



INSTALLATION INSTRUCTIONS

Accessory
WIRELESS CHARGER

Application
**2016 CIVIC
2- AND 4-DOOR**

Publications No.
VERSION 1
Issue Date
OCT 2015


PARTS LIST

**Wireless Charger Attachment Kit
P/N 08U58-TBA-100A**

Upper tray mat



Wireless charger harness

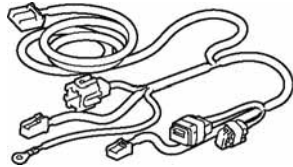

14 Wire ties
(Some may not be used)



2 Self-tapping screws



Fuse label



Wire tie with clip A



Urethane tape



Wire tie with clip B



20 A Blade fuse



**Wireless Charger Unit Kit
P/N 08U58-TBA-100**

Wireless charger unit



Accessory User's Information Manual




TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver
10 mm Open end wrench
Ratchet
10 mm Socket
Tape
Scissors
Diagonal cutters
Isopropyl alcohol
Shop towel

The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search". Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

Illustration of the Wireless Charger in the Vehicle

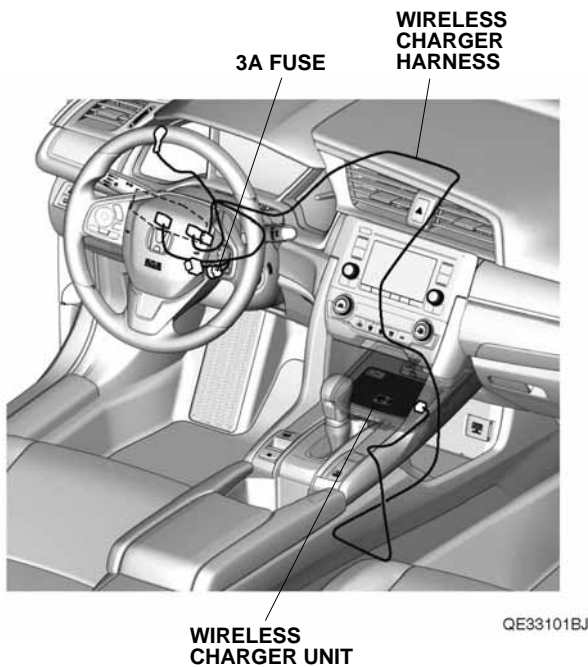


INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

1. Disconnect the negative cable from the battery.


2. Remove the driver's dashboard lower cover, then unplug the vehicle connectors and aspirator hose.

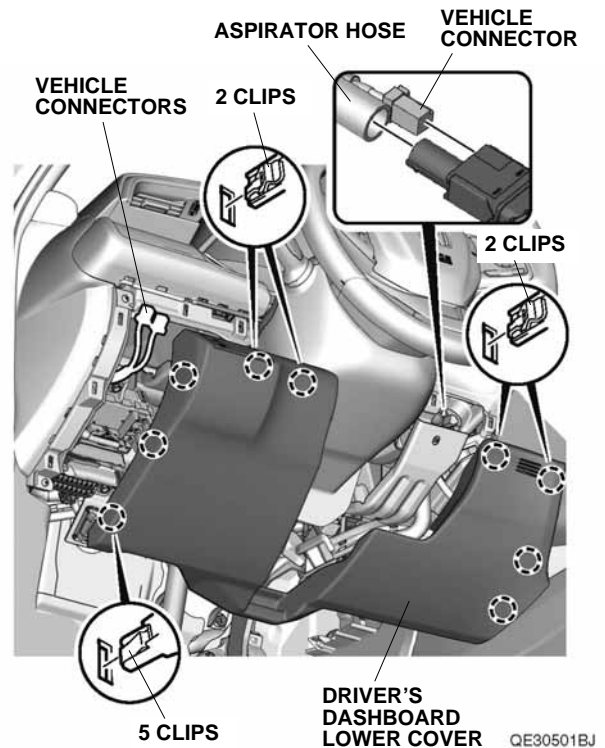


3. Remove the left console armrest.

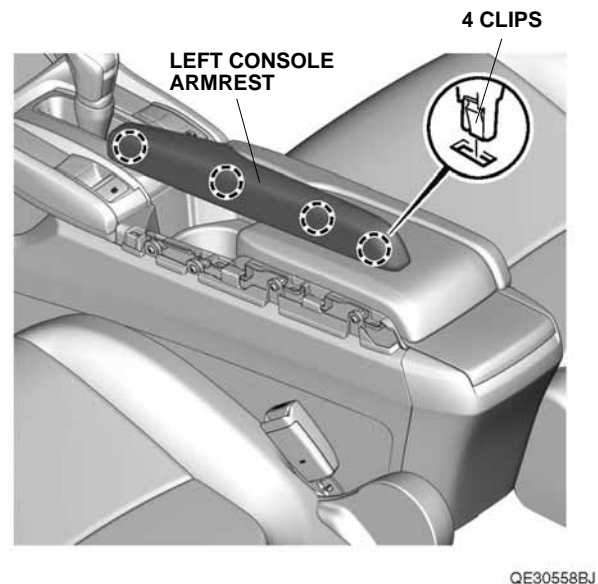


4. Apply tape to the area shown.

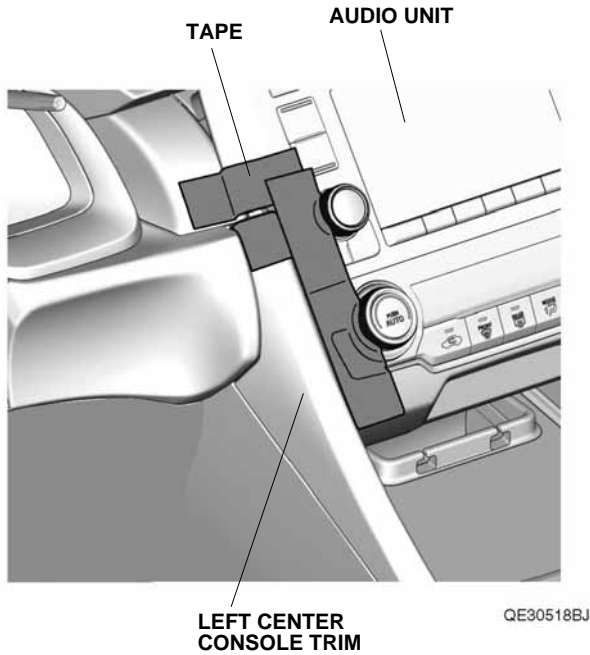


5. Remove the left center console trim.

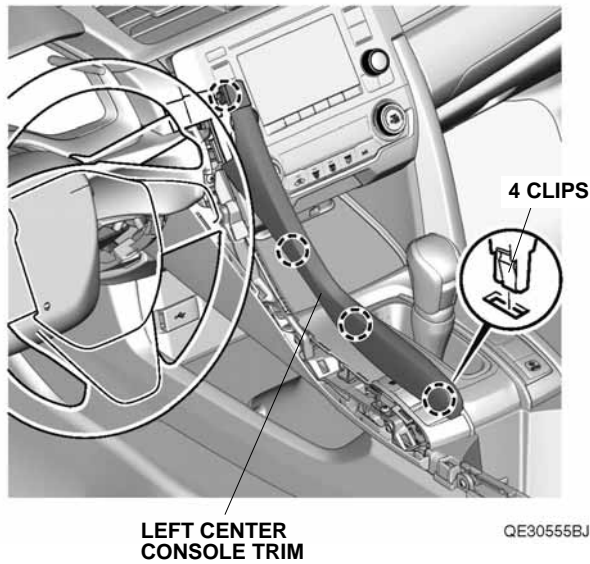


6. Remove the right console armrest.

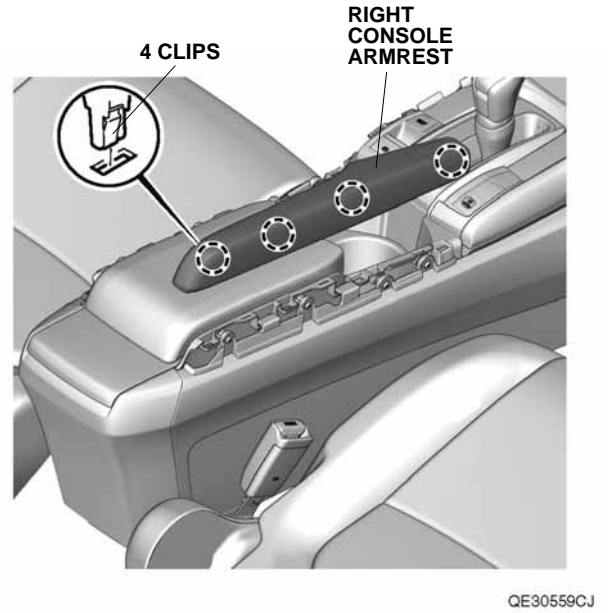

7. Apply tape to the area shown.

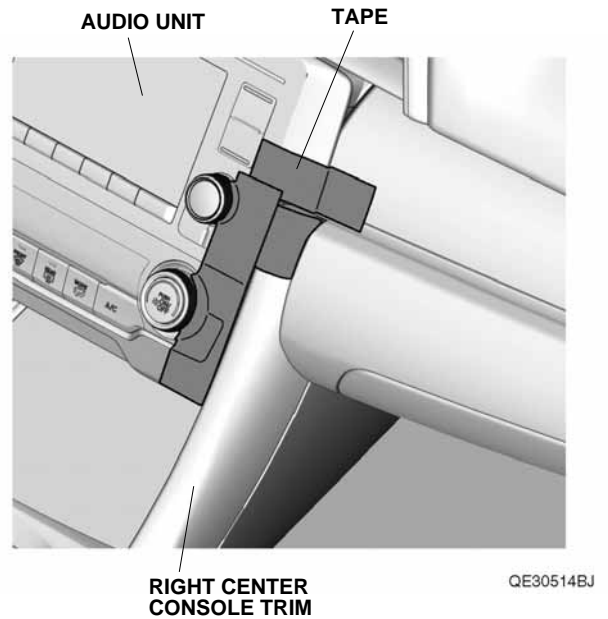


8. Remove the right center console trim.

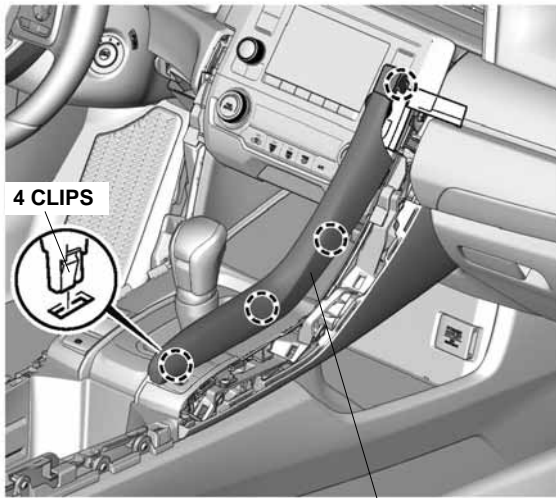

**RIGHT CENTER
CONSOLE TRIM** QE30517BJ


9. Remove the A/C control unit and unplug the vehicle connectors.

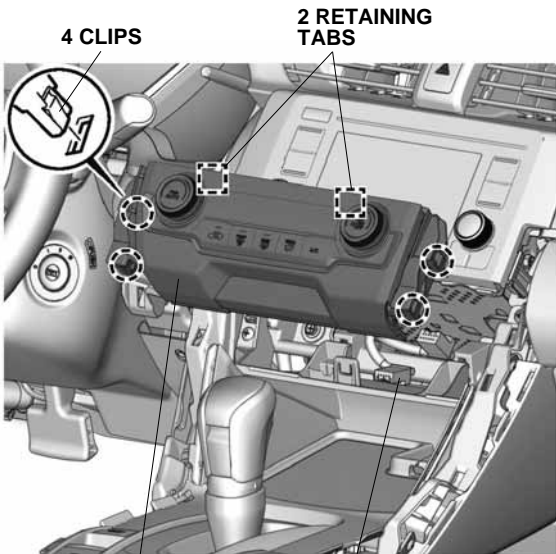

**A/C CONTROL
UNIT** QE30557AJ

**VEHICLE
CONNECTORS**

10. Remove the console rear panel and unplug the vehicle connectors (if equipped).

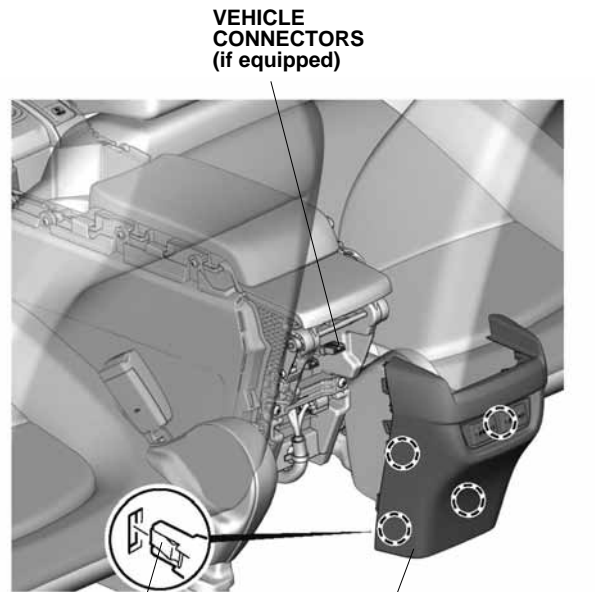

**VEHICLE
CONNECTORS
(if equipped)**

4 CLIPS


**CONSOLE
REAR PANEL** QE30538CJ

11. Remove the center console trim:


A/T Models

- Open the center console armrest and slide the beverage holder and the sliding tray (if equipped) rearward.
- Remove the shift lock release cover with a plastic trim tool.
- Insert the key into the shift lock release slot and move the shift lever knob to the D position.


NOTE: Make sure to apply the parking brake.

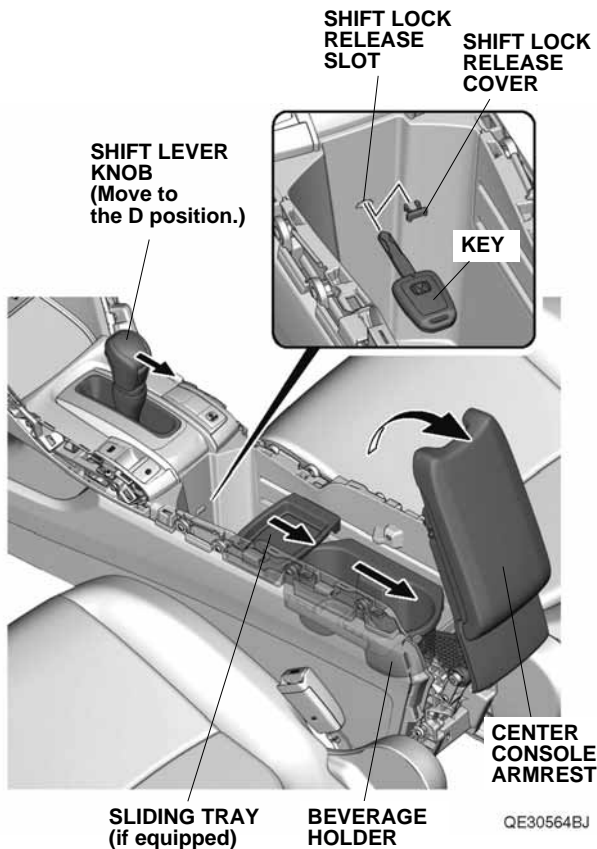

- Remove the trim panel and unplug the vehicle connectors.

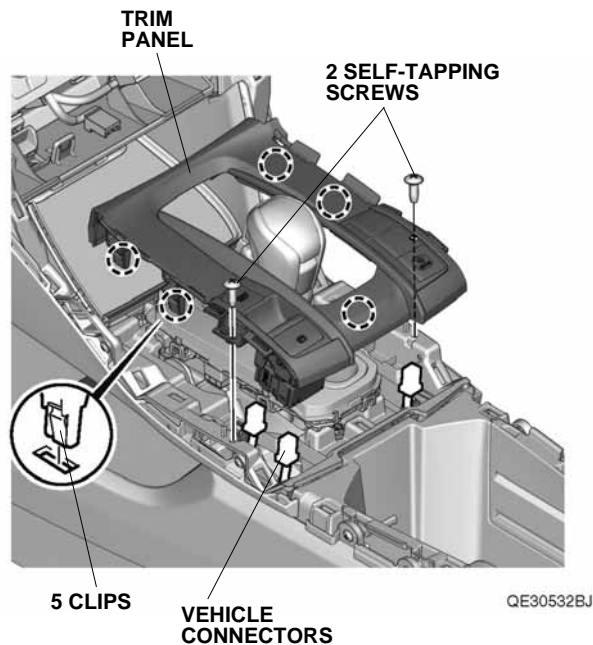


- Remove the console cover.

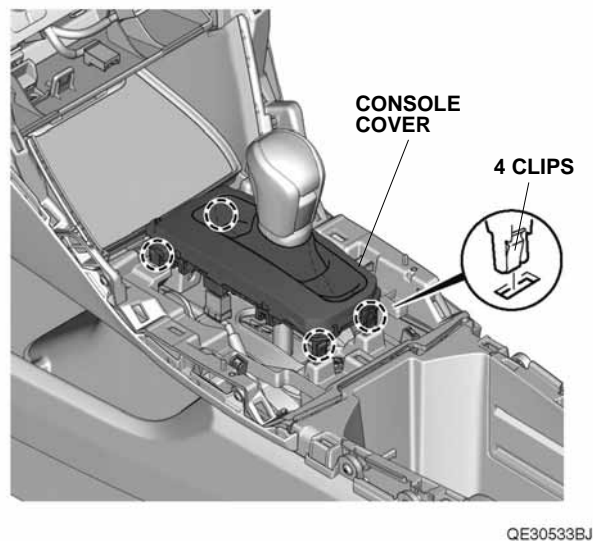


M/T Models

- Lower the shift lever boot to release the two retaining tabs from the boot.
- Remove the shift lever knob.

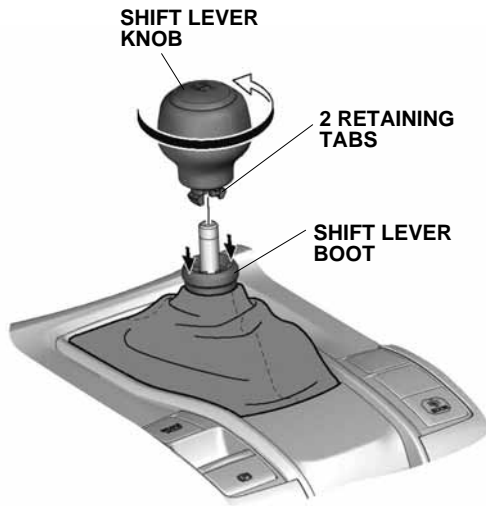


QE30541AJ

- Remove the trim panel and unplug the vehicle connectors.

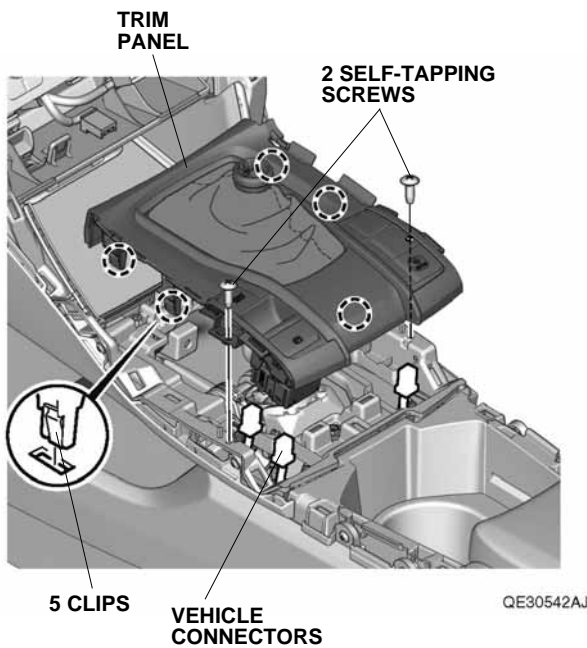


QE30542AJ

12. Remove and discard the upper tray mat.

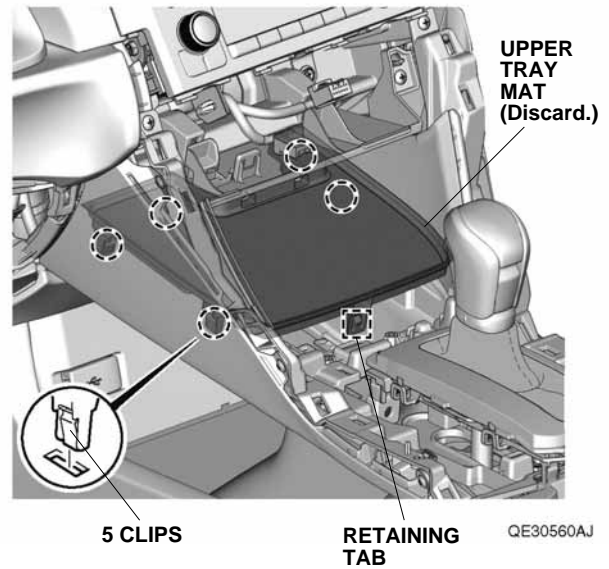


QE30560AJ

13. Remove the console panel.

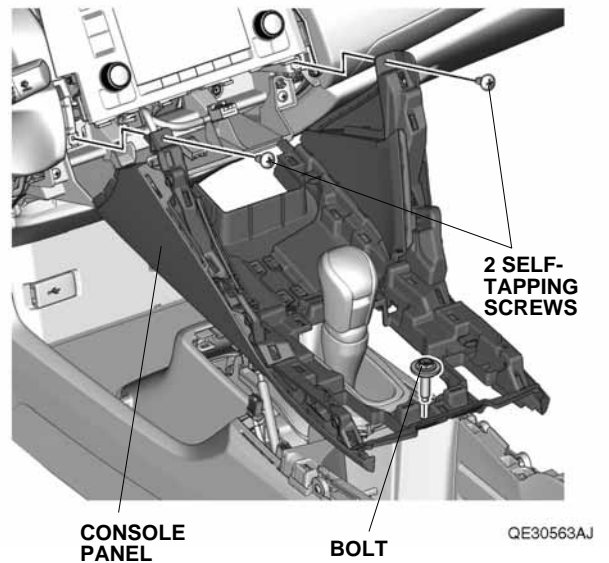


QE30563AJ

14. If equipped, remove the lower tray mat.

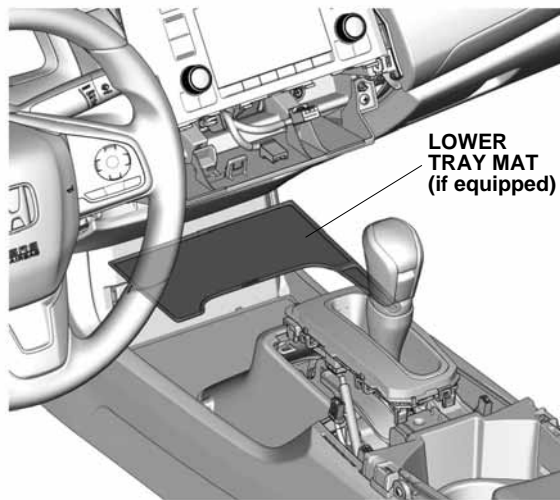


QE30546BJ

15. Using a plastic trim tool, remove the switch panel and unplug the vehicle connectors.

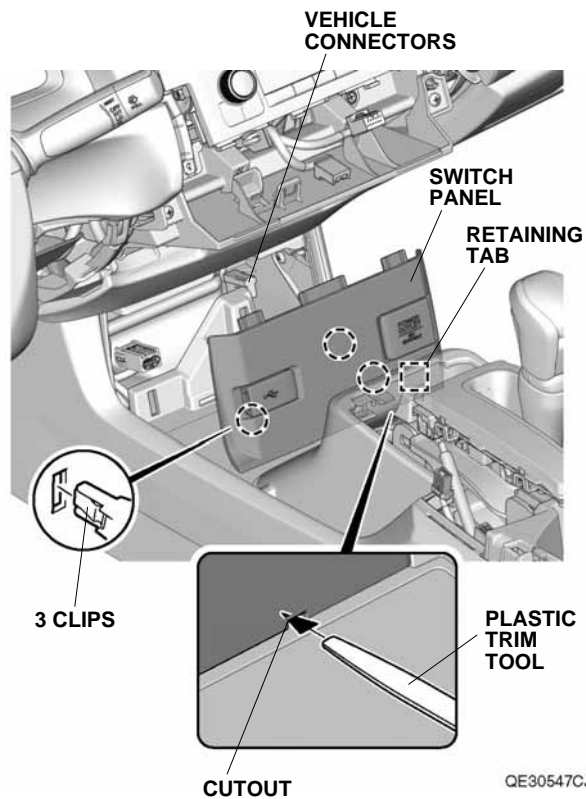

QE30547CJ


16. If equipped, release the vehicle clip and unplug the vehicle connector.

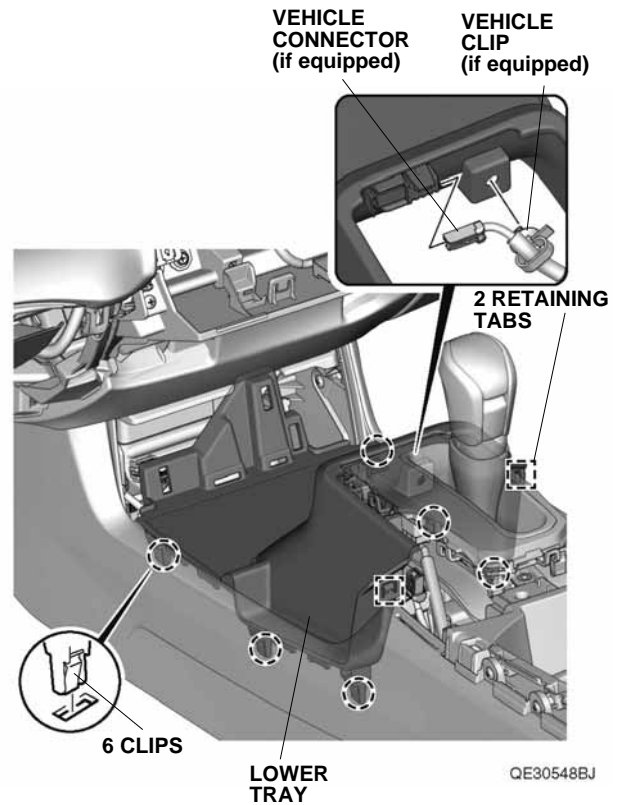


QE30548BJ

17. Remove the lower tray.


18. Remove the left side panel.

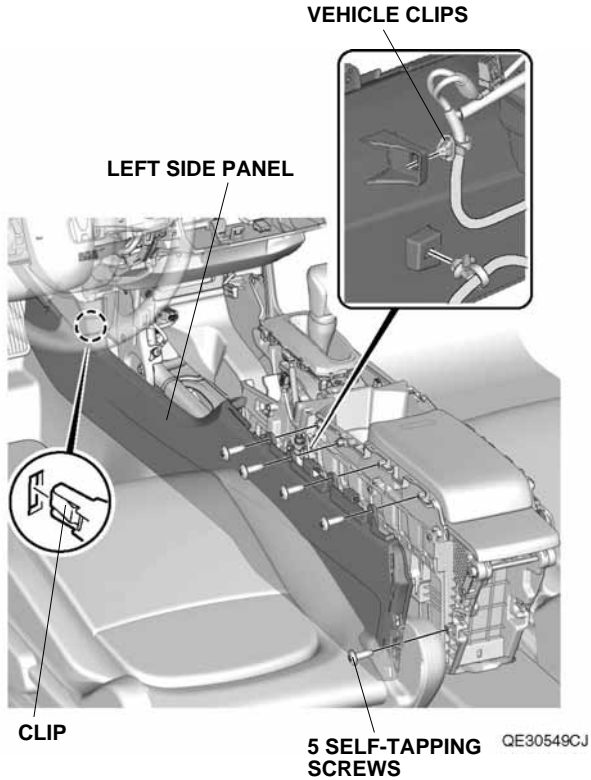

19. Remove the right side panel.

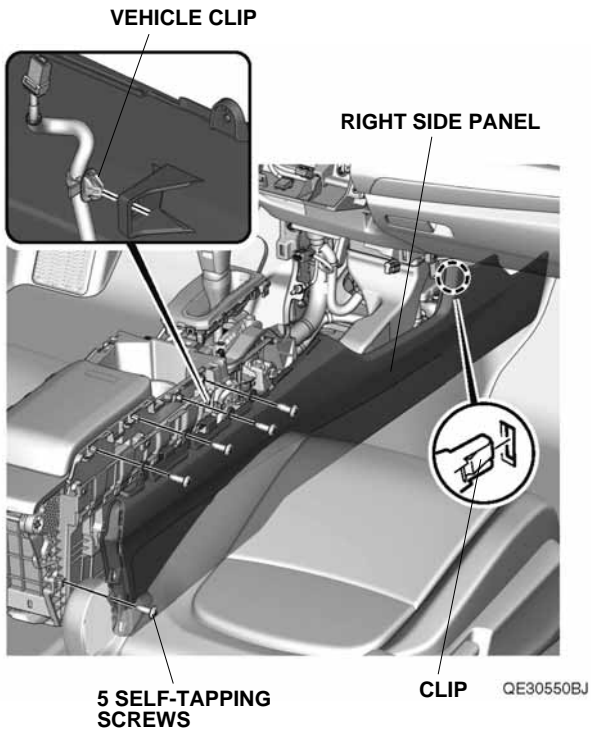


20. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the urethane tape will attach.

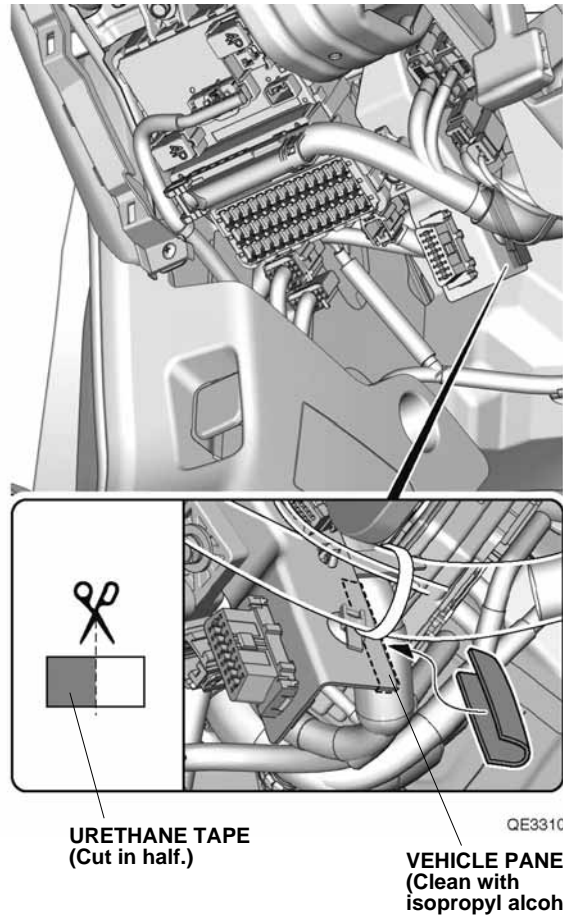

21. Using scissors, cut one urethane tape in half and attach one piece to the vehicle panel.


22. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the urethane tape will attach.

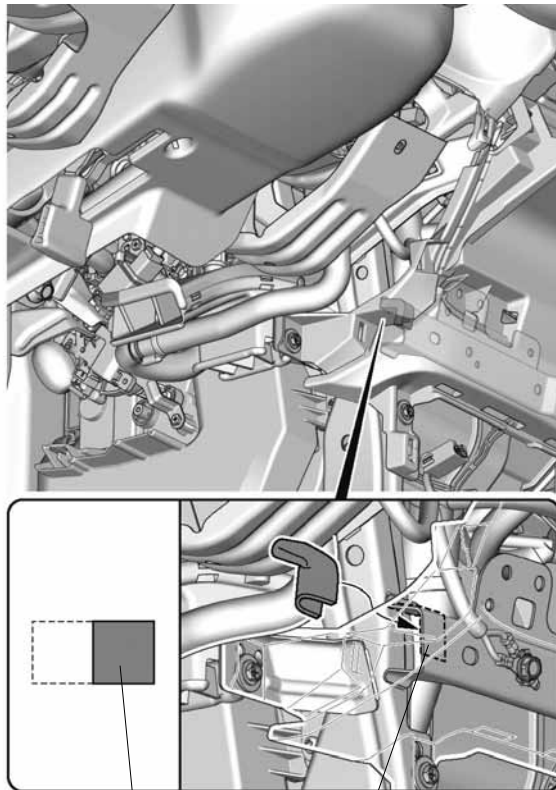

URETHANE TAPE VEHICLE PANEL (Clean with isopropyl alcohol.) QE33103AJ

23. Attach the other piece of urethane tape to the vehicle panel.

24. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the fuse label will attach.

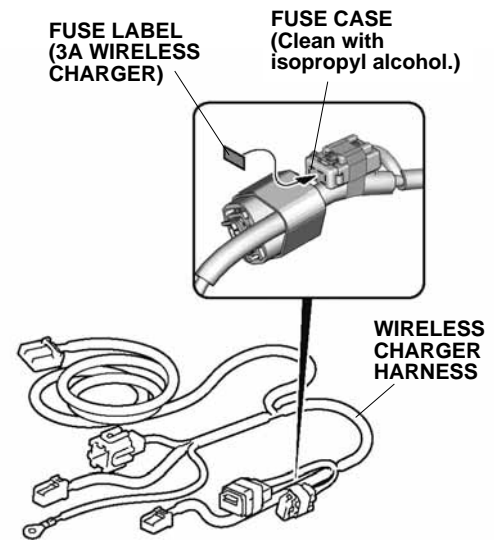


QE33104AJ

25. Attach the fuse label to the wireless charger harness fuse case.

If the vehicle is without another accessory harness 4-pin connector, continue with step 26; otherwise, go to step 27.

Without Another Accessory Harness 4-Pin Connector


26. Plug the wireless charger harness 4-pin connector into the fuse box. Go to step 29.

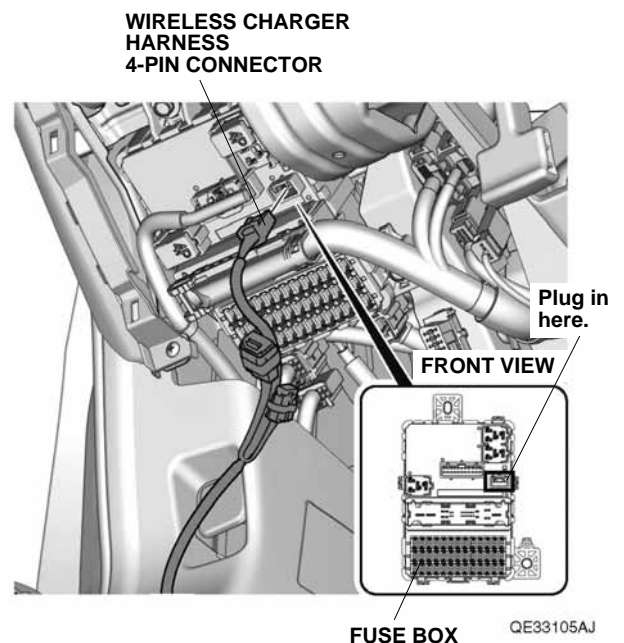

QE33105AJ


With Another Accessory Harness 4-Pin Connector

27. If the other accessory harness 4-pin connector is plugged into the fuse box, unplug it from the fuse box. Remove and discard the dummy connector from the wireless charger harness 4-pin connector and plug the other accessory harness 4-pin connector into the wireless charger harness 4-pin connector.

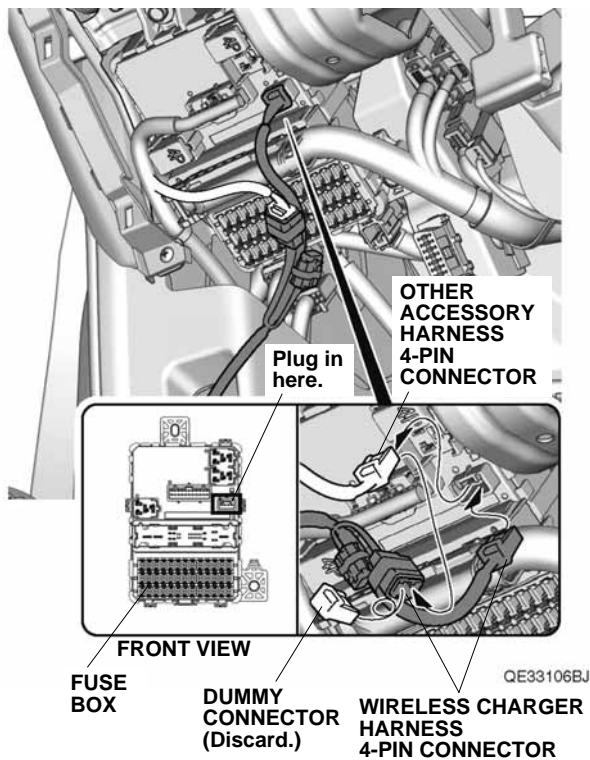

28. Plug the wireless charger harness 4-pin connector into the fuse box.

29. Align the white tape on the wireless charger harness with the vehicle clip. Secure the wireless charger harness to the vehicle harness with one wire tie.

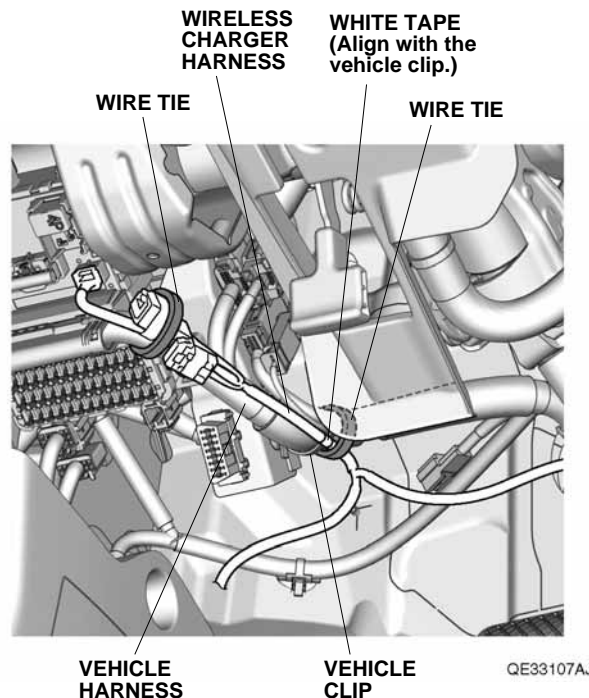


30. Secure the wireless charger harness to the vehicle harness with one wire tie.

If the vehicle is without another accessory harness 6-pin connector, continue with step 31. If the vehicle is equipped with a remote control engine starter, go to step 32. If the vehicle is equipped with another accessory (except remote control engine starter), go to step 33.

Without Another Accessory Harness 6-Pin Connector


31. Plug the wireless charger harness 6-pin connector into the vehicle 6-pin connector. Go to step 35.

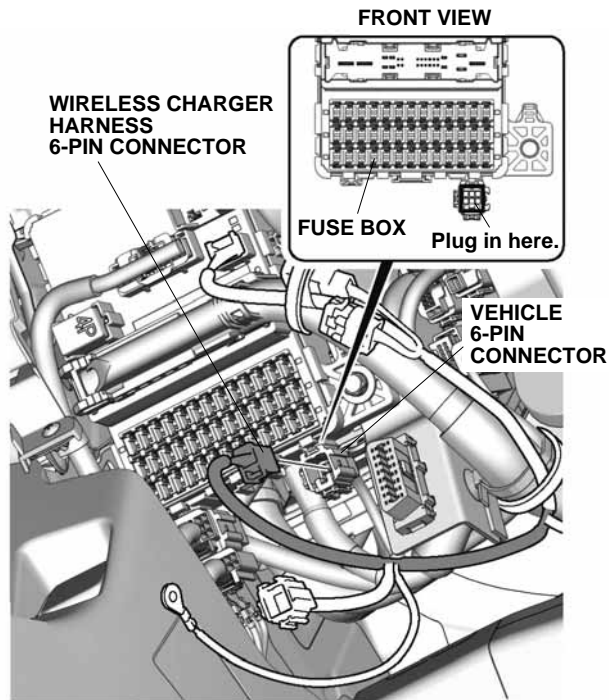

QE33108AJ


With Remote Control Engine Starter Harness 6-Pin Connector

32. If the remote control engine starter harness 6-pin connector is plugged into the vehicle 6-pin connector, plug the wireless charger harness 6-pin connector into the remote control engine starter harness 6-pin connector. Go to step 35.

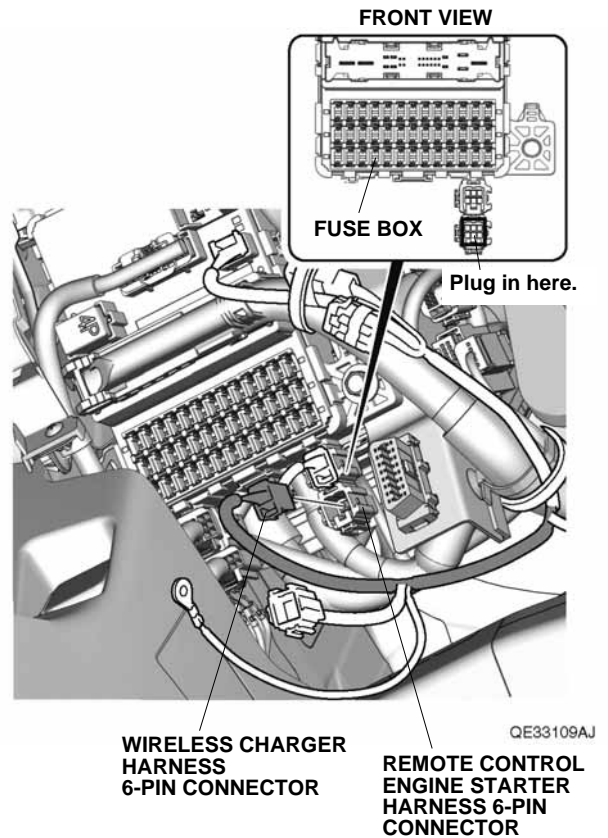

With Another Accessory (Except Remote Control Engine Starter) Harness 6-Pin Connector


33. If another accessory harness 6-pin connector is plugged into the vehicle 6-pin connector, unplug it. Plug the other accessory harness 6-pin connector into the wireless charger harness 6-pin connector.

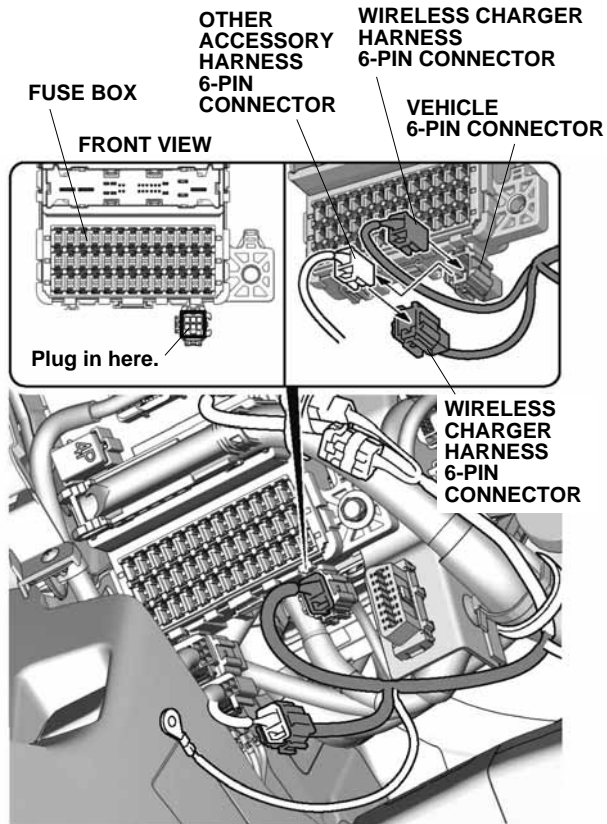

QE33110BJ


34. Plug the wireless charger harness 6-pin connector into the vehicle 6-pin connector.

35. Attach the wireless charger harness 6-pin connector to the vehicle connector.

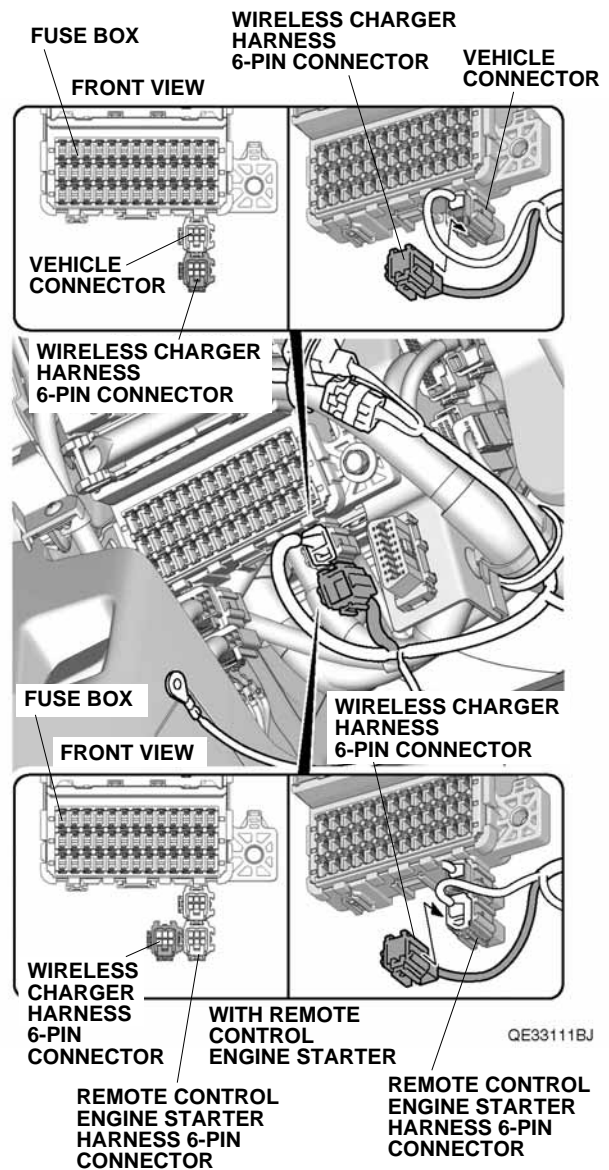

QE33111BJ


36. Remove the vehicle ground bolt and install the wireless charger harness ground terminal with vehicle ground bolt as shown. Do not put the ground terminal calking on top of one another.

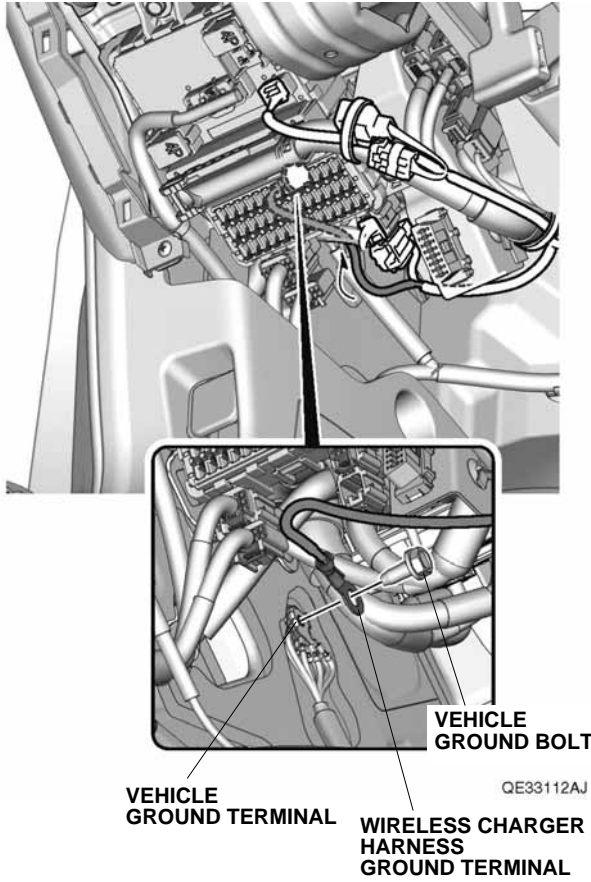


A/T models, continue with step 37; otherwise, go to step 41.

A/T Models


37. Route the wireless charger harness as shown. Align the white tape on the wireless charger harness with the vehicle clip. Secure the wireless charger harness to the vehicle harness with one wire tie.

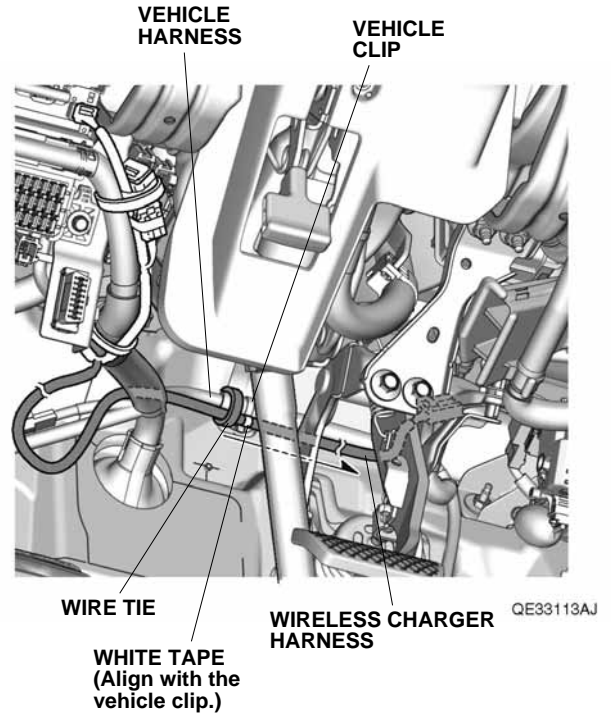

38. Secure the wireless charger harness to the vehicle harness with two wire ties.

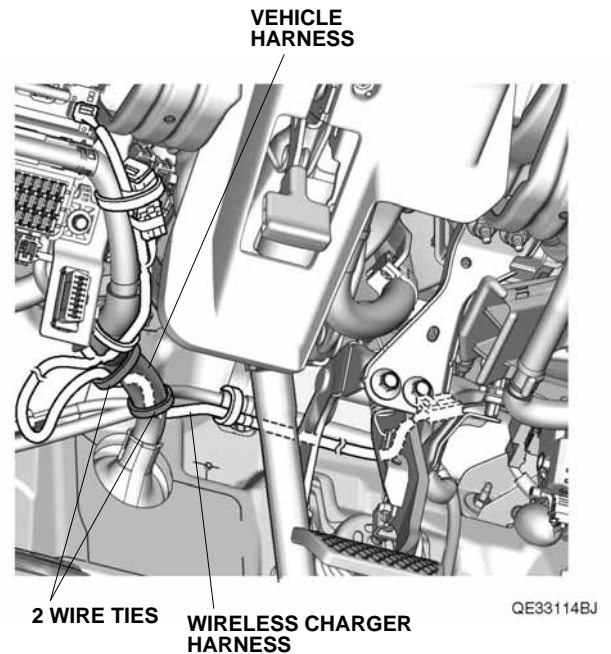


39. Secure the wireless charger harness to the wireless charger harness 6-pin connector with one wire tie with clip B.

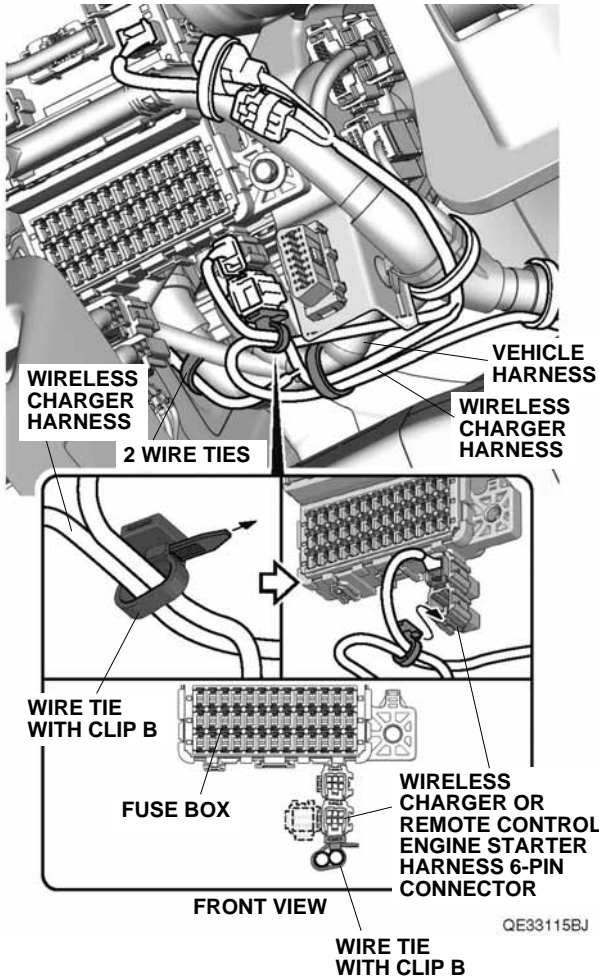


40. Secure the wireless charger harness to the vehicle harness with two wire ties. Go to step 45.

M/T Models


41. Route the wireless charger harness as shown. Align the white tape on the wireless charger harness with the vehicle clip. Secure the wireless charger harness to the vehicle harness with one wire tie.

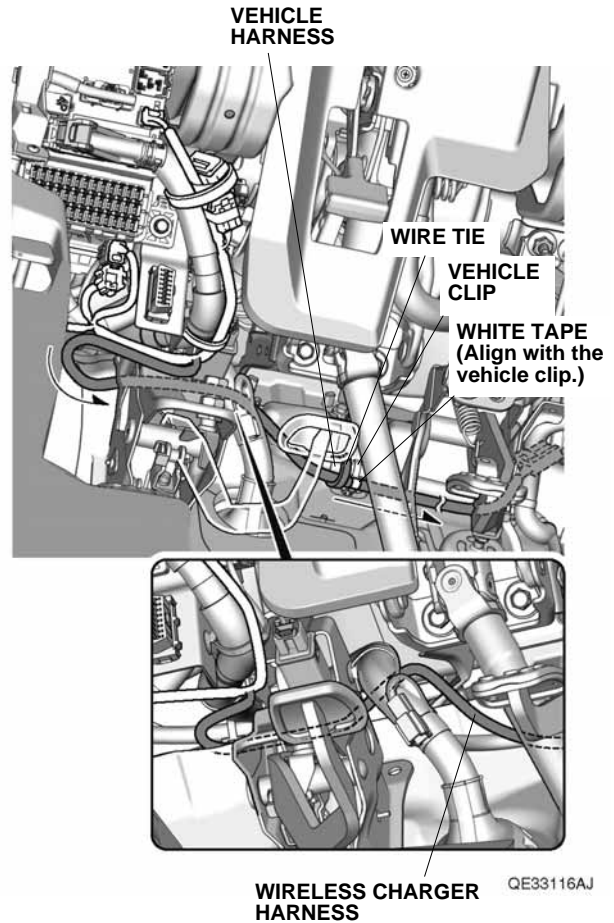

42. Secure the wireless charger harness to the vehicle harness with three wire ties.

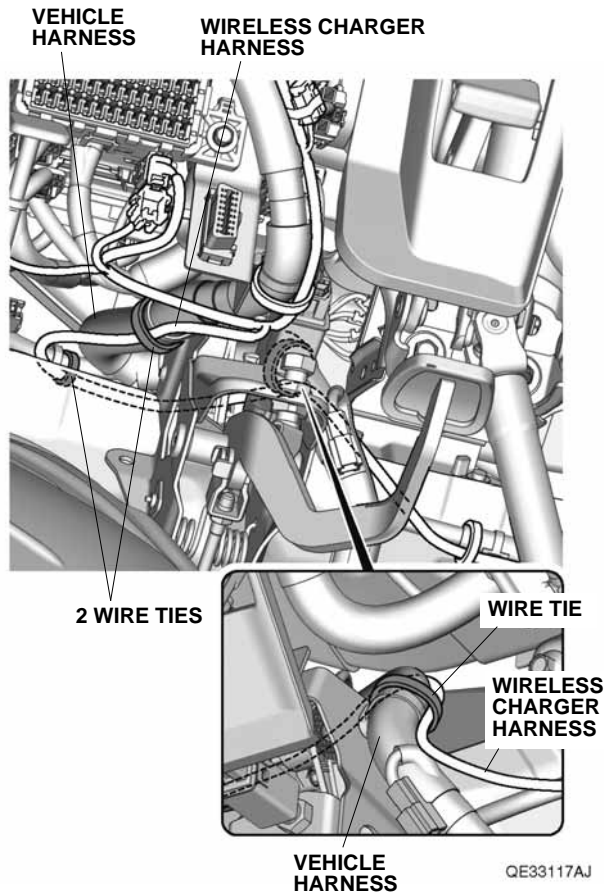


43. Secure the wireless charger harness to the wireless charger harness 6-pin connector with one wire tie with clip B.

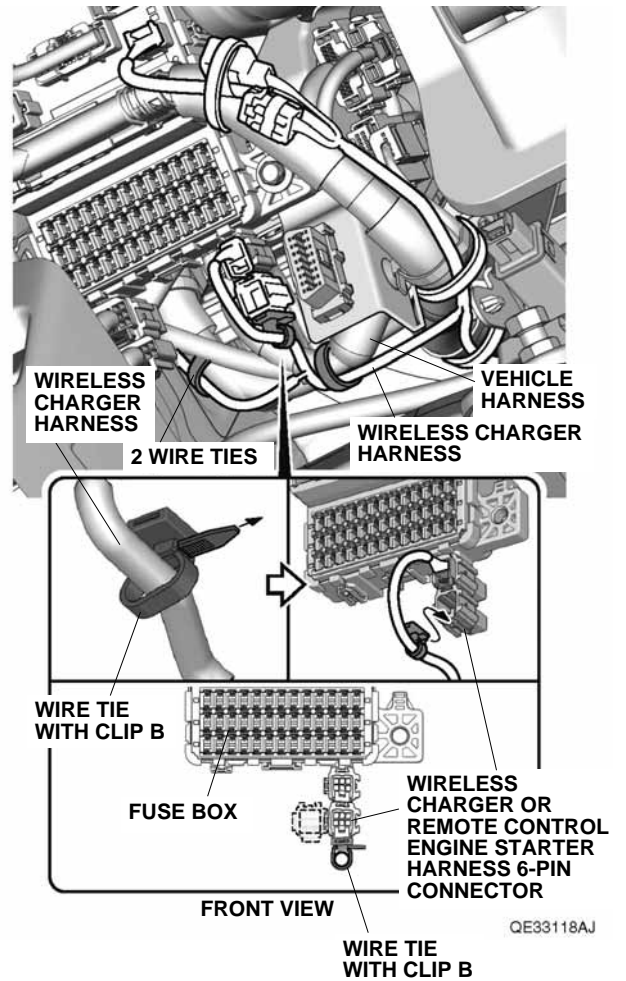


44. Secure the wireless charger harness to the vehicle harness with two wire ties.


45. Route the wireless charger harness along the vehicle harness as shown.

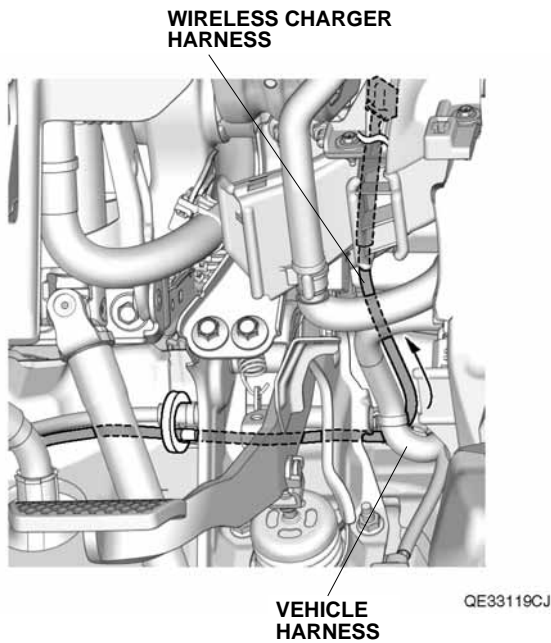

46. Route the wireless charger harness as shown.

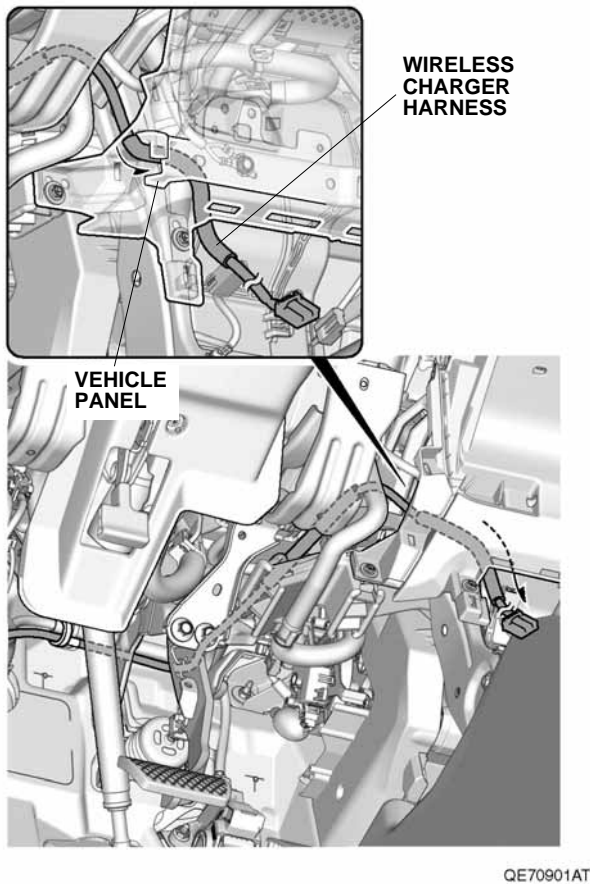


47. Route the wireless charger harness as shown. Align the white tape on the wireless charger harness with the vehicle clip. Secure the wireless charger harness to the vehicle harness with one wire tie.

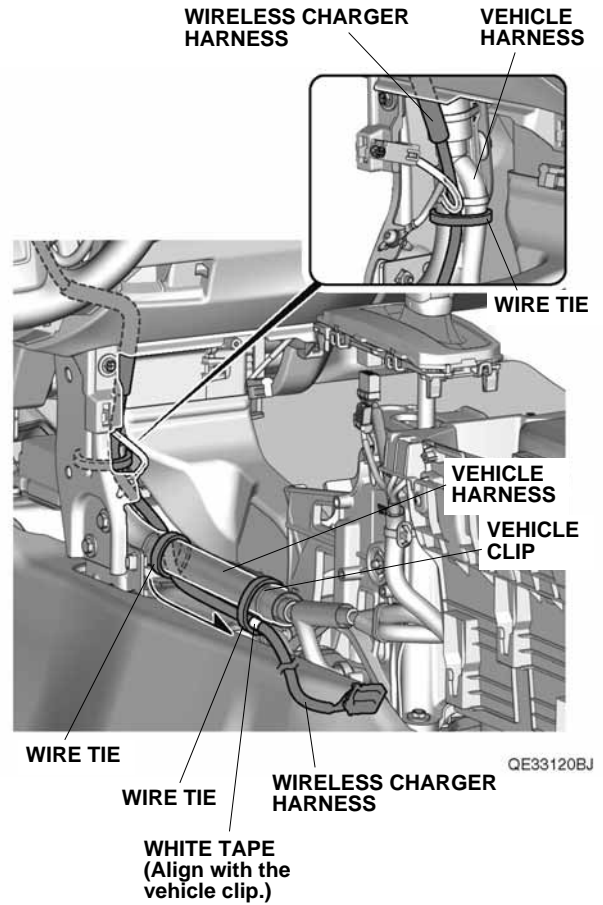

48. Secure the wireless charger harness to the vehicle harness with two wire ties.



49. Secure the wireless charger harness to the vehicle panel with one wire tie.

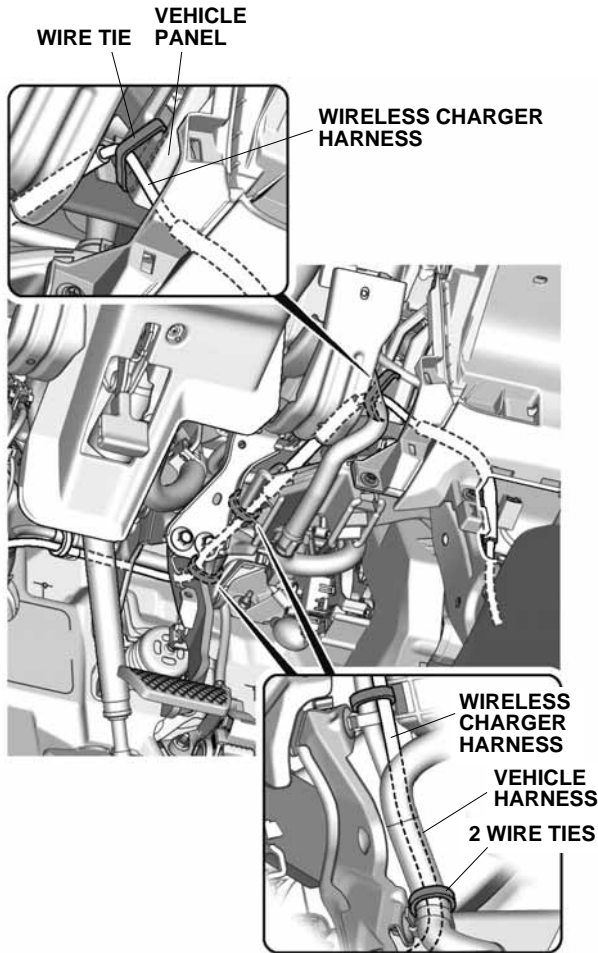


QE33121AJ

50. Secure the wireless charger harness to the vehicle harness with two wire ties.

51. Route the wireless charger harness as shown.

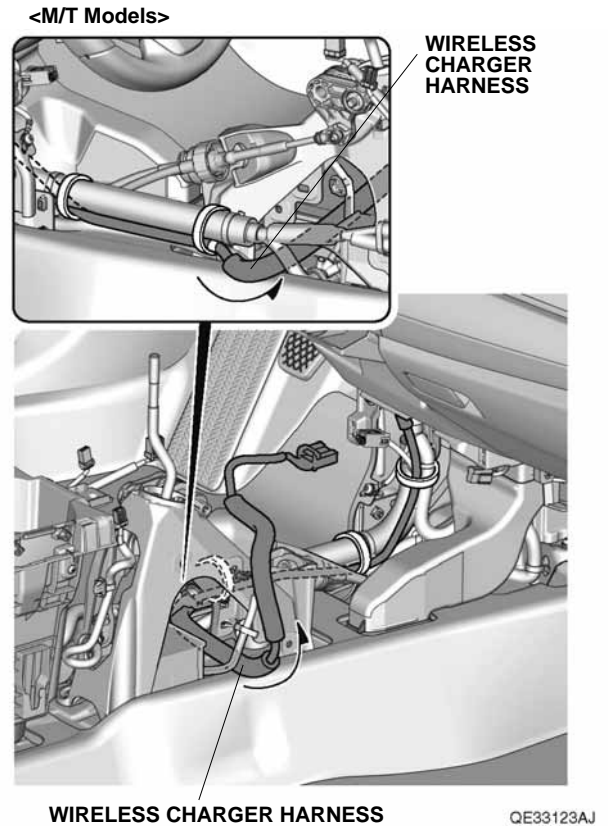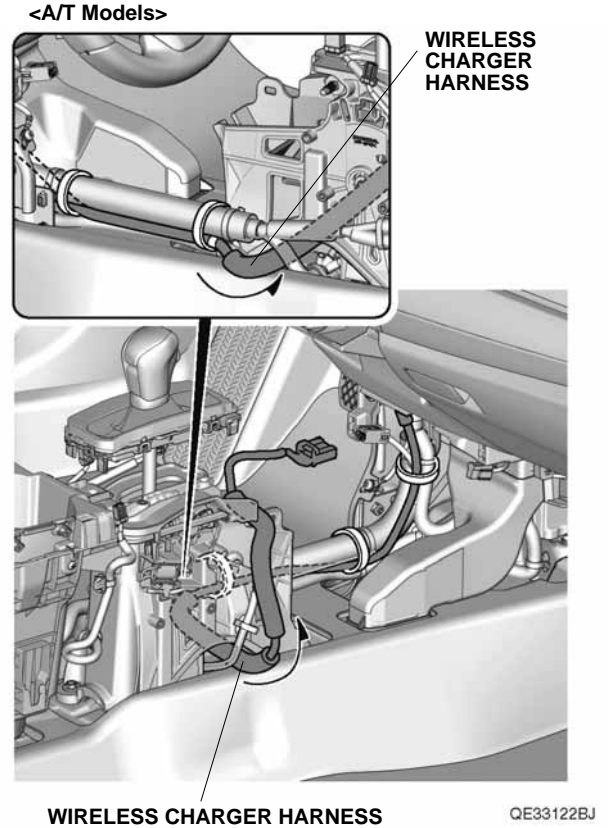


52. Reinstall the left and right side panels and the lower tray.

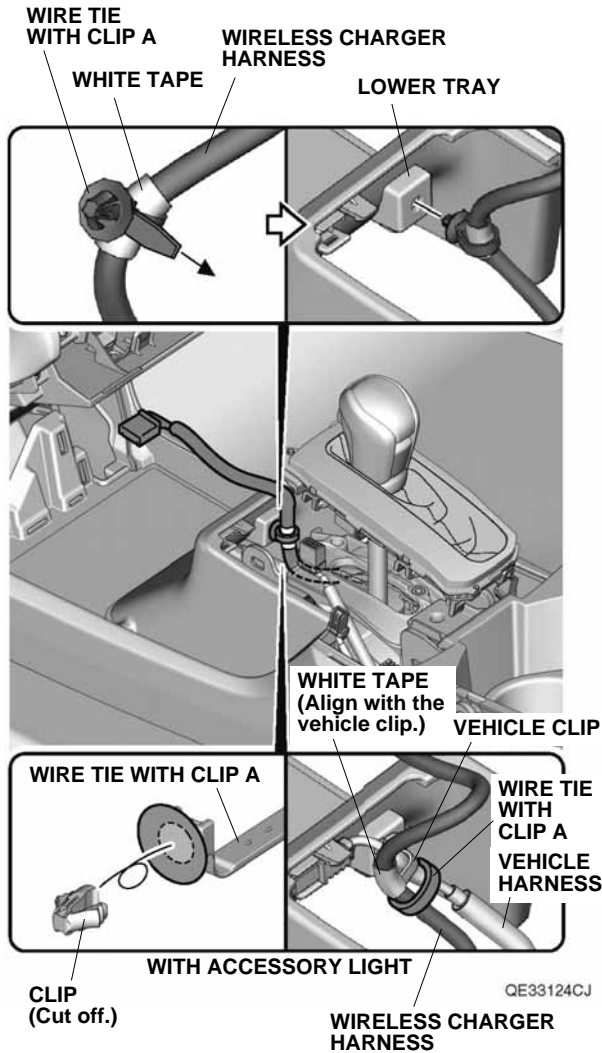


53. Attach one wire tie with clip A to the white tape on the wireless charger harness, secure the wire tie with clip A to the lower tray. If the vehicle has an accessory light, secure the wireless charger harness to the vehicle harness with one wire tie with clip A.


54. Install the switch panel, the lower tray mat (if equipped), and the console panel.

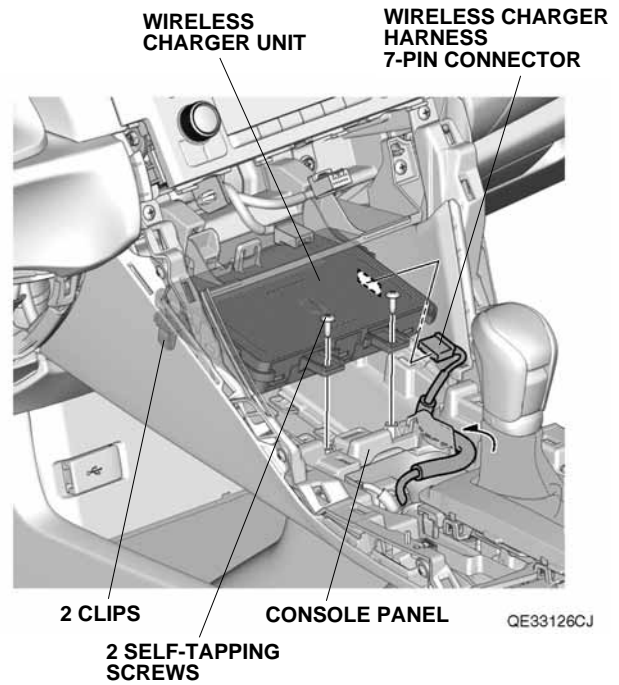


55. Plug the wireless charger harness 7-pin connector into the wireless charger unit and install the wireless charger unit to the console panel with two self-tapping screws and two clips.
56. Install the upper tray mat to the console panel with five clips and two retaining tabs.

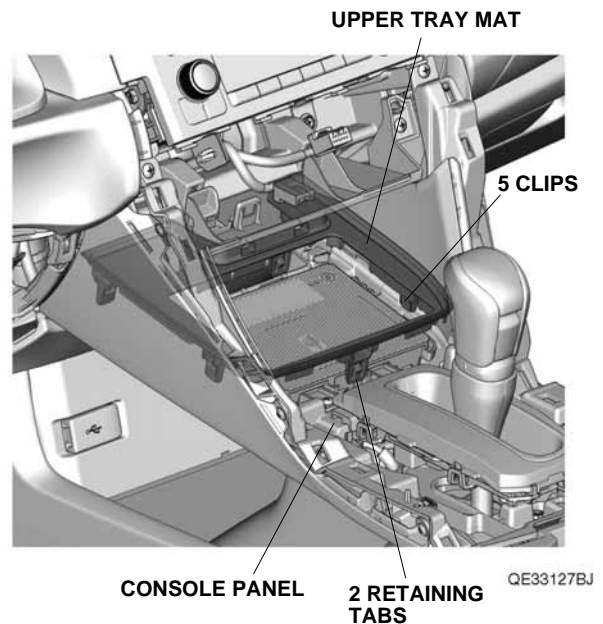

57. Plug the 20 A blade fuse into the fuse box.

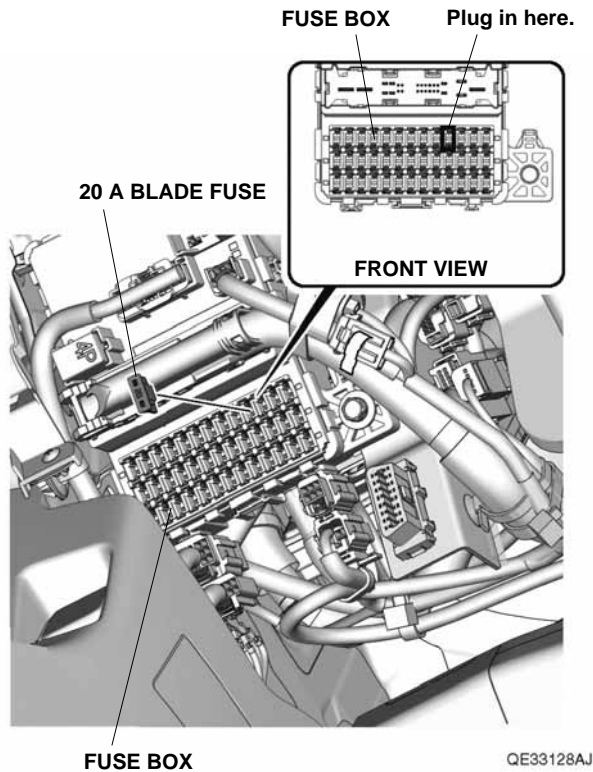

58. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the fuse label will attach.

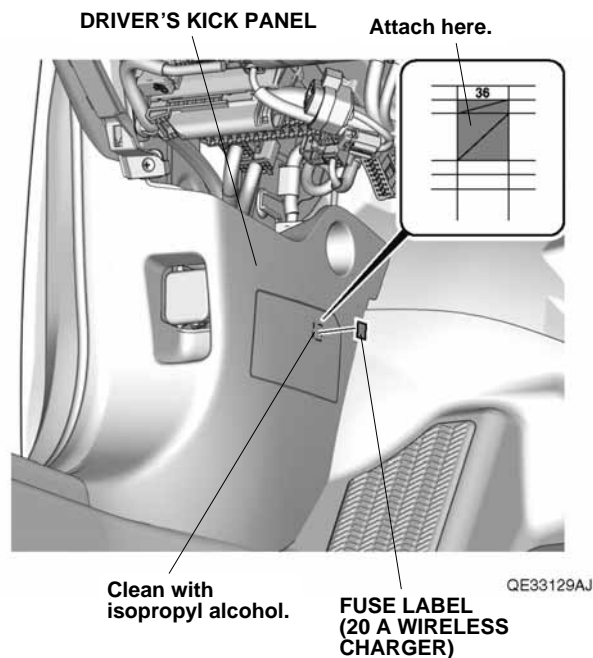

59. Attach the fuse label on the driver's kick panel.

60. Check that all wire harnesses are routed properly and all connectors are plugged in.
61. Install all removed parts.
62. Connect the negative cable to the battery.
63. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
64. Reset the clock.
65. If necessary restore the systems back to normal operation as described in the Service Information.

Check the Operation of the Wireless Charger

66. Check that the wireless charger works properly as described in the Accessory User's Information Manual.