




INSTALLATION INSTRUCTIONS


Accessory SUNSHADES P/N 08R13-TEA-100	Application 2020 CIVIC 5-DOOR	Publications No. VERSION 1
		Issue Date AUG 2019

PARTS LIST

Left sunshade

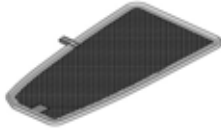

Right sunshade

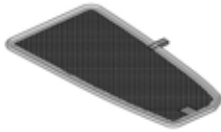


8 Clips



2 Alcohol wipes



Storage bag

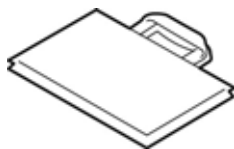

Accessory User's Information Manual




TOOLS AND SUPPLIES REQUIRED

Masking tape

Ruler

Illustration of the Sunshades Installed in the Vehicle

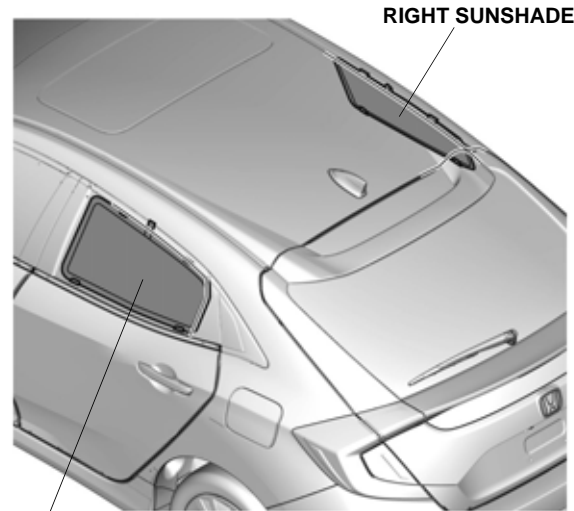

LEFT SUNSHADE

RIGHT SUNSHADE


QJ20201AU

INSTALLATION

NOTE: This sunshade kit should be installed only if the ambient air temperature is 60°F (15°C) or above.


Installing the Sunshades

1. Fully open the left and right rear door glass.

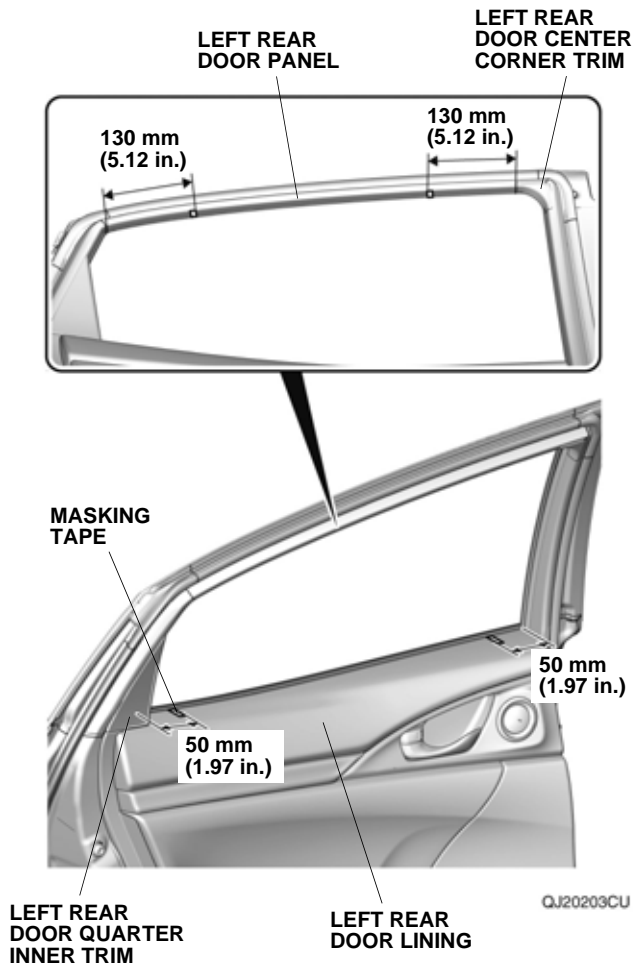


2. Apply masking tape to the left rear door panel and the left rear door lining.


3. Using an alcohol wipe, thoroughly clean the left rear door panel and the left rear door lining where the clip will attach.

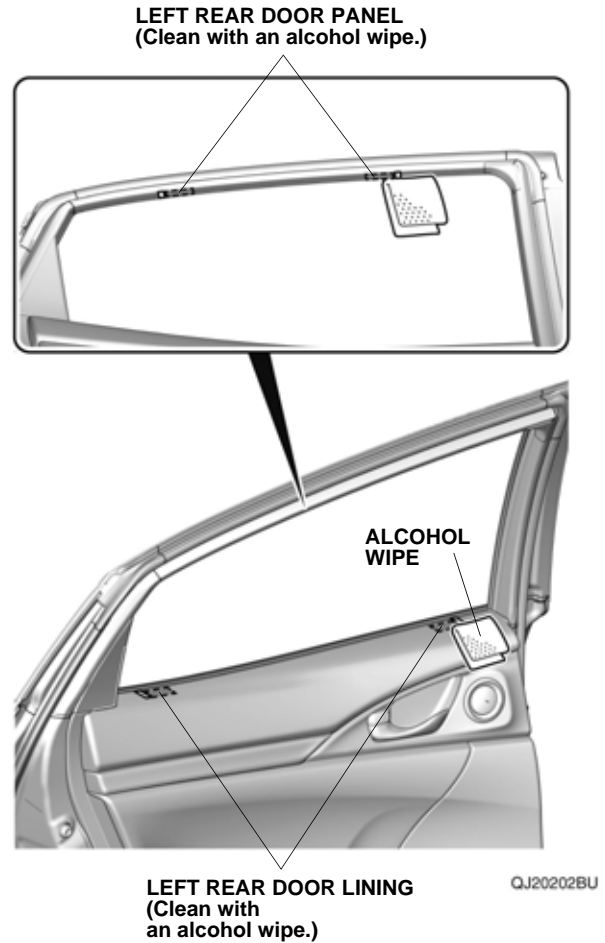

4. Remove the adhesive backings. Then, line up each clip with the masking tape and attach it to the door panel.
 NOTE: Press down and hold each clip in place for 30 seconds to allow the adhesive to set.

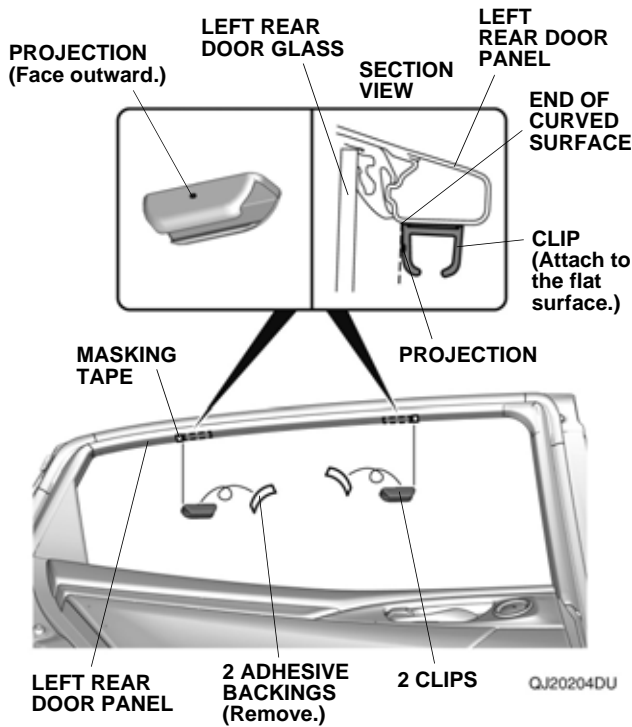


5. Remove the adhesive backings. Then, line up each clip as shown and attach the clips to the door lining.
 NOTE: Press down and hold each clip in place for 30 seconds to allow the adhesive to set.

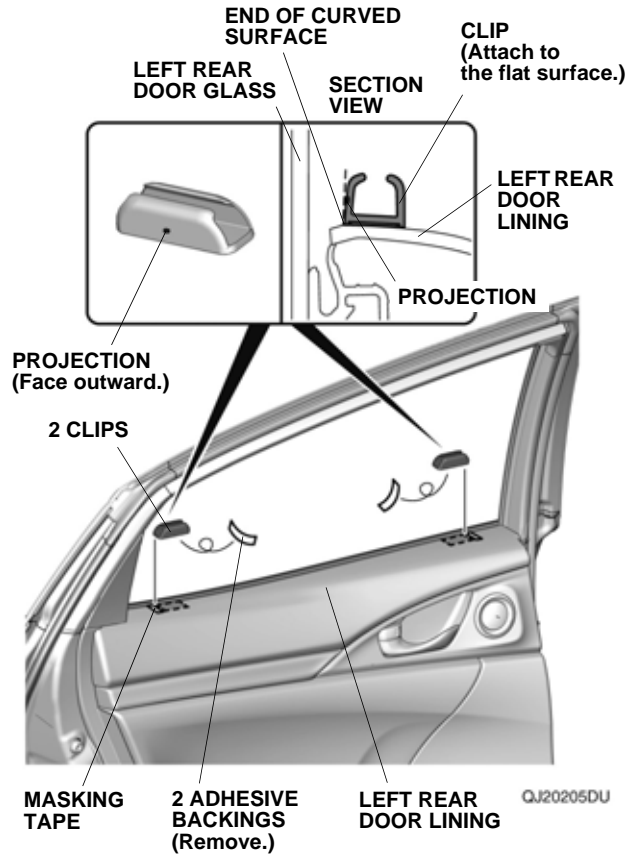


6. Remove the masking tape.

7. Install the bottom of the left sunshade into the clips.
NOTE: Make sure to check the identification mark before installation.

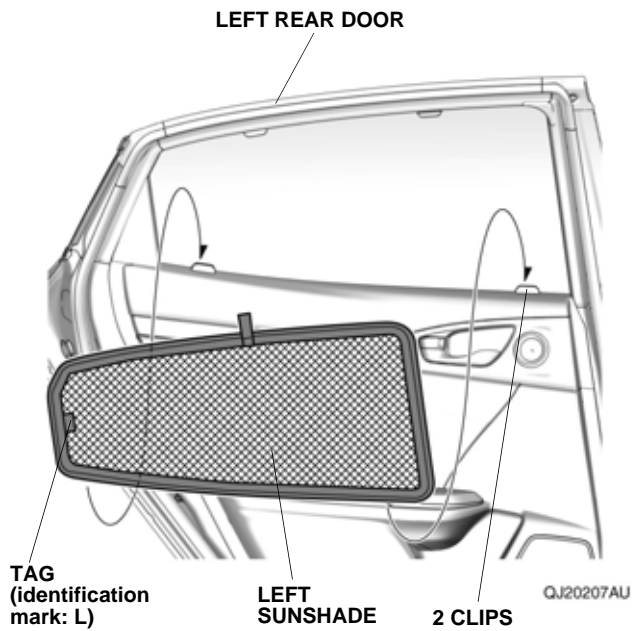

8. Install the top of the left sunshade into the clips, by pulling straight down on the tab.

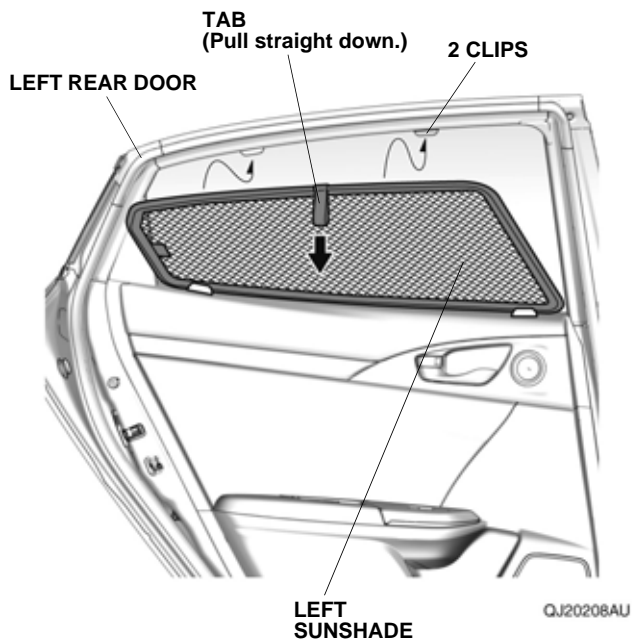

9. Repeat steps 2 through 8 for the right side of the vehicle.
10. Make sure the customer receives the storage bag.