



## HONDA INSTALLATION INSTRUCTIONS

Accessory  
FRONT GRILLE TRIM  
P/N 08F21-TBA-100A

Application  
2021 CIVIC  
4-DOOR

Publications No.  
**VERSION 1**  
Issue Date  
**SEP 2020**

### PARTS LIST

Front center grille trim



Left front grille trim



Right front grille trim



3 Alcohol wipes



### TOOLS AND SUPPLIES REQUIRED

Masking tape


Ruler

*The following tool is available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.*

Rubber Roller (T/N MHLE54D)

### Illustration of the Front Grille Trim Installed on the Vehicle

RIGHT FRONT  
GRILLE TRIM

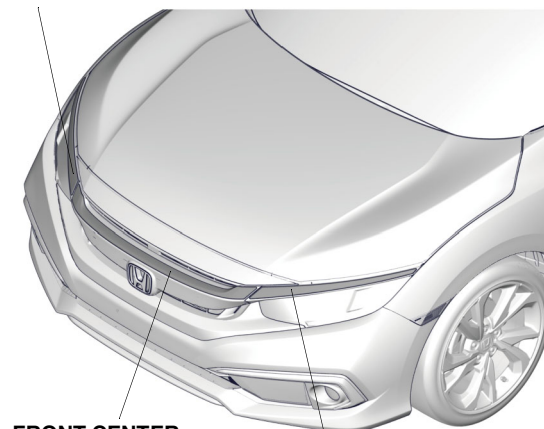

FRONT CENTER  
GRILLE TRIM

LEFT FRONT  
GRILLE TRIM

QH41001AR


### INSTALLATION

**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


#### NOTE:

- Be careful not to damage the body paint finish.
- This kit should be installed only if the ambient air temperature is 60°F (15°C) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Make sure your customer is aware of this.


1. Using an alcohol wipe, thoroughly clean the front grille where the front center grille trim will attach.

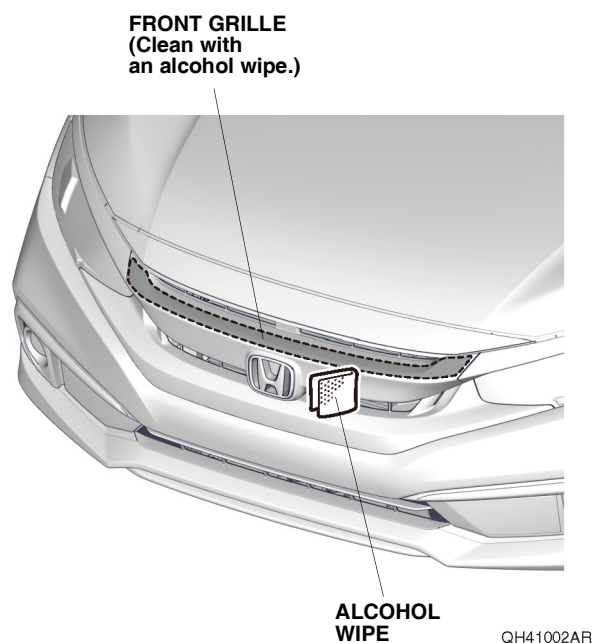


2. Peel back the adhesive backings, and tape them to the front surface of the front center grille trim with masking tape.

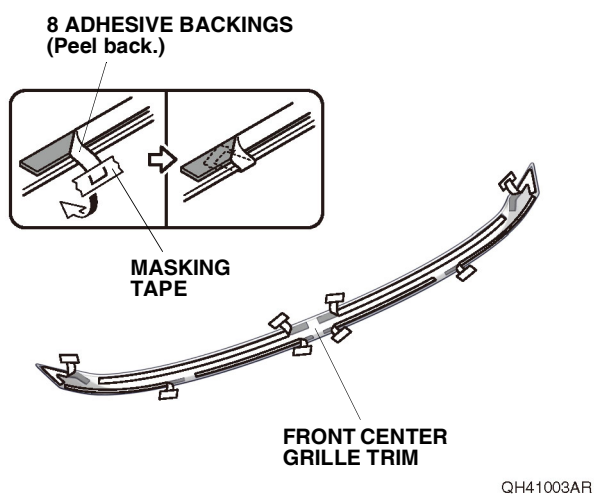


3. Line up the front center grille trim with the front grille, and attach it as shown.

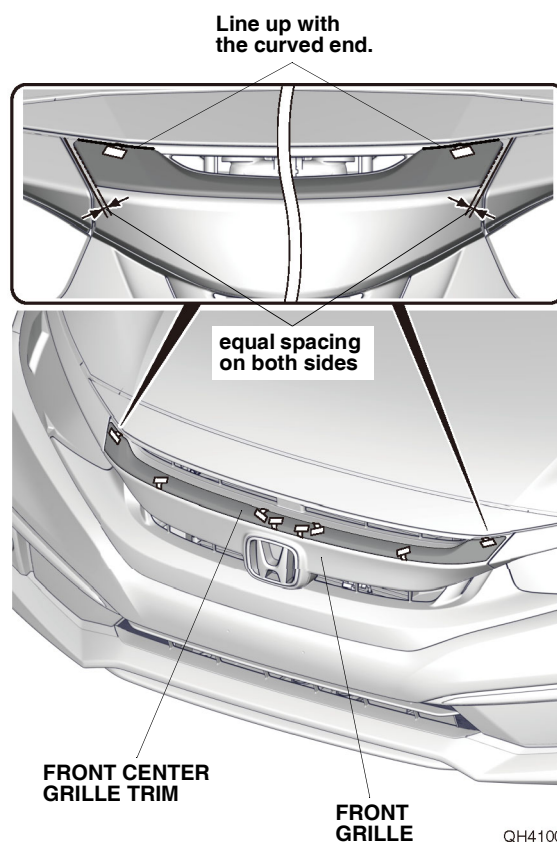


4. While applying light pressure against the front center grille trim, carefully remove the taped adhesive backings.

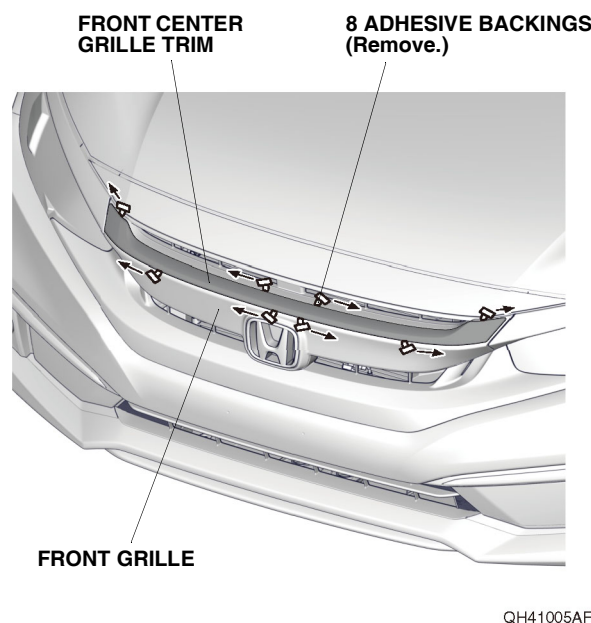


- Using an alcohol wipe, thoroughly clean the left front grille extension where the left front grille trim will attach.

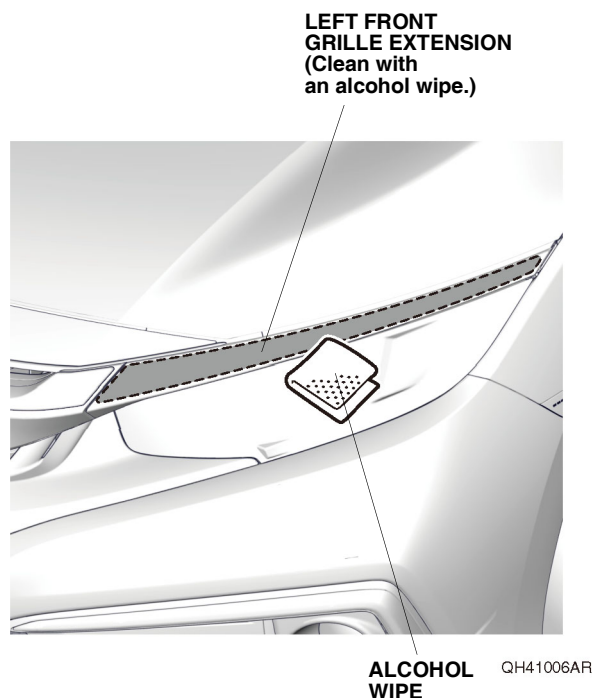


- Peel back the adhesive backings, and tape them to the front surface of the left front grille trim with masking tape. Remove the remaining adhesive backing.

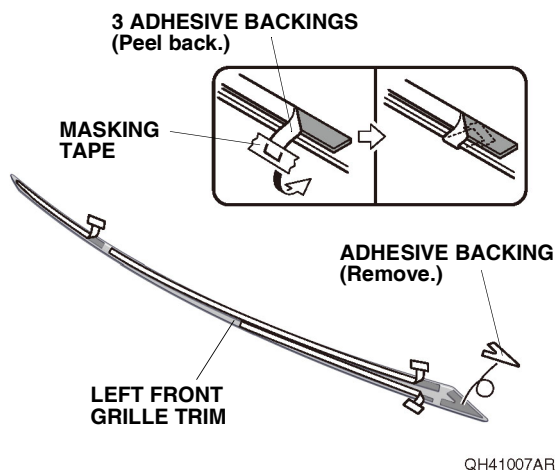

- Line up the left front grille trim with the left front grille extension, and attach it as shown.

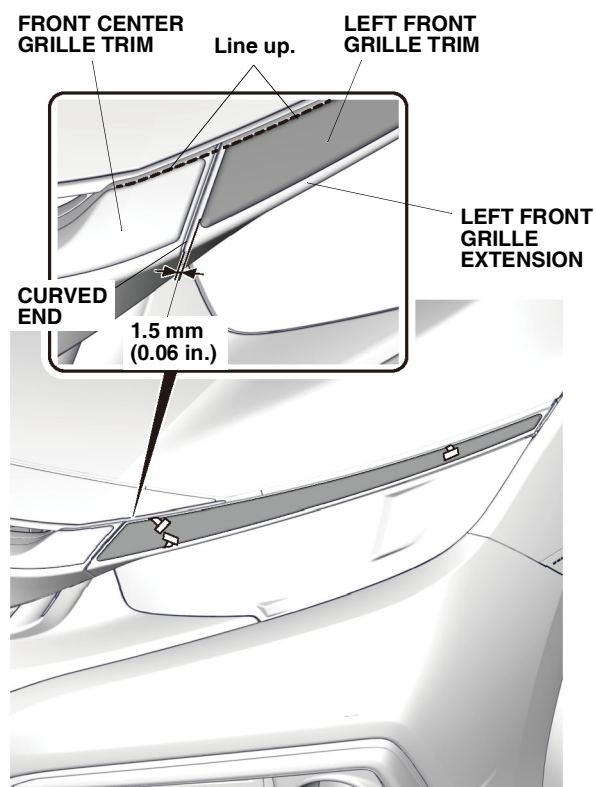

8. While applying light pressure against the left front grille trim, carefully remove the taped adhesive backings in the order shown.

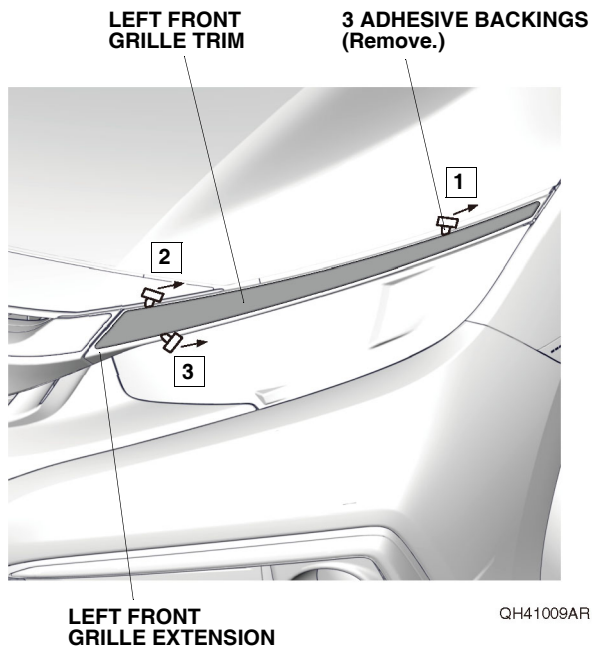

9. Repeat steps 5 through 8 to install the right front grille trim.
10. Using the rubber roller, apply firm pressure while rolling, especially at the ends, to set the adhesive.

