



HONDA INSTALLATION INSTRUCTIONS


Accessory
ILLUMINATED DOOR
SILL TRIM

Application
2021 CIVIC


Publications No.
VERSION 1
Issue Date
JUL 2020

PARTS LIST


Left door sill trim
(Identification mark: L)

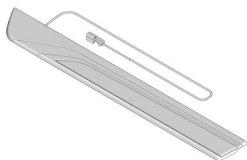


Right door sill trim
(Identification mark: R)

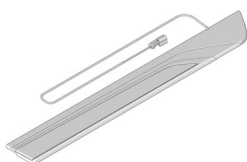


Aluminum tape



Door sill trim harness

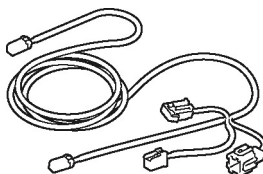


Fuse label

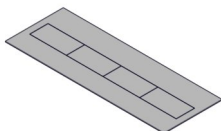


19 Wire ties




Urethane tape




Protective tape



2 Alcohol swabs



2 Protective clips




TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver
10 mm Open end wrench
Ratchet
10 mm Socket
Ruler
Masking tape
Scissors
Diagonal cutters
Isopropyl alcohol
Shop towel
Steel wire
Electrical tape

The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)


Illustration of the Door Sill Trim-Illuminated in the Vehicle

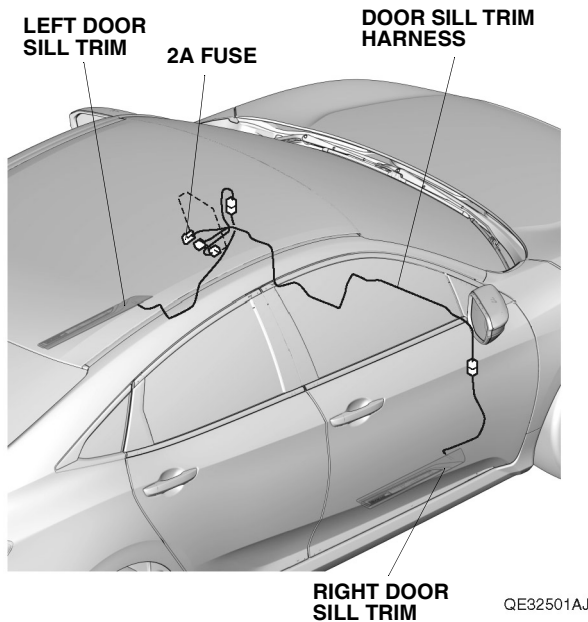


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


1. Disconnect the negative cable from the battery.
2. Remove the passenger's dashboard side lid, and unplug the vehicle connector, if equipped. Pull away the door opening seal.

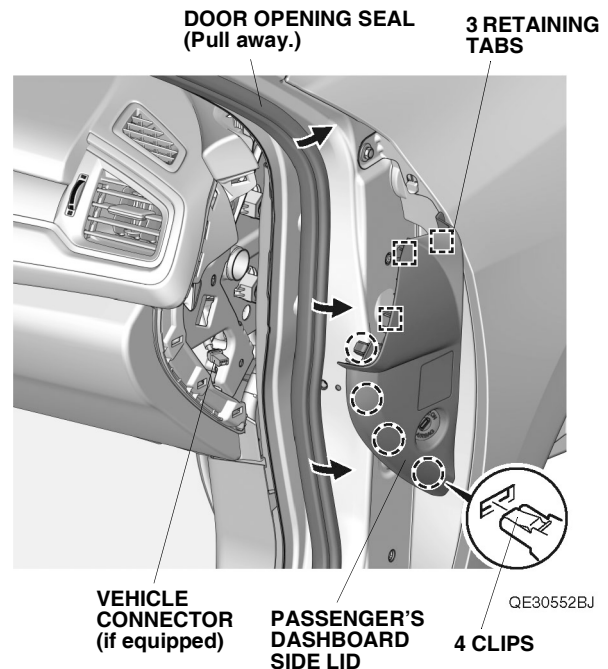


3. Remove the passenger's front door sill trim.

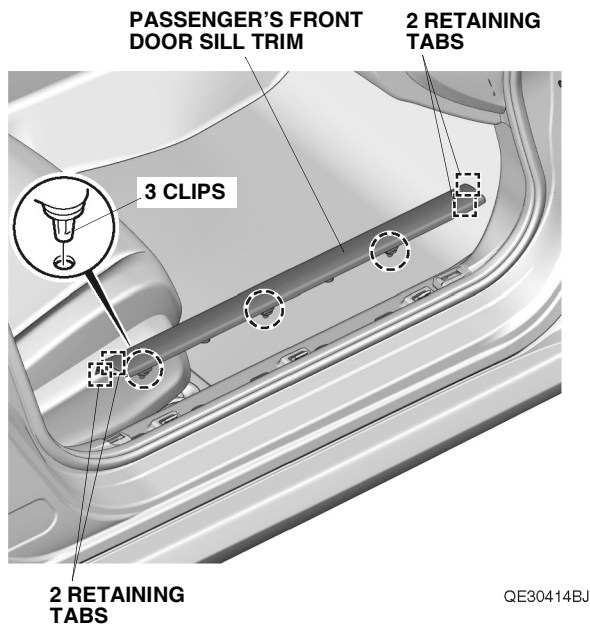


4. Pull away the door opening seal, and remove the passenger's kick panel.

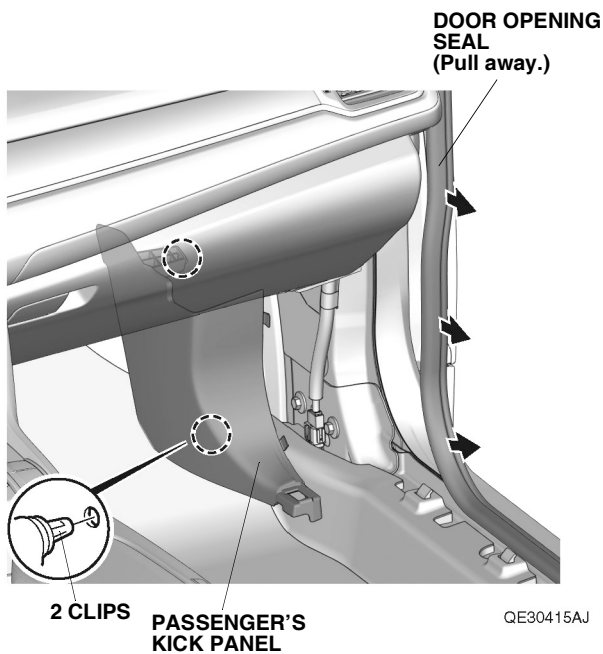


5. Remove the passenger's under cover.

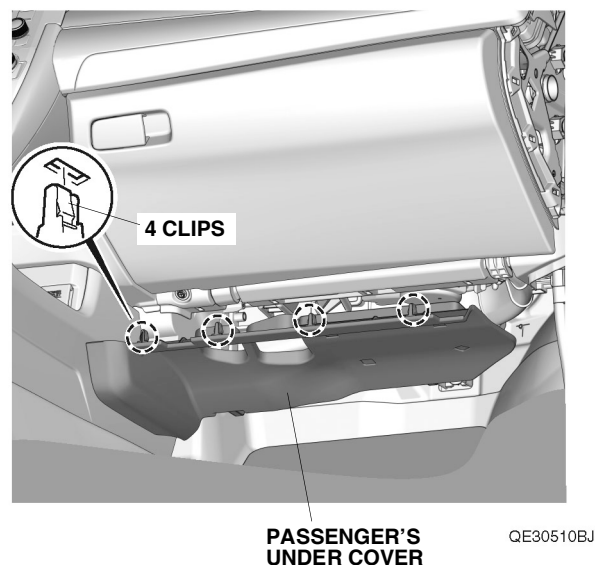


6. Open the glove box, push inward on the glove box stops and remove the glove box.

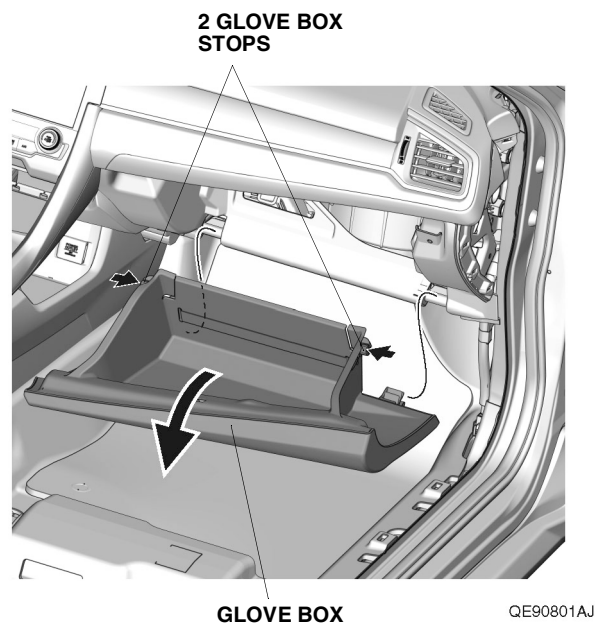


7. Remove the glove box cover, and unplug the vehicle connector, if equipped.

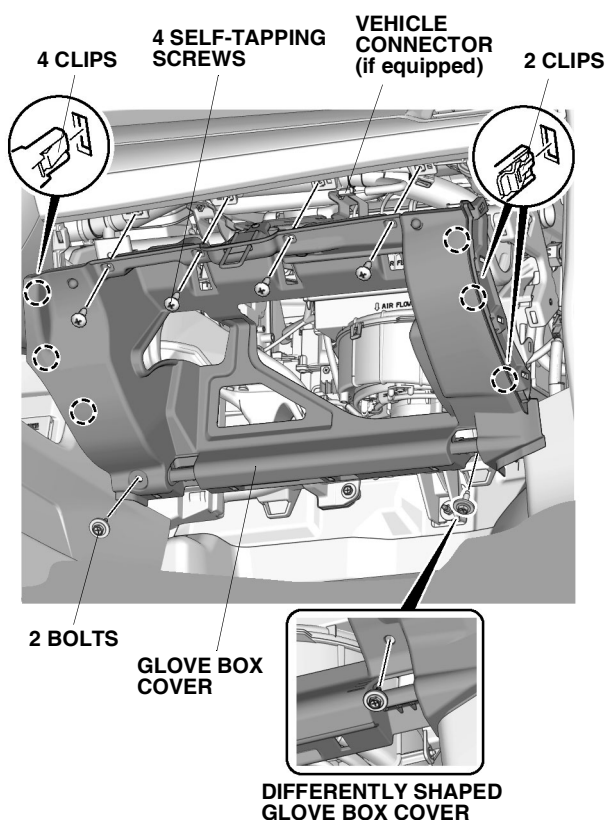

8. Remove the driver's dashboard lower cover, unplug the vehicle connectors and aspirator hose.

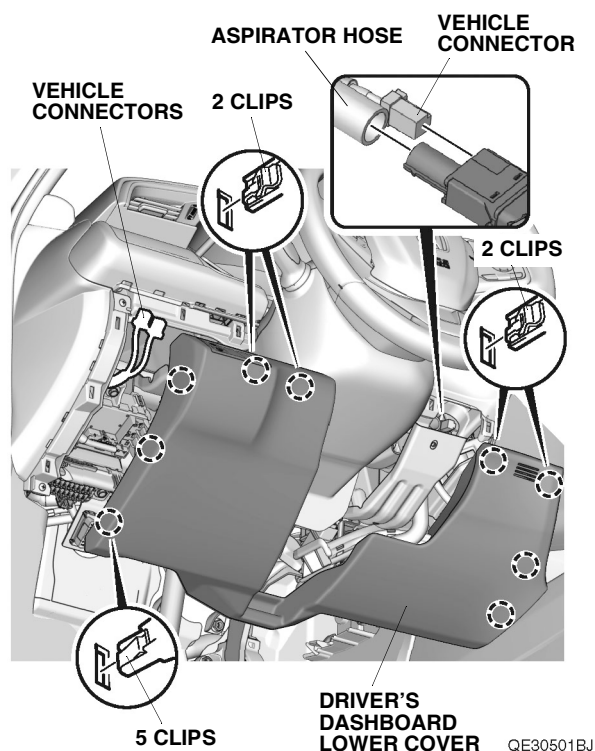


9. Remove the driver's front door sill trim.

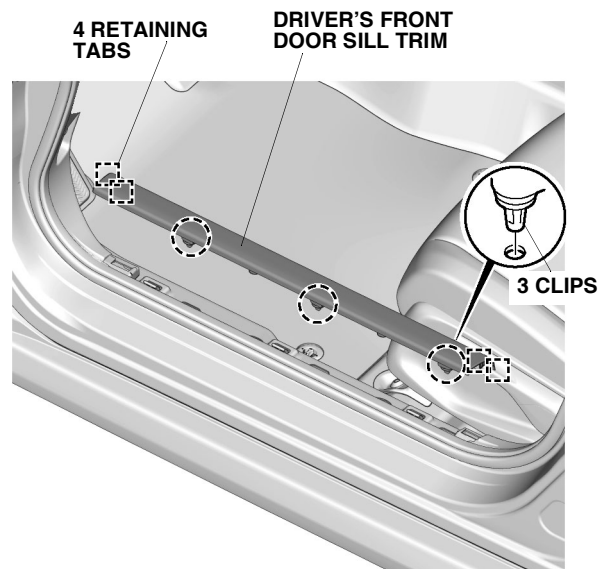


QE30412BJ

- Pull away the door opening seal, and remove the driver's kick panel.

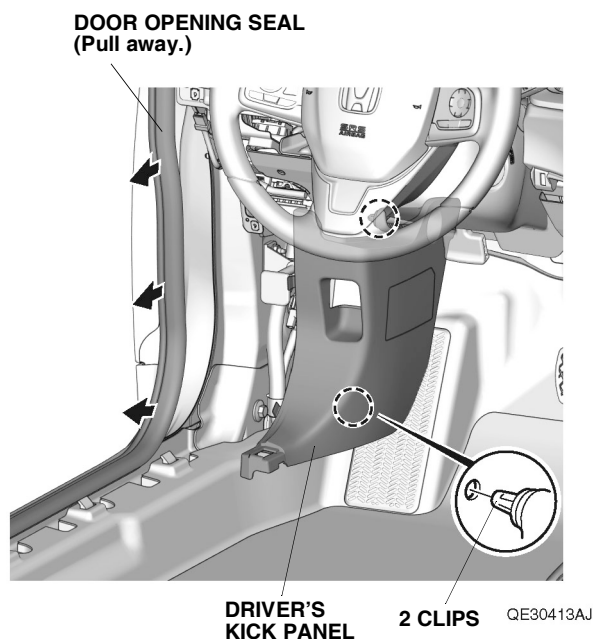



- Using isopropyl alcohol on a shop towel, thoroughly clean the fuse case where the fuse label will attach.

FUSE CASE
(Clean with isopropyl alcohol.)

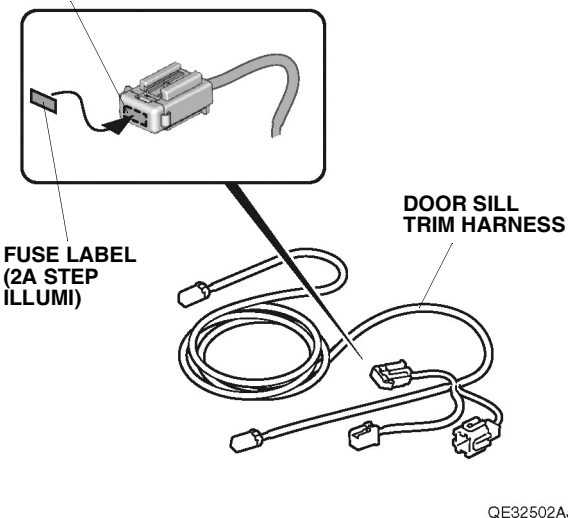


- Attach the fuse label to the door sill trim harness fuse case.

- Plug the door sill trim harness 6-pin connector into the vehicle 6-pin connector.

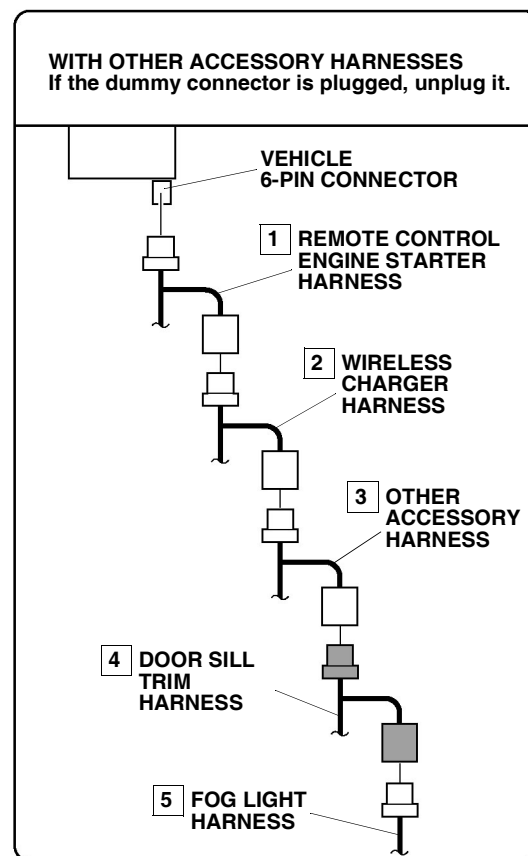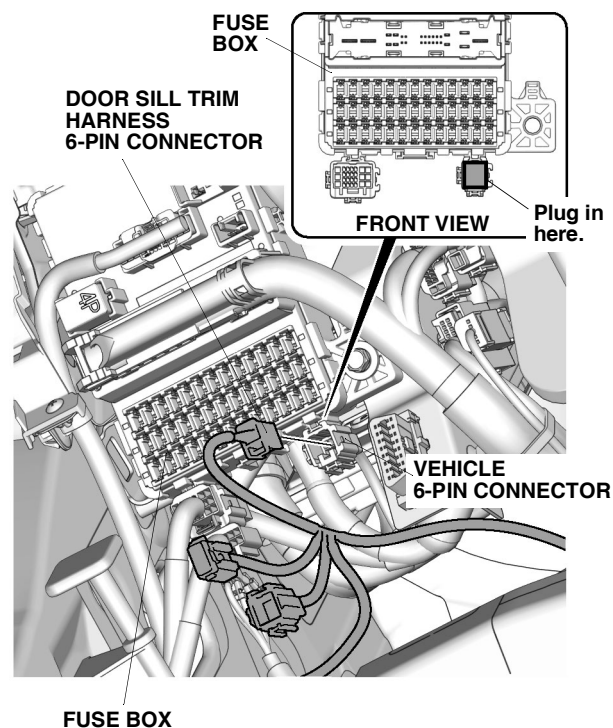


QH31308BT


14. Attach the door sill trim harness 6-pin connector to any of the positions shown.

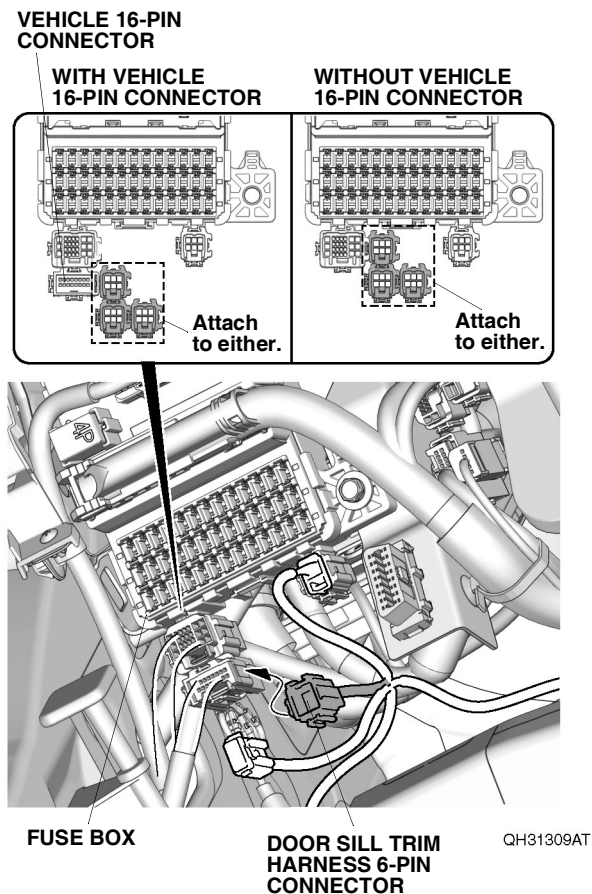


15. Attach the door sill trim harness fuse case to the vehicle connector.

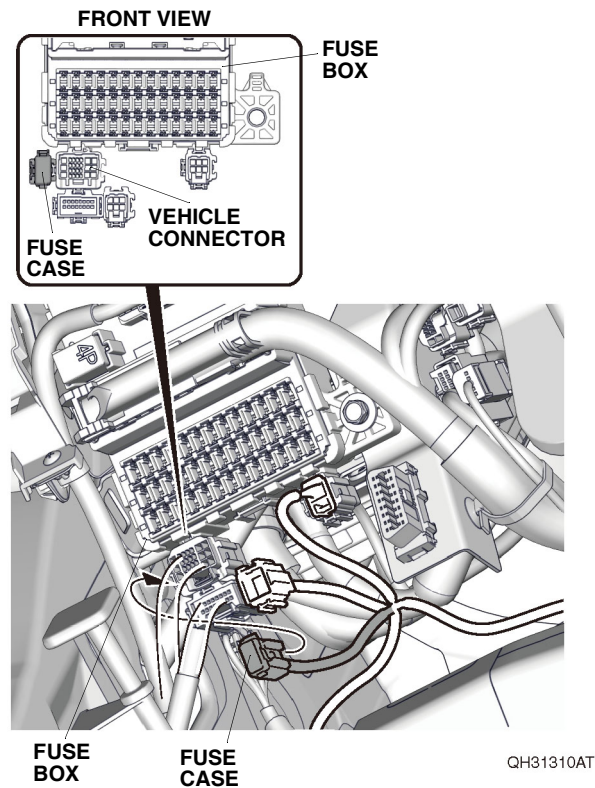

16. Route the door sill trim harness as shown. Secure the door sill trim harness to the vehicle harness and bracket with four wire ties.

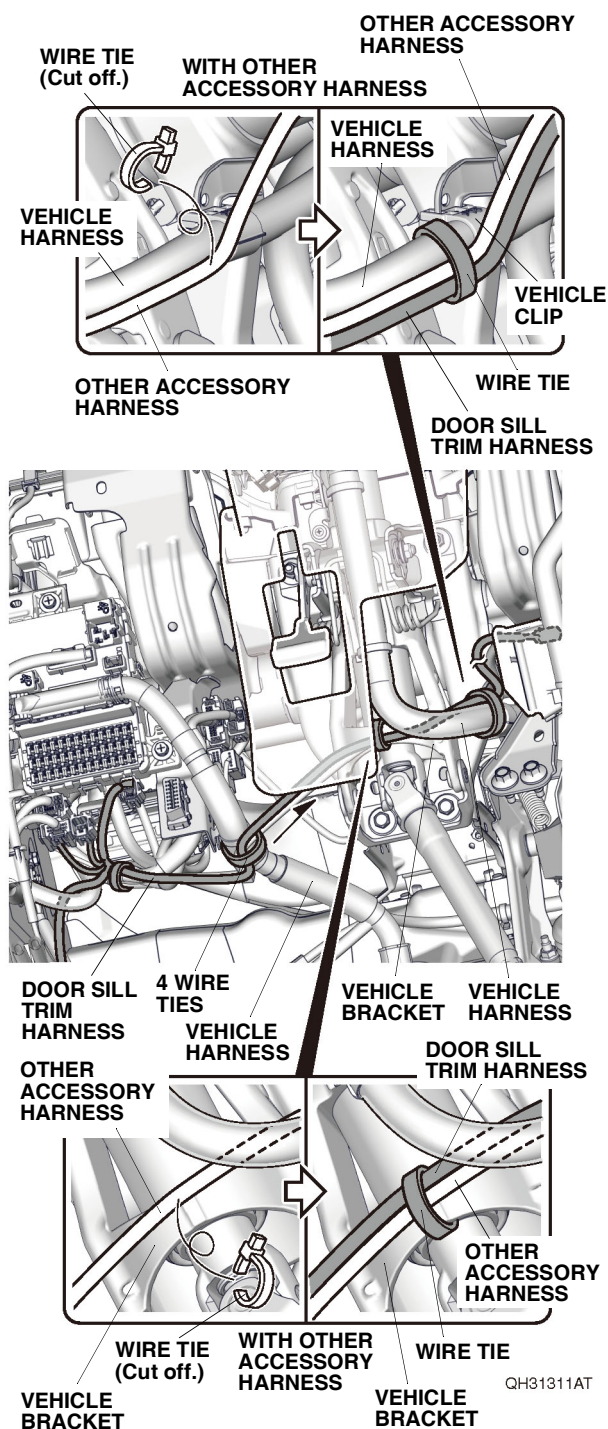


17. Secure the door sill trim harness to the vehicle duct with two wire ties.

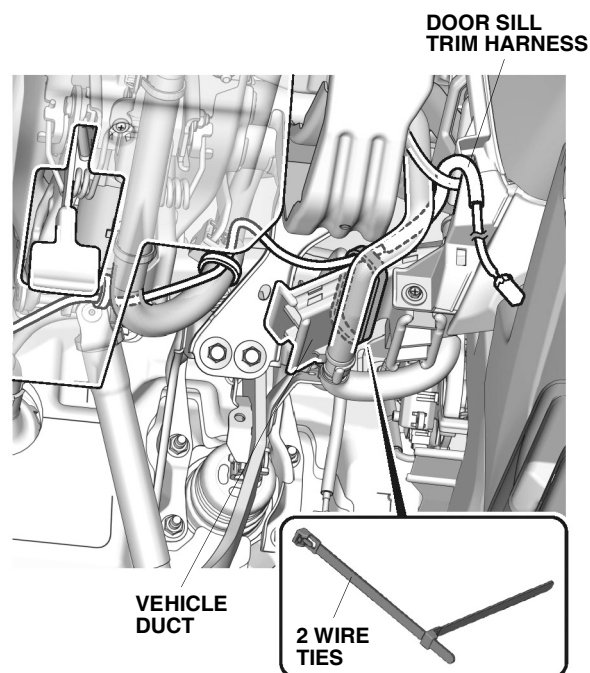



QE32507CJ

18. Route a piece of steel wire as shown.

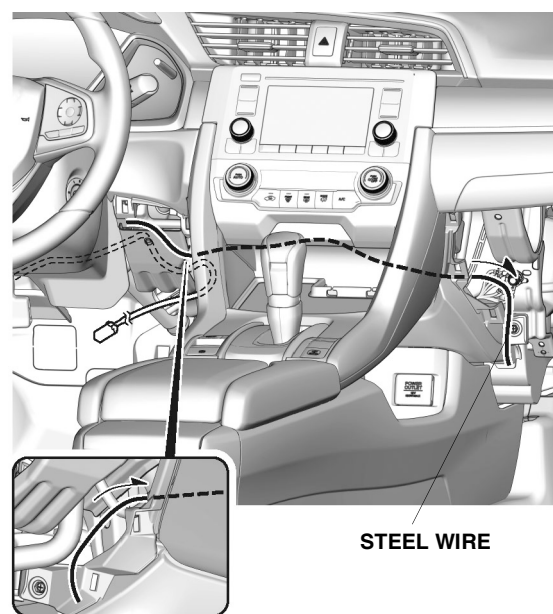

QE32529BJ


19. Attach steel wire to the door sill trim harness with electrical tape.

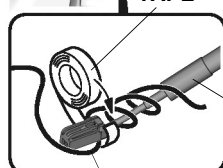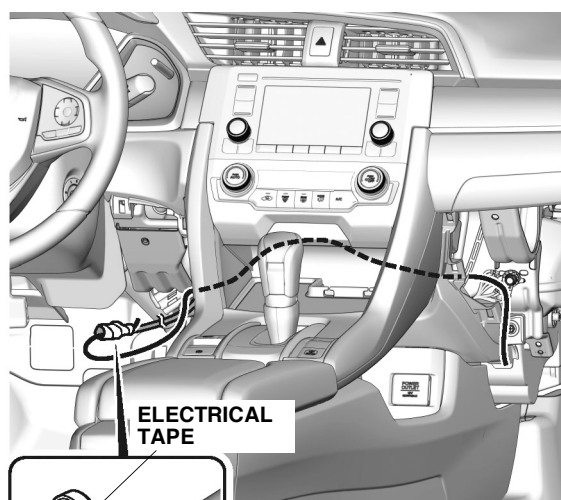

STEEL WIRE

QE32509CJ

20. Route the door sill trim harness as shown, and remove the electrical tape and steel wire.

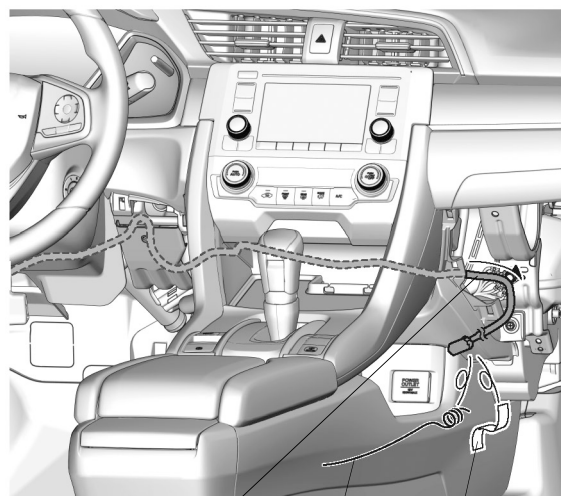


DOOR SILL TRIM HARNESS

STEEL WIRE

ELECTRICAL TAPE

QE32510CJ


21. Secure the door sill trim harness to the vehicle panel with one wire tie.

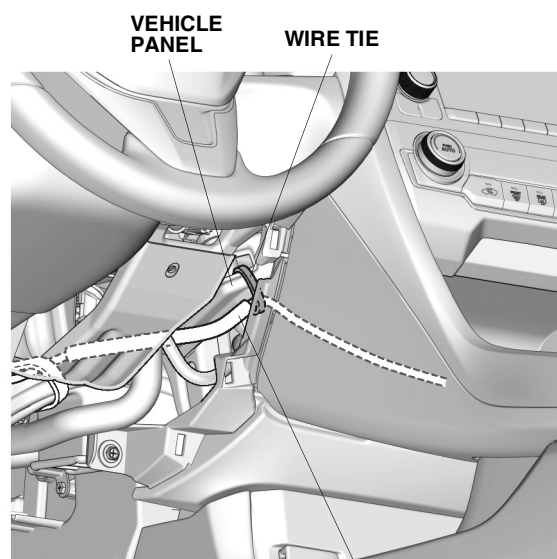

DOOR SILL TRIM HARNESS


QE32514CJ

22. Route the door sill trim harness as shown. Secure the door sill trim harness to the vehicle harness with four wire ties.

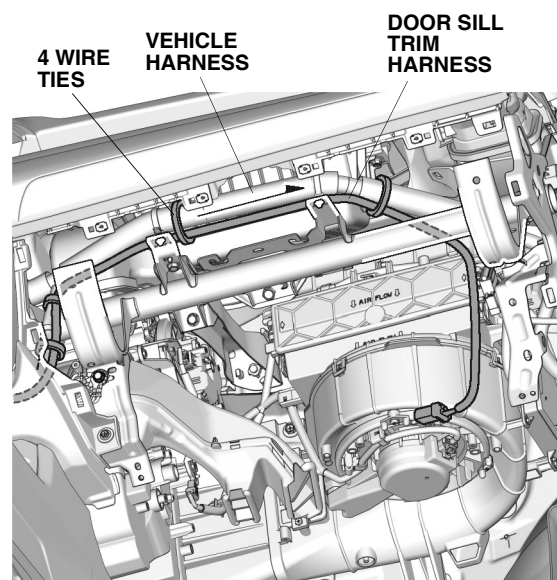


QE32512BJ

23. Using scissors, cut the protective tape as shown.

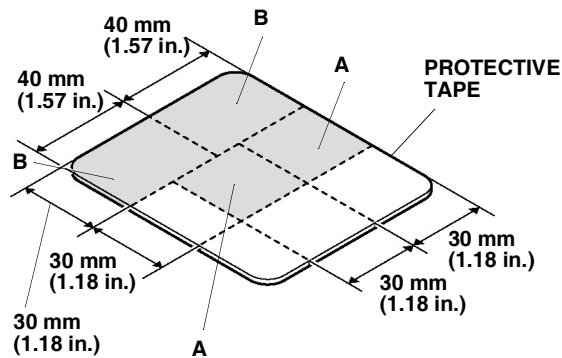

QE22410AH


24. Attach masking tape to the vehicle panel as shown.

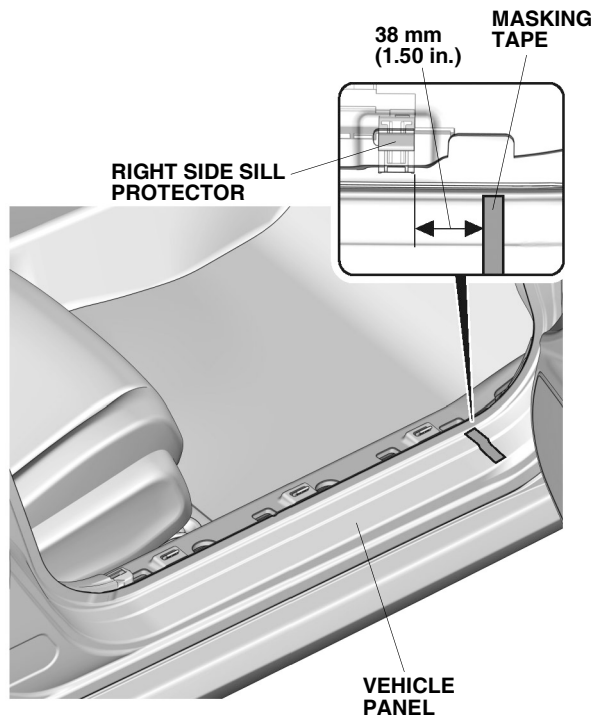

QE32515AJ


25. Peel back the ends of two adhesive backings on the right door sill trim, and attach them to the front of the trim with masking tape.

NOTE: Make sure to check the identification mark of the right door sill trim.

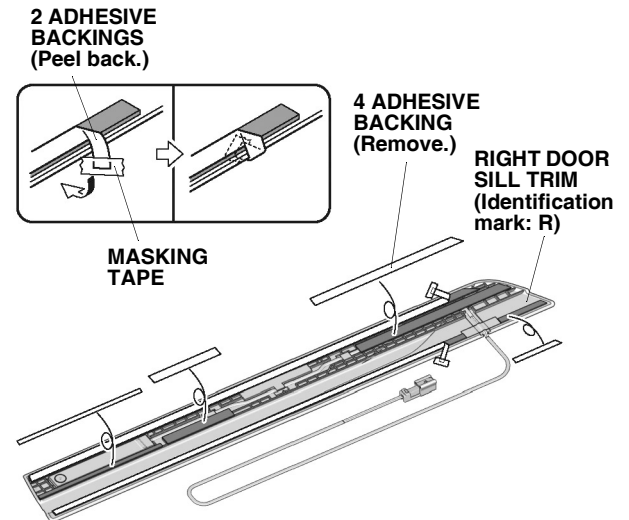

QE32516AJ


26. Remove the four adhesive backings.
27. Using an alcohol swab, thoroughly clean the vehicle panel where the right door sill trim will attach.

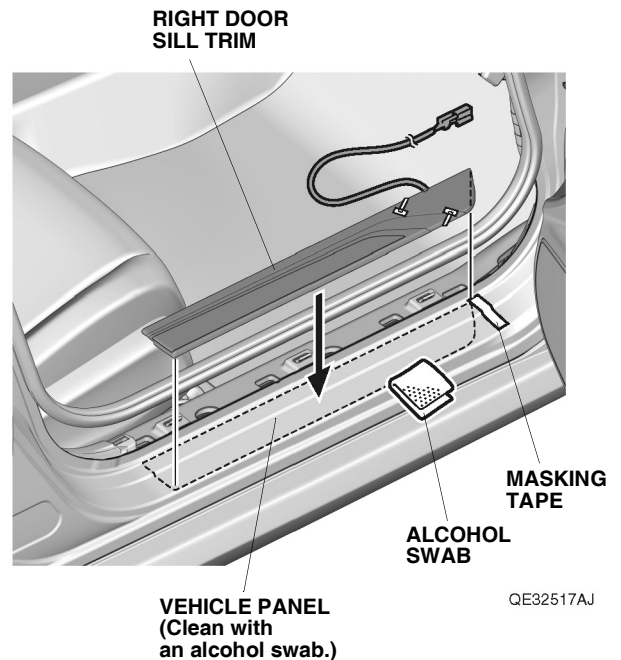

QE32517AJ

28. Line up the right door sill trim with the masking tape as shown.


29. Attach the right door sill trim to the vehicle panel by removing the two adhesive backings and pressing on the trim firmly with both hands.

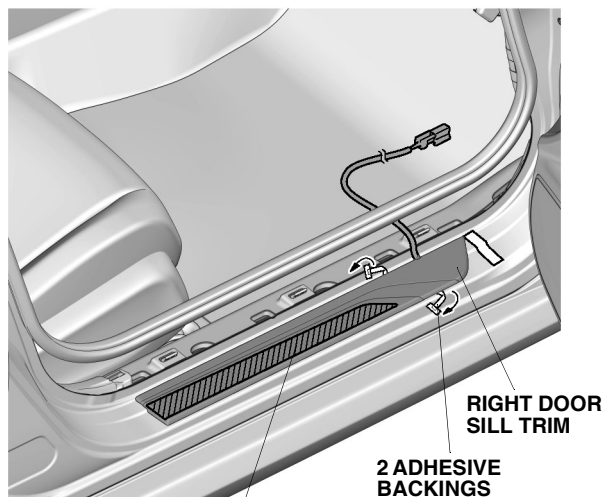

Do not apply firm pressure on the plate.


QG41101AT

30. Remove the masking tape.
31. Using isopropyl alcohol on a shop towel, thoroughly clean the vehicle panel where the protective tape will attach. Attach one piece of protective tape A to the vehicle panel as shown.

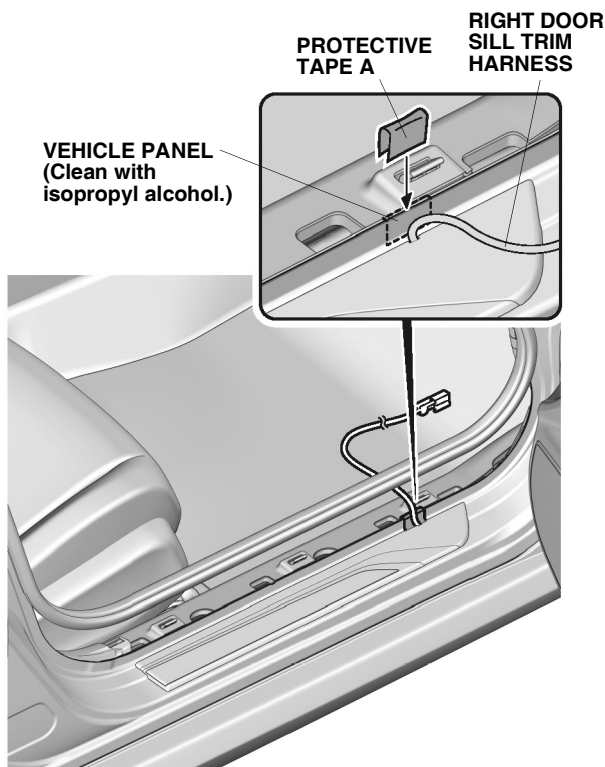

QE32519AJ


32. Install the protective clip to the protective tape A.

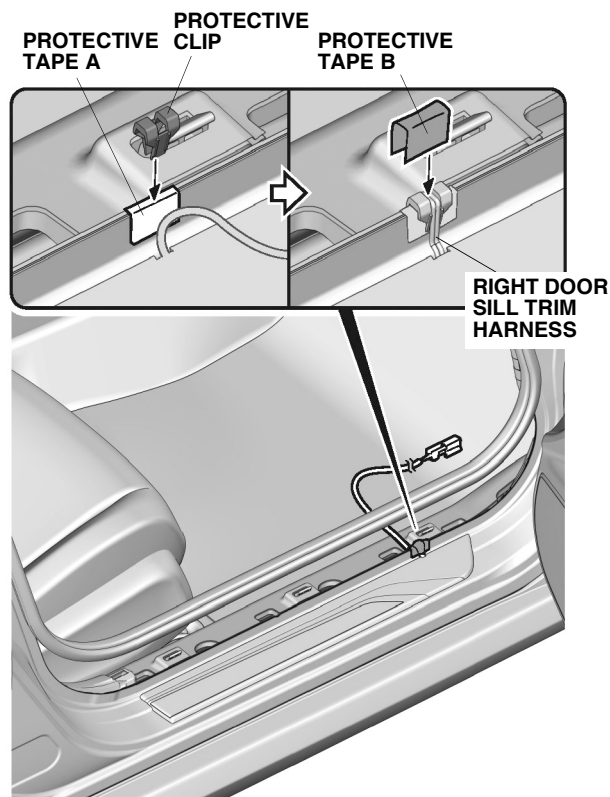

QE32520AJ


33. Route the right door sill trim harness over the protective clip as shown.
34. Attach one piece of protective tape B to the protective clip.

35. Release the right side sill protector from the clip.

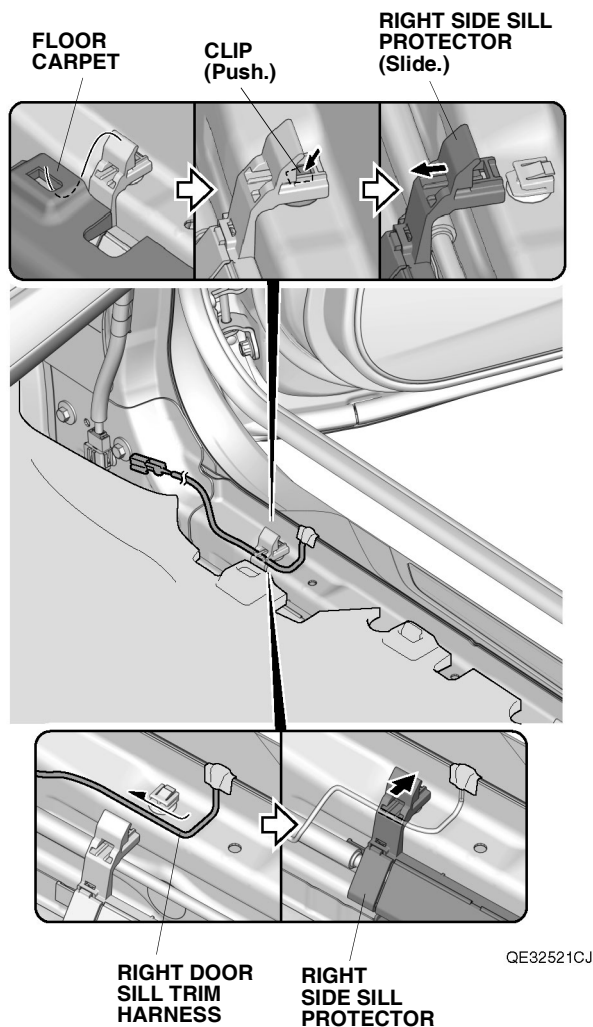


36. Route the right door sill trim harness as shown.
37. Install the right side sill protector.

38. Using isopropyl alcohol on a shop towel, thoroughly clean the vehicle panel where the aluminum tape will attach.

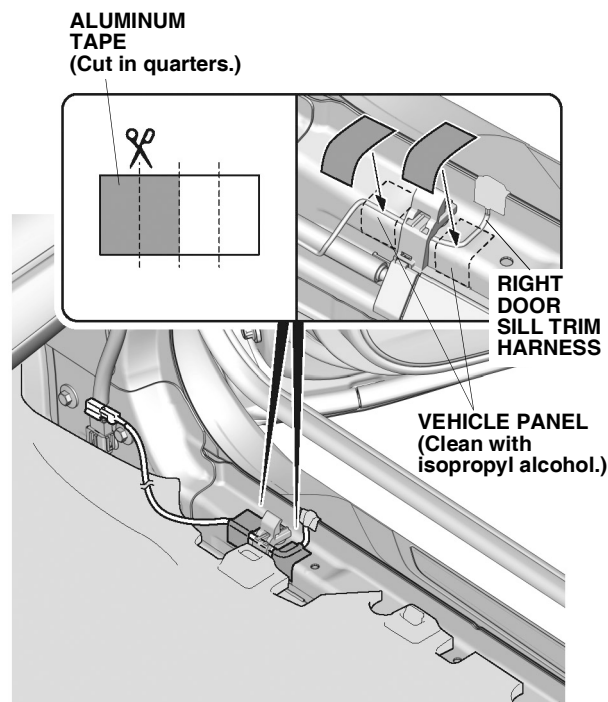


39. Using scissors, cut one aluminum tape in quarters. Secure the right door sill trim harness to the vehicle panel with two quarters of aluminum tape.
40. Repeat steps 24 through 39 to install the left door sill trim on the left side of the vehicle.

41. Using scissors, cut one urethane tape in half, and attach one piece of urethane tape around the left door sill trim 2-pin connector.

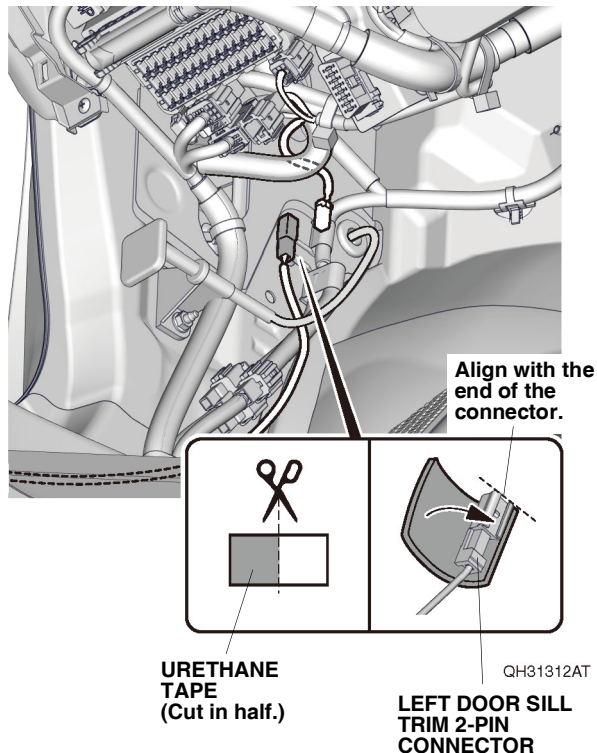


42. Plug the door sill trim harness 2-pin connector into the left door sill trim 2-pin connector.

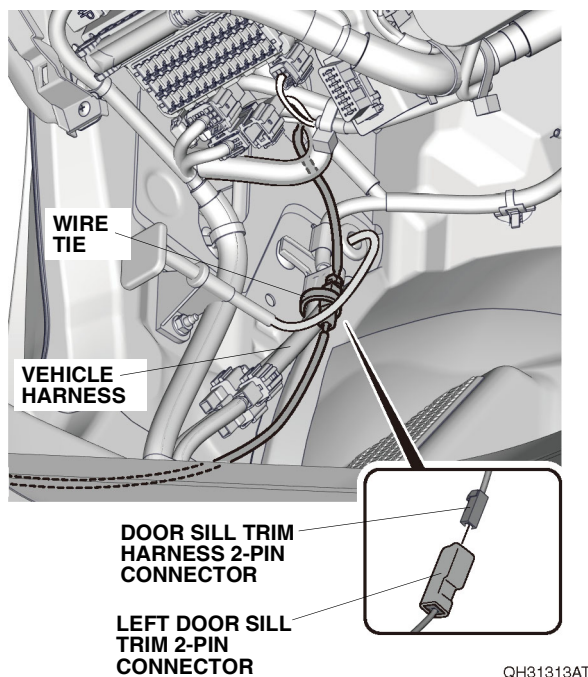


43. Secure the 2-pin connectors to the vehicle harness with one wire tie.


44. Secure the left door sill trim harness to the vehicle harness with two wire ties.

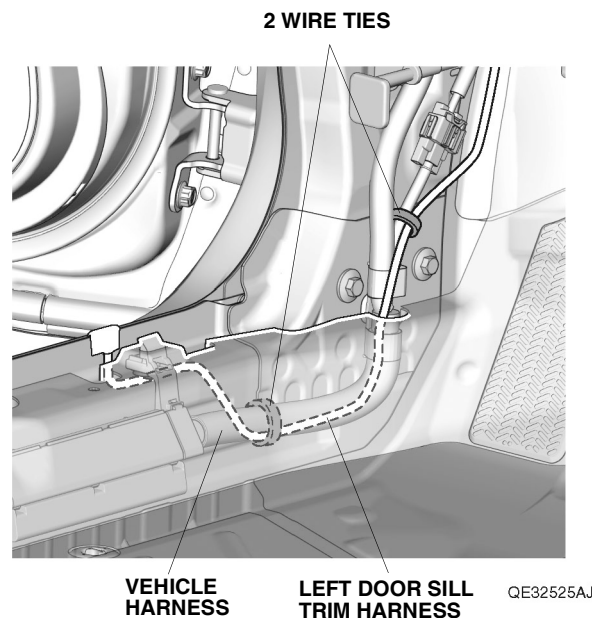

45. Attach one piece of urethane tape around the right door sill trim 2-pin connector.

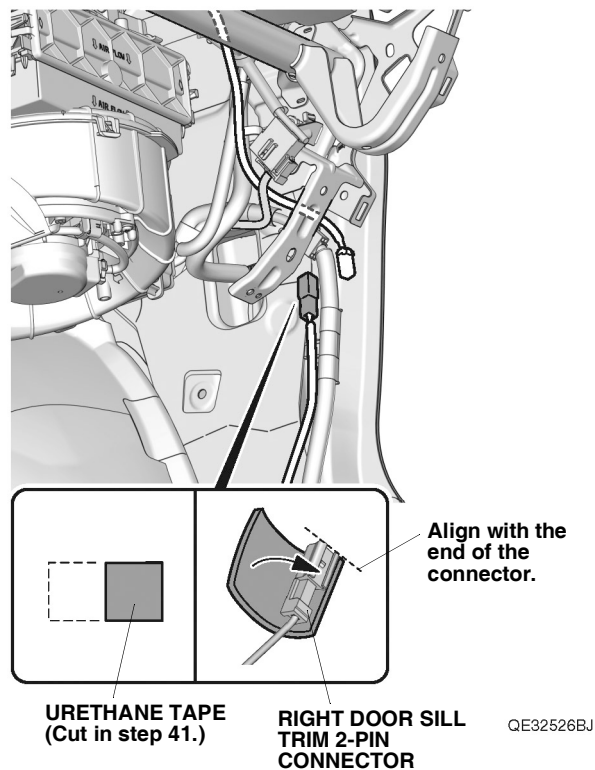


46. Plug the door sill trim harness 2-pin connector into the right door sill trim 2-pin connector.

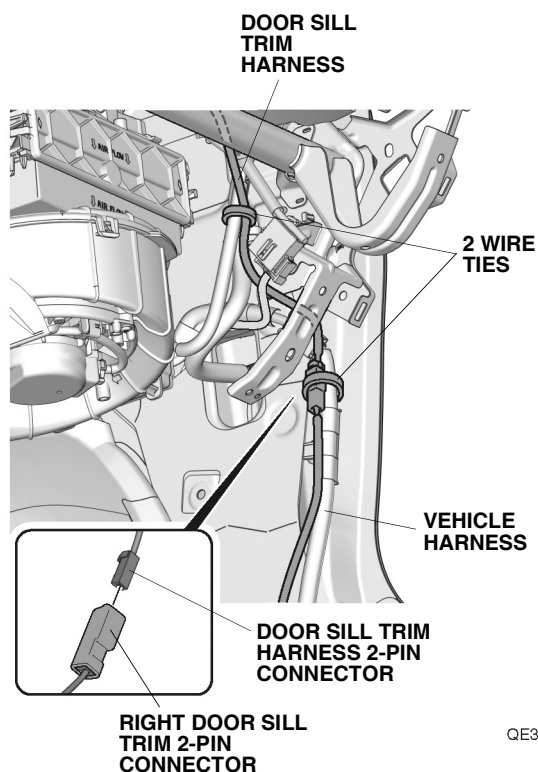

47. Secure the 2-pin connectors to the vehicle harness with one wire tie.
48. Secure the door sill trim harness to the vehicle harness with one wire tie.

49. Secure the right door sill trim harness to the vehicle harness with three wire ties.

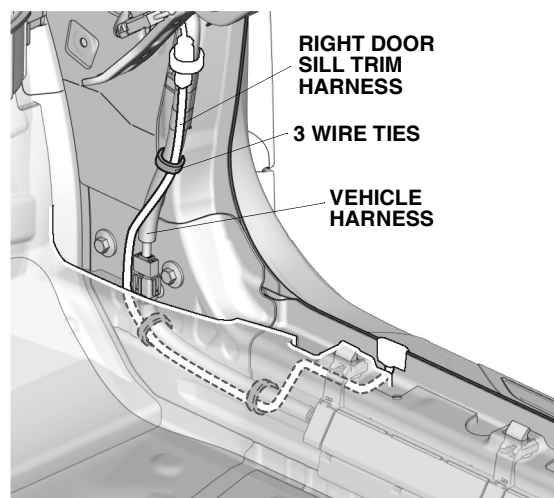

QE32528BJ

50. Check that all wire harnesses are routed properly and all connectors are plugged in.
51. Install all removed parts.
52. Connect the negative cable to the battery.
53. Turn the engine switch to ON; the SRS indicator should come on for about 6 seconds and then go off.
54. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
55. Set the clock on vehicles without navigation.
56. If necessary, restore the systems back to normal operation as described in the service information.

Check the Operation of the Illuminated Door Sill Trim

57. Make sure the lights come on when you open the front doors.