



## INSTALLATION INSTRUCTIONS


Accessory <b>CARGO NET</b> P/N 08L96-TGG-100	Application <b>2021 CIVIC</b> <b>5-DOOR</b>	Publications No. <b>VERSION 1</b>
		Issue Date <b>AUG 2020</b>

### PARTS LIST


Cargo net



4 Snaps

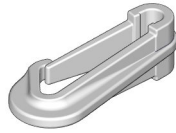

### Illustration of the Cargo Net Installed in the Vehicle

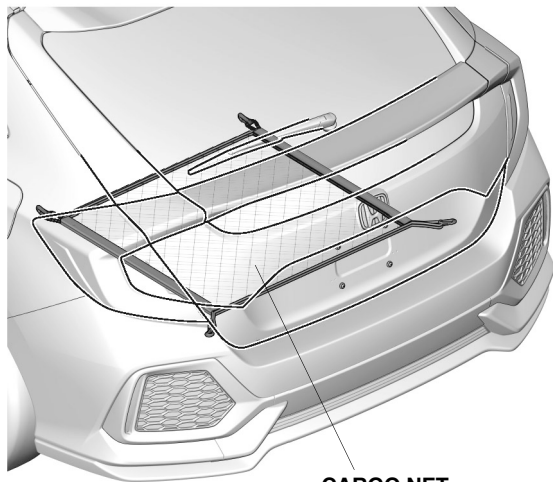


CARGO NET

QED2401AJ

### INSTALLATION


#### Installing the Cargo Net

1. Fold the cargo net in half and attach the four snaps to the cargo net as shown.

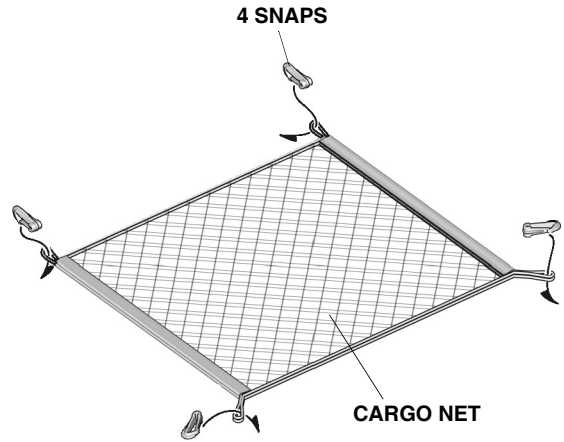

QED2402AJ

2. Open the tailgate, and secure the four snaps to the hooks in the luggage area.

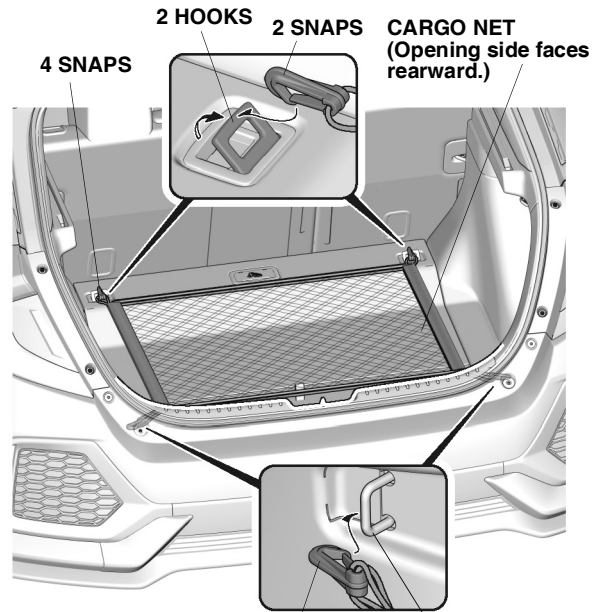

QED2403AJ