<u>www.collegehillshonda.com</u>

INSTALLATION INSTRUCTIONS

BLACK EMBLEMS


Аррисано


2022 CIVIC

Publications No.

Issue Date
JUN 2021

GENERAL VIEW

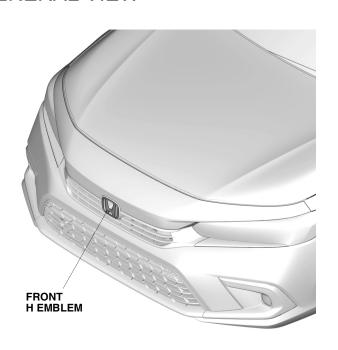

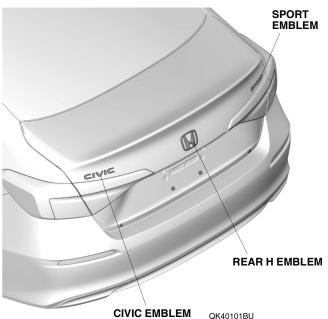

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of following symbols:

*All symbols are not used in all installation instructions.

A DANGER

You will be killed or seriously hurt if you do not follow the instructions.

A WARNING

You can be killed or seriously hurt if you do not follow the instructions.

A CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.



Indicates a prohibited action.

Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle. (instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.




Clean with isopropyl alcohol.



Return the original part to the customer. (Do not reuse.)


Wire Harness Routing Precaution

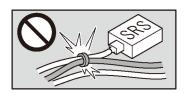

Do not secure the accessory harness to the SRS harness. (except for instruction cases.)



Push the connectors and terminals together until they lock.



Do not pull the harness to unplug the connectors.



Install removed connectors in their original location.



Do not pull the harness.




Secure the accessory harness as shown.





Do not pinch the harness.



Cut off the excess wire tie.

Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and the safety of others.
- Be careful not to damage the vehicle or the parts.
- · Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- The illustrations may differ slightly from the actual accessory.

Safety: Electric Parts


Always disconnect the negative cable from the battery before beginning work.

Safety: Accessory


- Always use the parts and tools specified in the installation instructions.
- · Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

PARTS LIST

Black Emblems Kit (P/N 08F20-T20-100)

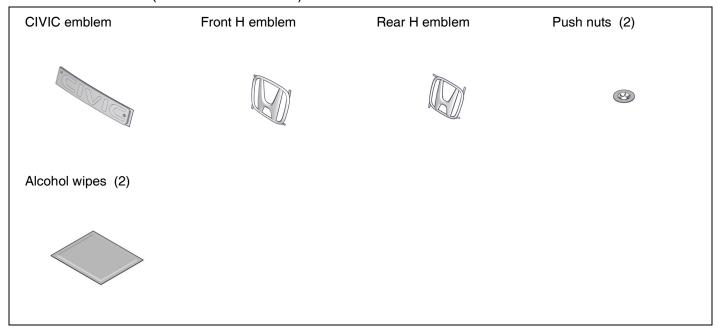

Black Sport Emblem Kit (P/N 08F20-TVA-100C)

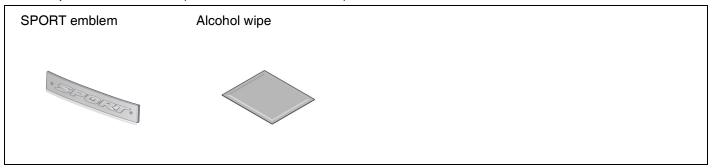

REQUIRED TOOLS AND SUPPLIES

- 10 mm Open end wrench
- · Phillips screwdriver
- Blanket

- Ratchet
- · Masking tape
- String

- 6 mm and 10 mm Sockets
- · Diagonal cutters
- · Needle nose pliers


The following tools are available through the Honda Tool and Equipment Program:

- Trim Tool Set (T/N SOJATP2014)
- Rubber Roller (T/N MHLE54D)
- Plastic Trim Tool (T/N SILTRIMTL10)

Push Pin Pliers (T/N 07AAC-001A101)

INSTALLATION


1. Disconnect the negative cable from the battery.

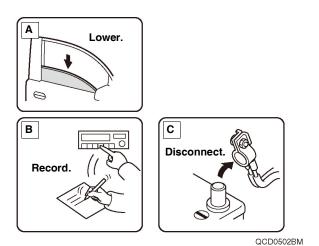


2. Attach masking tape to protect the vehicle.

NOTE


Do not remove the masking tape until after the parts are installed.

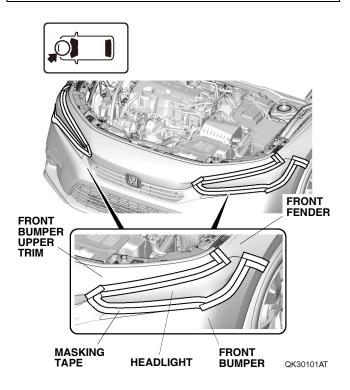


3. Remove the clips.

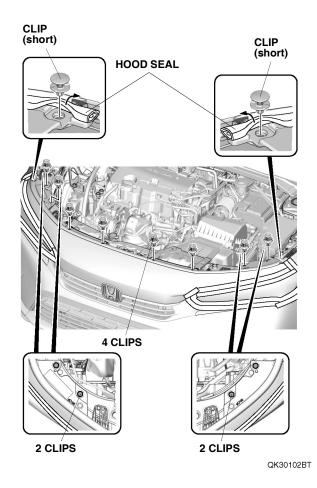

4. Remove the self-tapping screws, clips, and bolts.

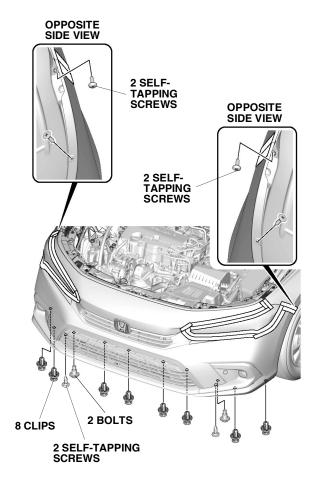


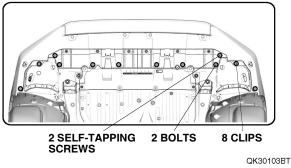

5. Release the retaining tabs.


NOTE

- Release the retaining tabs in order from outside.
- Make sure to release the retaining tabs in the correct orientation.

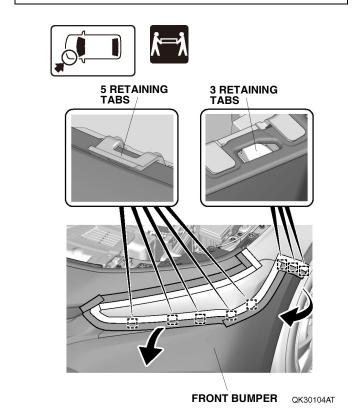


6. Repeat step 5 on the other side.

7. Remove the front bumper.

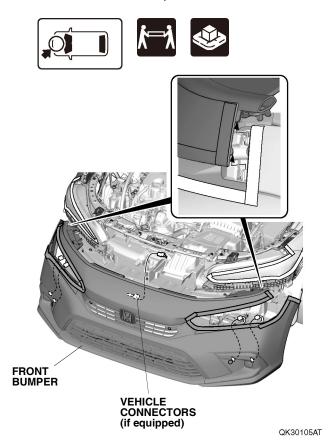

8. Remove the front H emblem.

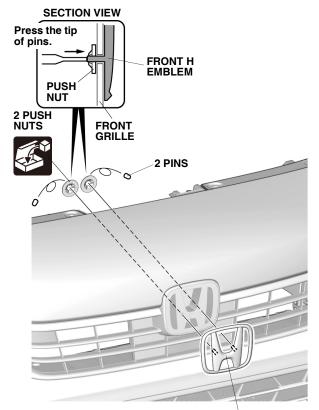


FRONT H EMBLEM

QK40102BU




9. Clean the front grille.

NOTE Allow to dry thoroughly.

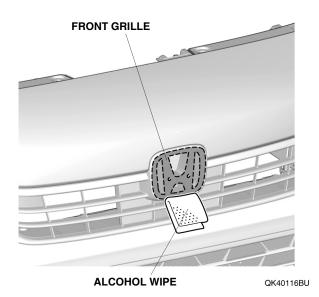

10. Install the front H emblem.

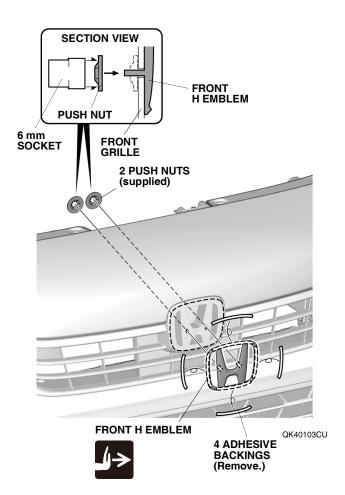


11. Secure the front H emblem.



12. Remove the trunk lid trim panel.




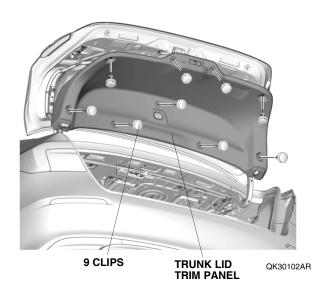

13. Remove the rear H emblem.

NOTE


- Do not damage the trunk lid when removing the rear H emblem with the string.
- Make sure to thoroughly remove the adhesive tape from the trunk lid.

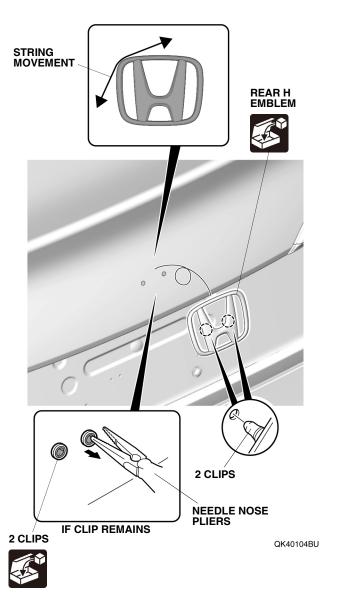


14. Clean the trunk lid.

NOTE

Allow to dry thoroughly.

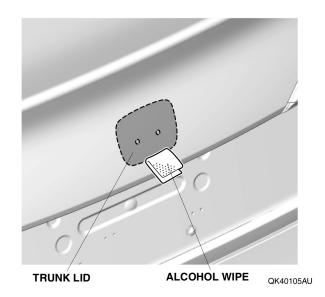


15. Install the rear H emblem.

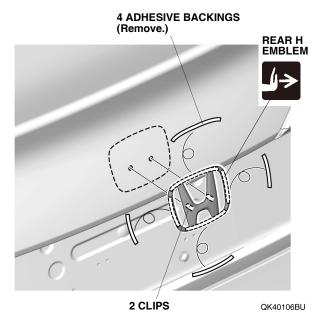


16. Secure the rear H emblem.



17. Remove the guide form.

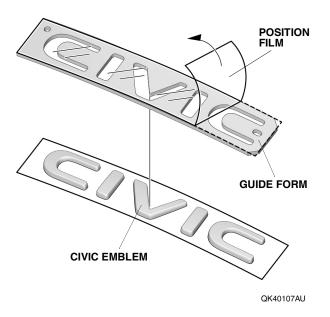


18. Install the guide form.

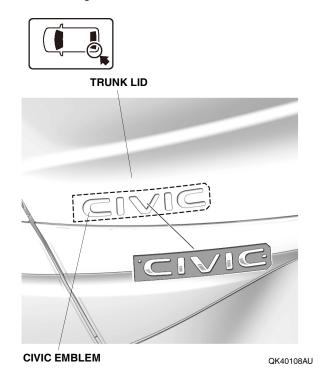

19. Attach the masking tape.



20. Remove the guide form.

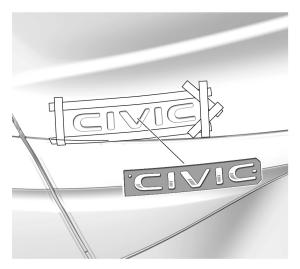


QK40110AU

21. Remove the CIVIC emblem.


NOTE

- Do not damage the trunk lid when removing the CIVIC emblem with the string.
- Make sure to thoroughly remove the adhesive tape from the trunk lid.

STRING MOVEMENT

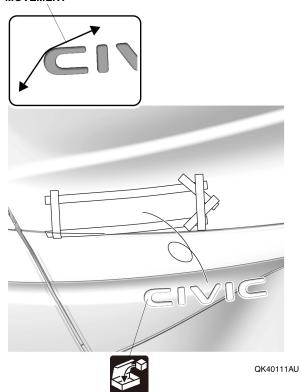


22. Install the guide form.

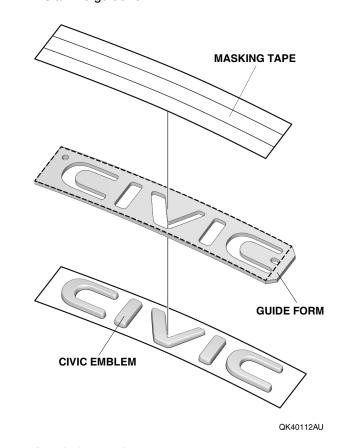


- 23. Attach the masking tape.
- 24. Clean the trunk lid.

NOTE


Allow to dry thoroughly.

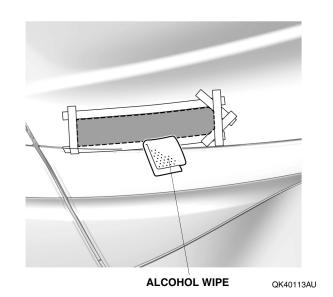

25. Line up the guide form.

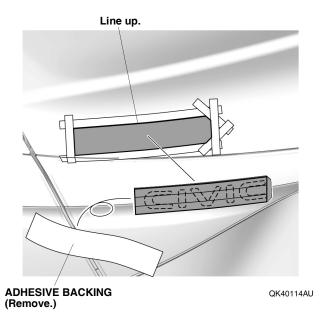


- 26. Attach the CIVIC emblem.
- 27. Remove the guide form.

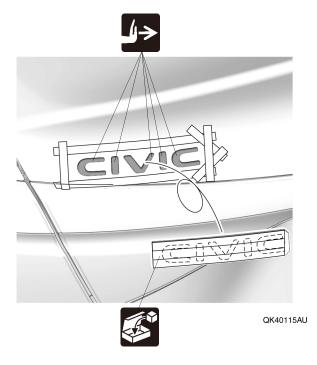


28. Secure the CIVIC emblem.



- 29. Remove the masking tape.
- 30. Choose one of these options.




31. Remove the guide form.

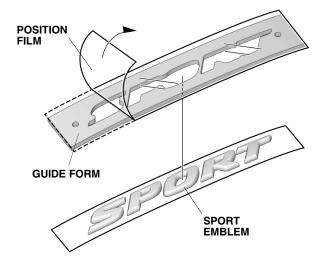

QK40202AU

32. Install the guide form.

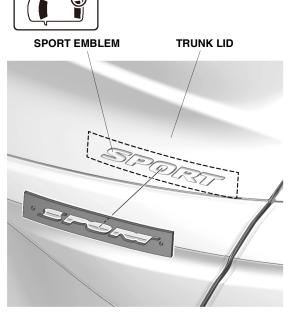


QK40203AU

33. Attach the masking tape.



QK40204AU

34. Remove the guide form.

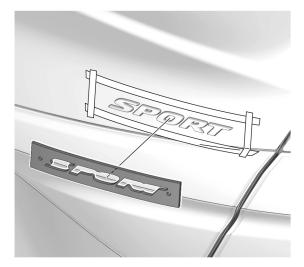


QK40205AU


35. Remove the SPORT emblem.

NOTE

- Do not damage the trunk lid when removing the SPORT emblem with the string.
- Make sure to thoroughly remove the adhesive tape from the trunk lid.

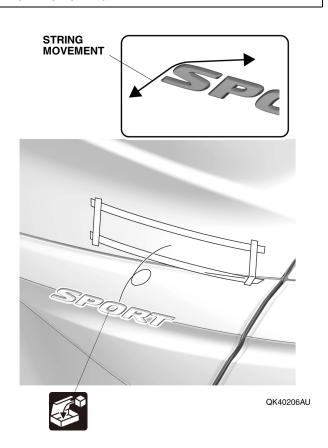


36. Install the guide form.

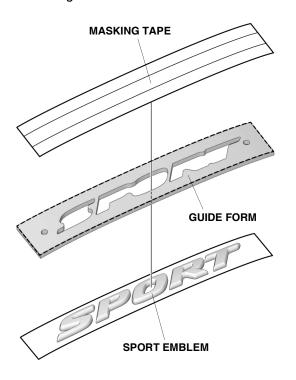


QK40207AU

- 37. Attach the masking tape.
- 38. Clean the trunk lid.

NOTE Allow to dry thoroughly.

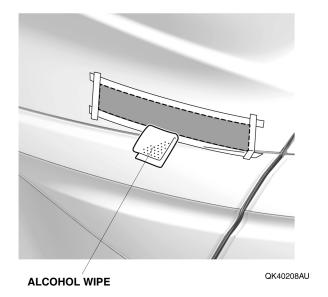


39. Line up the guide form.

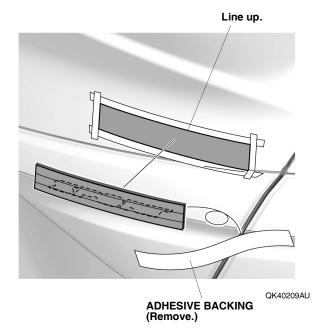

- 40. Attach the SPORT emblem.
- 41. Remove the guide form.




42. Secure the SPORT emblem.

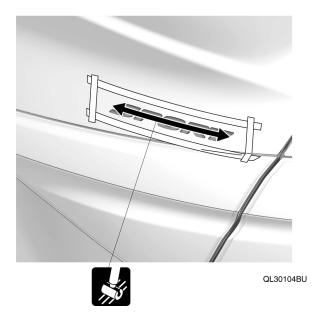

- 43. Remove the masking tape.
- 44. Check that all parts are installed and properly routed.

NOTE

- Check that all harnesses are not pulled or pinched.
- Make sure all clips and wire ties are securely installed.
- 45. Install all removed parts.
- 46. Connect the negative cable to the battery.

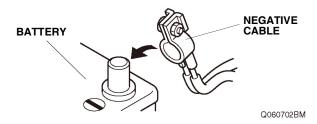

- 47. Make sure all accessories and systems operate properly.
- 48. If necessary, restore the systems back to normal operation as described in the service information.
- 49. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.