



INSTALLATION INSTRUCTIONS

Accessory

CARGO NET

Application

2022 CIVIC


Publications No.

All

Issue Date

JUN 2021

GENERAL VIEW

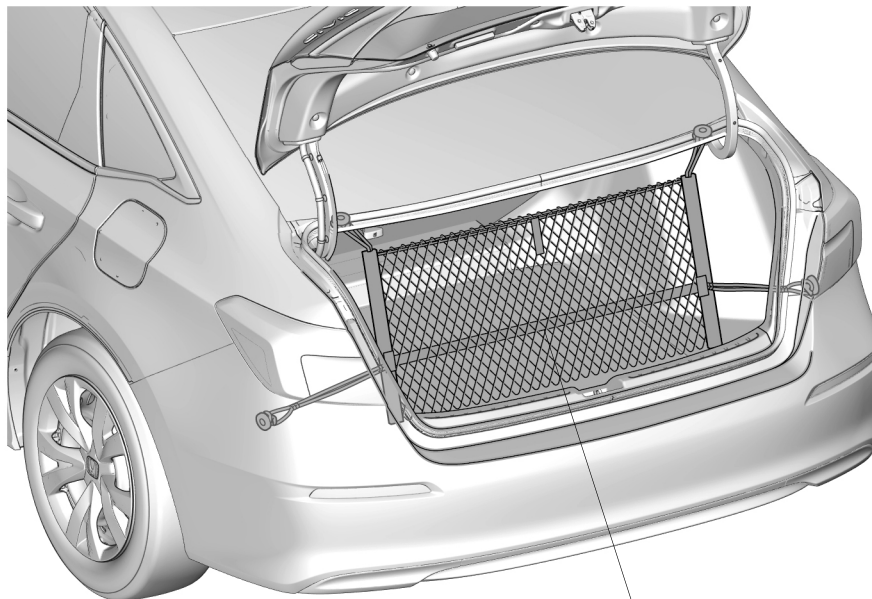

CARGO NET

QK40401BJ

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of following symbols:

*All symbols are not used in all installation instructions.



DANGER

You will be killed or seriously hurt if you do not follow the instructions.



WARNING

You can be killed or seriously hurt if you do not follow the instructions.



CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.



Indicates a prohibited action.

Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle.
(instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the customer.
(Do not reuse.)

Safety: General






- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and the safety of others.
- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.

Safety: Accessory

Always use the parts and tools specified in the installation instructions.

PARTS LIST

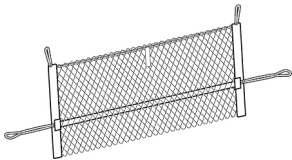Cargo Net Kit (P/N 08L96-T20-100)

Cargo net	Anchors (4)	Bolts (4)	Rivet nuts (4)
			
Accessory User's Information Manual			
			

REQUIRED TOOLS AND SUPPLIES


- 19 mm Open end wrench
- Drill
- File
- Eye protection (face shield, safety goggles, etc.)
- Hex wrench
- 9 mm Drill bit
- Ruler
- Clip puller
- Touch-up paint
- Masking tape

The following tools are available through the Honda Tool and Equipment Program:

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)
- Rivet nut tool, 6 mm (T/N 07AAE-000A100)

INSTALLATION

1. Open the trunk lid.
2. Remove the clip.




LEFT TRUNK
SIDE TRIM PANEL

CLIP



QK40402AJ


3. Drill the left trunk side trim panel and the vehicle panel.

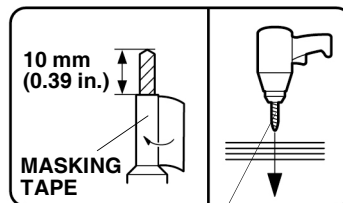

9 mm DRILL BIT




HOLE

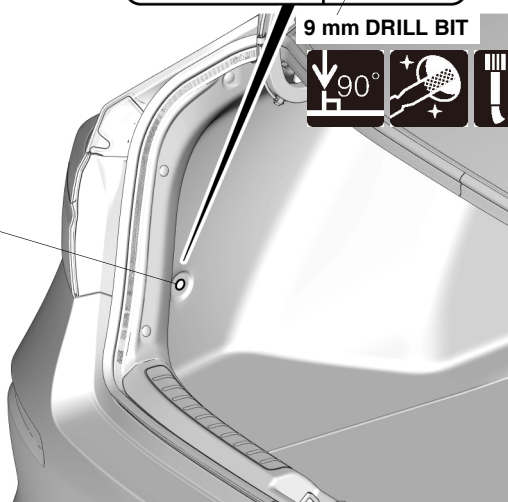

QKD2501AJ


4. Drill the vehicle panel.

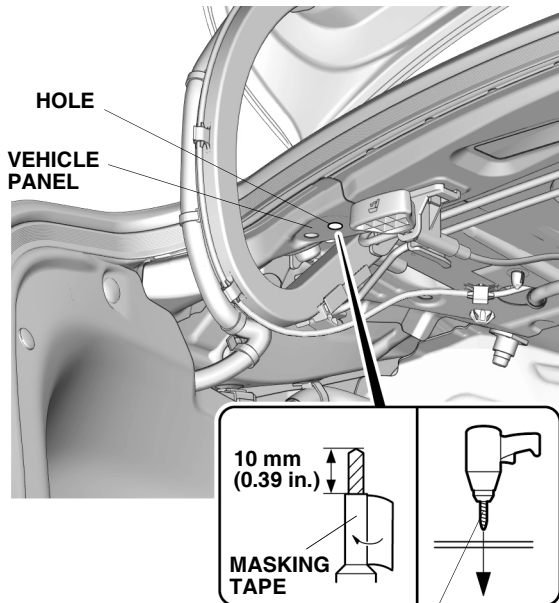

9 mm DRILL BIT QKD2502AJ




5. Repeat the same procedures on the other side.

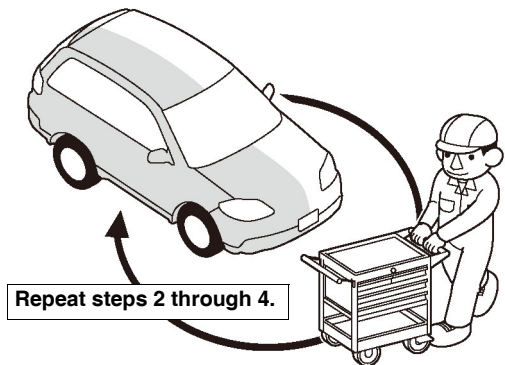

Q9D1014AM

6. Pull back the left trunk side trim panel.



WEATHERSTRIP

LEFT TRUNK
SIDE TRIM
PANEL

3 CLIPS

QKD2503AJ

7. Choose one of these options.


- With self opening trunk lid

To step 8

- Without self opening trunk lid



To step 9

8. Pull back the right trunk side trim panel.

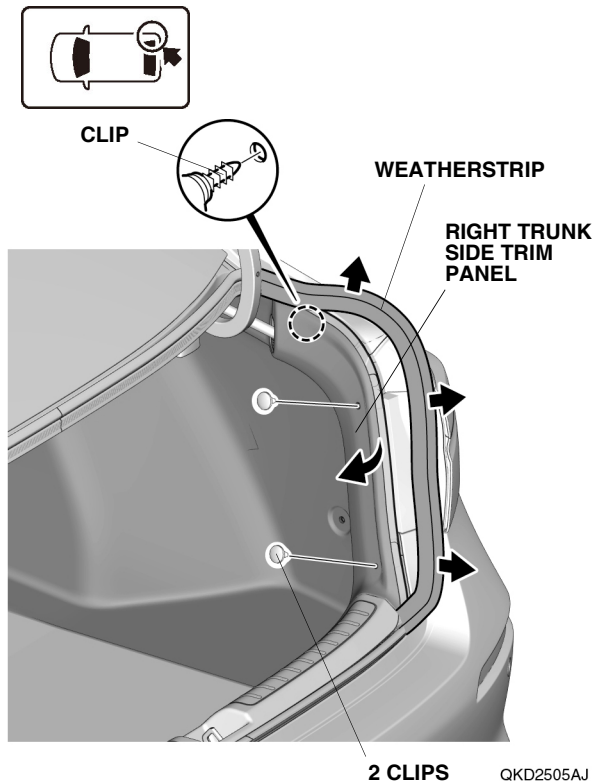


To step 10

9. Pull back the right trunk side trim panel.

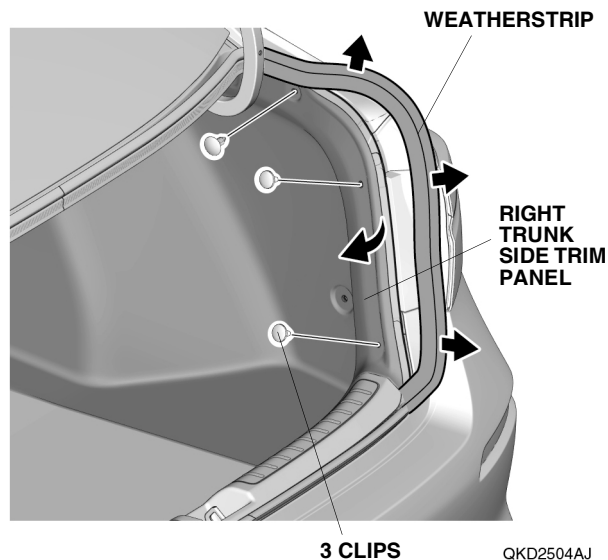


10. Thread the rivet nut.

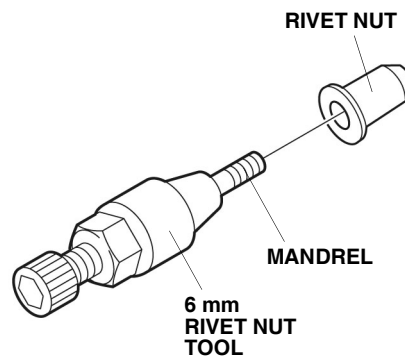


QG20906AN

11. Install the rivet nut.

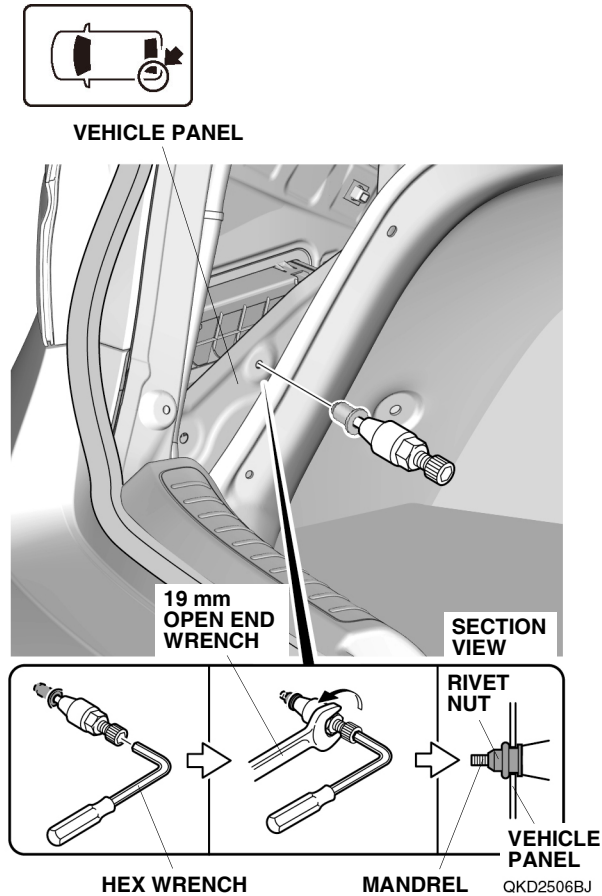


12. Thread the rivet nut.

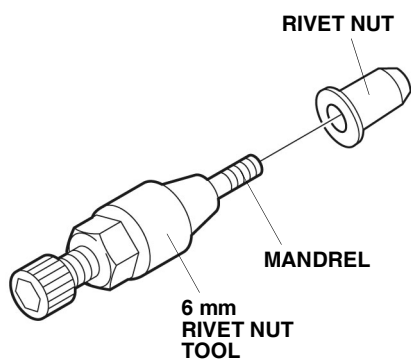


QG20906AN

13. Install the rivet nut.

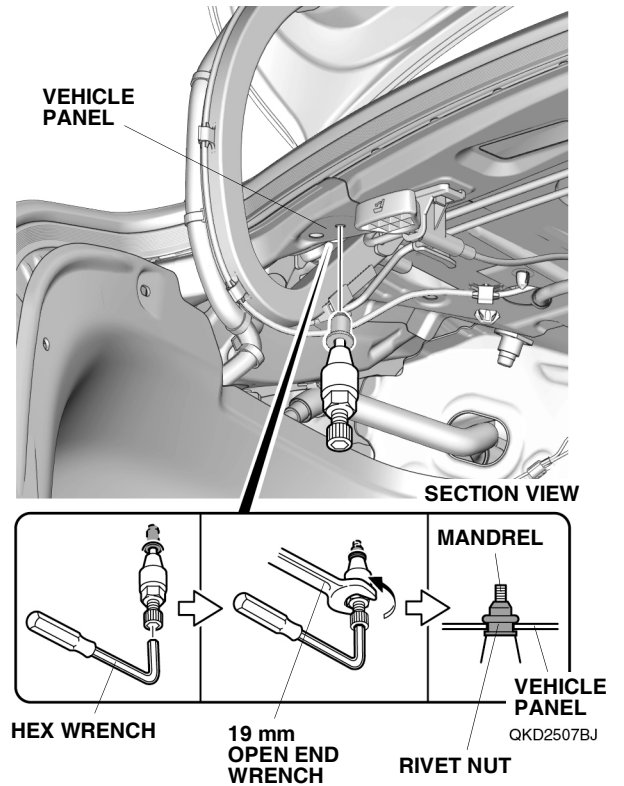


14. Repeat the same procedures on the other side.

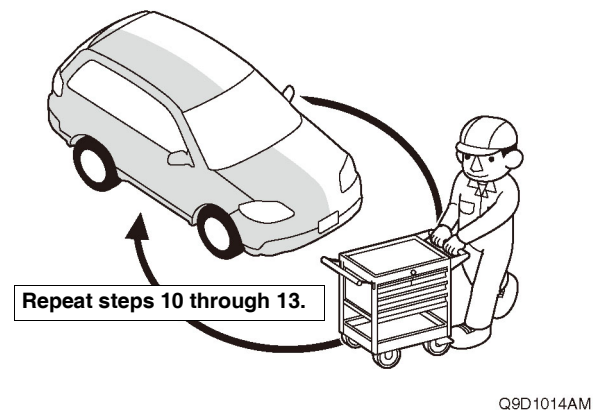


15. Install the left and right trunk side trim panels.

16. Install the bolts.

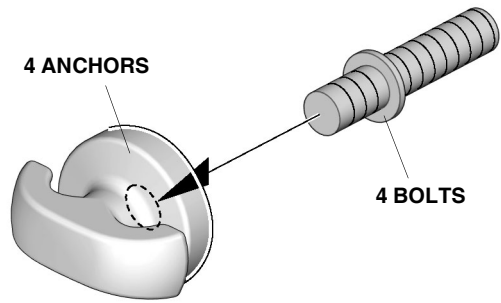


QE31201AU

17. Install the anchor.

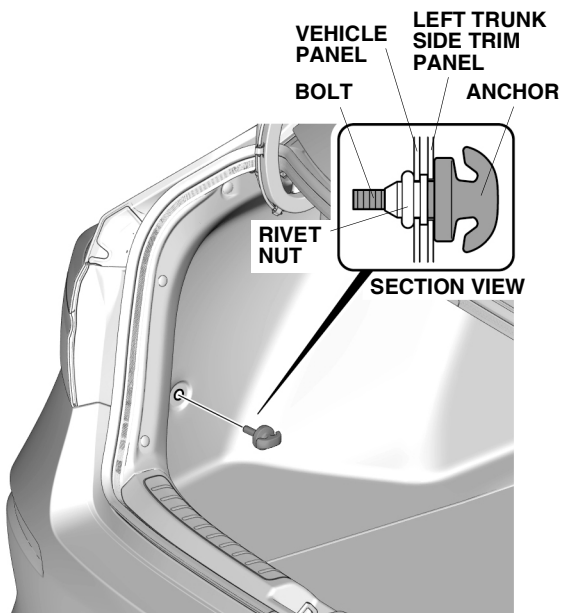


QKD2508AJ

18. Install the anchor.

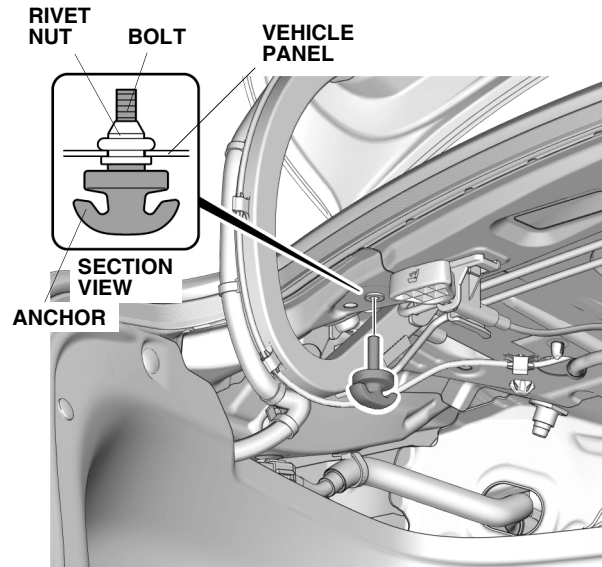


QKD2509AJ

19. Repeat the same procedures on the other side.

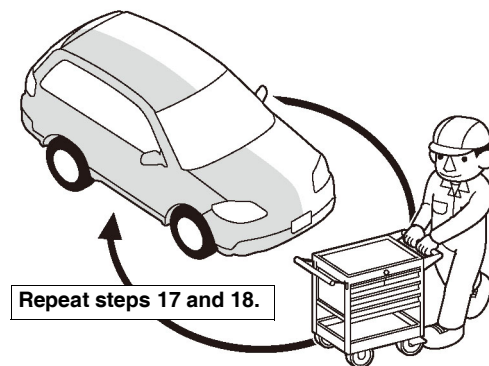

Q9D1014AM

20. Install the cargo net.

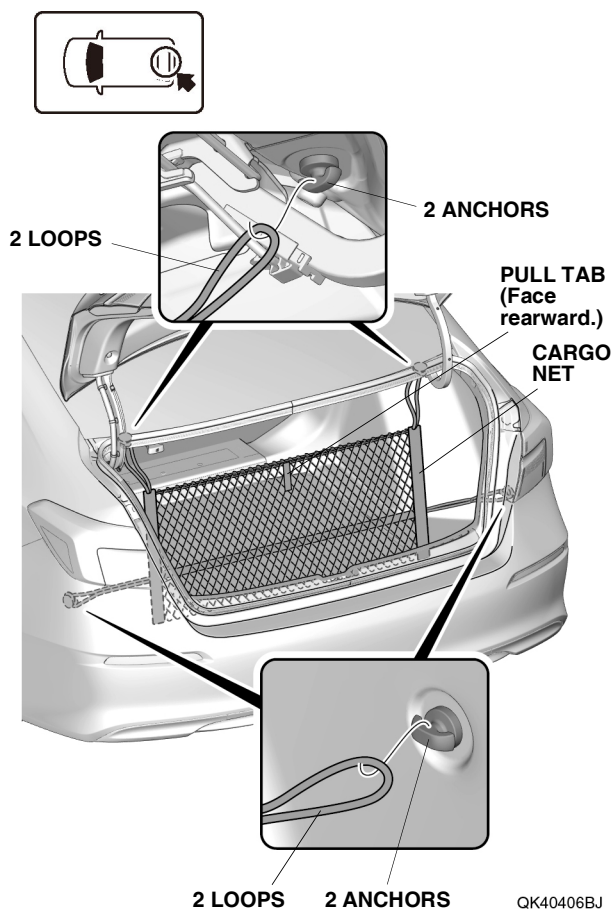

21. Check that all parts are installed properly.
22. Give the Accessory User's Information Manual to the customer.