



INSTALLATION INSTRUCTIONS

Accessory

DOOR HANDLE FILM

Application

2022 CIVIC


Publications No.

All

Issue Date

JUN 2021

GENERAL VIEW

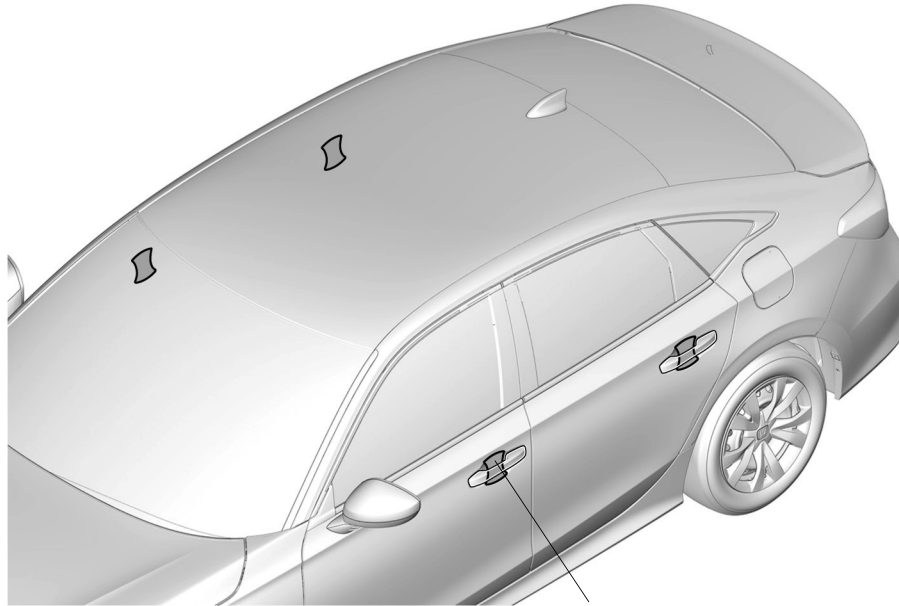

4 DOOR HANDLE FILMS QK30501BU

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of following symbols:

*All symbols are not used in all installation instructions.



DANGER

You will be killed or seriously hurt if you do not follow the instructions.



WARNING

You can be killed or seriously hurt if you do not follow the instructions.



CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.




Indicates a prohibited action.


Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.

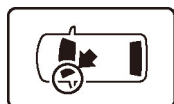

The location on the vehicle.

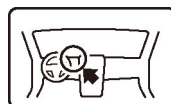

The location in the vehicle.
(instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the customer.
(Do not reuse.)

Safety: General

- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.

Safety: Accessory

- Always use the parts and tools specified in the installation instructions.
- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Cover nearby parts with a shop towel to prevent getting them wet.



- Always wear gloves when working with 3M Protective tape application solution.
- Use 3M protective tape application solution with a spray bottle.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

PARTS LIST

Door Handle Film Kit (P/N 08P48-T20-100)

Door handle films (4)

Alcohol wipes (4)

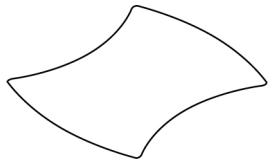

REQUIRED TOOLS AND SUPPLIES

- Shop towel
- Spray bottle
- Gloves

The following tool is available through the Honda Tool and Equipment Program:


- Mini Soft Spreader/Applicator (T/N SBSA2302Y5PK)
- 3M Protective tape application solution (P/N: 08712-1)

INSTALLATION


1. Clean the left front door.

NOTE

Allow to dry thoroughly.



LEFT FRONT DOOR
(Clean with
an alcohol wipe.)

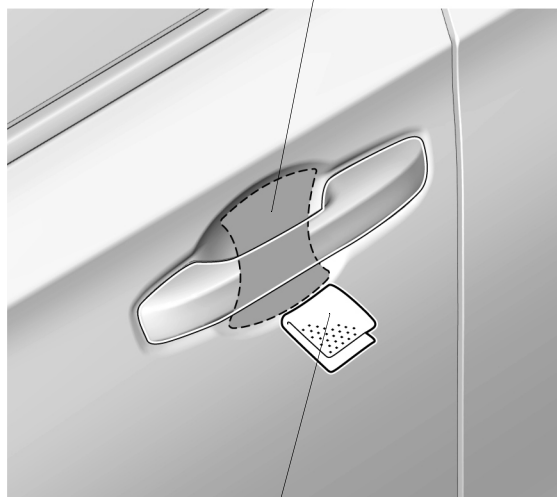

ALCOHOL WIPE

QK30502BU

2. Spray the left front door.



**3M PROTECTIVE TAPE
APPLICATION SOLUTION**


SPRAY BOTTLE

QK30503BU

3. Remove the adhesive backing.





**ADHESIVE BACKING
(Remove.)**

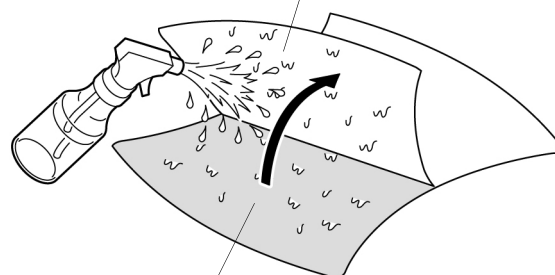

DOOR HANDLE FILM

QK30504BU


4. Spray the door handle film.
5. Line up the protective film.

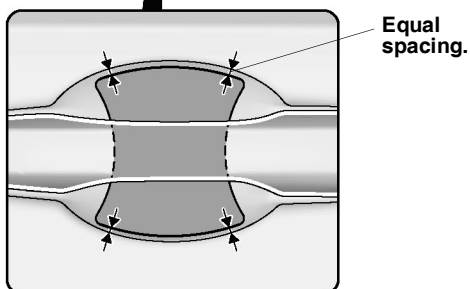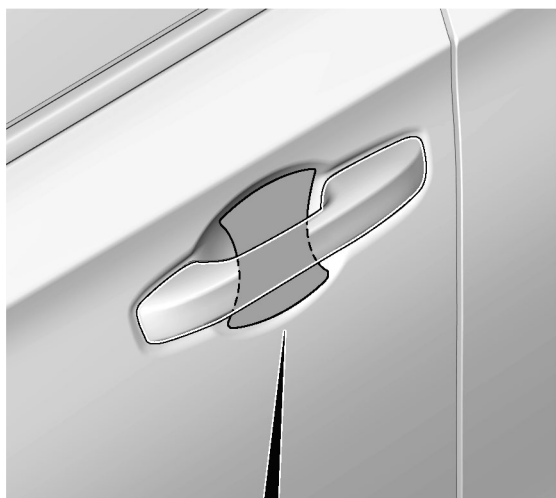

QK30505DU

6. Secure the door handle film.

**Work from the center
to the outside.**

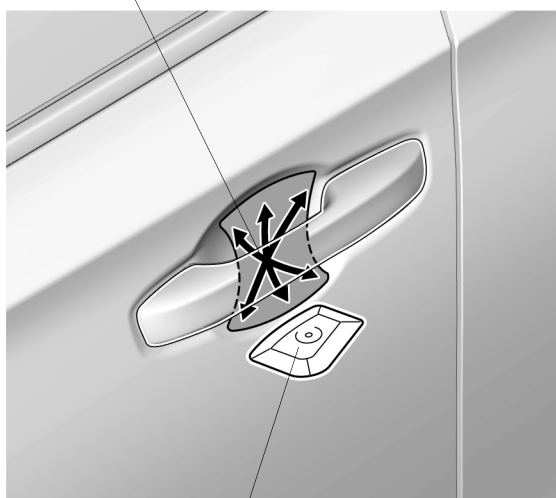

**MINI SOFT
SPREADER/APPLICATOR**

QK30506CU

7. Wipe off the 3M protective tape application solution.

NOTE

Allow to dry thoroughly.



SHOP TOWEL

QK30507BU

8. Repeat steps 1 through 7 for the other doors.
9. Check that all parts are installed properly.