




## INSTALLATION INSTRUCTIONS

Accessory  
**DOOR SILL  
PROTECTION FILM**

Application  
**2022 CIVIC**

Publications No.  
**All**  
Issue Date  
**JUN 2021**

### GENERAL VIEW

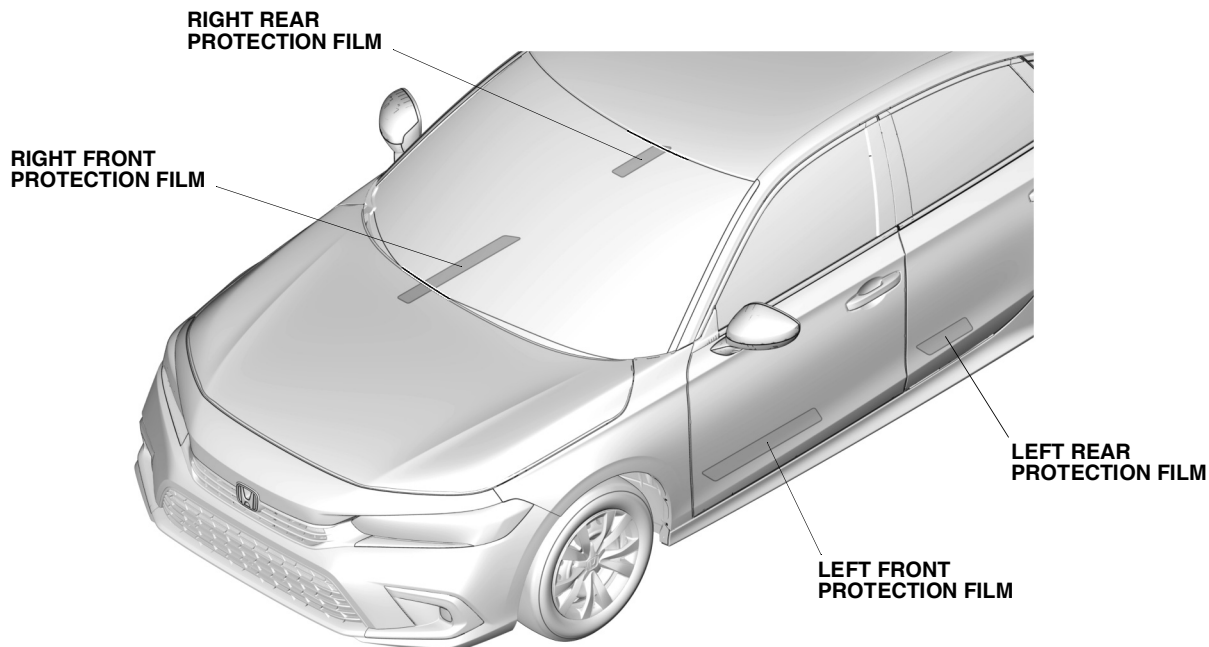

QK50101AR

### FOR YOUR SAFETY (Read carefully.)

#### Warning Symbols

**Safety:** Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of following symbols:

\*All symbols are not used in all installation instructions.

**⚠ DANGER**

You will be killed or seriously hurt if you do not follow the instructions.

**⚠ WARNING**

You can be killed or seriously hurt if you do not follow the instructions.

**⚠ CAUTION**

You can be hurt if you do not follow the instructions.

**NOTICE**

Gives advice to prevent damage to the product, vehicle, the environment or other property.

**NOTE**

Gives helpful information or instructions to be followed when installing this product.



Indicates a prohibited action.

## Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

\*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle.  
(instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the customer.  
(Do not reuse.)

## Safety: General








- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.

## Safety: Accessory

- Always use the parts and tools specified in the installation instructions.
- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Cover nearby parts with a shop towel to prevent getting them wet.
- Always wear gloves when working with 3M protective tape application solution.
- Use 3M protective tape application solution with a spray bottle.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

## PARTS LIST

### Door Sill Protection Film Kit (P/N 08P04-T20-100)

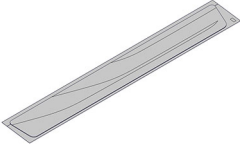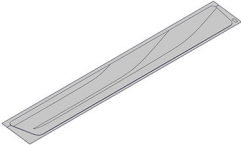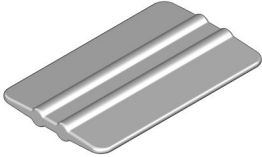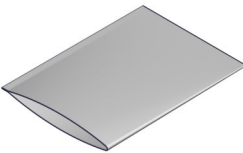Left front protection film (Identification mark: FR-L)	Right front protection film (Identification mark: FR-R)	Left rear protection film (Identification mark: RR-L)	Right rear protection film (Identification mark: RR-R)
			
Alcohol wipes (4)	Applicator	Felt sleeve	
			


## REQUIRED TOOLS AND SUPPLIES

- Shop towel
- Spray bottle
- Masking tape
- Ruler
- Gloves


The following tool is available through the Honda Tool and Equipment Program:  
3M Protective tape application solution (P/N: 08712-0008)

## INSTALLATION

1. Open the left front door.



DRIVER'S  
KICK PANEL

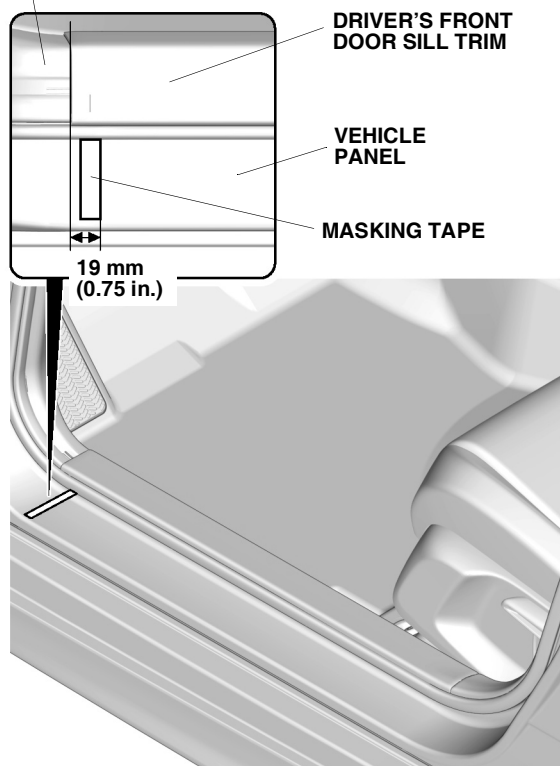


QK50102AR

2. Attach the masking tape.

3. Clean the vehicle panel.

### NOTE


Allow to dry thoroughly.

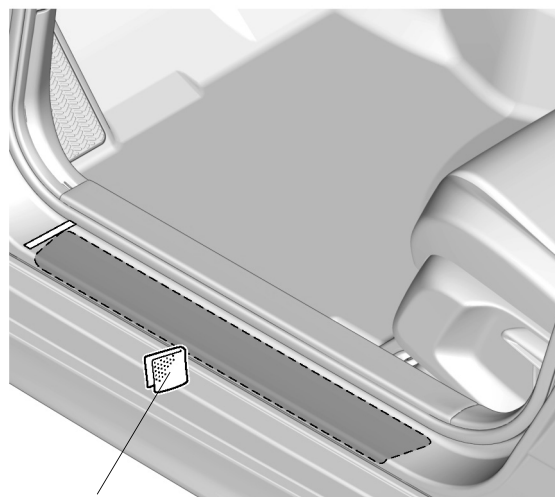

ALCOHOL  
WIPE

QK50103AR

4. Spray the vehicle panel.

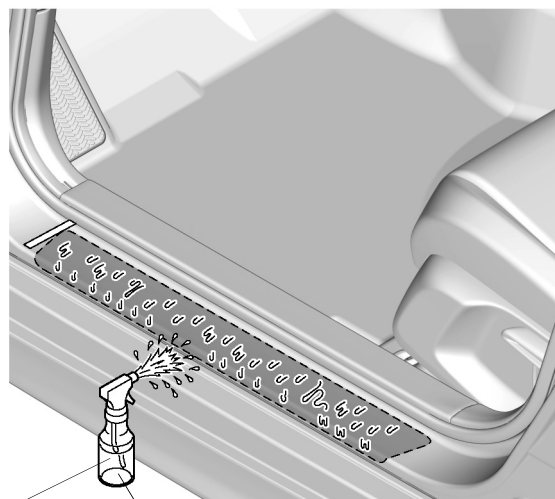

3M  
PROTECTIVE  
TAPE  
APPLICATION  
SOLUTION


SPRAY  
BOTTLE

QK50104AR


5. Remove the adhesive backing.

## NOTE

Make sure to check the identification mark before installation.


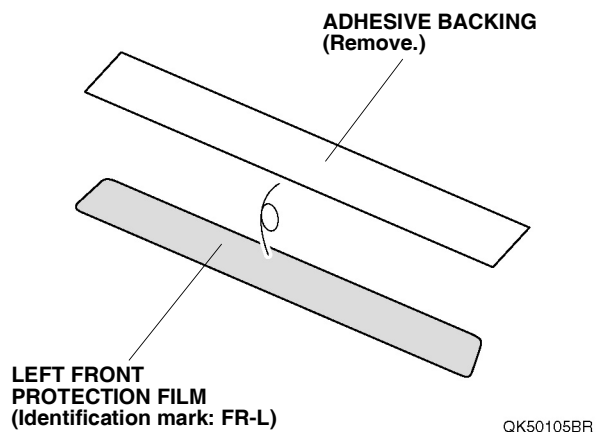


6. Spray the left front protection film.

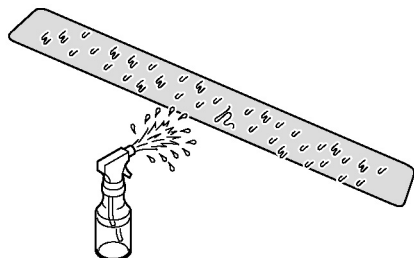


7. Line up the left front protection film.

## MASKING TAPE

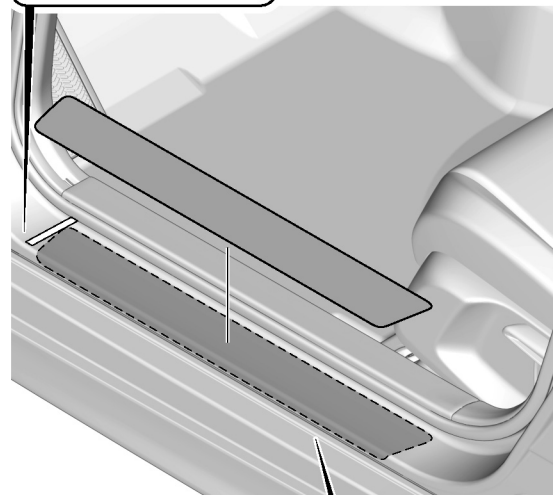
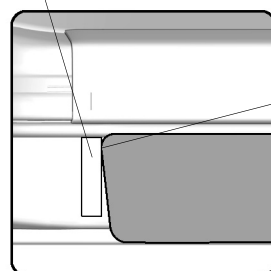


Line up with  
the curve end.

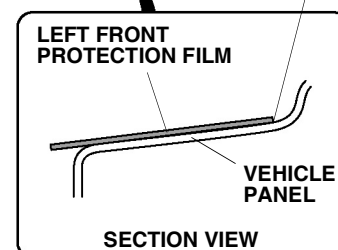


QK50107AR

8. Insert the applicator.

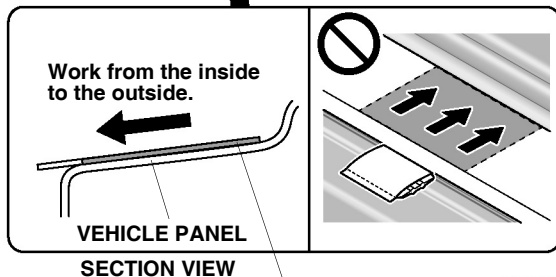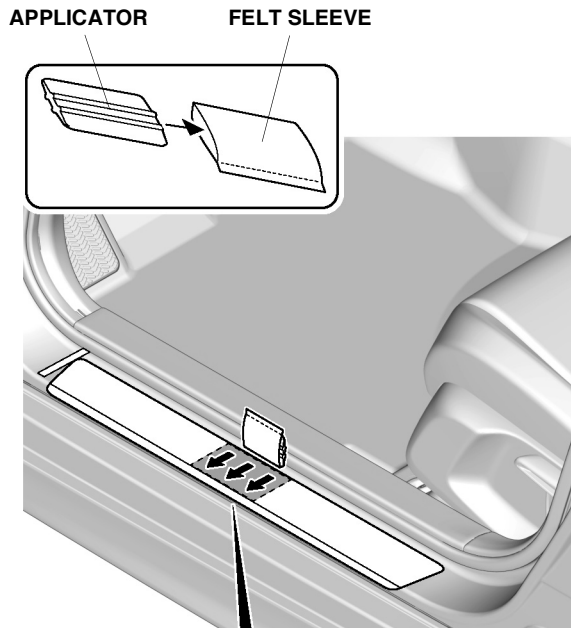



9. Secure the left front protection film.

10. Secure the left front protection film.

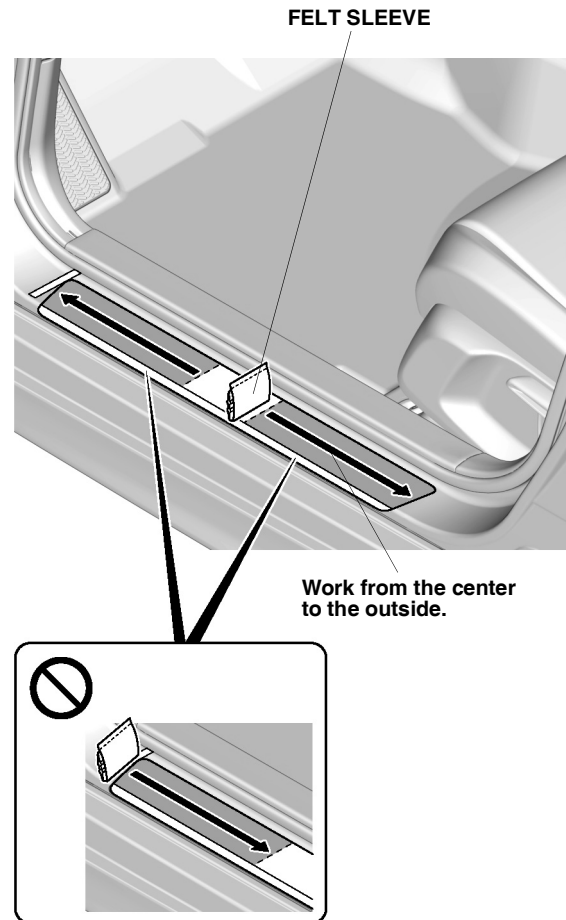

QK50109BR



11. Secure the left front protection film.

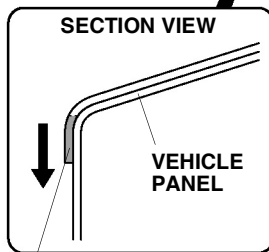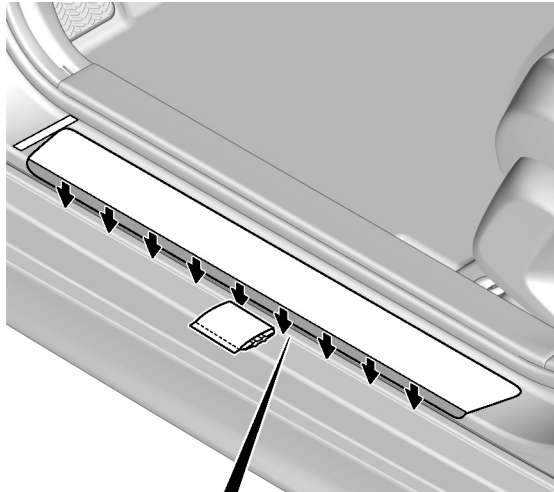

**LEFT FRONT PROTECTION FILM**

QK50110AR

12. Secure the left front protection film.

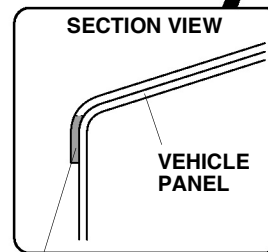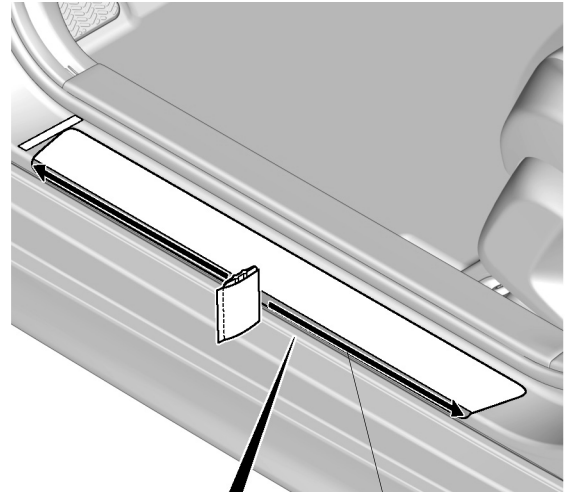


Work from the center to the outside.

**LEFT FRONT PROTECTION FILM**

QK50111AR

13. Wipe off the 3M protective tape application solution.

NOTE
Allow to dry thoroughly.

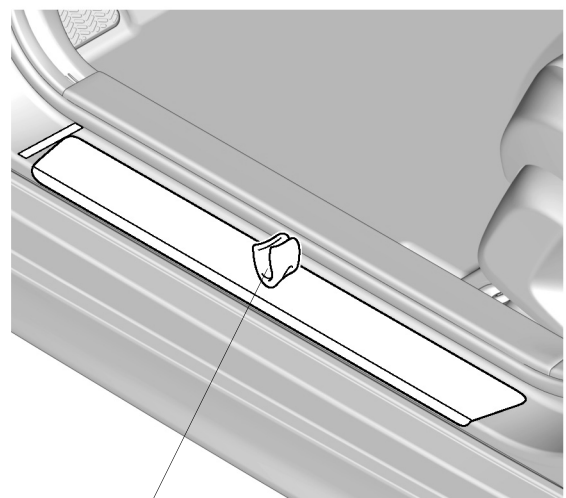


**SHOP TOWEL**

QK50112AR


14. Remove the masking tape.

15. Open the left rear door.



LEFT B-PILLAR  
LOWER TRIM


LEFT REAR  
DOOR SILL TRIM

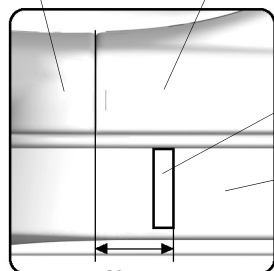

MASKING  
TAPE

VEHICLE  
PANEL

48 mm  
(1.89 in.)

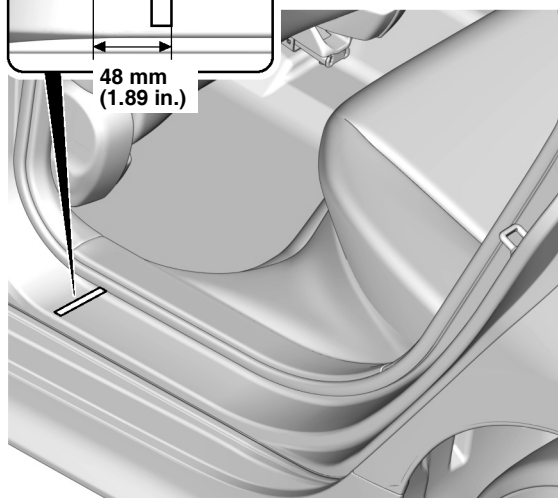


QK50113AR

16. Attach the masking tape.

17. Clean the vehicle panel.

## NOTE


Allow to dry thoroughly.

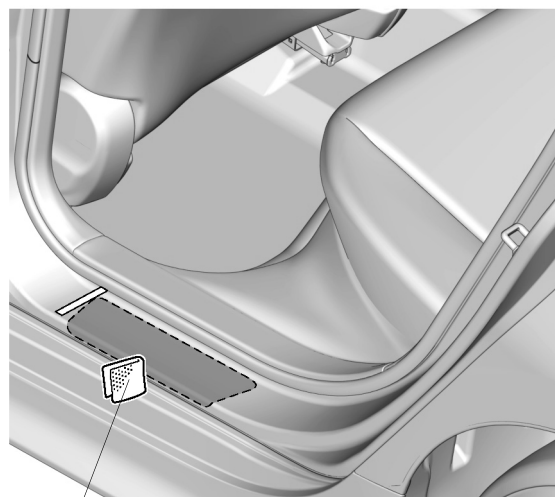

ALCOHOL WIPE

QK50114AR

18. Spray the vehicle panel.

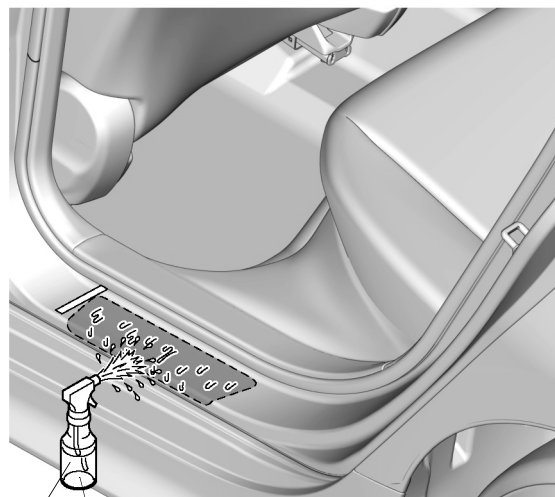

SPRAY  
BOTTLE

3M PROTECTIVE TAPE  
APPLICATION SOLUTION


QK50115AR




19. Remove the adhesive backing.

## NOTE


Make sure to check the identification mark before installation.

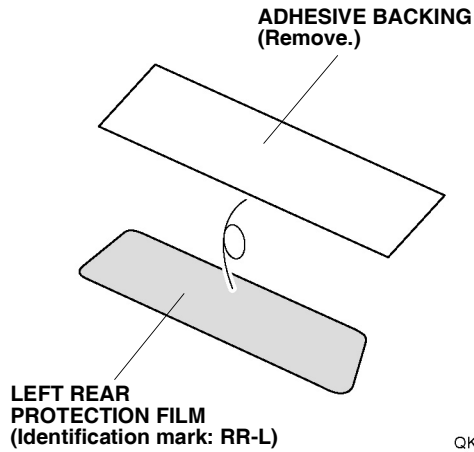


20. Spray the left rear protection film.

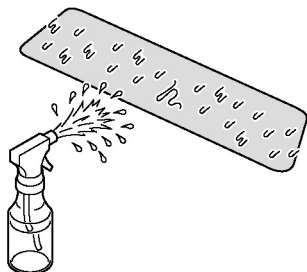


21. Line up the left rear protection film.

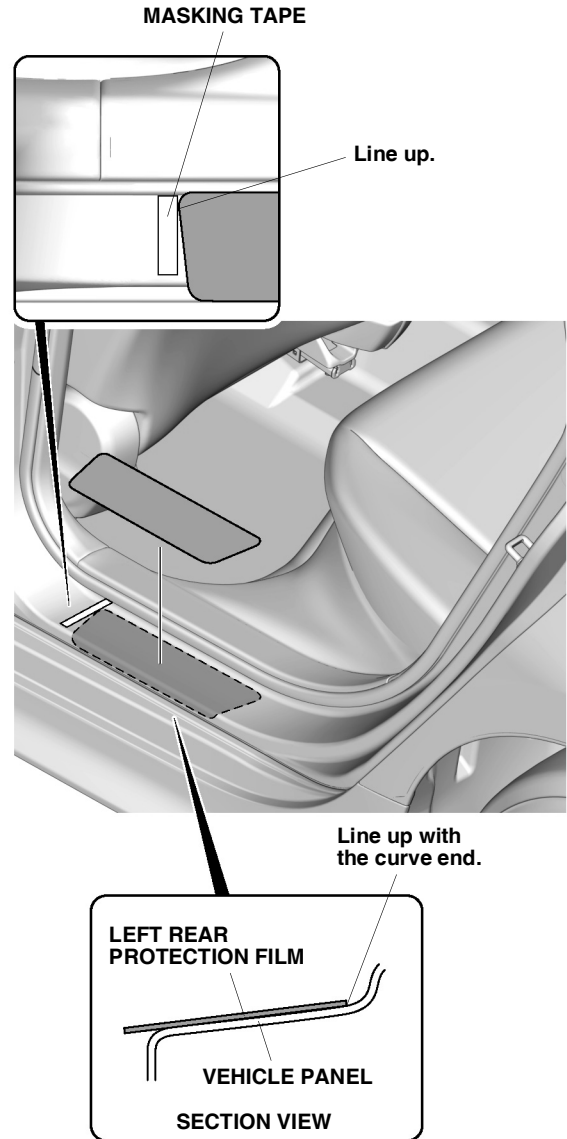



22. Secure the left rear protection film.

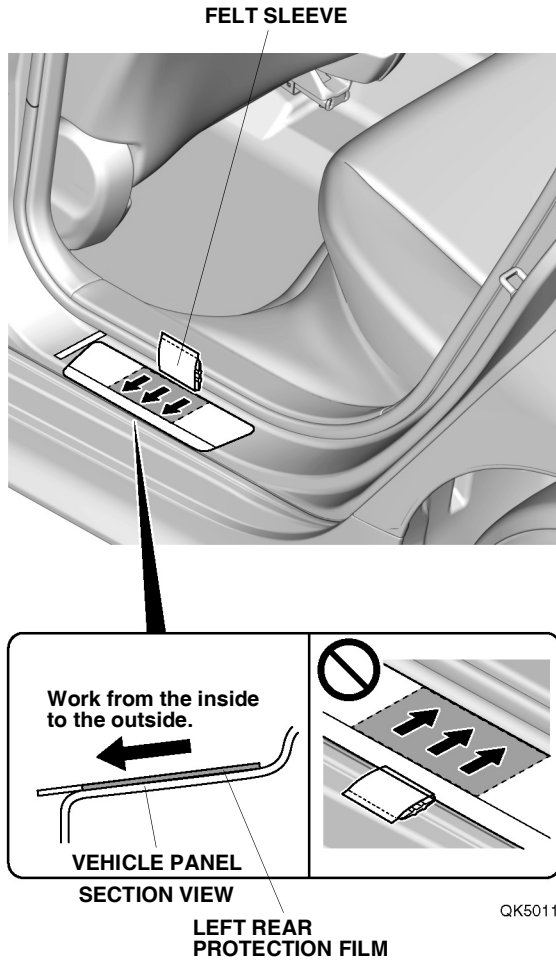

23. Secure the left rear protection film.

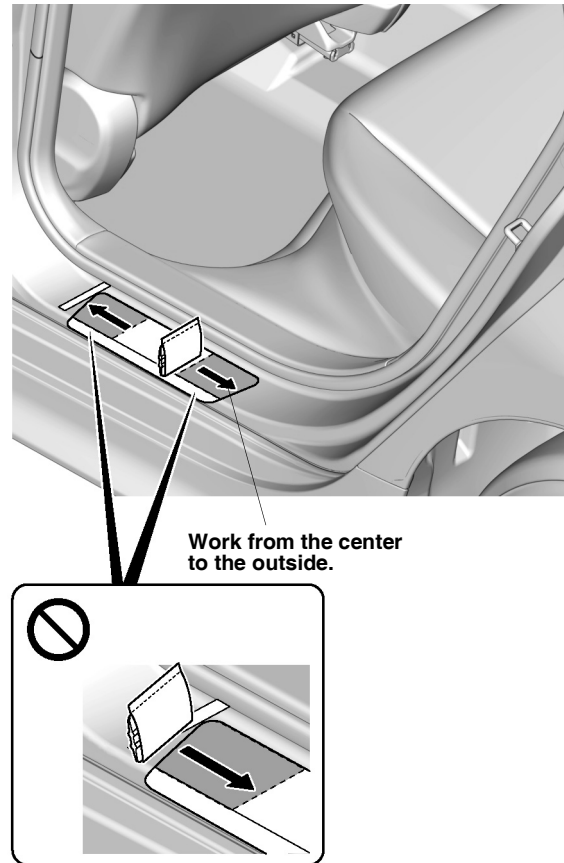



24. Secure the left rear protection film.

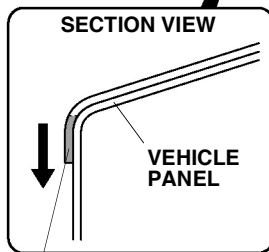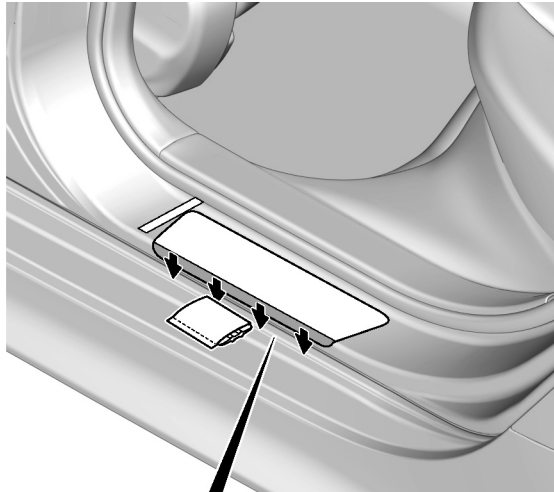

**LEFT REAR  
PROTECTION FILM**

QK50121AR

25. Secure the left rear protection film.

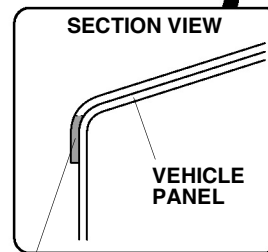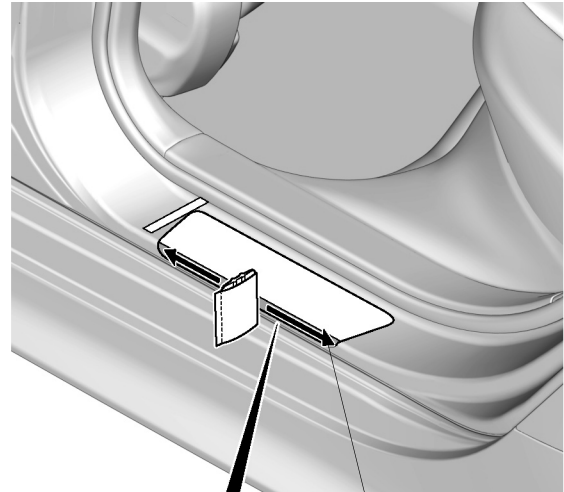

Work from  
the center to  
the outside.

**LEFT REAR  
PROTECTION FILM**


QK50122AR

26. Wipe off the 3M protective tape application solution.

## NOTE

Allow to dry thoroughly.


SHOP TOWEL

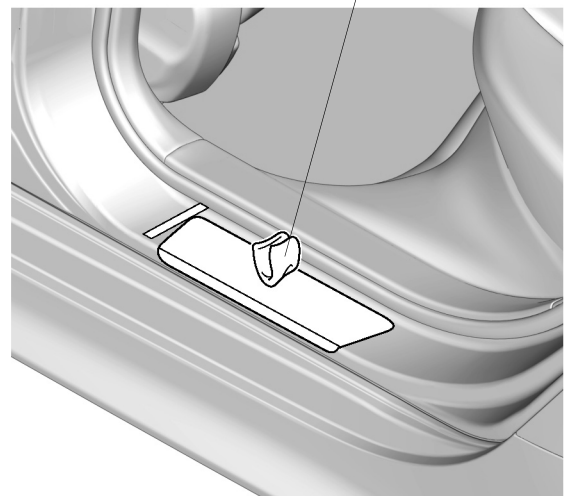

QK50123AR

27. Remove the masking tape.

28. Repeat the same procedures on the other side.

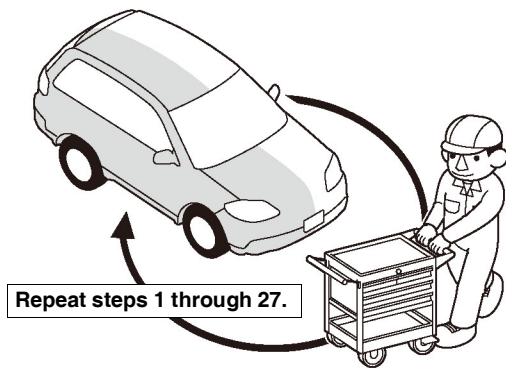

Q9D1014AM

29. Check that all parts are installed properly.