



INSTALLATION INSTRUCTIONS

Accessory

BLACK EMBLEMS

Application

2022 CIVIC
5-DOOR



Publications No.

VERSION 1

Issue Date

SEP 2021

GENERAL VIEW

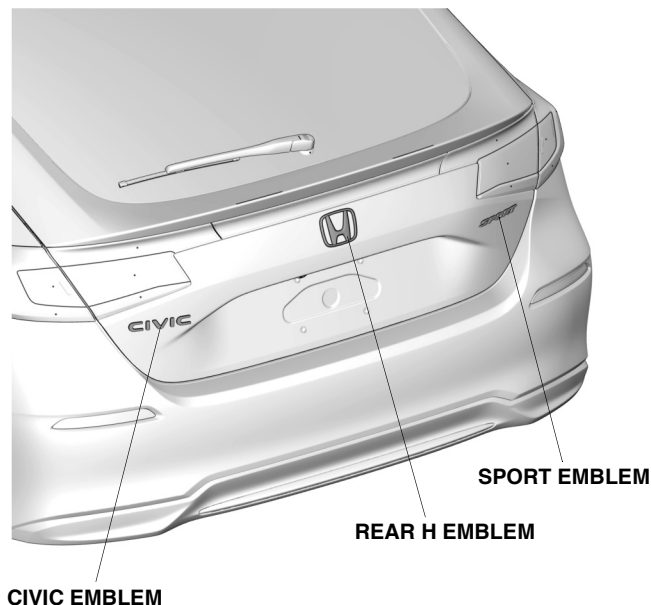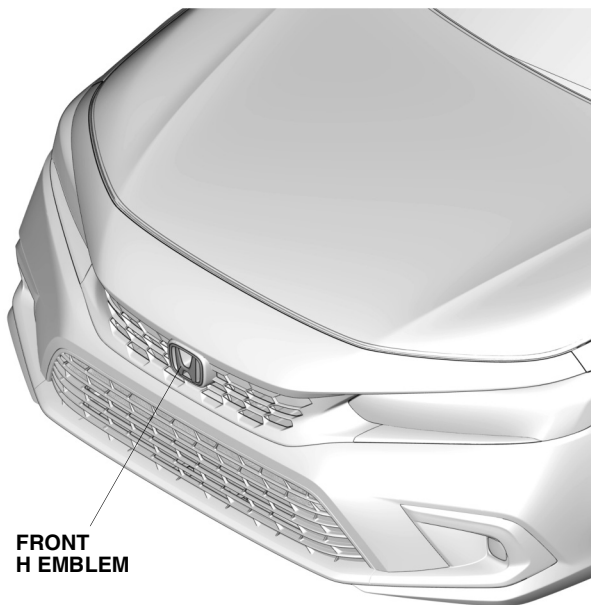

QL20101BR

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of following symbols:

*All symbols are not used in all installation instructions.

⚠ DANGER

You will be killed or seriously hurt if you do not follow the instructions.

⚠ WARNING

You can be killed or seriously hurt if you do not follow the instructions.

⚠ CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.




Indicates a prohibited action.


Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle.
(instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.




Clean with isopropyl alcohol.




Return the original part to the customer.
(Do not reuse.)


Wire Harness Routing Precaution

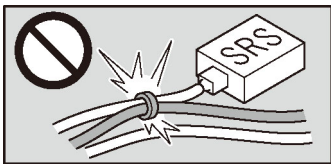


Do not secure the
accessory harness to the
SRS harness.
(except for instruction
cases.)

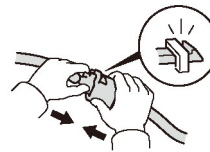


Push the connectors and
terminals together until
they lock.

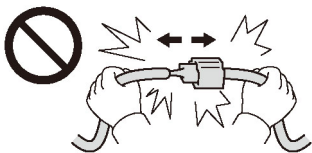

Do not pull the harness to
unplug the connectors.



Install removed
connectors in their original
location.

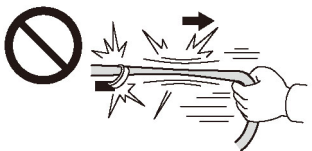


Do not pull the harness.



Secure the accessory
harness as shown.



Do not pinch the harness.

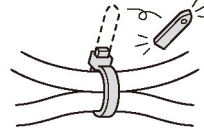

Cut off the excess wire tie.

Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and the safety of others.
- Be careful not to damage the vehicle or the parts.
- Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- The illustrations may differ slightly from the actual accessory.

Safety: Electric Parts





- Always disconnect the negative cable from the battery before beginning work.

Safety: Accessory


- Always use the parts and tools specified in the installation instructions.
- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

PARTS LIST

Black Emblems Kit (P/N 08F20-T47-100A)

CIVIC emblem	Front H emblem	Rear H emblem	Push nuts (2)
			

Alcohol wipes (3)

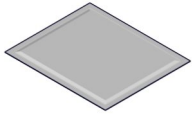


Black Sport Emblem Kit (P/N 08F20-TVA-100C)

SPORT emblem



Alcohol wipe



REQUIRED TOOLS AND SUPPLIES




- 10 mm Open end wrench
- Phillips screwdriver
- Blanket
- Felt-tip pen
- Ratchet
- Masking tape
- String

The following tools are available through the Honda Tool and Equipment Program:

- Trim Tool Set (T/N SOJATP2014)
- Rubber Roller (T/N M)
- Push Pin Pliers (T/N 07AAC-001A101)

INSTALLATION

1. Disconnect the negative cable from the battery.

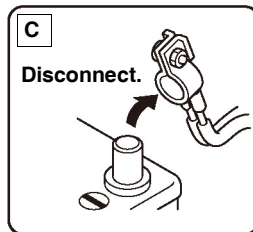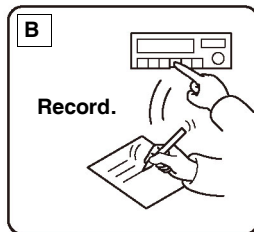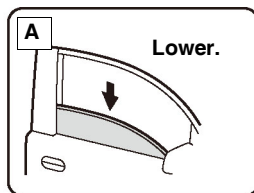


QCD0502BM


2. Apply masking tape to protect the vehicle.

NOTE


Do not remove the masking tape until after the parts are installed.




- 6 mm and 10 mm Sockets
- Diagonal cutters
- Ruler

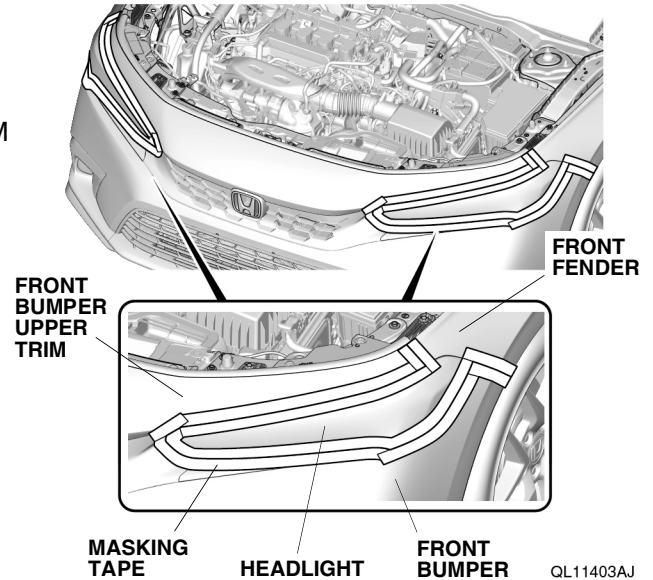

3. Remove the clips.

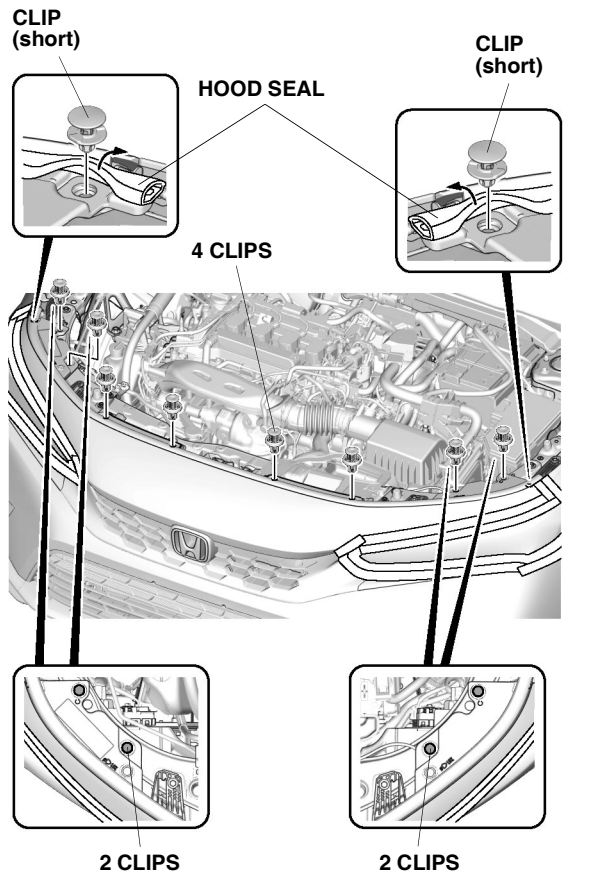


4. Remove the self-tapping screws, clips, and bolts.

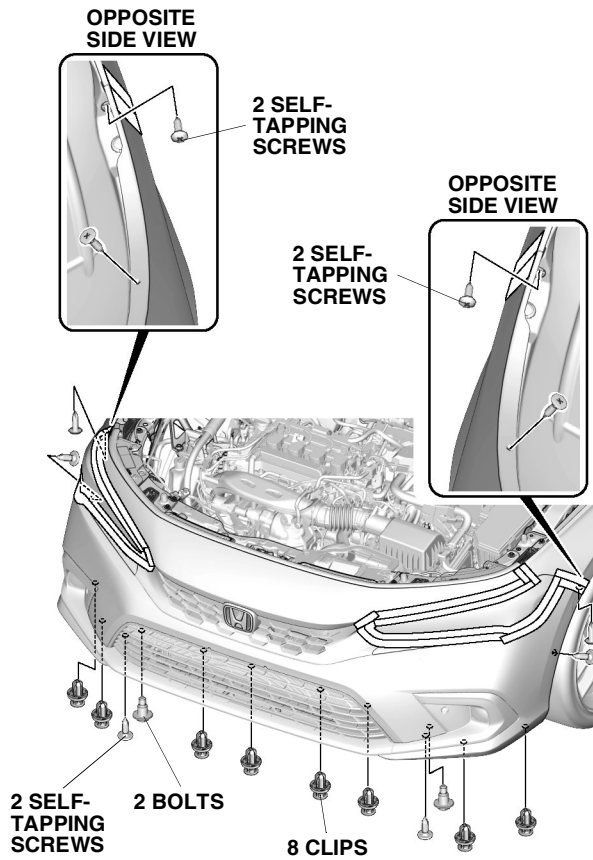

5. Release the retaining tabs.




NOTE

- Release the retaining tabs in order from outside.
- Make sure to release the retaining tabs in the correct orientation.



5 RETAINING TABS


3 RETAINING TABS

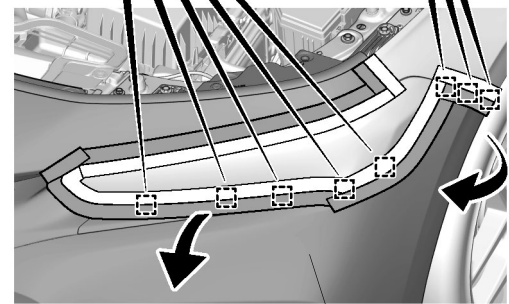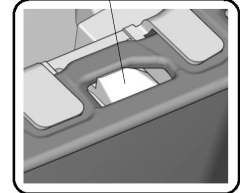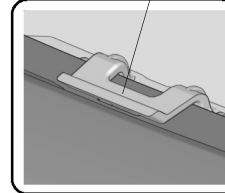


FRONT BUMPER

QK00138AT

6. Repeat step 5 on the other side.
7. Remove the front bumper.

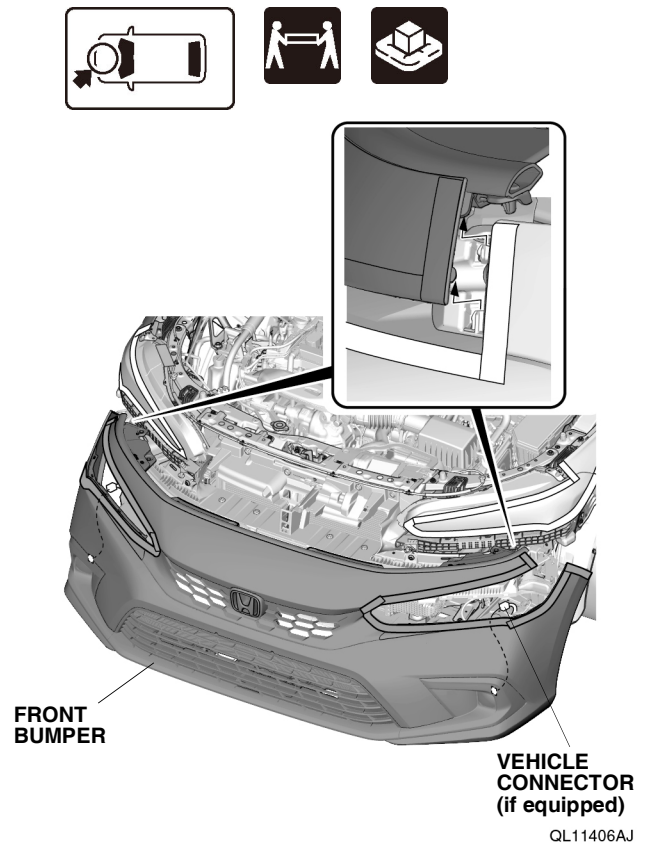


8. Remove the vehicle front H emblem.

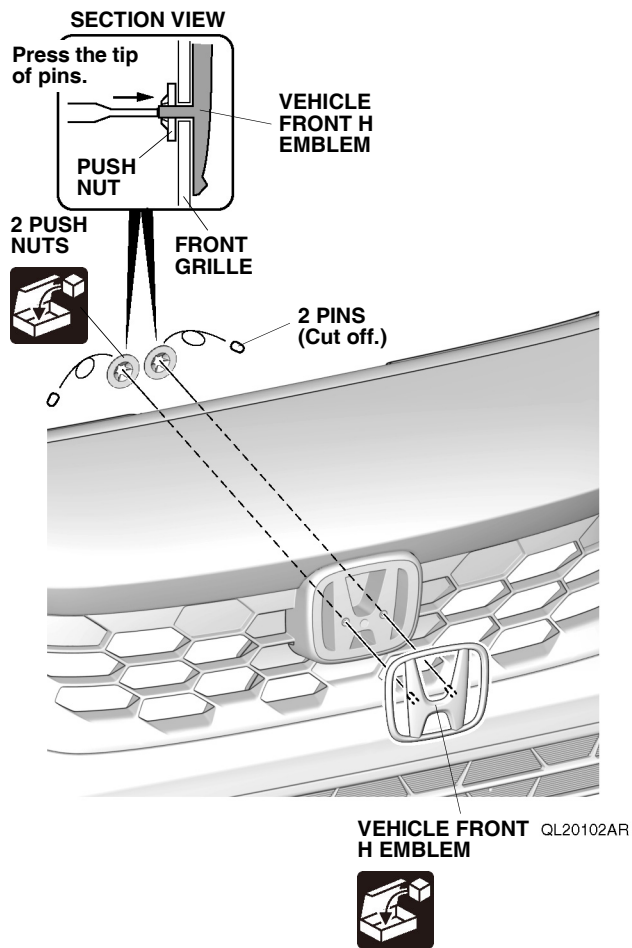

9. Clean the front grille.

NOTE


Allow to dry thoroughly.

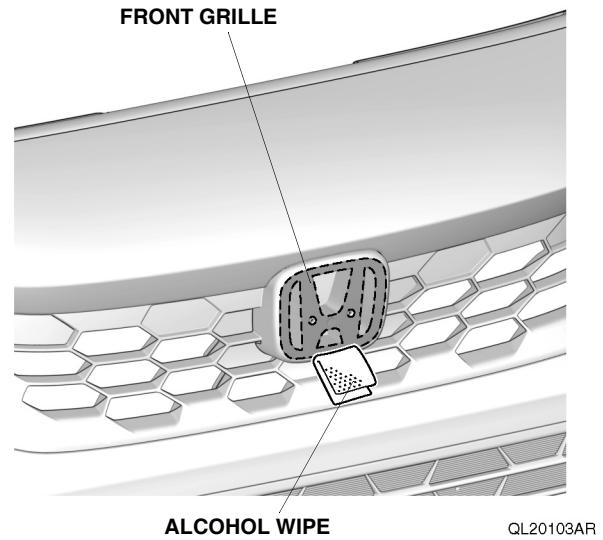


10. Install the front H emblem.

NOTE

Check the orientation of the push nuts.

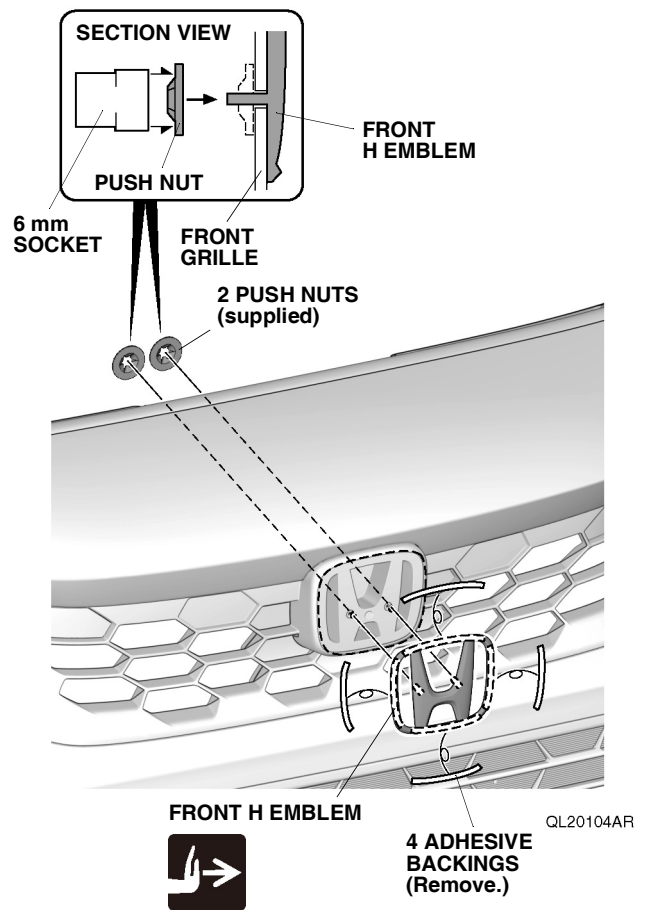



11. Set the adhesive.

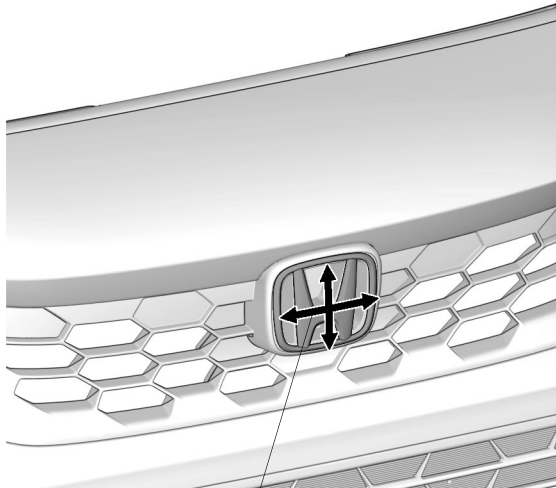


QL70101AT



12. Attach masking tape.

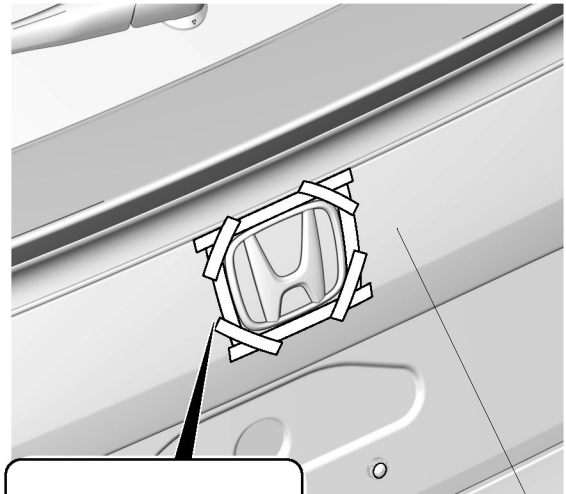

TAILGATE

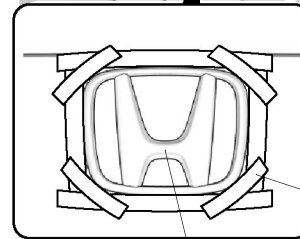

MASKING TAPE


VEHICLE REAR
H EMBLEM

QL20115BR

13. Remove the vehicle rear H emblem.

NOTE


- Do not damage the tailgate when removing the rear H emblem with the string.
- Make sure to thoroughly remove the adhesive tape from the tailgate.

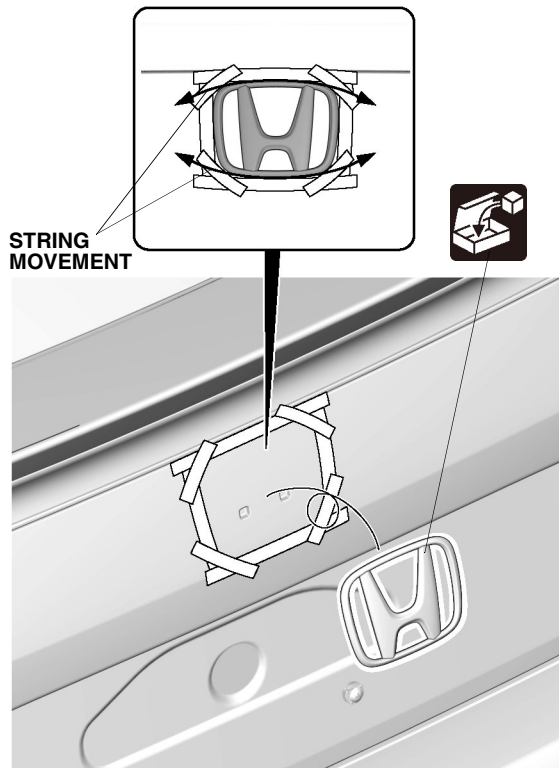


14. Clean the tailgate.

NOTE


Allow to dry thoroughly.

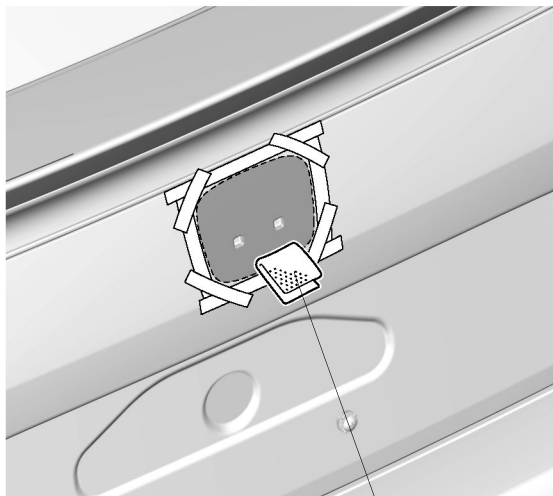

15. Install the rear H emblem.

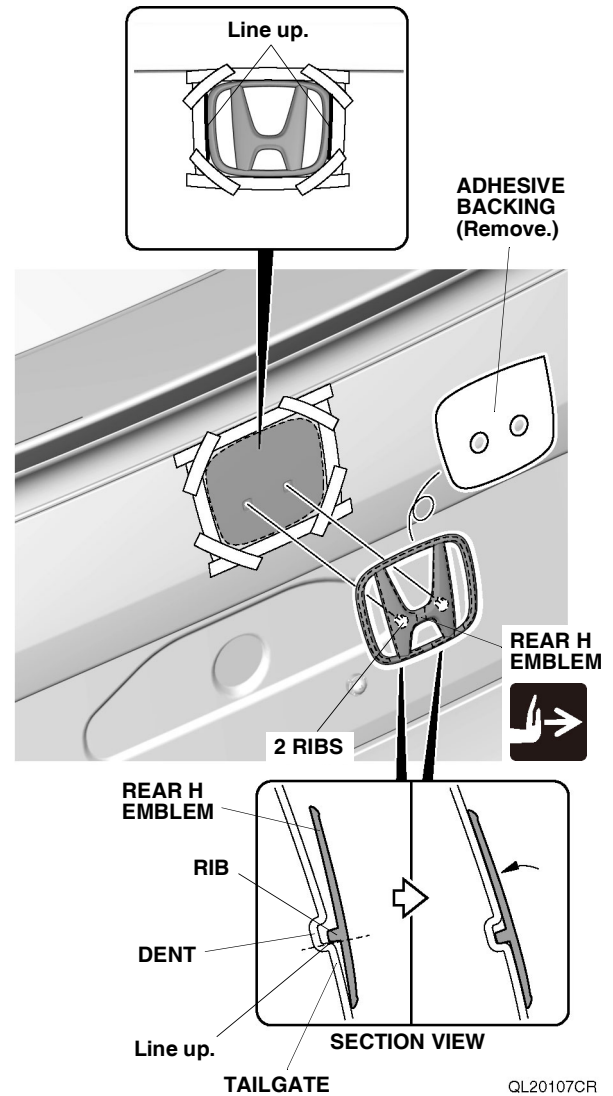


16. Set the adhesive.

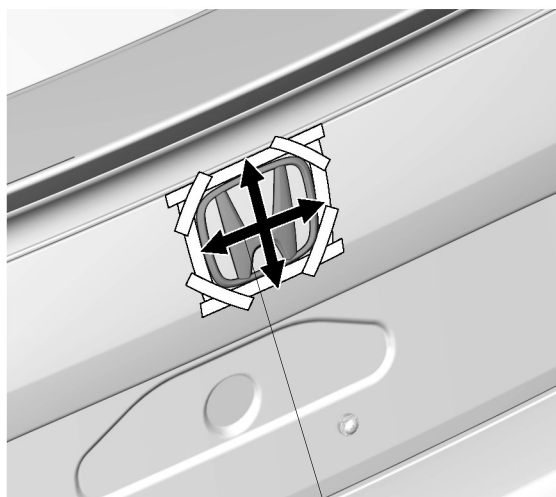


QL70102AT

17. Remove the masking tape.
18. Remove the guide form.

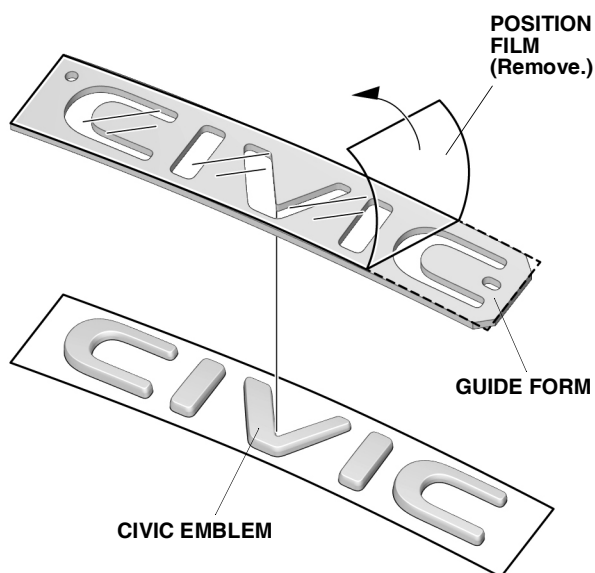

QK40107AU

19. Install the guide form.



TAILGATE




VEHICLE
CIVIC EMBLEM

GUIDE FORM

QL20108AR


20. Attach the masking tape.

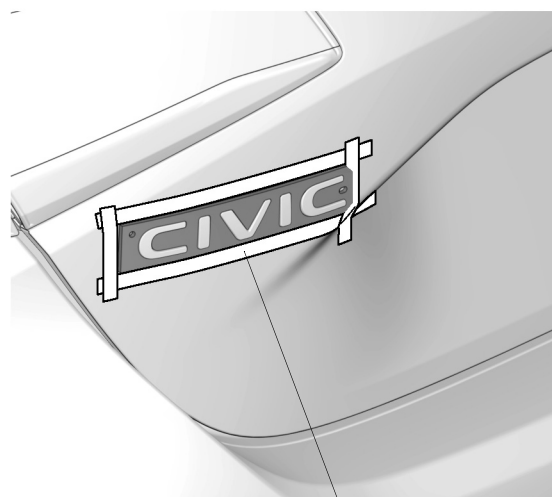

MASKING TAPE

QL20109AR

21. Remove the guide form.

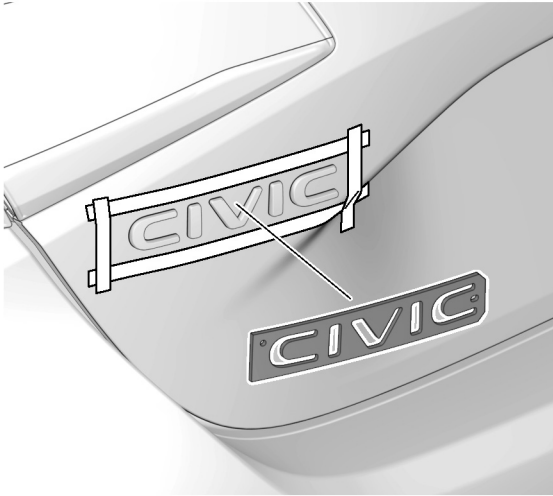


QL20110AR

22. Remove the vehicle CIVIC emblem.

NOTE


- Do not damage the tailgate when removing the CIVIC emblem with the string.
- Make sure to thoroughly remove the adhesive tape from the tailgate.

STRING
MOVEMENT

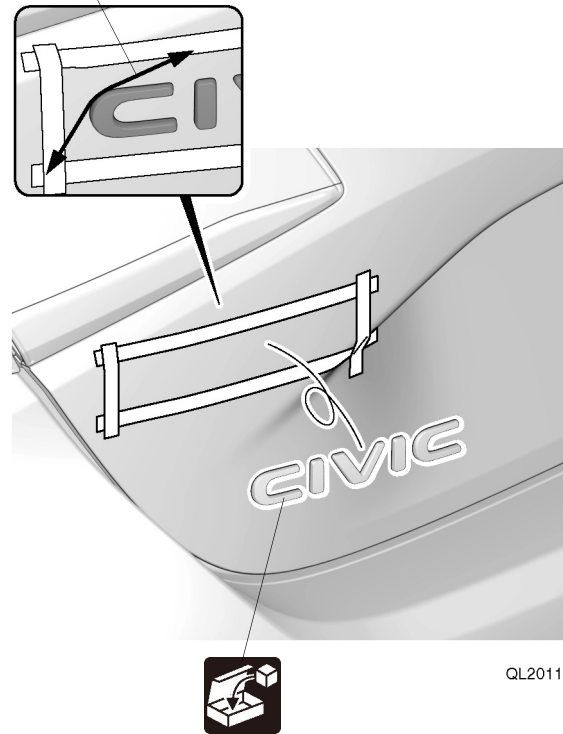

QL20111AR


23. Install the guide form.

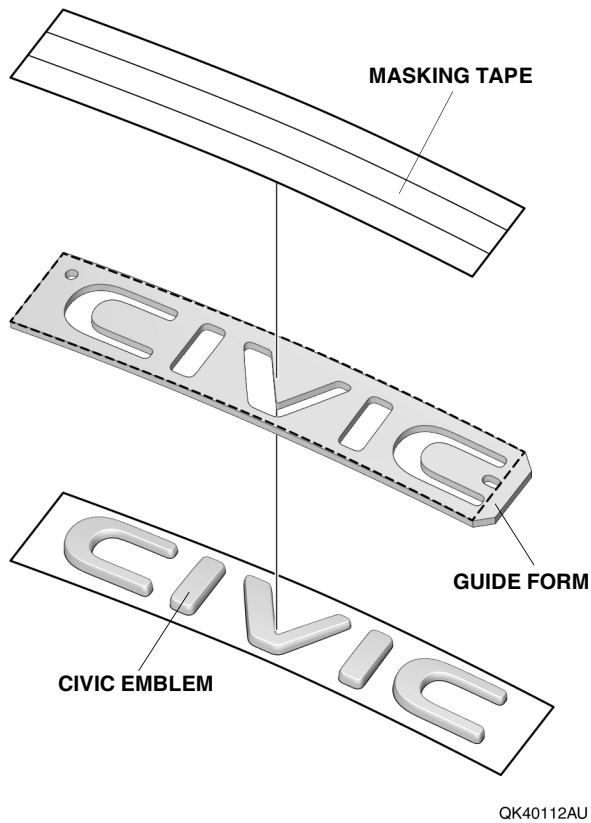

24. Attach the masking tape.
25. Clean the tailgate.

NOTE


Allow to dry thoroughly.

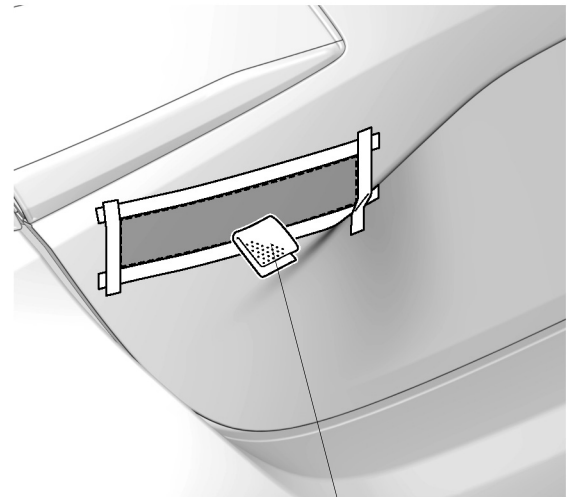

ALCOHOL WIPE

QL20112AR


26. Line up the guide form.

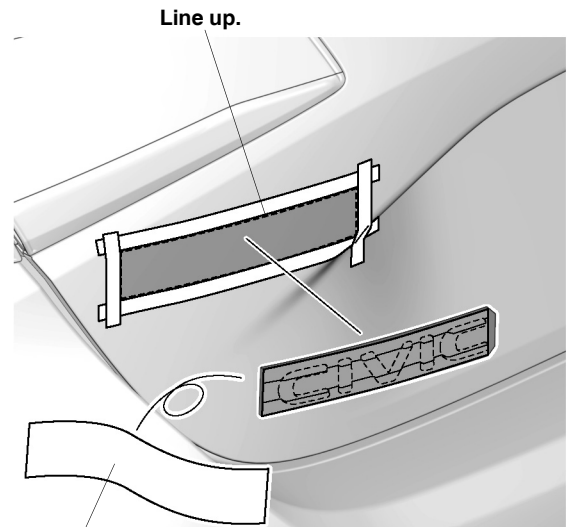

ADHESIVE BACKING
(Remove.)


QL20113AR

27. Attach the CIVIC emblem.
28. Remove the guide form.

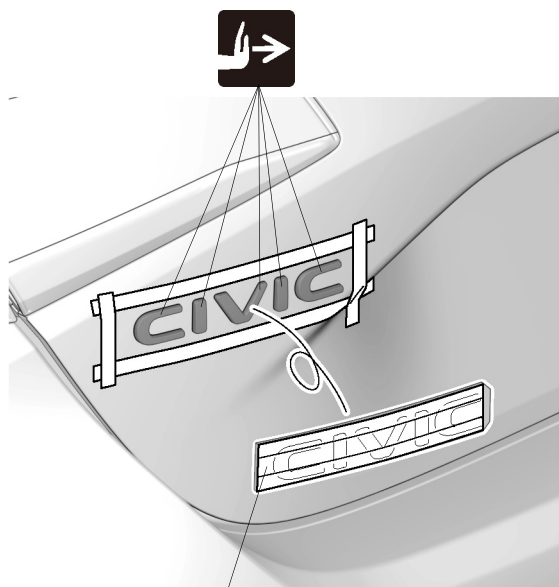

QL20114AR


29. Set the adhesive.

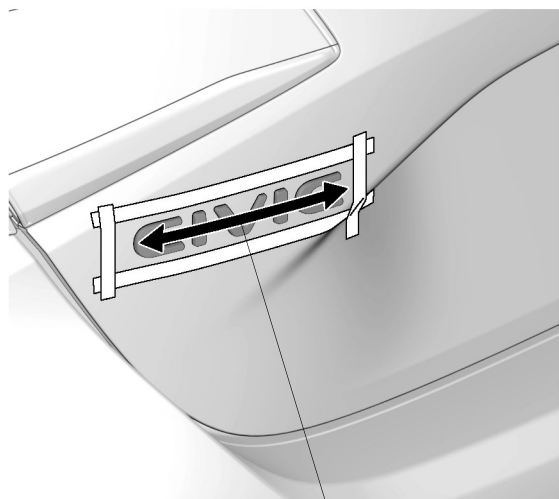

QL70103AT

30. Remove the masking tape.

31. Remove the guide form.

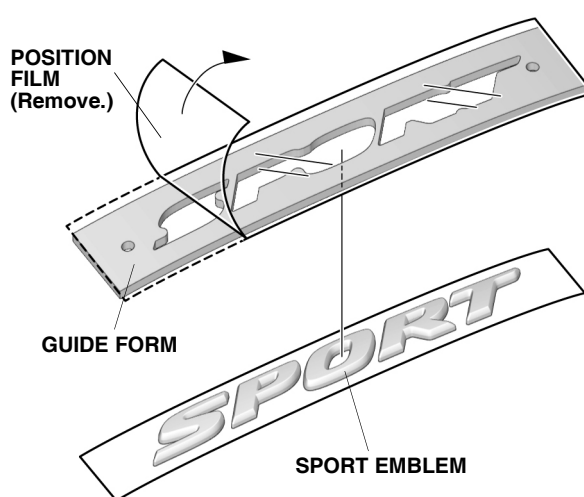


QK40202AU

32. Choose one of these options.



- | | |
|------------------------------|---------------|
| • With SPORT emblem | |
| With TOURING grade emblem | Go to step 33 |
| Without TOURING grade emblem | Go to step 48 |
| • Without SPORT emblem | |
| | Go to step 60 |

33. Mark the guide form.

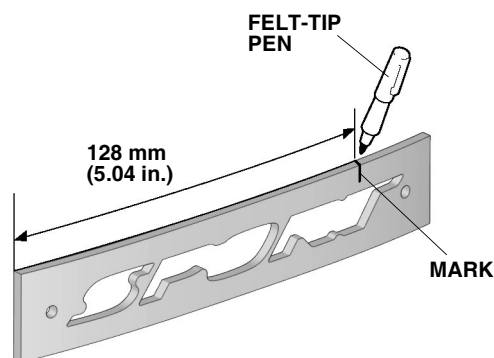

QL70104AT

34. Apply masking tape to protect the vehicle.

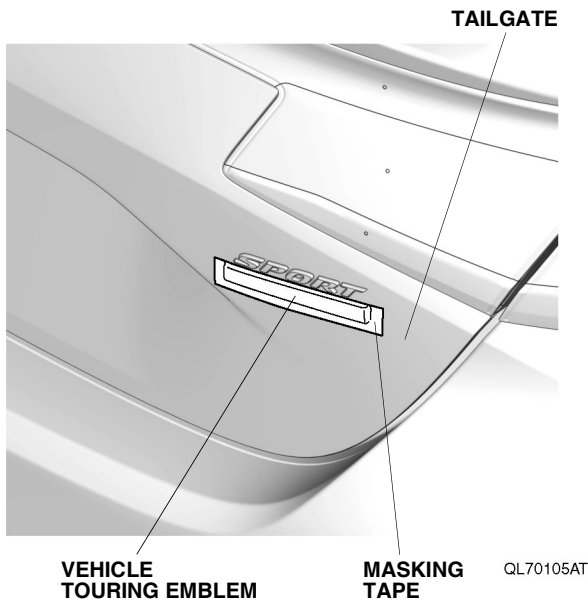


35. Remove the vehicle SPORT emblem.

NOTE

- Do not damage the tailgate when removing the SPORT emblem with the string.
- Make sure to thoroughly remove the adhesive tape from the tailgate.

STRING
MOVEMENT

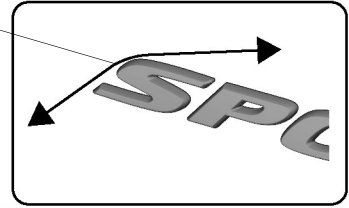


VEHICLE
SPORT EMBLEM

QL70106AT



36. Remove the masking tape.
37. Line up the guide form.

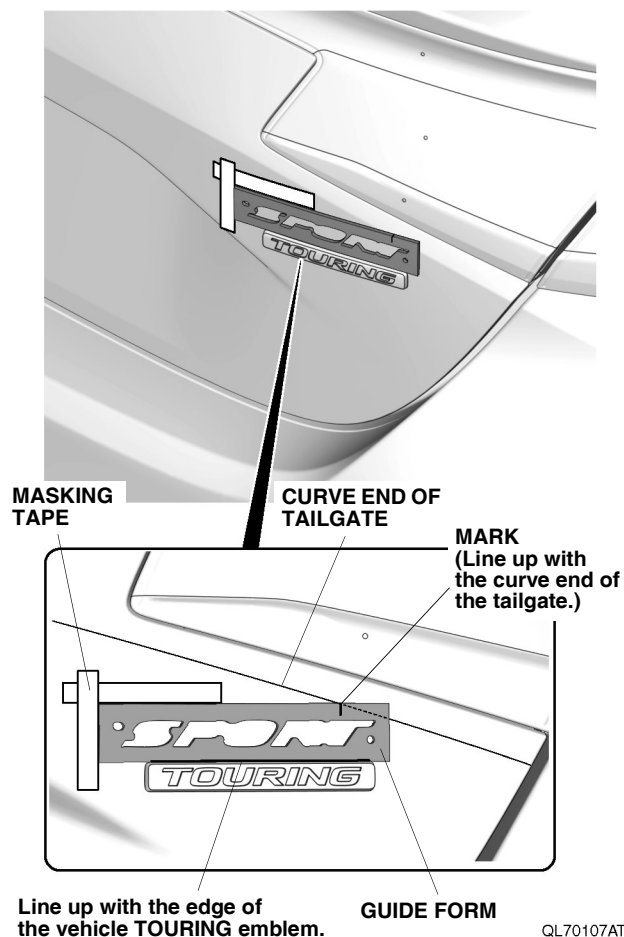


38. Attach the masking tape.
39. Remove the guide form.
40. Clean the tailgate.

NOTE

Allow to dry thoroughly.




41. Install the guide form.

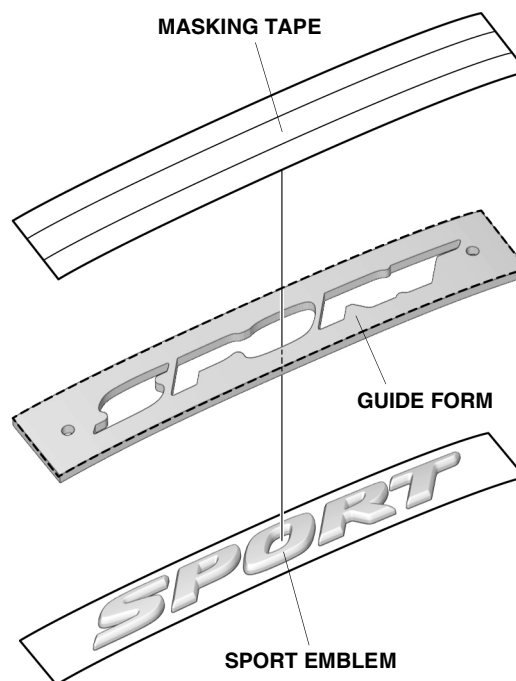


QK40207AU

42. Attach the masking tape.
43. Line up the guide form.

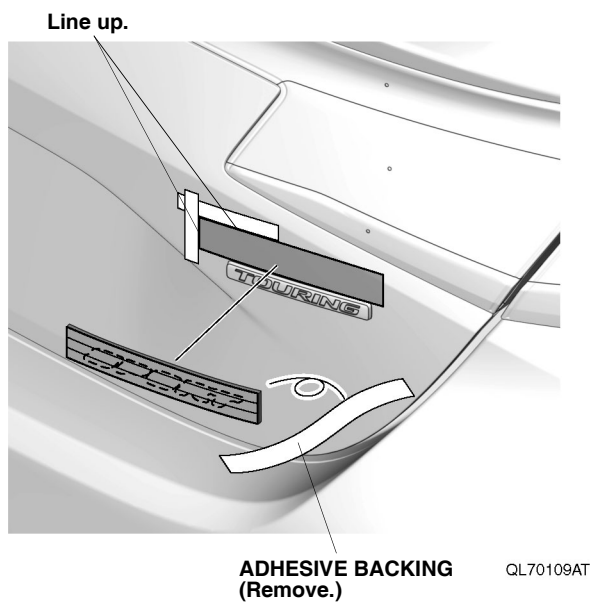

44. Attach the SPORT emblem.

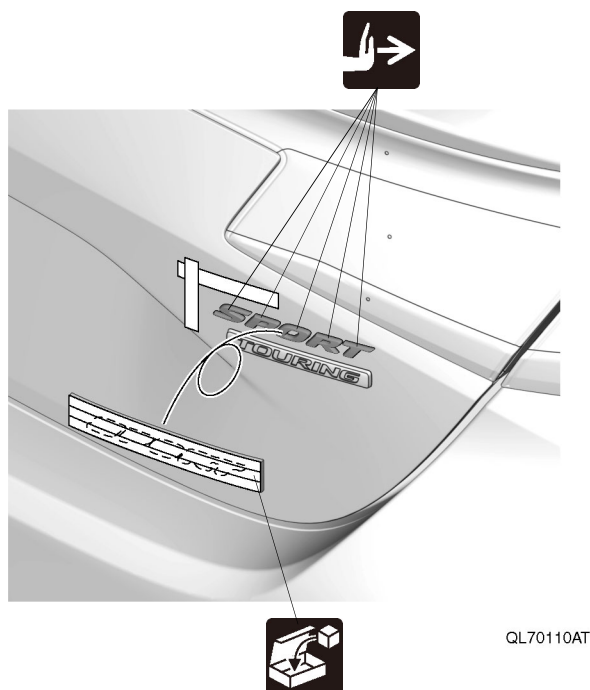


45. Remove the guide form.
46. Set the adhesive.



47. Remove the masking tape.

To step 60

48. Install the guide form.




VEHICLE SPORT EMBLEM

TAILGATE



49. Attach the masking tape.

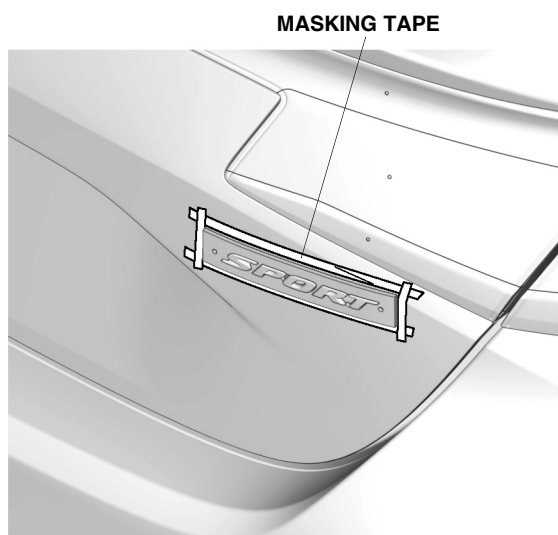

QL20213AR

50. Remove the guide form.





QL20214AR

51. Remove the vehicle SPORT emblem.

NOTE


- Do not damage the tailgate when removing the SPORT emblem with the string.
- Make sure to thoroughly remove the adhesive tape from the tailgate.

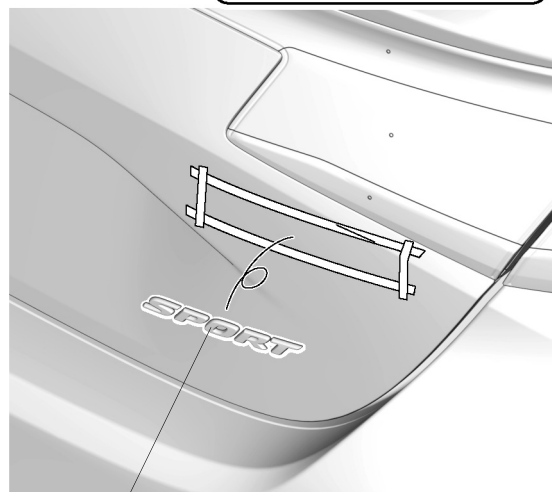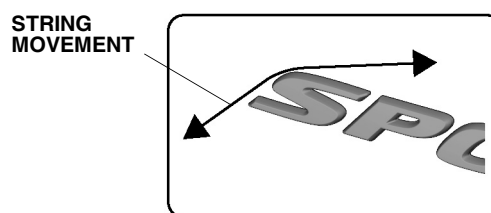

QL20215AR



52. Install the guide form.

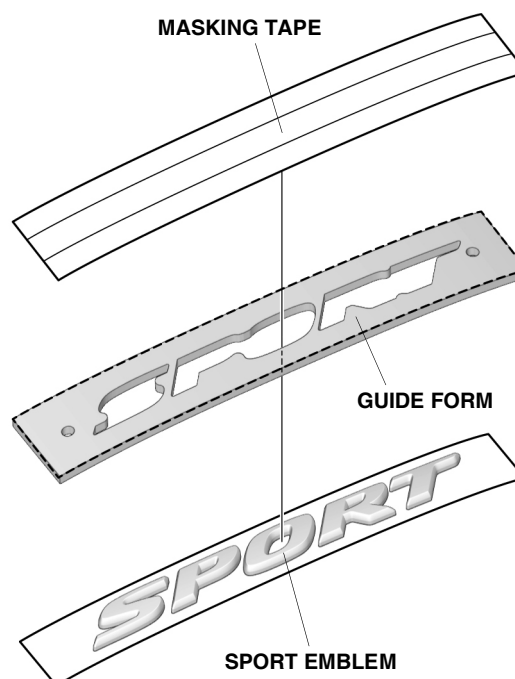


QK40207AU

53. Attach the masking tape.

54. Clean the tailgate.

NOTE


Allow to dry thoroughly.

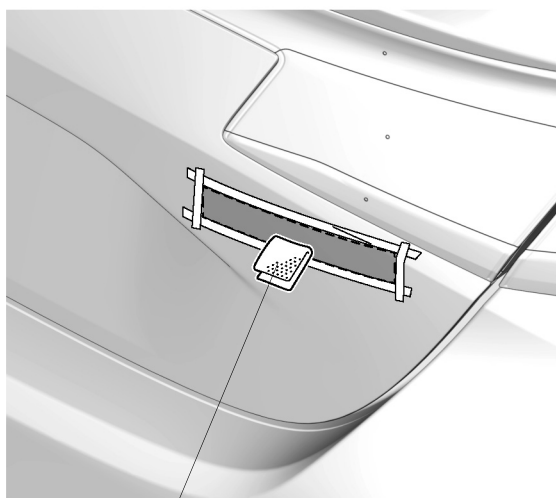

ALCOHOL WIPE

QL20216AR


55. Line up the guide form.

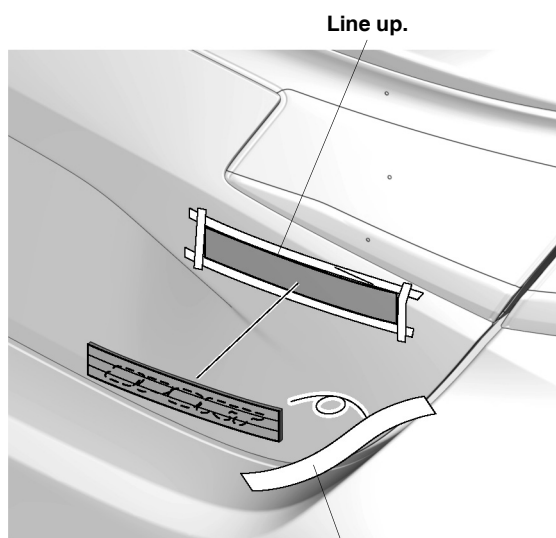

ADHESIVE
BACKING
(Remove.)


QL20217AR

56. Attach the SPORT emblem.
57. Remove the guide form.

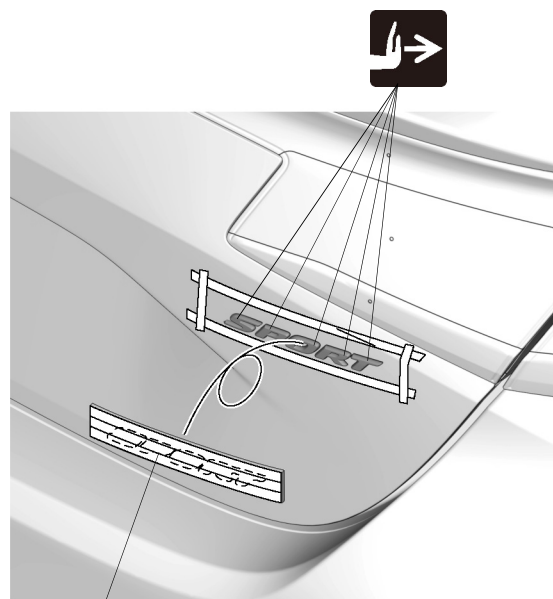

QL20218AR

58. Set the adhesive.

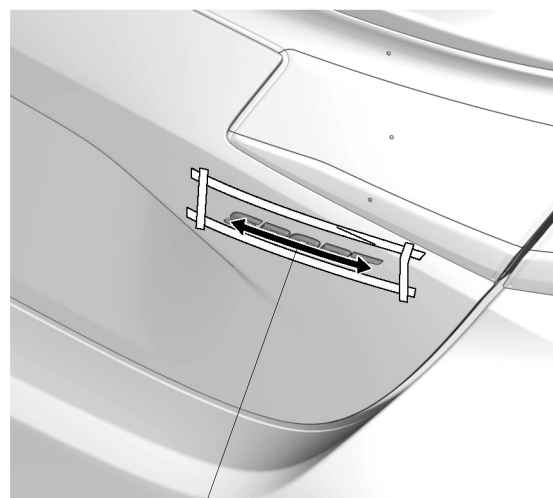


QL70112AT

59. Remove the masking tape.
60. Check that all parts are installed and properly routed.

NOTE

- Check that all harnesses are not pulled or pinched.
- Make sure all clips and wire ties are securely installed.

61. Install all removed parts.
62. Connect the negative cable to the battery.

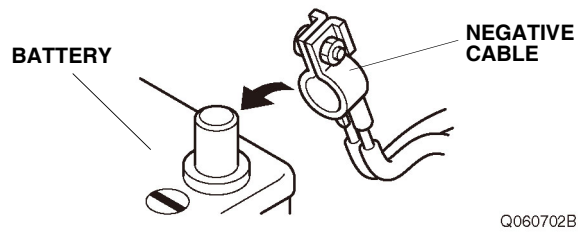

63. Make sure all accessories and systems operate properly.
64. If necessary, restore the systems back to normal operation as described in the service information.
65. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.