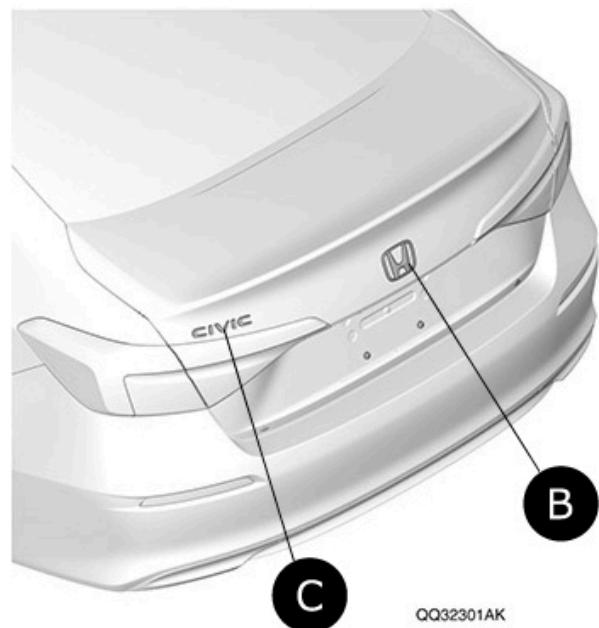
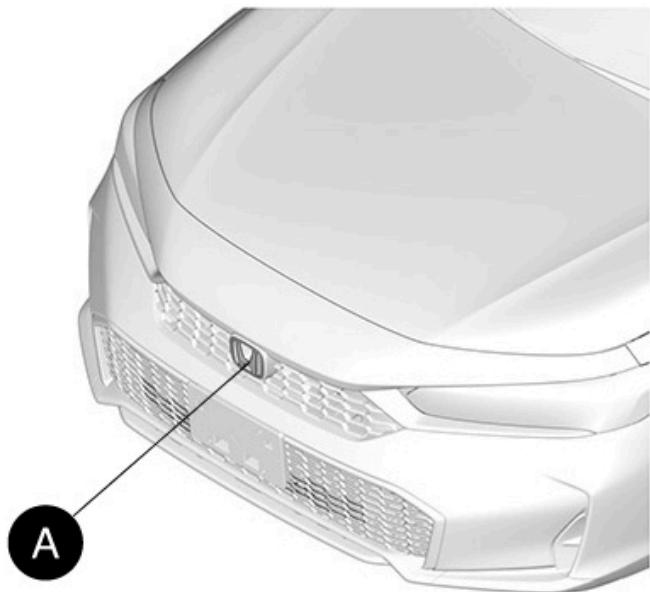


BLACK EMBLEMS

2026 CIVIC
MODEL SERIESPublications No.
VERSION 1**GENERAL VIEW**

A	FRONT H EMBLEM
B	REAR H EMBLEM
C	CIVIC EMBLEM

FOR YOUR SAFETY (Read carefully.)

■ Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

DANGER

You will be killed or seriously hurt if you do not follow the instructions.

WARNING

You can be killed or seriously hurt if you do not follow the instructions.

CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.




Indicates a prohibited action.




Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.

	The location on the vehicle.		The location in the vehicle. (Instrument panel.)
	Wear eye protection.		Wear heavy gloves.
	Use an assistant.		Place the part on a blanket.
	Work perpendicular.		Remove any burrs.
	Use touch-up paint and allow to dry.		Tighten to the specified torque.
	Apply firm pressure while rolling, especially at the ends, to set the adhesive.		Press firmly.
	Clean with isopropyl alcohol.		Return the original part to the customer. (Do not reuse.)

Wire Harness Routing Precaution

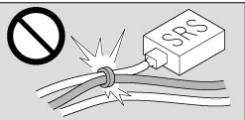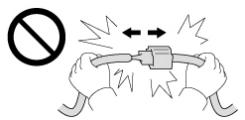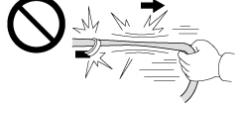	<p><u>Do not secure the accessory harness to the SRS harness.</u> <u>(except for instruction cases.)</u></p>		<p>Push the connectors and terminals together until they lock.</p>
	<p>Do not pull the harness to unplug the connectors.</p>		<p>Install removed connectors in their original location.</p>
	<p>Do not pull the harness.</p>		<p>Secure the accessory harness as shown.</p>
	<p>Do not pinch the harness.</p>		<p>Cut off the excess wire tie.</p>

Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and the safety of others.
- Always use the parts and tools specified in the installation instructions.
- Be careful not to damage the vehicle or the parts. Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- The illustrations may differ slightly from the actual accessory.

Safety: Electric Parts

Always disconnect the negative cable from the battery before beginning work.

Safety: Accessory

- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60 °F (15 °C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

PARTS LIST

Black Emblem Kit (P/N 08F20-T20-100)

Parts	Parts name	QTY	Remarks
	CIVIC emblem	1	
	Front H emblem	1	
	Rear H emblem	1	
	Push nut	2	
	Alcohol wipe	3	

Black Emblem Kit (P/N 08F20-T20-100E)

Parts	Parts name	QTY	Remarks
	Front H emblem	1	
	Rear H emblem	1	
	Push nut	2	
	Alcohol wipe	2	

REQUIRED TOOLS AND SUPPLIES

- 10 mm Open end wrench
- Ratchet
- 6 mm and 10 mm Sockets
- Phillips screwdriver
- Masking tape
- Diagonal cutters
- Blanket
- Nylon string
- Needle nose pliers

The following tools are available through the Honda Tool and Equipment Program:

- Trim Tool Set (T/N SOJATP2014)
- Rubber Roller (T/N MHLE54D)
- Plastic Trim Tool (T/N SILTRIMTL10)
- Push Pin Pliers (T/N 07AAC-001A101)


INSTALLATION

■ Disconnecting the Battery Cable



- 1 Disconnect the negative cable from the battery.

 **NOTE**

Follow the "12 Volt Battery Terminal Disconnection and Reconnection" described in the service information since the work differs depending on the vehicle.

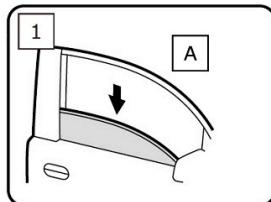

A	Lower.
B	Record.
C	Disconnect.

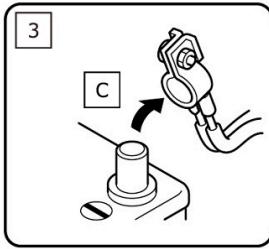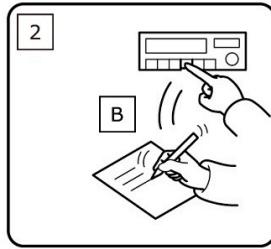

QCD0502BM

Removing the Vehicle Parts




● Front Bumper

2

Attach masking tape to protect the vehicle.

 **NOTE**


To prevent damage, do not remove masking tape until after the parts are installed.

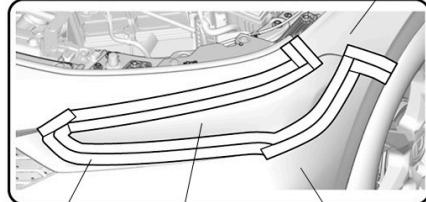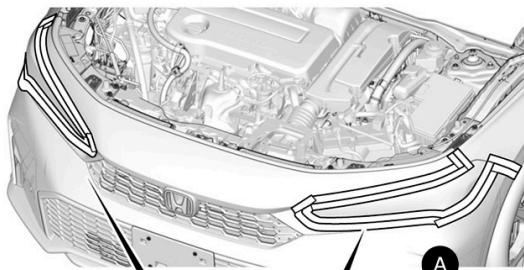

A	FRONT FENDER
B	FRONT BUMPER
C	MASKING TAPE
D	HEADLIGHT

QN70401AU


3 Remove the clips.

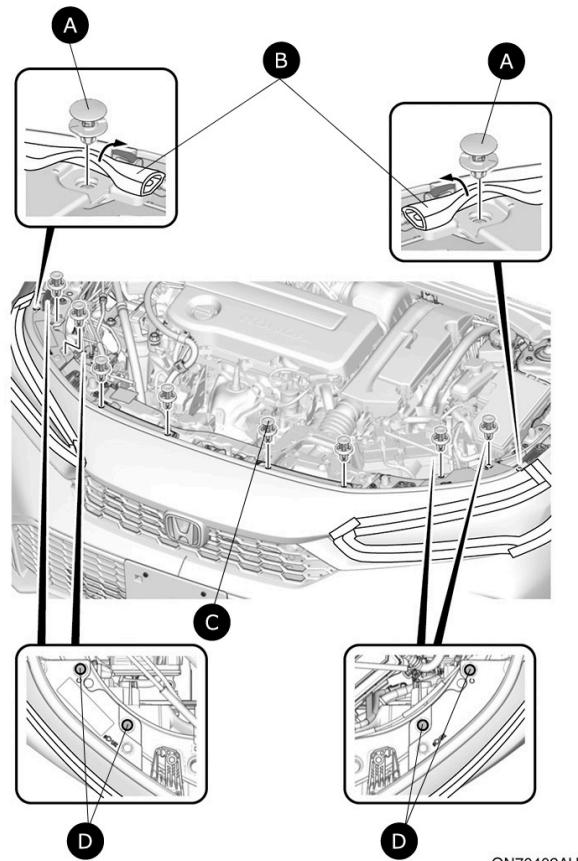

A	CLIP (short)
B	HOOD SEAL
C	CLIP(4)
D	CLIP(2)

QN70402AU

4 Remove the self-tapping screws, clips, and bolts.


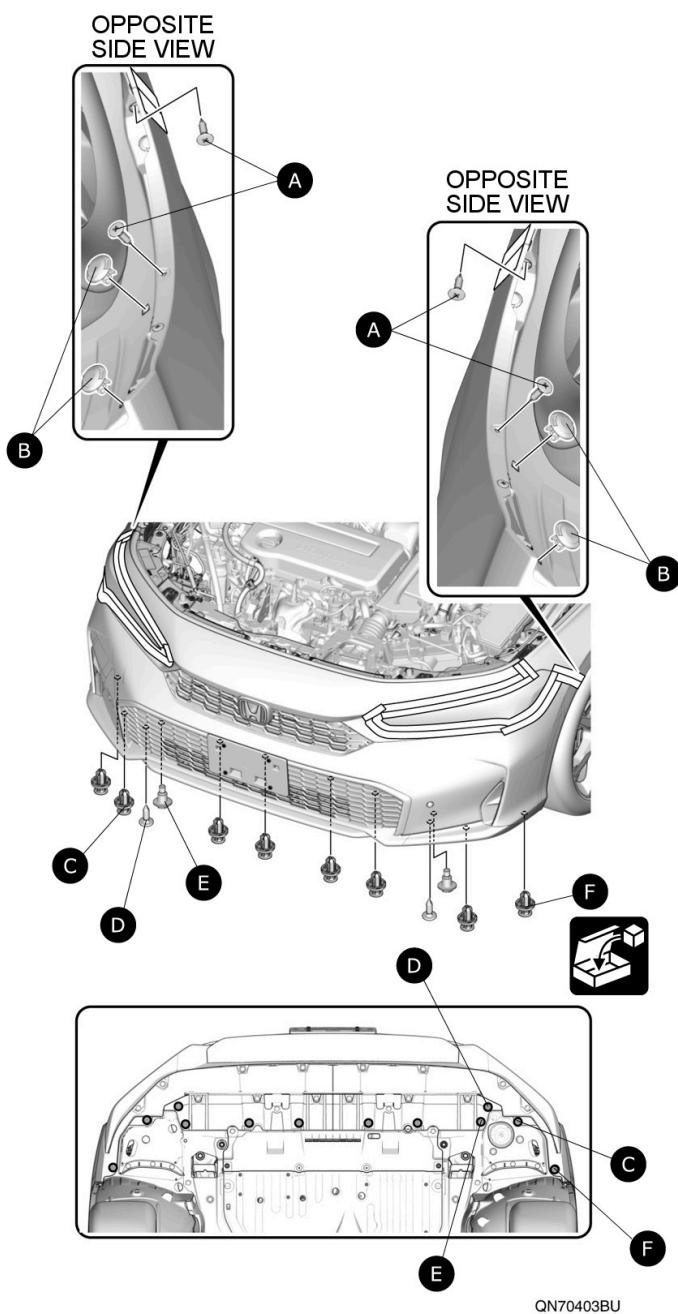


A	SELF-TAPPING SCREW(2)
B	CLIP (short)(2)
C	CLIP (long)(6)
D	SELF-TAPPING SCREW(2)
E	BOLT(2)
F	CLIP (long)(2)


5 Release the retaining tabs.

NOTE

- Release the retaining tabs starting from outside working in.
- Make sure to release the retaining tabs in the correct orientation.

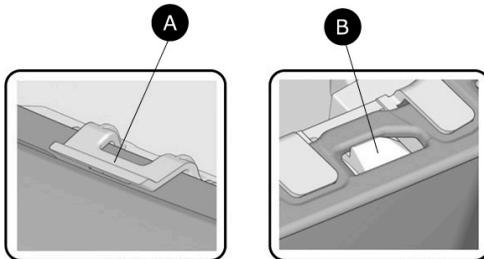

A	RETAINING TAB(5)
B	RETAINING TAB(3)
C	FRONT BUMPER


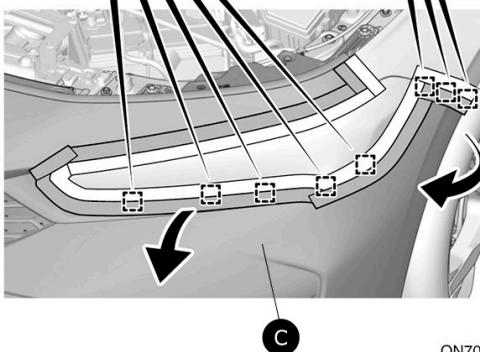


QN70404AU

6 Repeat step 5 on the other side.

7

Remove the front bumper.

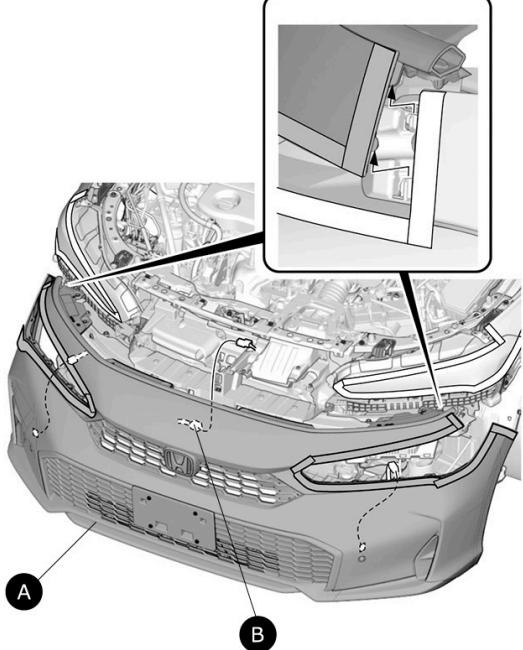


A	FRONT BUMPER
B	VEHICLE CONNECTORS (if equipped)

QN70405AU

Installing the Emblems

8

Remove the vehicle front H emblem.

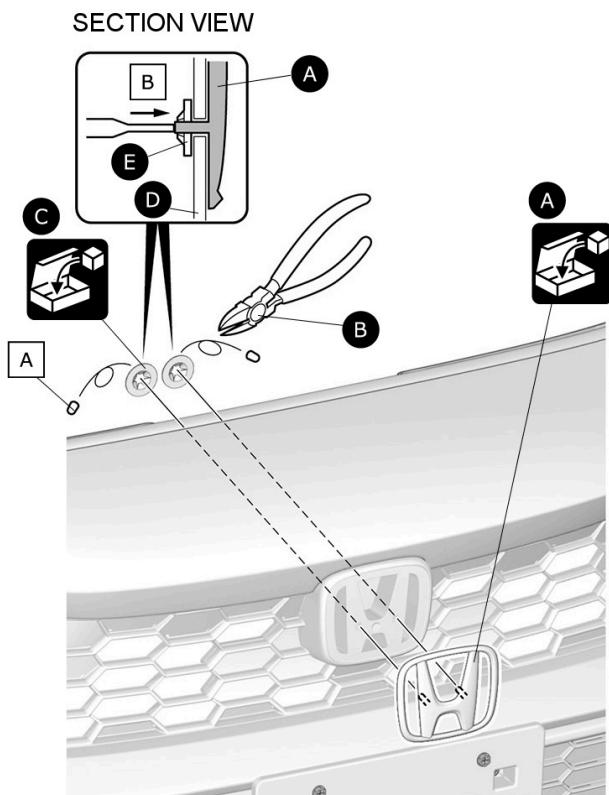

A	VEHICLE FRONT H EMBLEM
B	DIAGONAL CUTTERS
C	PUSH NUT(2)
D	FRONT GRILLE
E	PUSH NUT
A	PIN (Cut off.)(2)
B	Press the tip of pins.


QQ32302AK

9

Clean the front grille.

 **NOTE**

Allow to dry thoroughly.

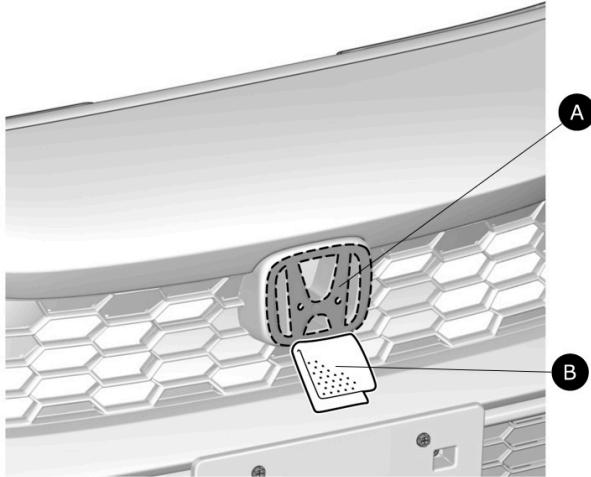


A	FRONT GRILLE
B	ALCOHOL WIPE

QN80103AU

10 Install the new front H emblem.


NOTE

- Check the orientation of the push nuts.
- Check the position of double-sided adhesive tapes and make sure to press firmly.

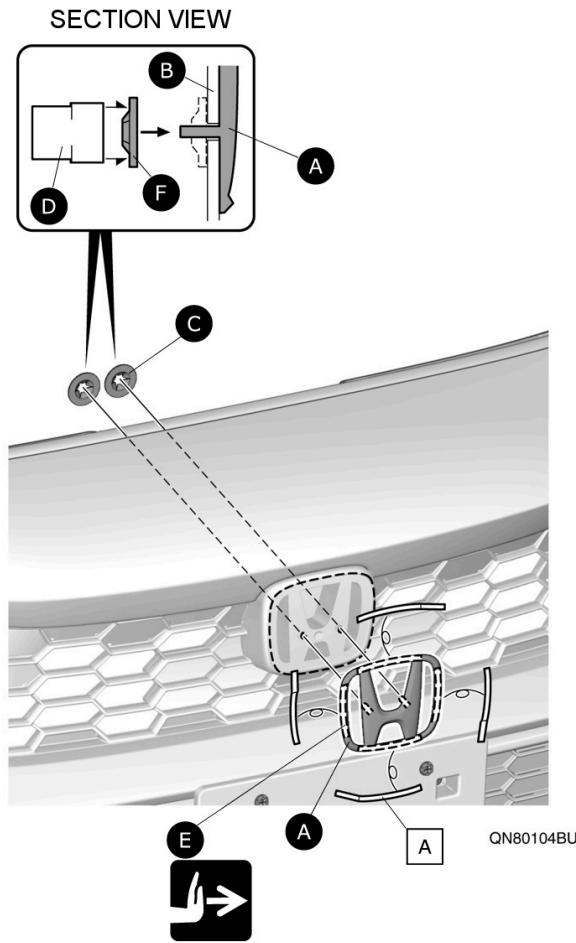



A	NEW FRONT H EMBLEM
B	FRONT GRILLE
C	PUSH NUT (supplied)(2)
D	6 mm SOCKET
E	DOUBLE-SIDED ADHESIVE TAPE(4)
F	PUSH NUT
A	ADHESIVE BACKING (Remove.)(4)

11 Secure the new front H emblem.

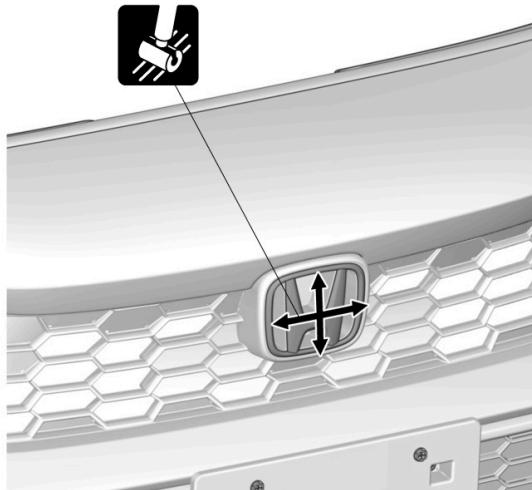

QN80105AU

12 Remove the trunk lid trim panel.

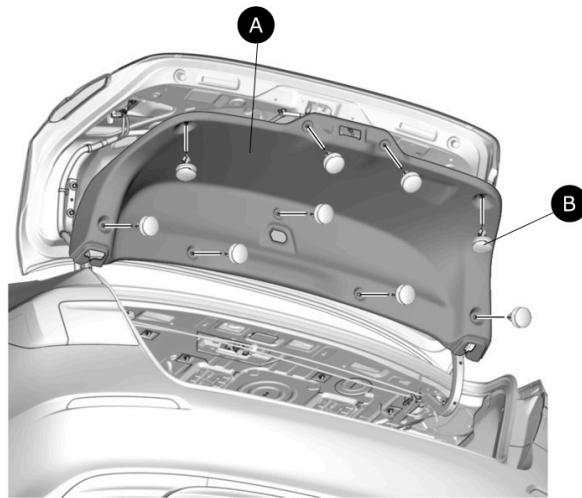


A	TRUNK LID TRIM PANEL
B	CLIP(9)

QK30102AR

13 Remove the vehicle rear H emblem.

NOTE

- Do not damage the trunk lid when removing the rear H emblem with the nylon string.
- Make sure to thoroughly remove the adhesive tape from the vehicle body.

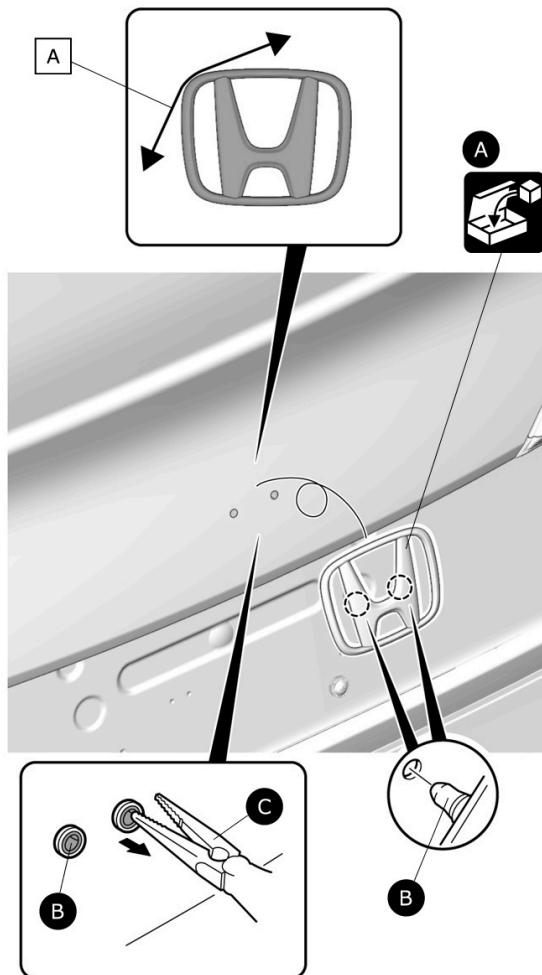


A	VEHICLE REAR H EMBLEM
B	CLIP(2)
C	NEEDLE NOSE PLIERS
A	NYLON STRING MOVEMENT

14

Clean the trunk lid.

 **NOTE**

Allow to dry thoroughly.

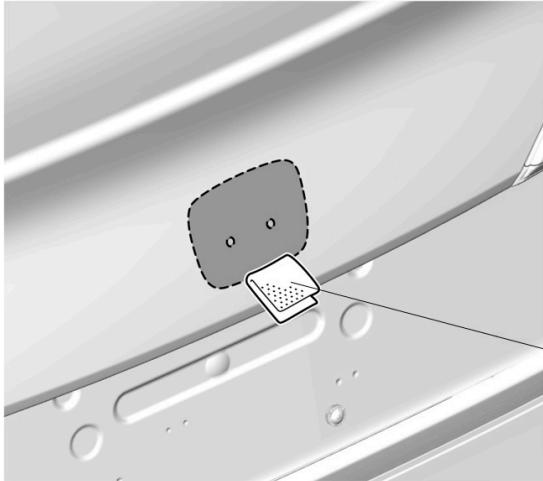


 **ALCOHOL WIPE**

QK40105AU

15 Install the new rear H emblem.


NOTE

Check the position of double-sided adhesive tapes and make sure to press firmly.

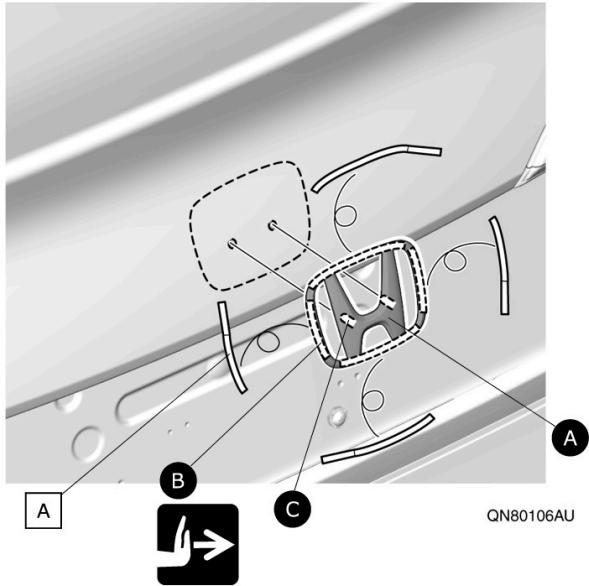

A	NEW REAR H EMBLEM
B	DOUBLESIDED ADHESIVE TAPE(4)
C	CLIP(2)
A	ADHESIVE BACKING (Remove.)(4)

16 Secure the new rear H emblem.

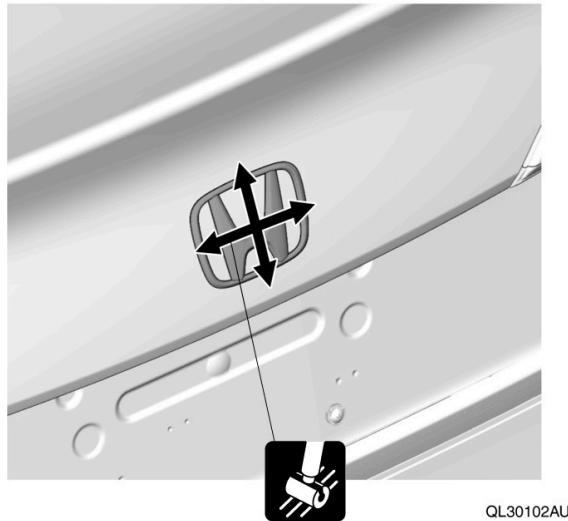

17 Choose one of these options.


- With CIVIC emblem

[Go to step 18](#)

- Without CIVIC emblem

[Go to step 31](#)

18 Remove the guide form.

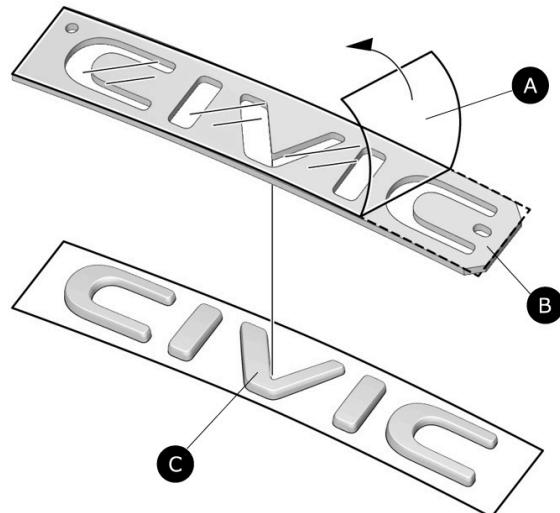


QK40107AU

A	POSITION FILM
B	GUIDE FORM
C	NEW CIVIC EMBLEM

19

Install the guide form.

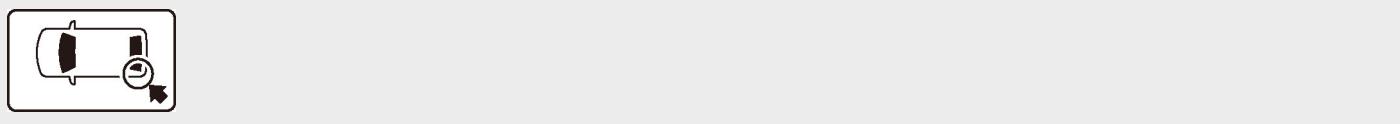


A	TRUNK LID
B	VEHICLE CIVIC EMBLEM

QK40108AU

20


Attach the masking tape.

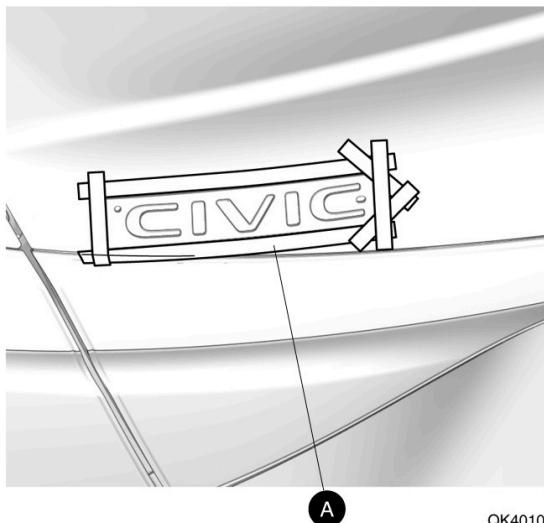

A	MASKING TAPE
---	--------------

QK40109AU

21 Remove the guide form.

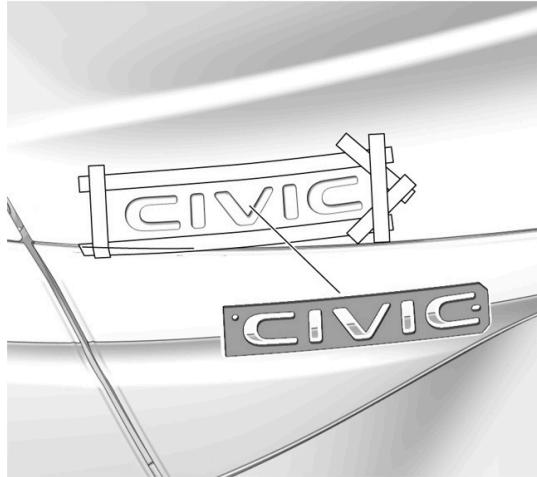


QK40110AU

22 Remove the vehicle CIVIC emblem.


NOTE

- Do not damage the trunk lid when removing the CIVIC emblem with the nylon string.
- Make sure to thoroughly remove the adhesive tape from the vehicle body.

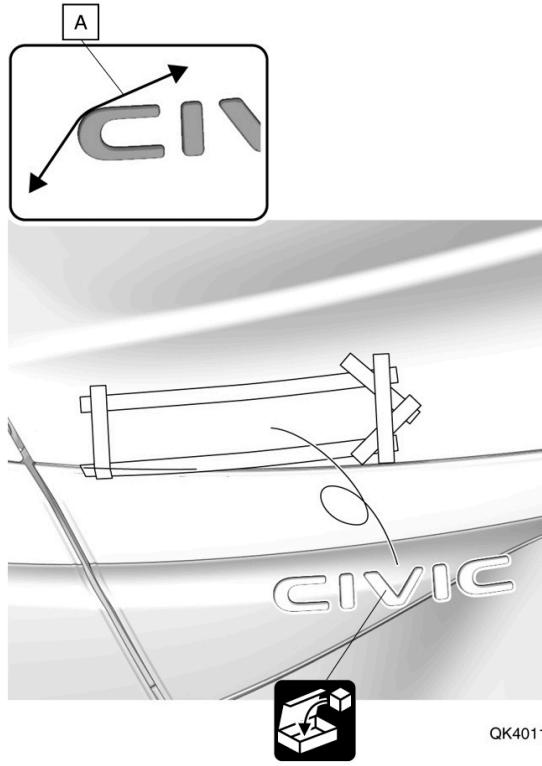

NYLON STRING MOVEMENT

23 Install the guide form.

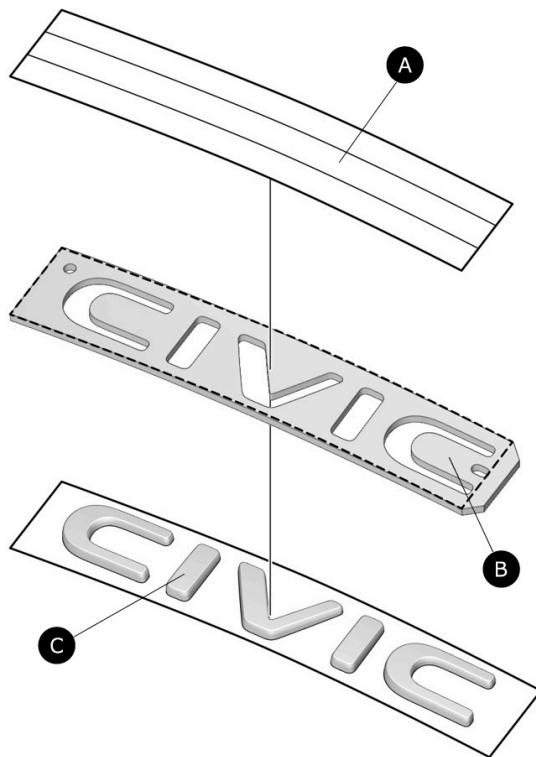

A	MASKING TAPE
B	GUIDE FORM
C	NEW CIVIC EMBLEM


QK40112AU

24 Attach the masking tape.

25 Clean the trunk lid.

 **NOTE**


Allow to dry thoroughly.

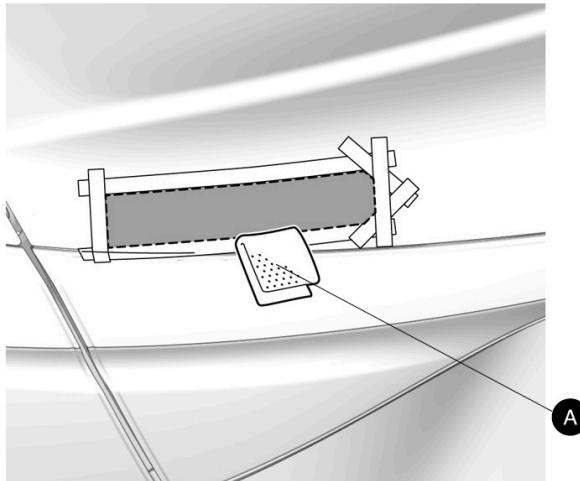

 **A** ALCOHOL WIPE

QK40113AU

26 Line up the guide form.

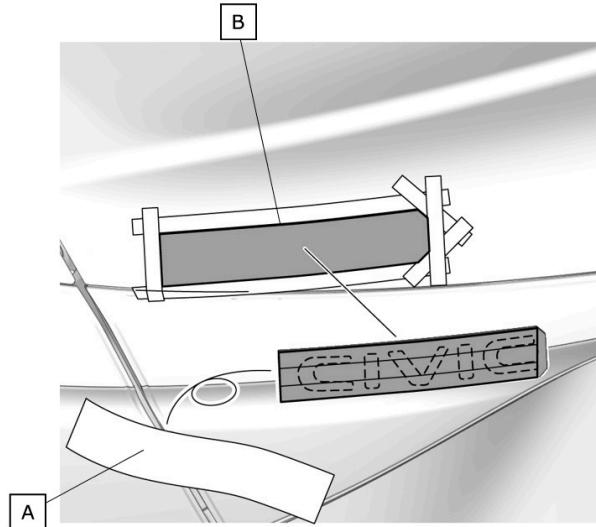


 A	ADHESIVE BACKING (Remove.)
 B	Line up.

QK40114AU

27 Attach the new CIVIC emblem.

NOTE

Check the position of double-sided adhesive tapes and make sure to press firmly.

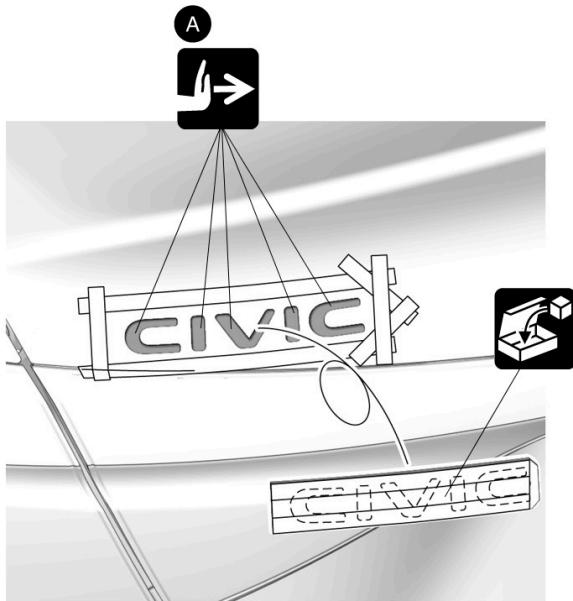


A DOUBLE-SIDED ADHESIVE TAPE(5)

QK40115AU

28 Remove the guide form.

29 Secure the new CIVIC emblem.

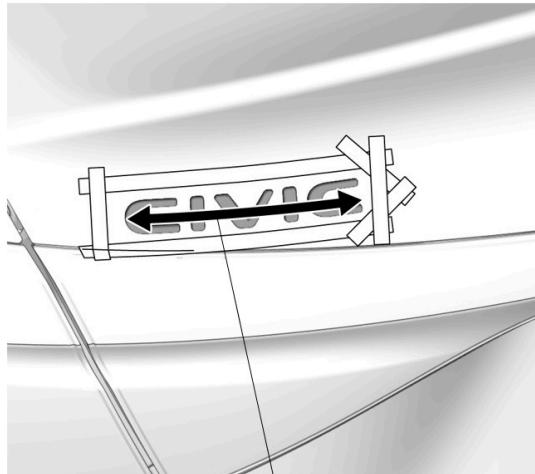

QL30103BU

30 Remove the masking tape.

Check After Installation

31 Check that all parts are installed and properly routed.

NOTE


- Check that all harnesses are not pulled or pinched.
- Make sure all clips and wire ties are securely installed.

Installing All Removed Parts

32 Install all removed parts.

Operation Check

33 Connect the negative cable to the battery.

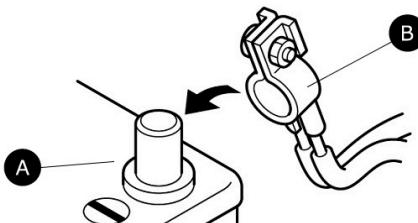

Q060702BM

A	BATTERY
B	NEGATIVE CABLE

Vehicle Check

34 Make sure all accessories and systems operate properly.

35 If necessary, restore the systems back to normal operation as described in the service information.

36 Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.