



INSTALLATION INSTRUCTIONS

| Accessory | Application | Publications No. |
|--------------------------------------|--|------------------------|
| DECKLID SPOILER P/N 08F10-TRT-100 | 2018 CLARITY (All Clarity Vehicles) | VERSION 1 |
| | | Issue Date NOV 2017 |

PARTS LIST

Spoiler




Right trunk spring
(marked red)



2 Clips



Template A

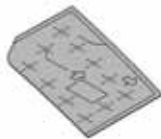

Template B



2 Alcohol swabs



TOOLS AND SUPPLIES REQUIRED

Eye protection (face shield, safety goggles, etc.)

Drill

File

Masking tape

Heavy gloves

Diagonal cutters

Ratchet

10 mm Socket

10 mm Open end wrench

Flat-tip screwdriver

Pushpin

Ruler

3 mm, 6 mm, 8 mm, and 10 mm Drill bits


Utility knife

Needle nose pliers

The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trunk Spring Tool (T/N 07AAF-T2AA200)
- Rubber Roller (T/N MHLE54D)
- Trim Tool Set (T/N SOJATP2014)
- Air Saw (T/N AT192A)
- Plastic Trim Tool (T/N SILTRIMTL10)

Illustration of the Spoiler Installed in the Vehicle

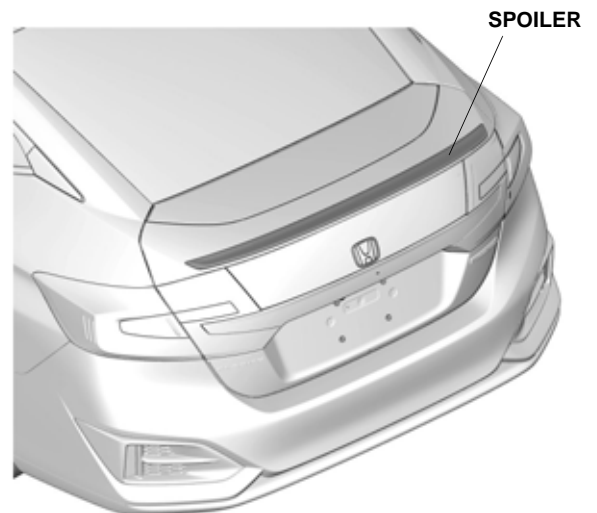

QF23701AT

INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE:


- Be careful not to damage the paint finish.
 - This spoiler kit should be installed only if the ambient air temperature is 15°C (60°F) or above.
 - Clean the areas to be covered.
 - To allow the adhesive to cure, do not wash the vehicle for 24 hours. Make sure your customer is aware of this.
1. Disconnect the negative cable from the battery.

NOTICE

The procedure for disconnecting the negative battery cable from the battery is different on fuel cell vehicles than other vehicles. For your safety, refer to the service information.


Removing the Vehicle Parts

2. Remove left trunk lid hinge trims A and B.

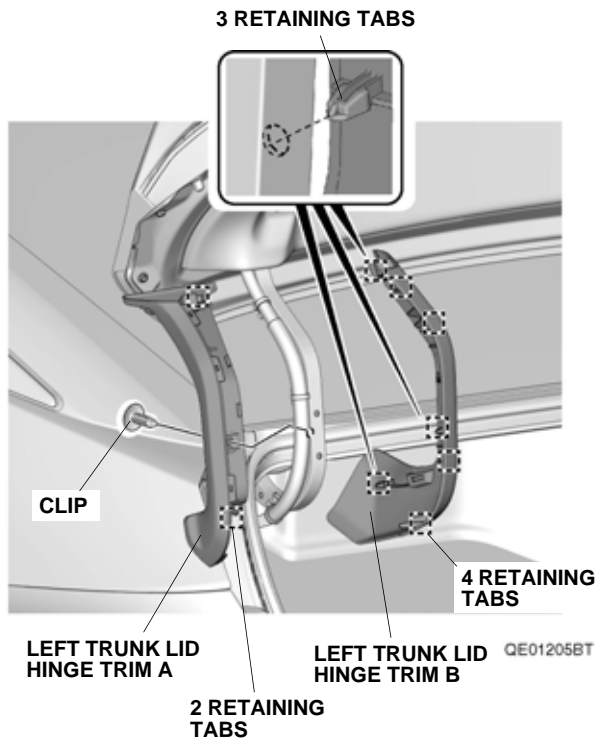


3. Repeat step 2 on the right side of the vehicle.


4. Remove the trunk lid front trim panel.

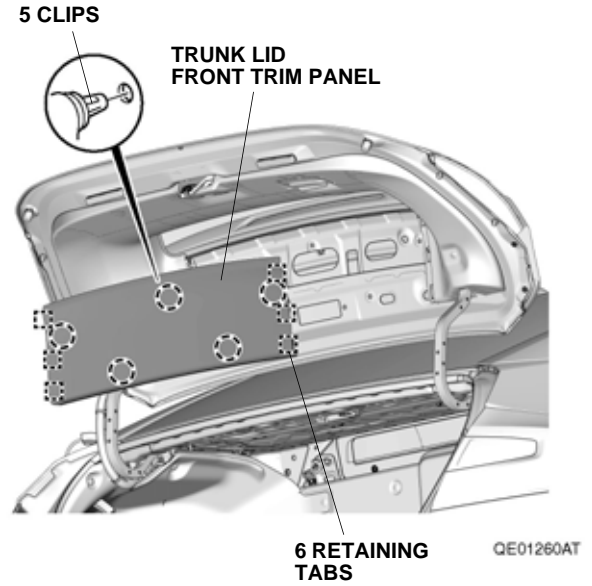


5. Remove the trunk lid handle:
- Wrap masking tape around the tip of flat-tip screwdriver.
 - Release the lid.

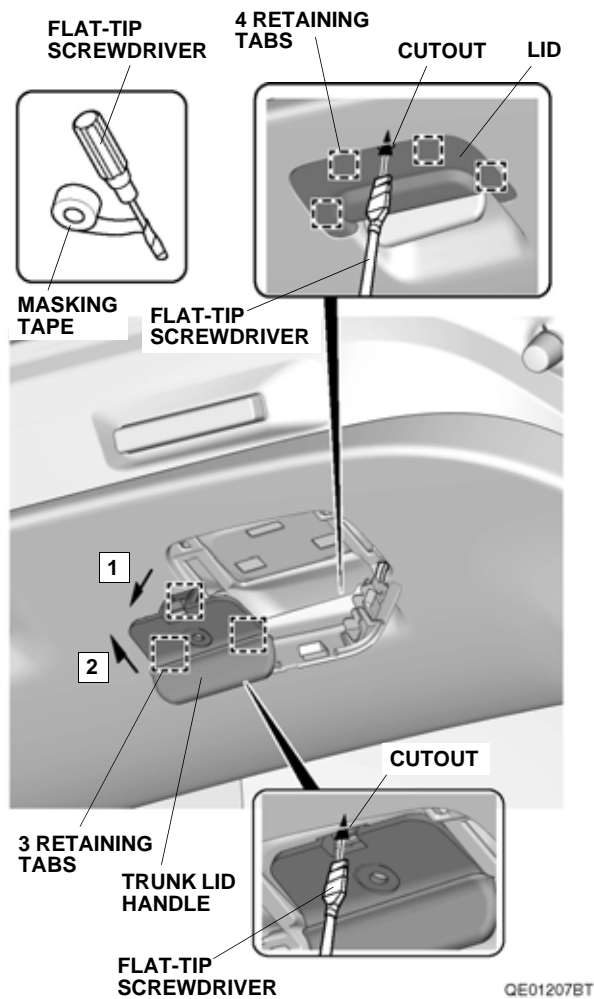


6. Remove the trunk lid trim panel.

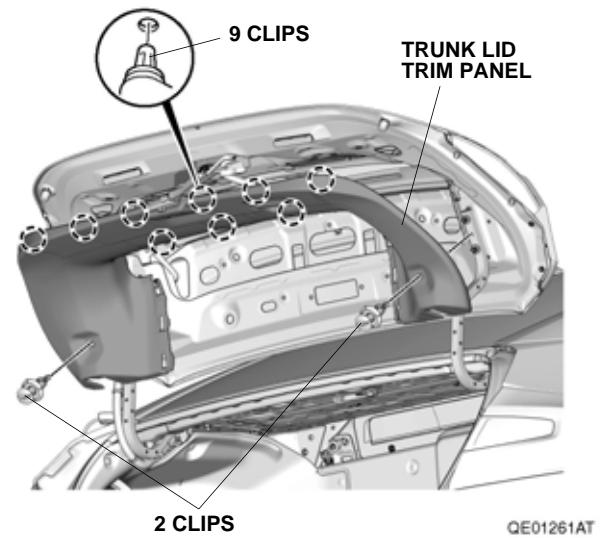

7. Unplug the vehicle connector and remove the four bolts.

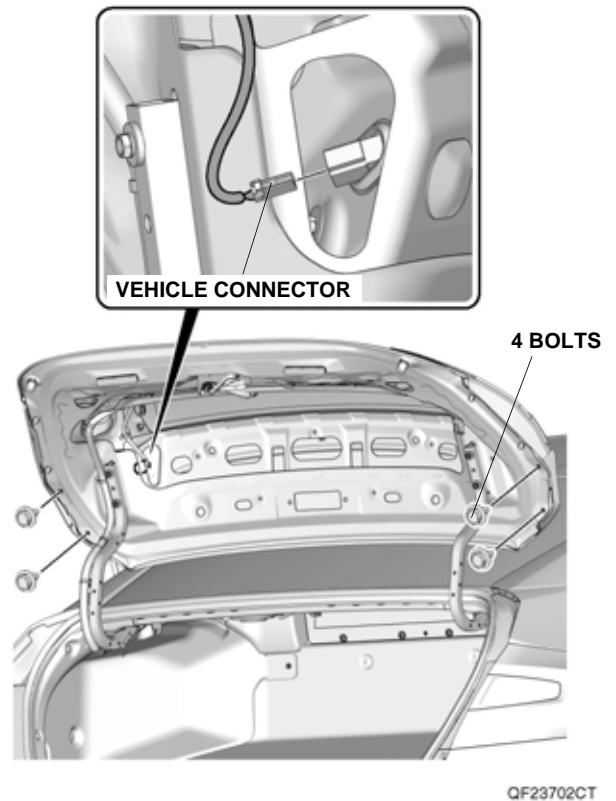


8. Release the three clips on the right side of the trunk lid spoiler trim.

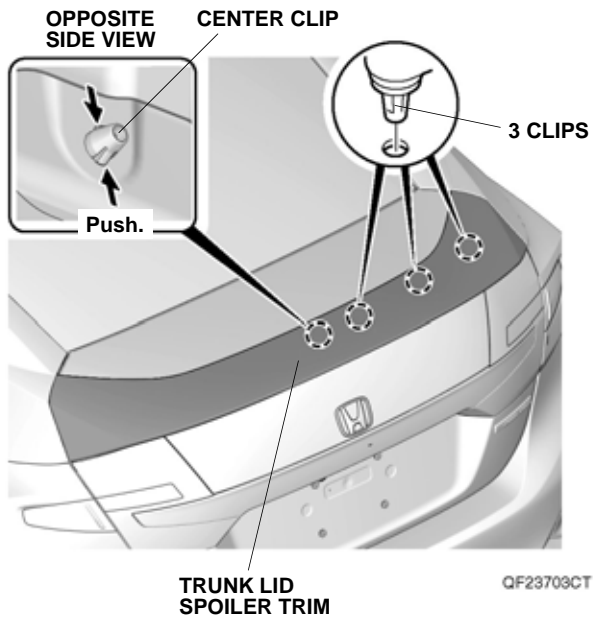


9. Release the center clip.

10. Release the three clips on the left side of the trunk lid spoiler trim.

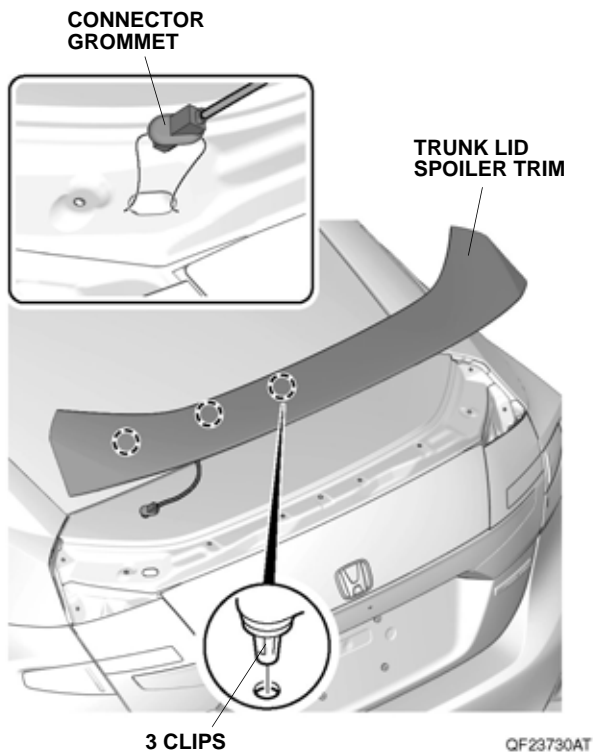


Installing the Spoiler


11. To prevent damage to the trunk lid spoiler trim, remove the clip and attach the masking tape as shown.

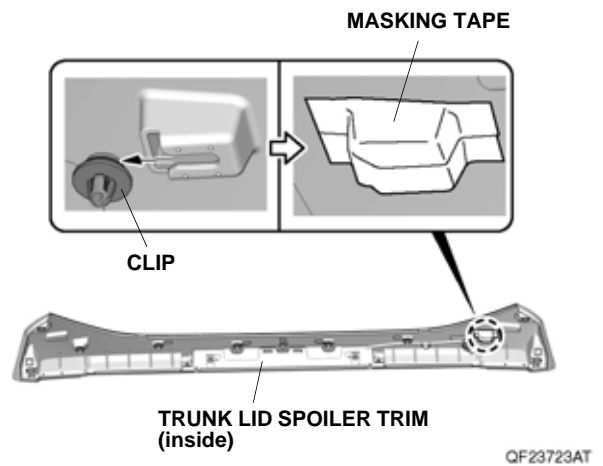


12. Place template A on the left side of the trunk lid spoiler trim and line up the template A with the trunk lid spoiler trim as shown. Tape the template A to the trunk lid spoiler trim with masking tape.

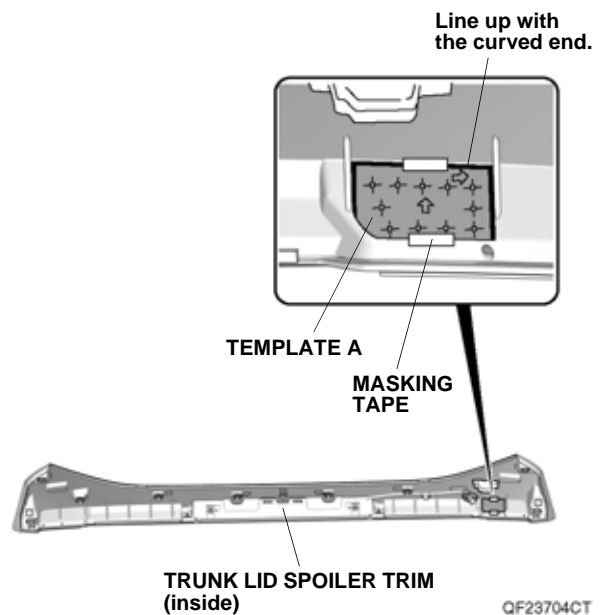


13. Using a pushpin, pierce the trunk lid spoiler trim through the 11 holes in template A. Remove template A.

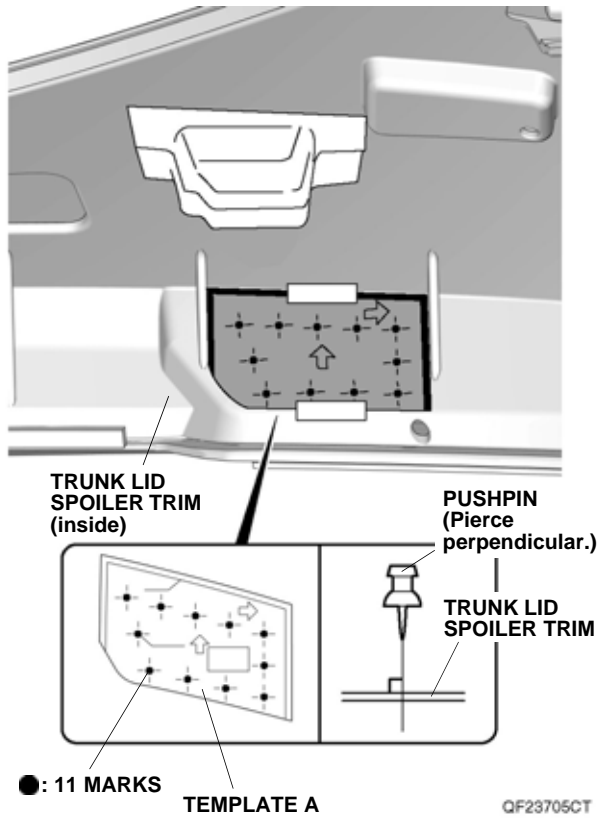


14. While wearing eye protection, drill the 11 pierced marks to 10 mm.
- Wrap masking tape around each drill bit 10 mm (0.39 in.) away from the tip or use a drill stop.
 - First, drill with a 3 mm drill bit, then follow with a 6 mm drill bit, an 8 mm drill bit, and finish with a 10 mm drill bit.

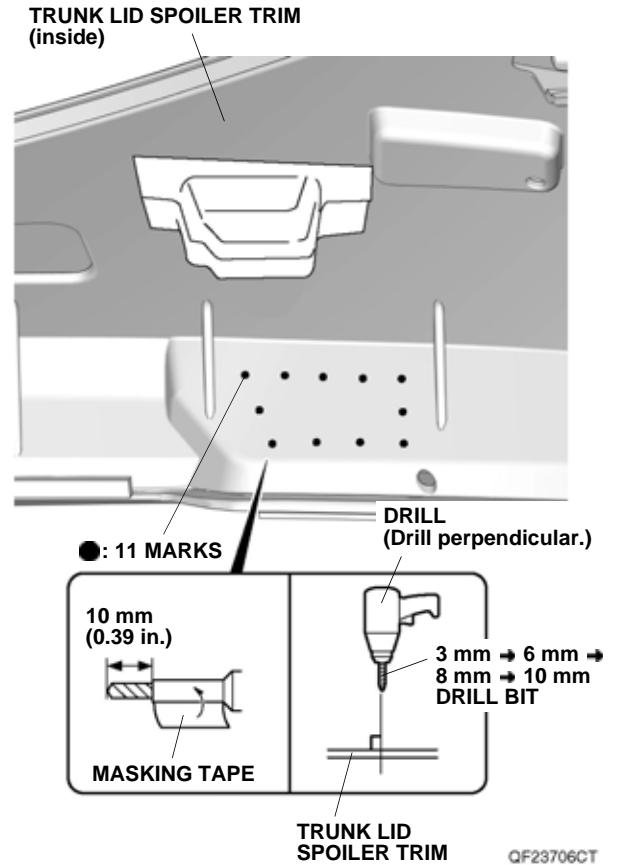


15. Using an air saw, cut out the trunk lid spoiler trim as shown. Remove any burrs.

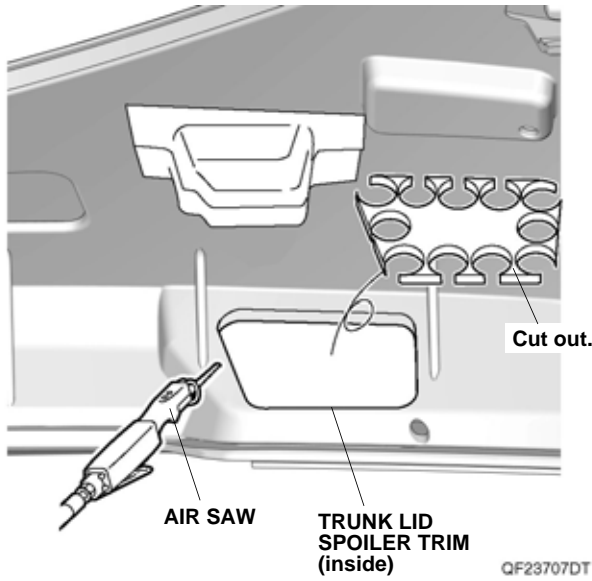


16. Remove the masking tape and install the clip removed in step 11.
17. Turn template A over and repeat steps 11 through 16 on the right side of the trunk lid spoiler trim.
18. Place template B on the left side of the trunk lid spoiler trim and line up template B with the trunk lid spoiler trim as shown. Tape template B to the trunk lid spoiler trim with masking tape.

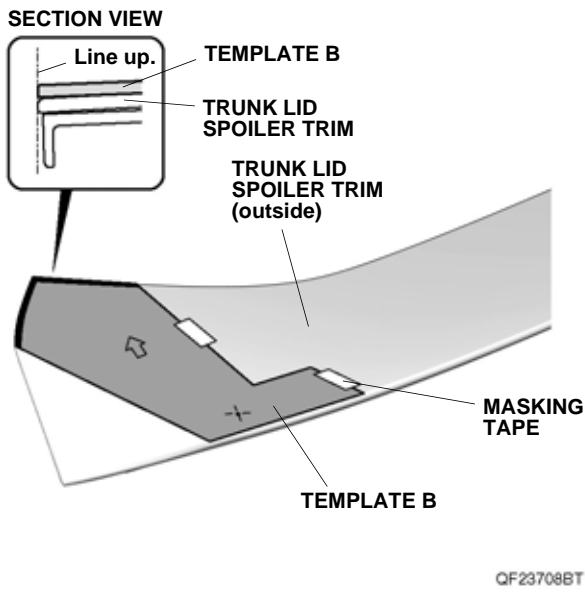


19. Apply masking tape to the trunk lid spoiler trim as shown.

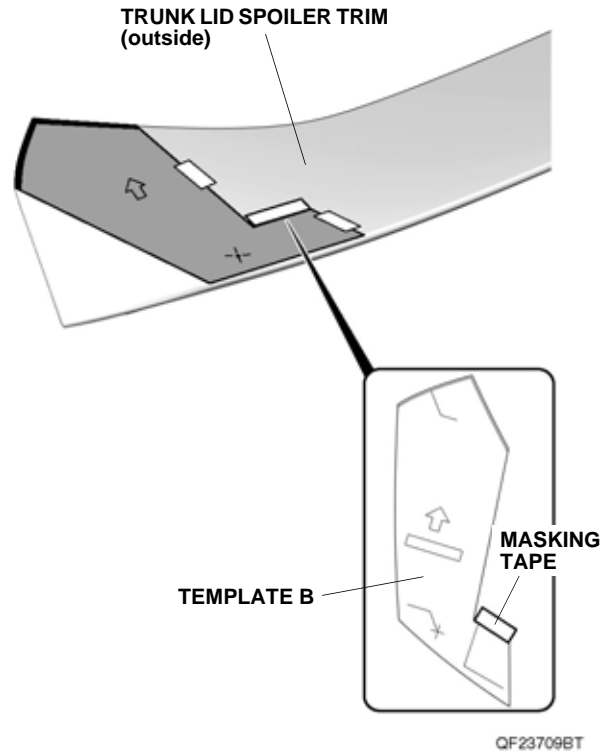


20. Using a pushpin, pierce the trunk lid spoiler trim through the one hole in template B. Remove template B.

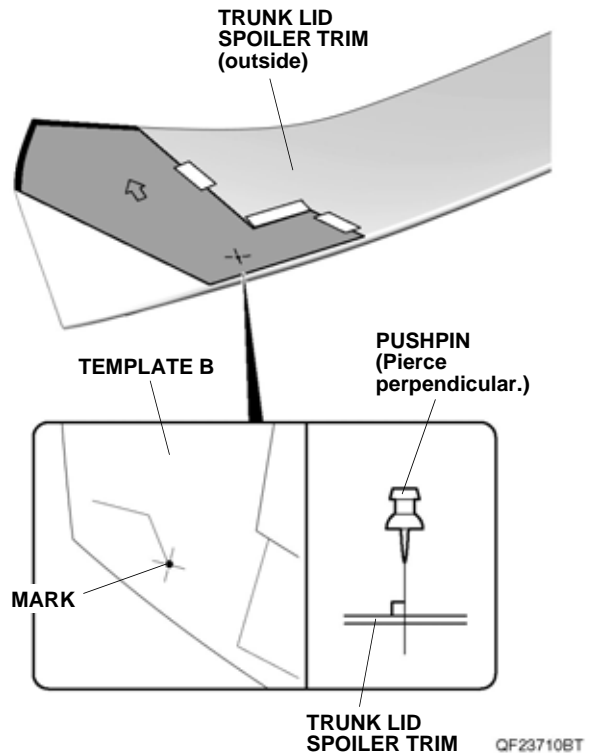


21. While wearing eye protection, drill one pierced mark to 10 mm.
 - Wrap tape around each drill bit 10 mm (0.39 in.) away from the tip or use a drill stop.
 - First, drill with a 3 mm drill bit, then follow with a 6 mm drill bit, an 8 mm drill bit, and finish with a 10 mm drill bit.
 - Remove any burrs.

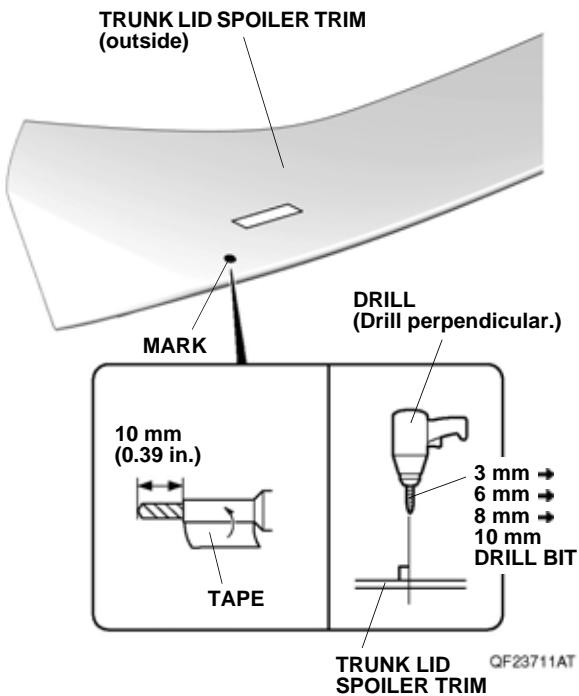



22. Turn template B over and repeat steps 18 through 21 on the right side of the trunk lid spoiler trim.
23. Using two alcohol swabs, thoroughly clean the trunk lid spoiler trim where the spoiler will attach.

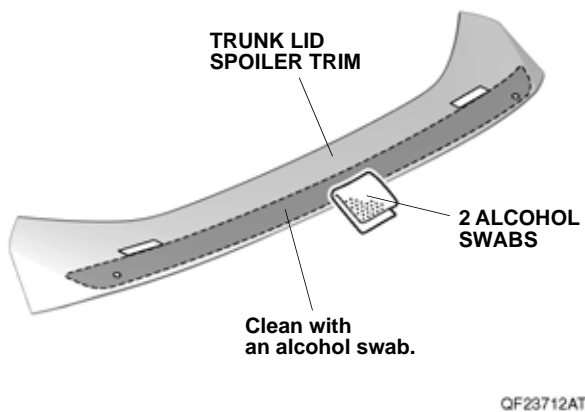

24. Using a utility knife, cut the two adhesive backings on the spoiler. Peel back the adhesive backing from each adhesive strip and tape the ends to the front surface of the spoiler with masking tape.

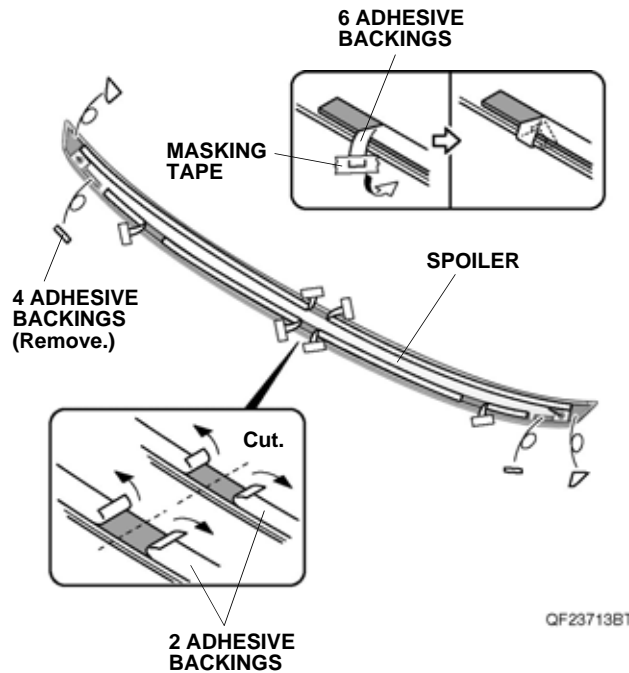


25. Remove the four adhesive backings.
26. Line up the spoiler with masking tape and adjust the position of the spoiler so there is equal spacing on both sides.

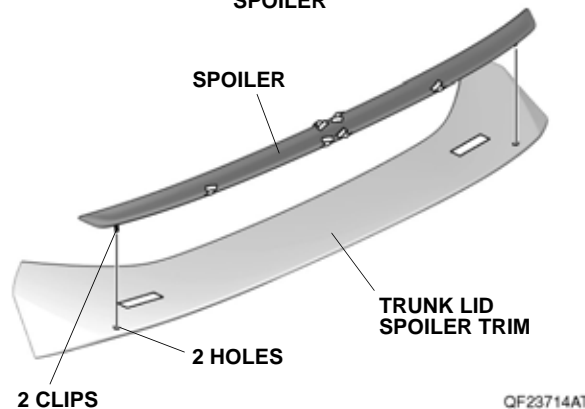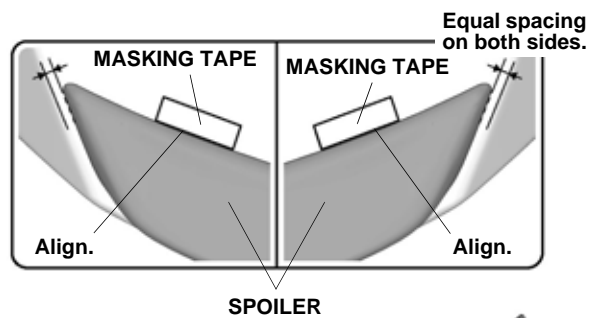


QF23714AT

27. While applying light pressure against the spoiler, carefully remove the adhesive backings as shown.

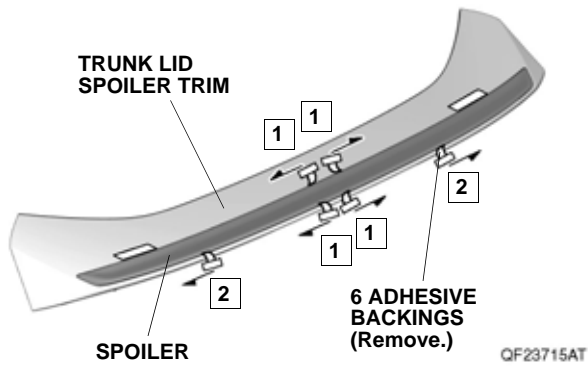


28. Using your hand, firmly press the spoiler against the trunk lid spoiler trim.
29. Using a rubber roller, apply firm pressure, especially at the ends, to set the adhesive.

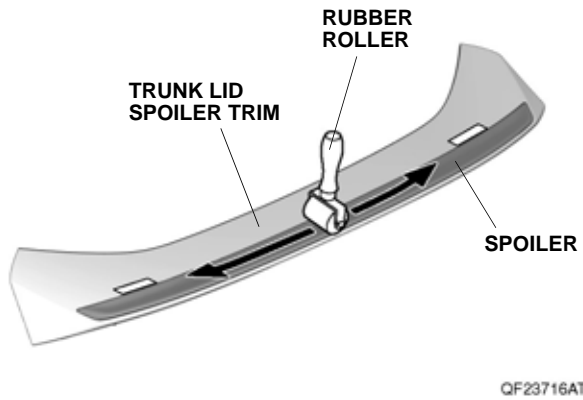

30. Remove the masking tape.


31. Secure the spoiler with two clips.
NOTE: Do not push the clip too tightly or it may deform the spoiler. Readjust the clip, if necessary.

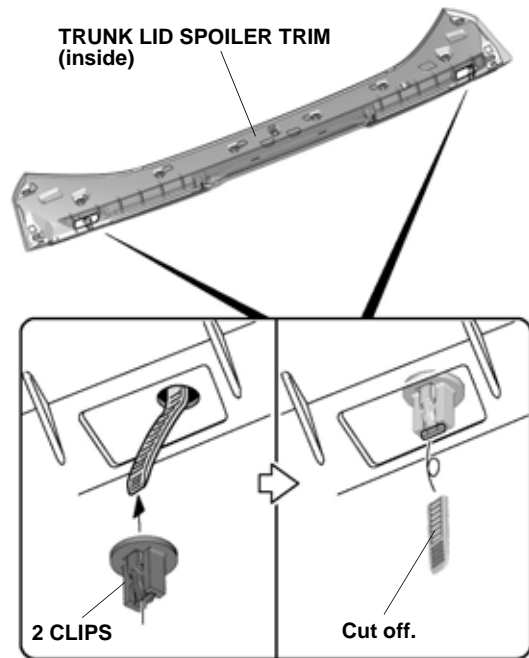


32. Cut off the excess from the clips.
33. Install the trunk lid spoiler trim.

Installing the Right Trunk Spring


34. Remove the center clip from the right trunk spring.

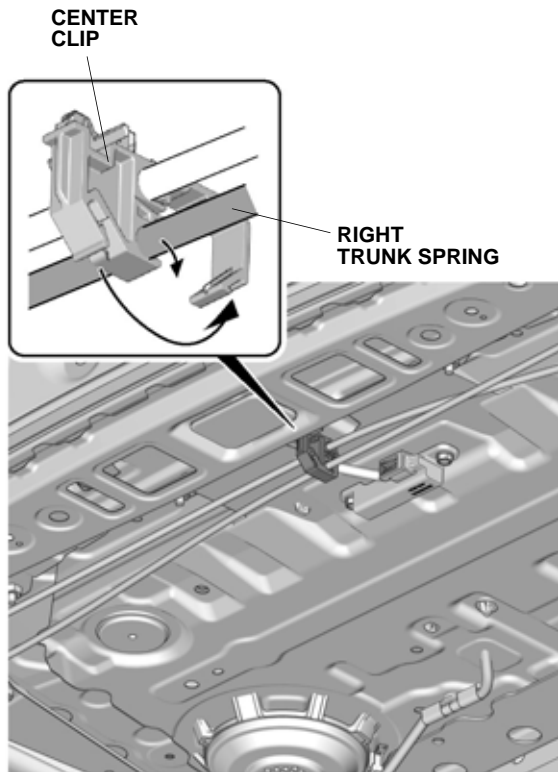

35. With an assistant holding the trunk lid open, remove the right trunk spring from the slider using the trunk spring tool. Wear gloves to protect your hands and push the trunk spring tool slowly and carefully.

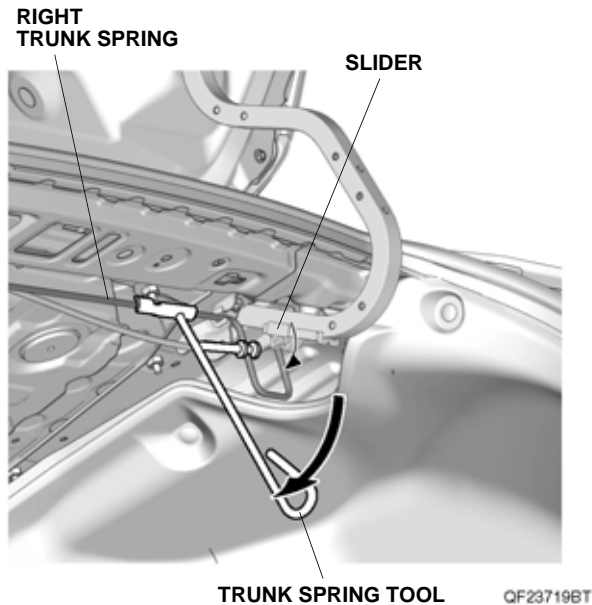


- Remove the right trunk spring from the right hinge bracket.

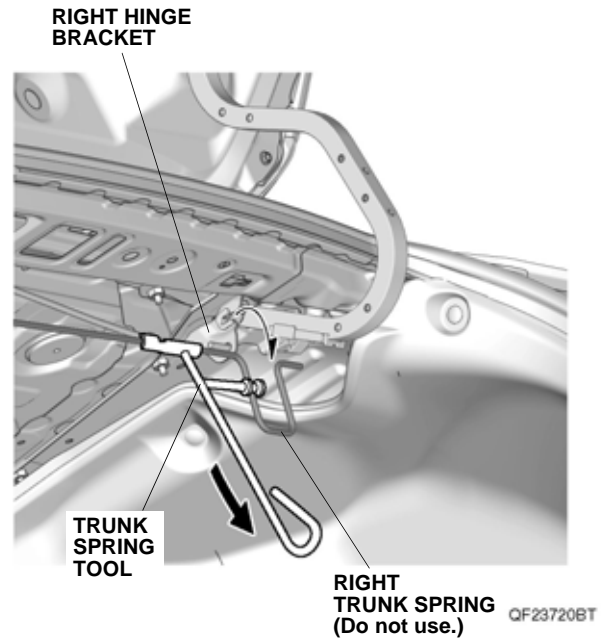


36. Install the new right trunk spring in the reverse order of removal:
- Install the red marked trunk spring in the slot in the left (driver's side) hinge bracket and to the right (passenger's side) hinge arm.
 - Wearing gloves, rotate the trunk spring tool as you pull it towards you.

NOTICE: Be careful when installing the trunk spring as they could repel with strong force and cause injury.

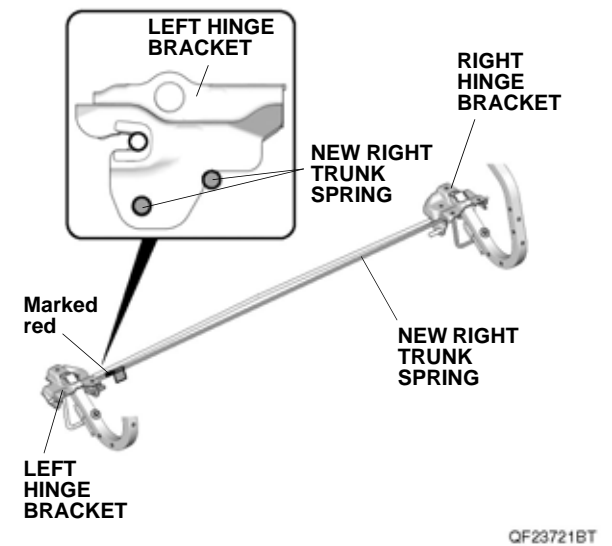

37. Install the center clip to the new right trunk spring.

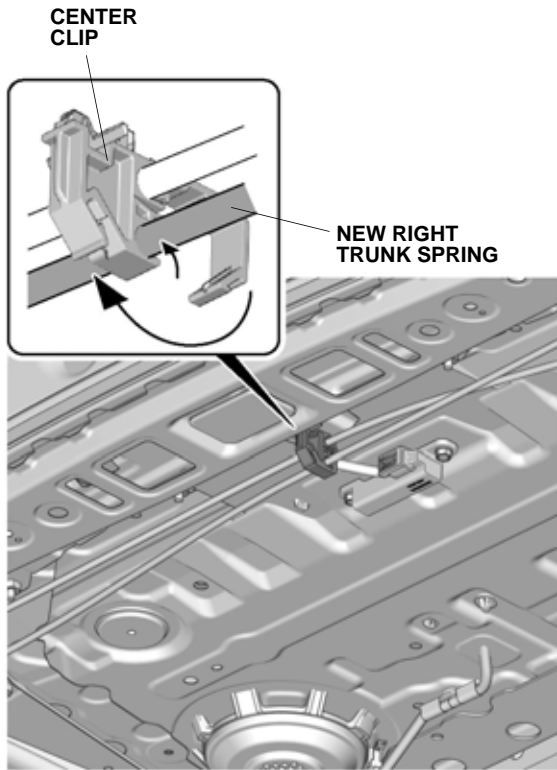

QF23722BT

38. Check that all wire harnesses are routed properly and all connectors are plugged in.
39. Install all removed parts.
40. Connect the negative cable to the battery.
41. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
42. Set the clock on vehicle without navigation.