




## TOOL AND SUPPLIES REQUIRED

Phillips screwdriver  
Ratchet  
10 mm and 13 mm Sockets  
Torque wrench  
Drill  
3 mm, 6 mm, 8 mm, and 10 mm Drill bits  
Blanket  
Eye protection (safety goggles, face shield, etc.)  
Utility knife  
Pushpin  
File  
Ruler  
Diagonal cutter  
Isopropyl alcohol  
Shop towel

*The following tools are available through the Honda Tool and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search". Or, call 888-424-6857.*

- Air Saw (T/N AT192A)
- Plastic Trim Tool (T/N SILTRIMTL10)

## Illustration of the Running Boards Installed on the Vehicle

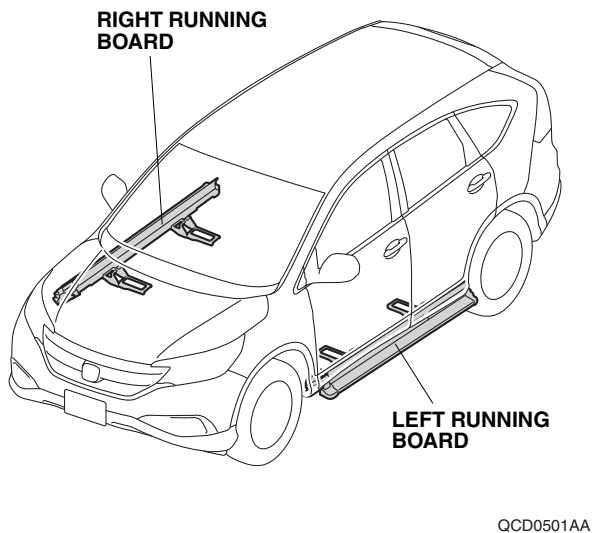

## INSTALLATION

**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

### NOTE:

- These instructions show the left running board being installed. The same procedure applies to installing the right running board.
  - Do not damage the body paint finish.
  - This kit should be installed only if the ambient air temperature is 15°C (60°F) or above.
  - To allow the adhesive to cure, do not wash the vehicle for 24 hours. Please advise the customer.
1. Remove the self-tapping screws and clip from the left front wheel arch protector.

