



INSTALLATION INSTRUCTIONS

Accessory	Application	Publications No.
REAR BUMPER PROTECTOR P/N 08P01-TLA-100	2018 CR-V	VERSION 2
		Issue Date OCT 2017

PARTS LIST

Rear bumper protector



Primer



Alcohol swab



TOOLS AND SUPPLIES REQUIRED

Masking tape

Felt-tip pen

Ruler

The following tool is available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

Rubber Roller (T/N MHLE54D)

Illustration of the Rear Bumper Protector on the Vehicle



REAR BUMPER PROTECTOR

QF21601AC

INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE:

- Be careful not to damage the paint finish.
- This rear bumper protector should be installed only if the ambient air temperature is 15°C (60°F) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Make sure your customer is aware of this.


Installing the Rear Bumper Protector

1. Position the rear bumper protector on the rear bumper, and line up the sticker on the rear bumper protector with the center of the striker.




2. On the left side of the rear bumper protector, line up the crease in the bumper protector with the crease in the bumper. Then, secure the rear bumper protector to the rear bumper with masking tape, and repeat this on the right side.


3. Attach masking tape along the rear bumper protector as shown.

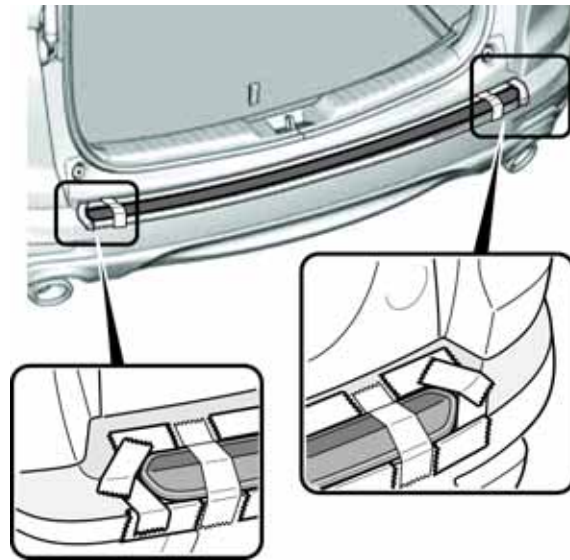

4. Remove the rear bumper protector from the rear bumper.
5. Attach masking tape to the areas shown.

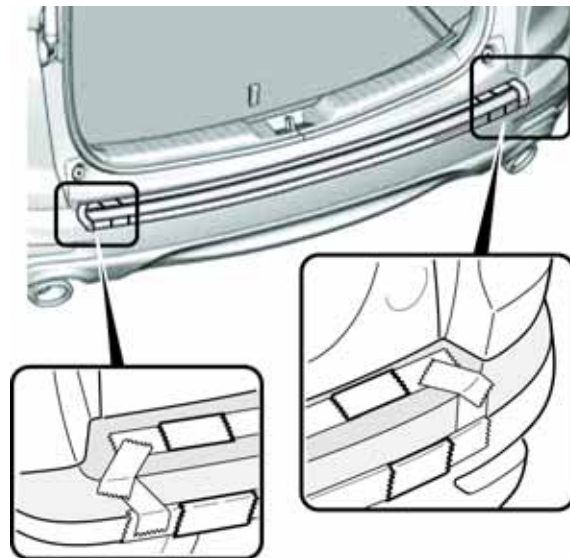


6. Using the alcohol swab, thoroughly clean the rear bumper where the rear bumper protector will attach.

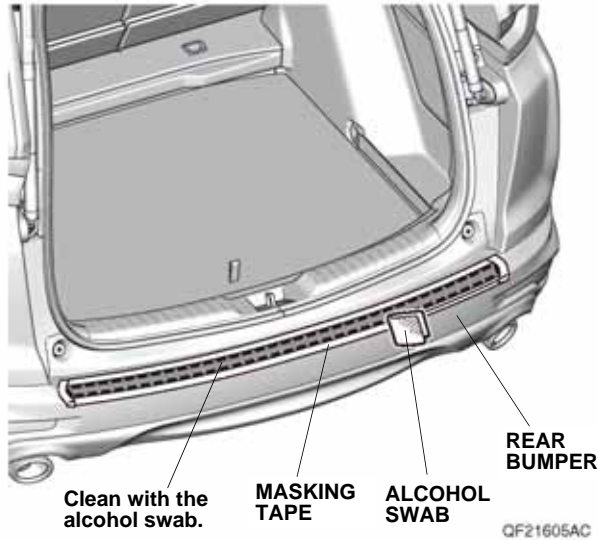


7. Apply the primer to the rear bumper.

NOTE:


- Apply the primer evenly.
- Be careful not to apply the primer anywhere except to the indicated area.
- Do not apply additional primer.
- Apply the primer, and let it dry for at least 10 minutes.
- Attach the rear bumper protector within 24 hours after applying the primer.

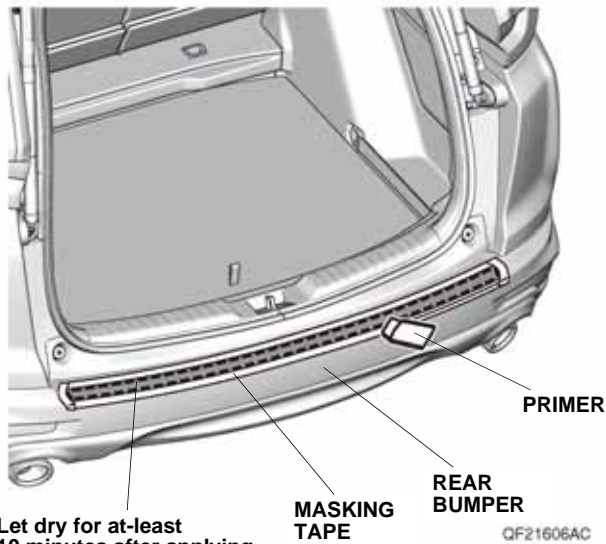


8. Peel back the adhesive backings, and secure them to the surface of the rear bumper protector with strips of masking tape. Remove the remaining adhesive backings.

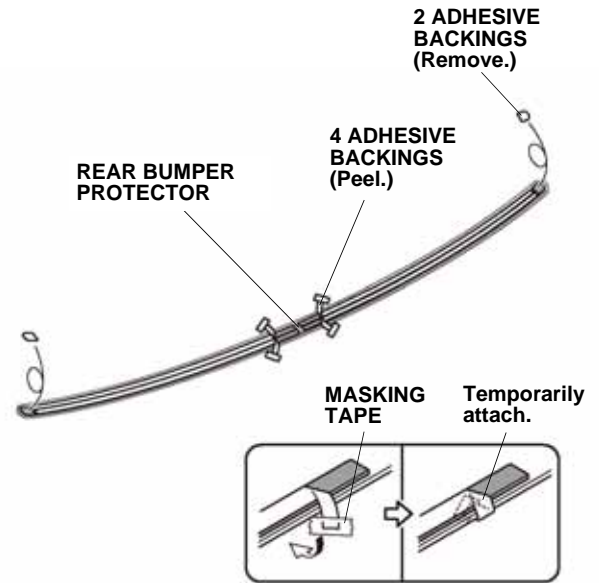


9. Line up the rear bumper protector as shown.

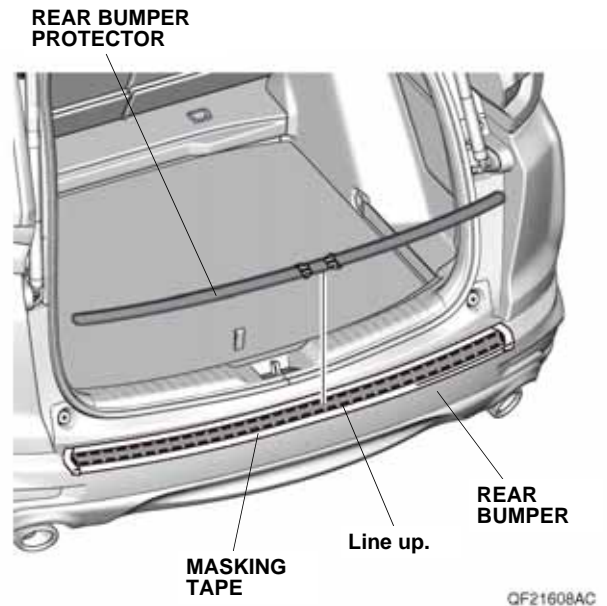

10. While applying light pressure against the rear bumper protector, carefully remove the taped adhesive backings.

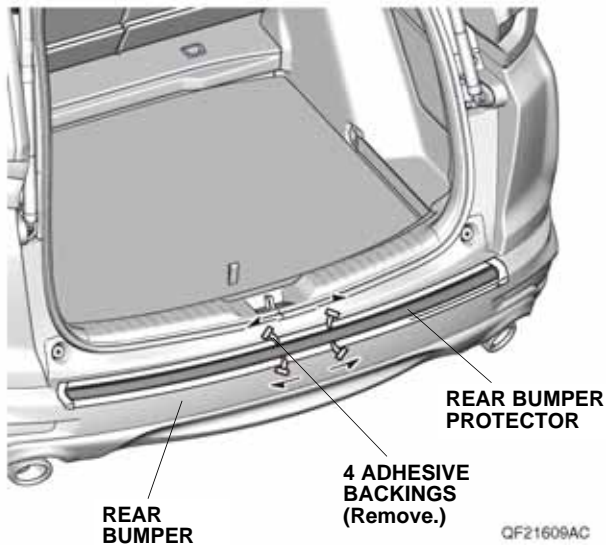

11. Using a rubber roller, apply firm pressure against the rear bumper protector and roll from one end to the other.
NOTE: Apply firm pressure, especially at the ends.

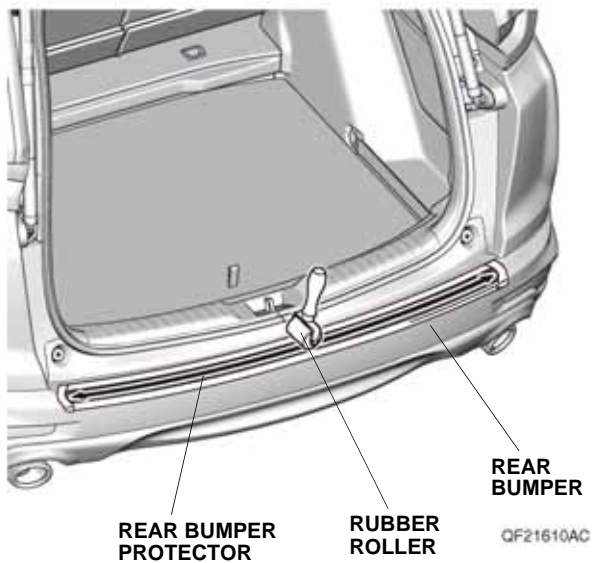

12. Remove the masking tape from the rear bumper and the sticker on the rear bumper protector.