



Illustration of the Black Emblems Installed on the Vehicle

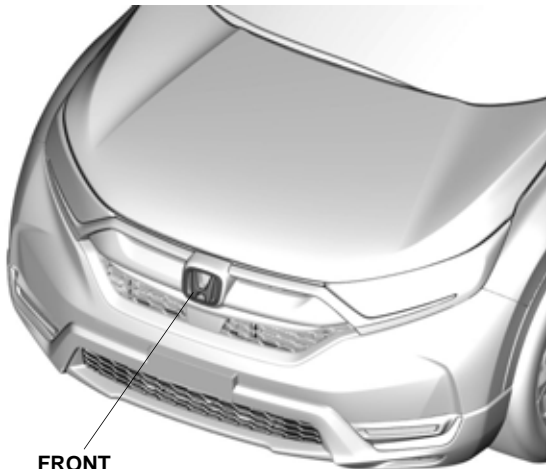

FRONT
H EMBLEM

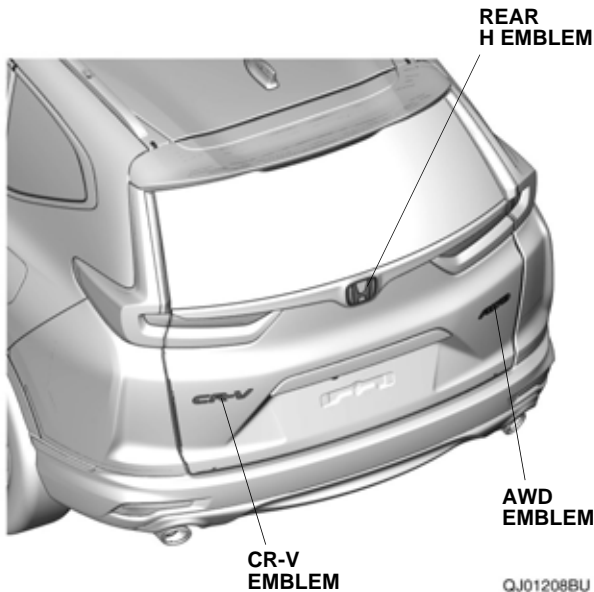

REAR
H EMBLEM

CR-V
EMBLEM

AWD
EMBLEM

QJ01208BU



INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE:

- Be careful not to damage the body paint finish.
 - This kit should be installed only if the ambient air temperature is 60°F (15°C) or above.
 - To allow the adhesive to cure, do not wash the vehicle for 24 hours. Make sure the your customer is aware of this.
1. Disconnect the negative cable from the battery, then wait at least 3 minutes before starting work.
 2. Wrap a shop towel around the hood latch lever.

HOOD LATCH
LEVER
(Wrap with
a shop towel.)

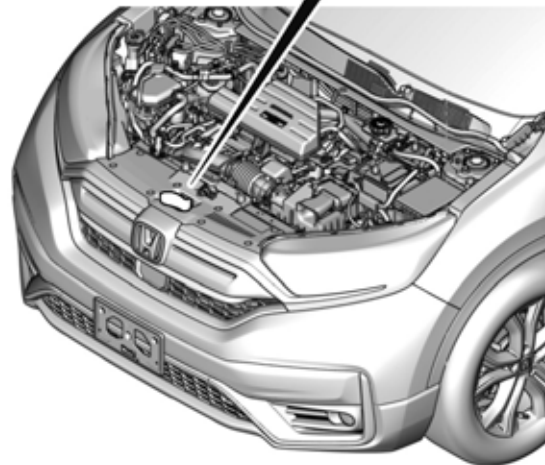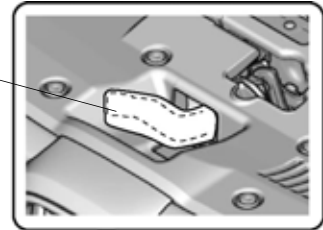

QHD2607AA

