

Germain Honda of College Hills



INSTALLATION INSTRUCTIONS

Accessory

BLACK EMBLEMS

Application

2023 CR-V
MODEL SERIES


Publications No.

VERSION 1

Issue Date

AUG 2022

GENERAL VIEW

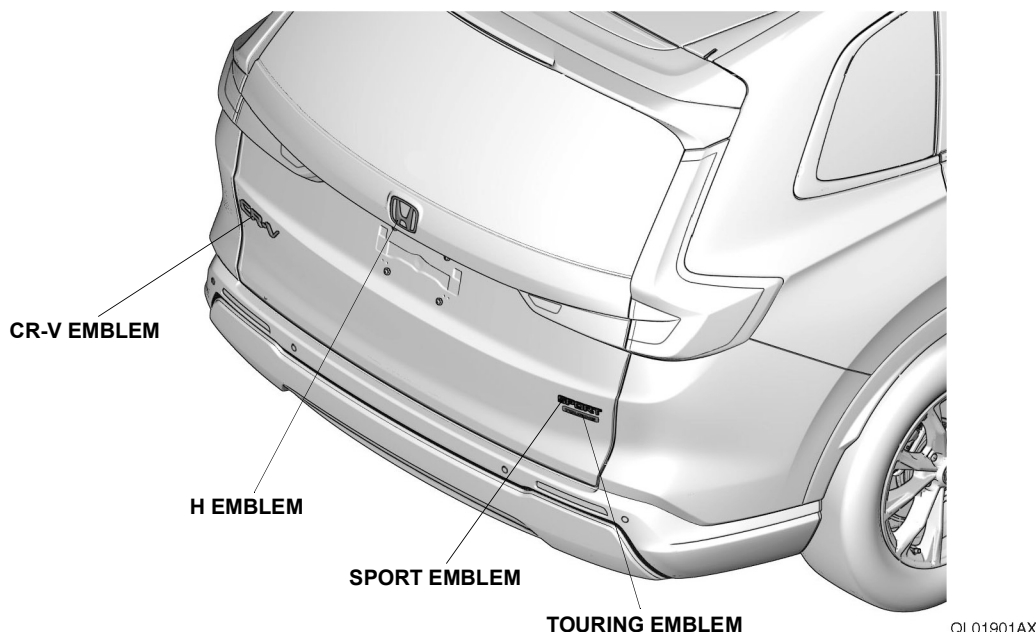

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

⚠ DANGER

You will be killed or seriously hurt if you do not follow the instructions.

⚠ WARNING

You can be killed or seriously hurt if you do not follow the instructions.

⚠ CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.



Indicates a prohibited action.

Germain Honda of College Hills

Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle.
(Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.




Clean with isopropyl alcohol.




Return the original part to the customer.
(Do not reuse.)


Wire Harness Routing Precaution

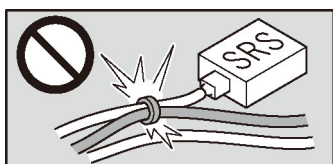


Do not secure the
accessory harness to the
SRS harness.
(except for instruction
cases.)

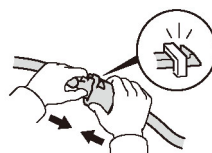


Push the connectors and
terminals together until
they lock.

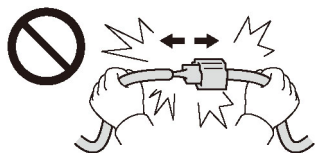

Do not pull the harness to
unplug the connectors.

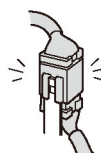

Install removed
connectors in their original
location.

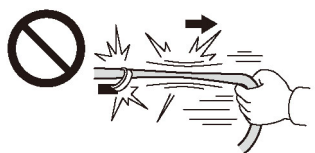


Do not pull the harness.



Secure the accessory
harness as shown.



Do not pinch the harness.

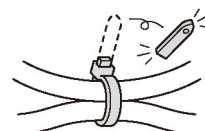

Cut off the excess wire tie.

Germain Honda of College Hills

Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Be careful not to damage the vehicle or the parts.
- Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- The illustrations may differ slightly from the actual accessory.

Safety: Electric Parts







Always disconnect the negative cable from the battery before beginning work.

Safety: Accessory



- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

PARTS LIST

Emblem Kit (P/N 08F20-3A0-100)


H emblem	CR-V emblem	Clips (7)	Nuts (2)
			
Push nuts (2)	Alcohol wipes (2)		
			

SPORT Emblem Kit (P/N 08F20-3A0-100A)

SPORT emblem	Alcohol wipe
	

Germain Honda of College Hills

TOURING Emblem Kit (P/N 08F20-3A0-100C)

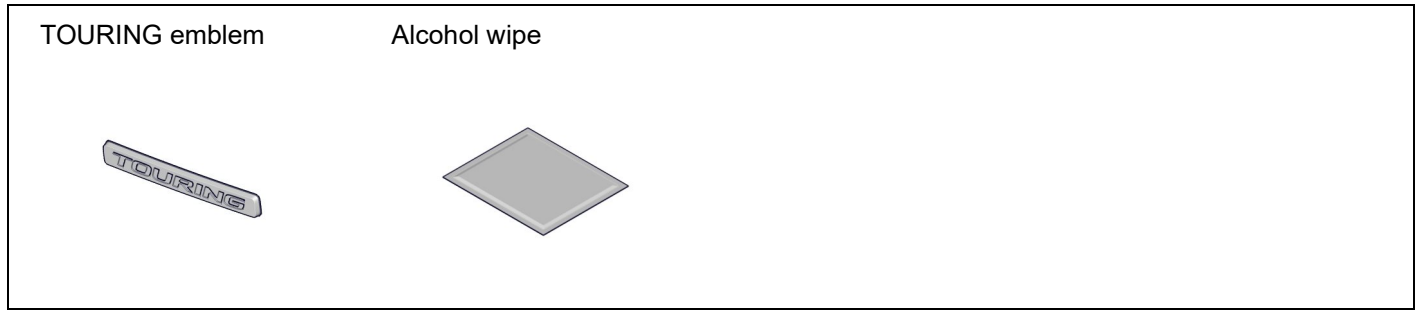

REQUIRED TOOLS AND SUPPLIES

- 10 mm Open end wrench
- Ratchet
- Phillips screwdriver
- 6 mm and 8 mm Sockets
- Diagonal cutters
- Masking tape
- Nylon string

The following tools are available through the Honda Tool and Equipment Program:

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)
- Rubber Roller (T/N MHLE54D)
- Push Pin Pliers (T/N 07AAC-001A101)





Germain Honda of College Hills

INSTALLATION

1. Disconnect the negative cable from the battery.


NOTE

- With the driver's door open, turn the vehicle to the OFF (LOCK) mode, then wait at least 3 minutes before disconnecting the 12 volt negative battery cable.
- Take countermeasures to prevent from locking the tailgate.

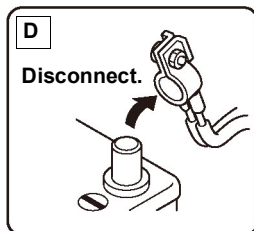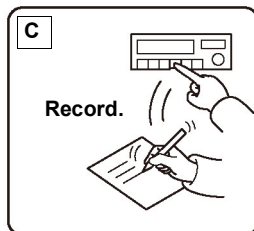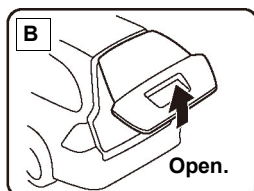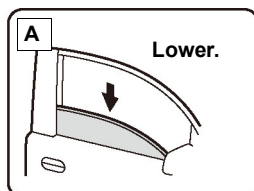


QCD0504BM

2. Remove the tailgate upper trim panel.



2 RETAINING TABS

4 CLIPS

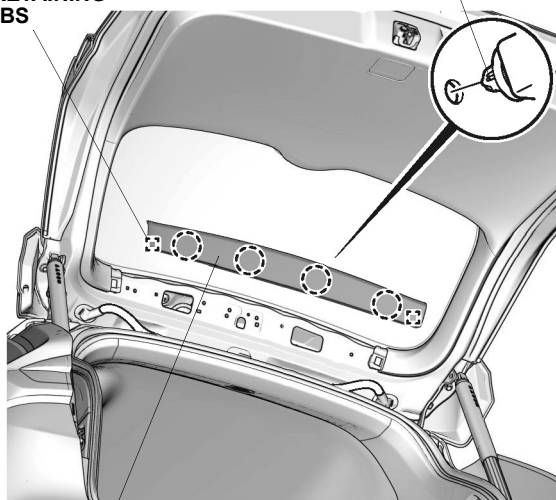

TAILGATE UPPER TRIM PANEL


QL01902AX

3. Remove the left and right tailgate side trim panels.

LEFT TAILGATE SIDE TRIM PANEL

2 RETAINING TABS


2 RETAINING TABS

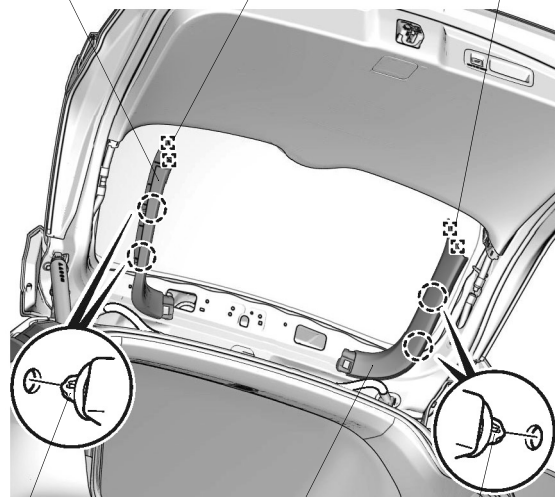

4. Attach masking tape to protect the vehicle.


NOTE

Do not remove the masking tape until after the parts are installed.



MASKING TAPE


TAILGATE LOWER TRIM PANEL

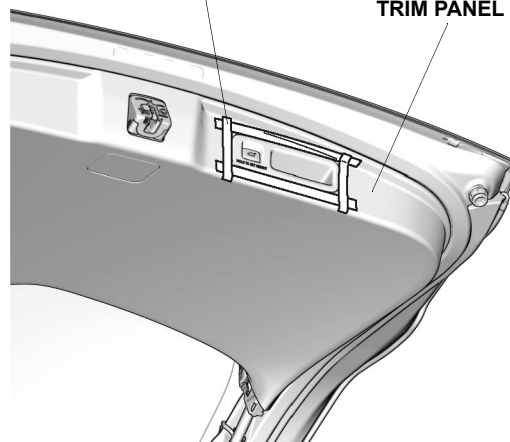


QL01904AX

Germain Honda of College Hills


5. Remove the tailgate pull pocket.

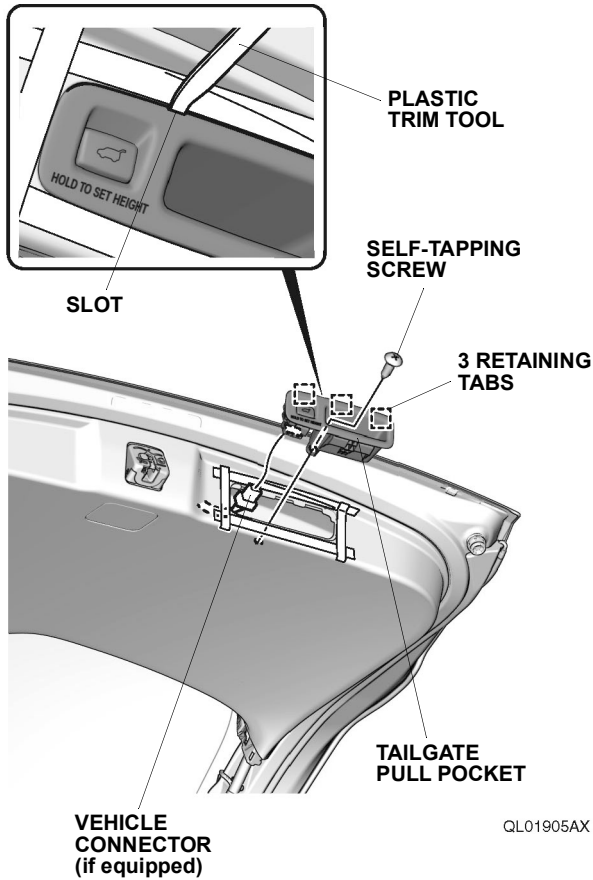

6. Remove the tailgate lower trim panel.

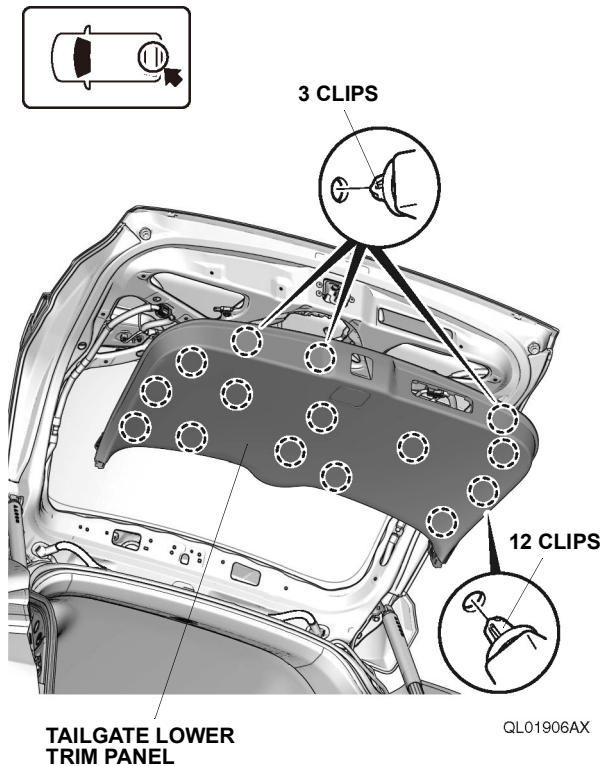

7. Remove the bolts.


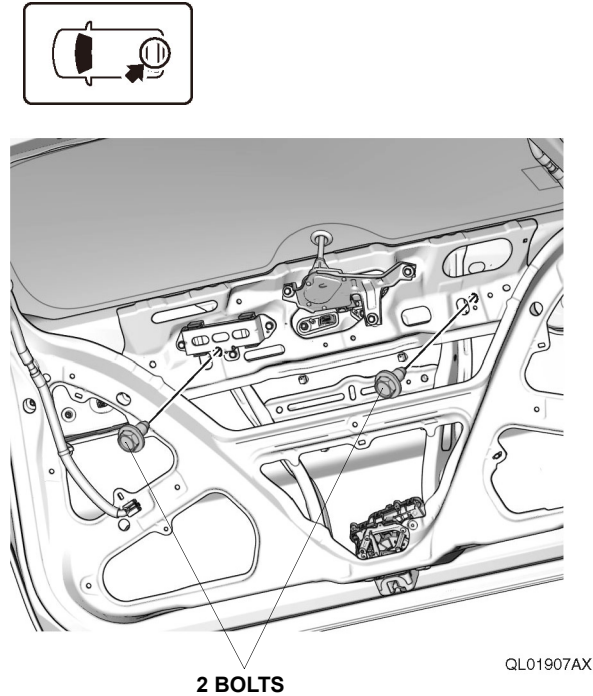


Germain Honda of College Hills


8. Attach masking tape to protect the vehicle.

NOTE


Do not remove the masking tape until after the parts are installed.

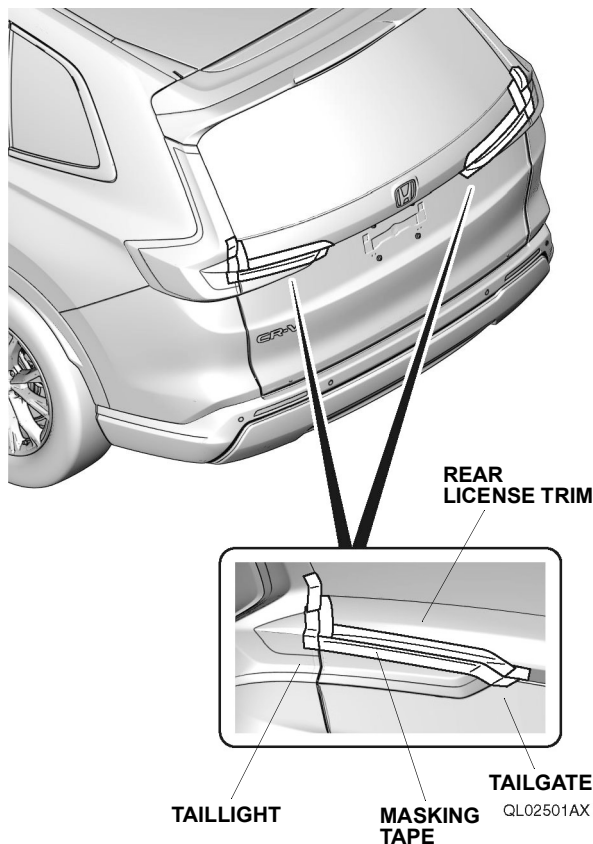

9. Remove the rear license trim.

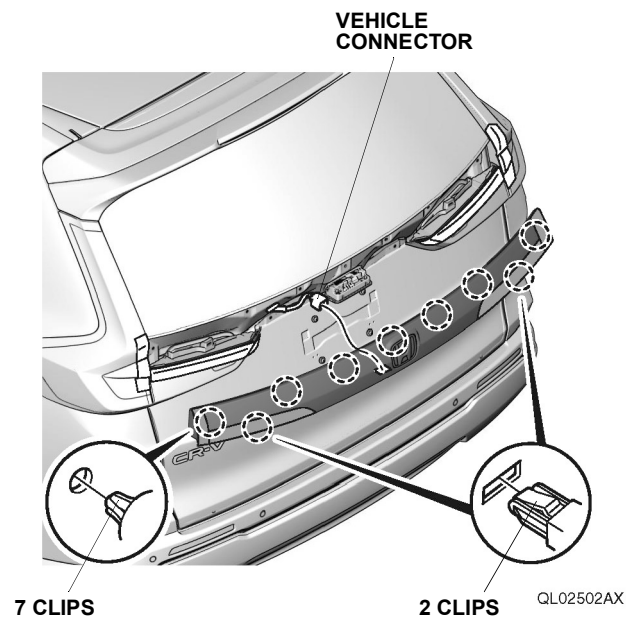

10. Remove the vehicle H emblem.

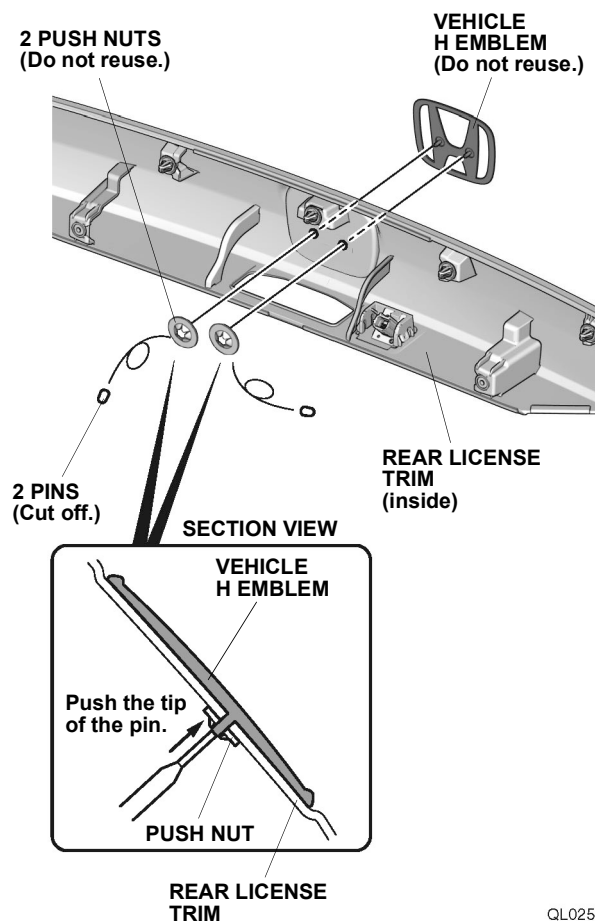


Germain Honda of College Hills

11. Clean the attaching area.

NOTE

Allow to dry thoroughly.

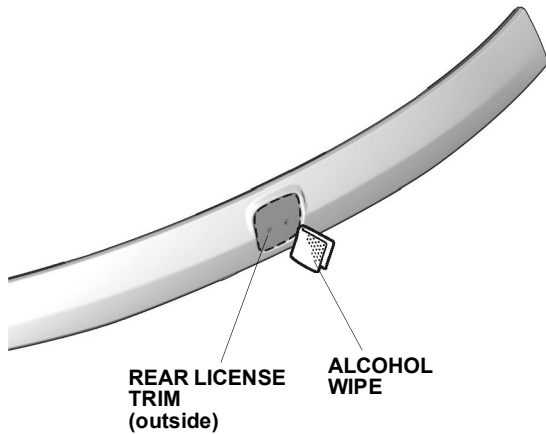


QL02504AX

12. Install the new H emblem.

NOTE


- Make sure to install the push nuts in the correct orientation.
- Check the position of the double-sided adhesive tapes and make sure to press firmly.

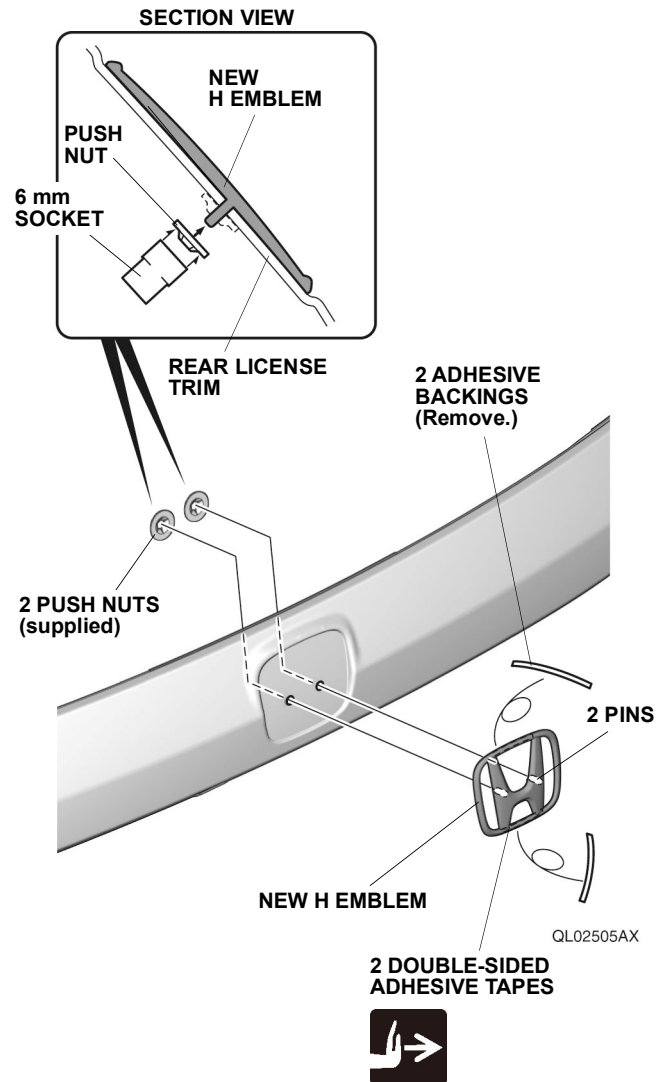

QL02505AX


Germain Honda of College Hills

13. Secure the new H emblem.

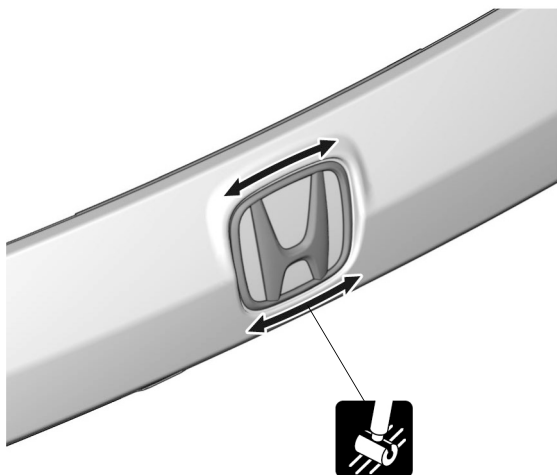

QL02506BX


14. Replace the clips and nuts.

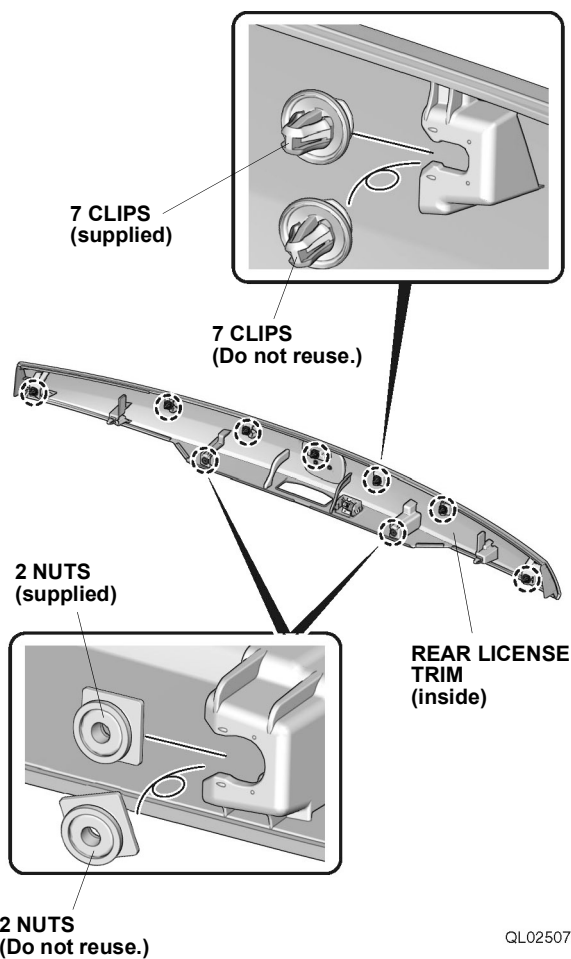

QL02507AX



15. Install the rear license trim.

16. Remove the guide form.

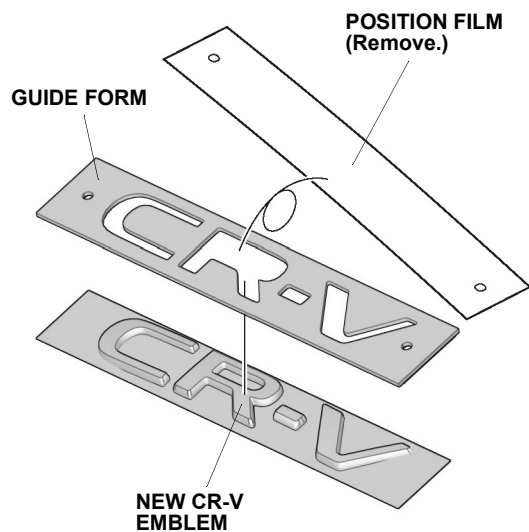

QL02508AX


17. Install the guide form.

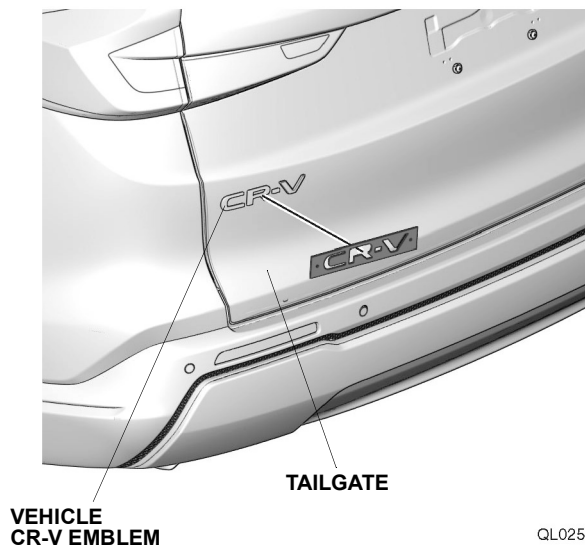

QL02509AX

Germain Honda of College Hills

18. Attach masking tape.

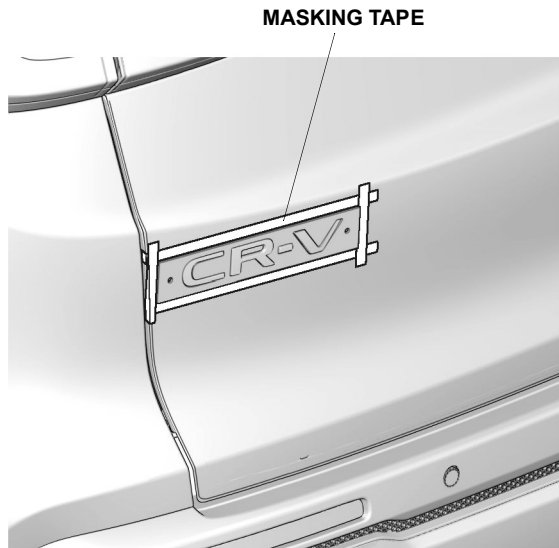

QL02510AX

19. Remove the guide form.




QL02511AX

20. Remove the vehicle CR-V emblem.

NOTE

- Do not damage the tailgate when removing the vehicle CR-V emblem with the nylon string.
- Make sure to thoroughly remove the adhesive tape from the tailgate.

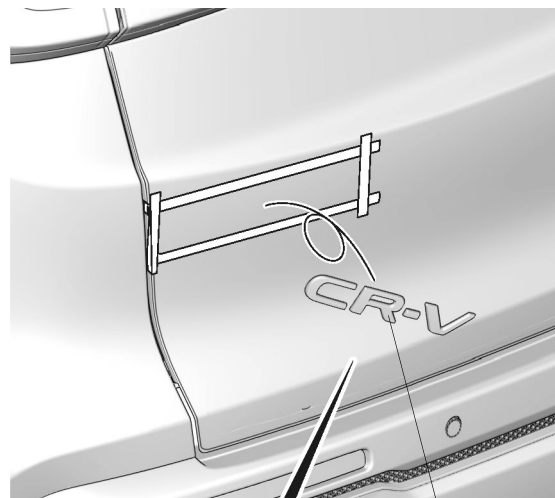


NYLON STRING
MOVEMENT



QL02512AX

21. Install the guide form.

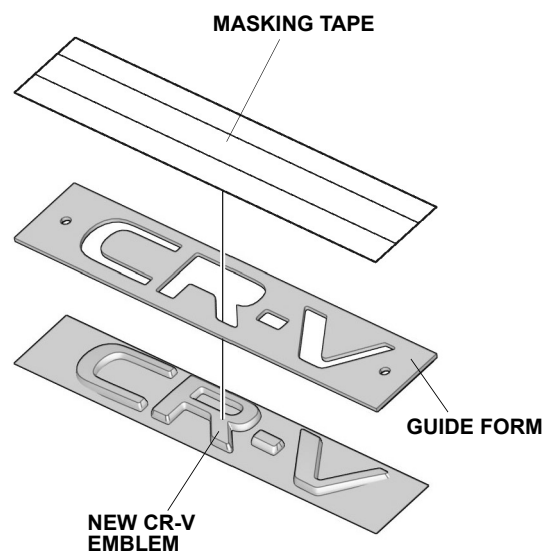

QL02513AX


22. Attach masking tape.

Germain Honda of College Hills

23. Clean the attaching area.

NOTE

Allow to dry thoroughly.

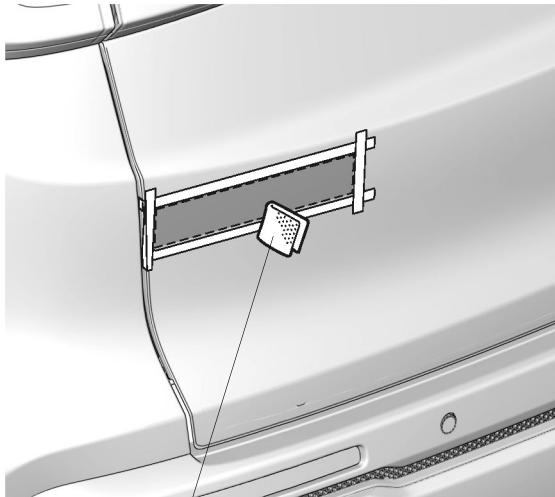


ALCOHOL WIPE

QL02514AX

24. Attach the new CR-V emblem.

NOTE

Check the position of the double-sided adhesive tapes and make sure to press firmly.

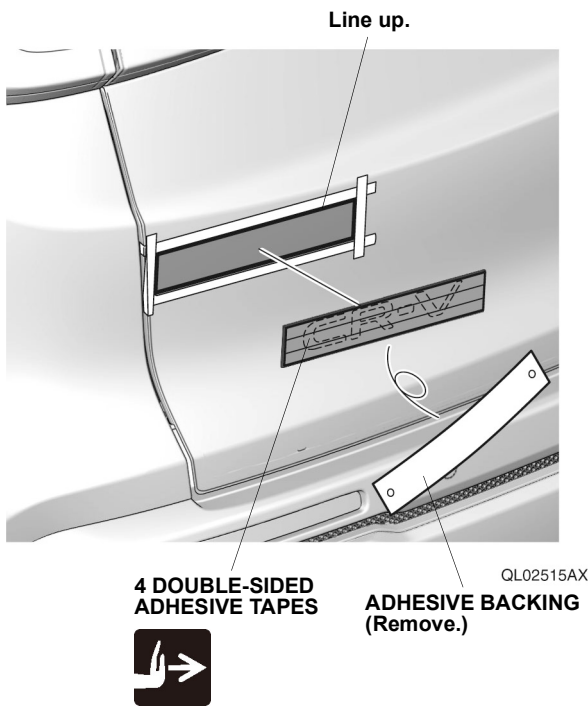


4 DOUBLE-SIDED
ADHESIVE TAPES

ADHESIVE BACKING
(Remove.)


QL02515AX

25. Secure the new CR-V emblem.

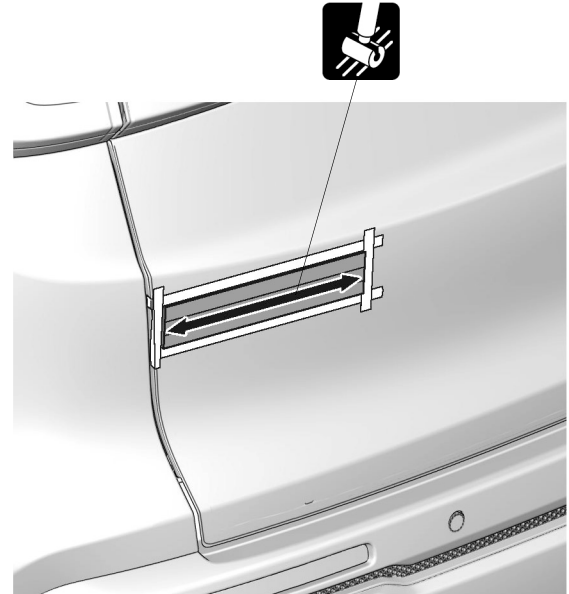

QL02516AX

26. Remove the guide form.

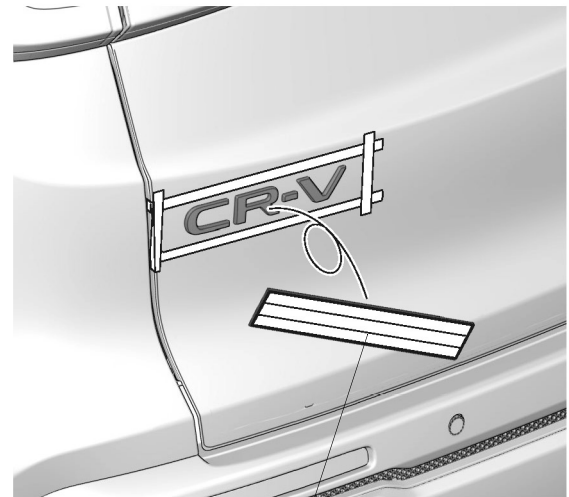

Remove.

QL02517AX

27. Remove the masking tape.

Germain Honda of College Hills

28. Choose one of these options.


- Replace the SPORT emblem

Go to step 29


- Do not replace the SPORT emblem

Go to step 41


29. Remove the guide form.

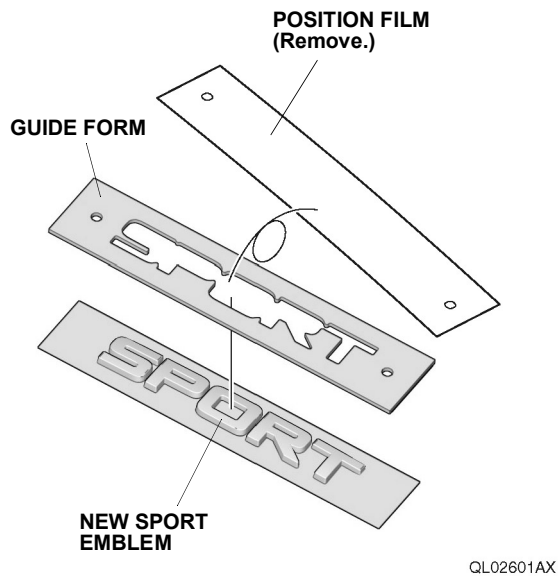


30. Install the guide form.

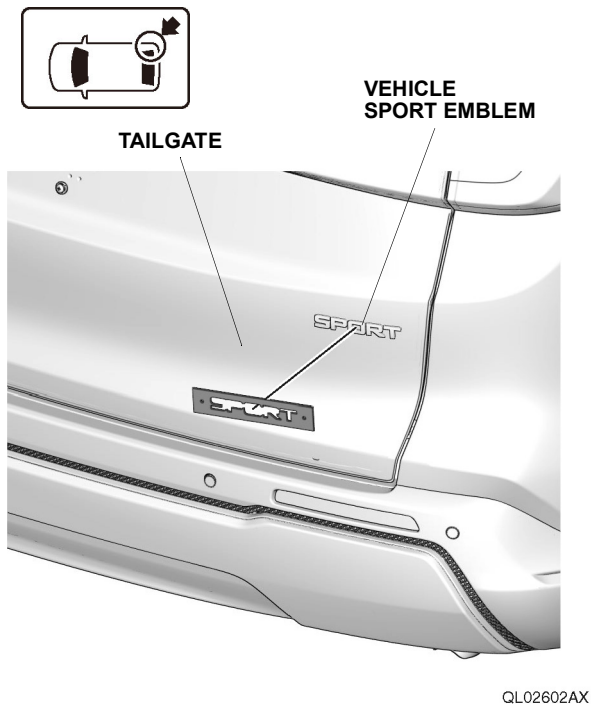

31. Attach masking tape.

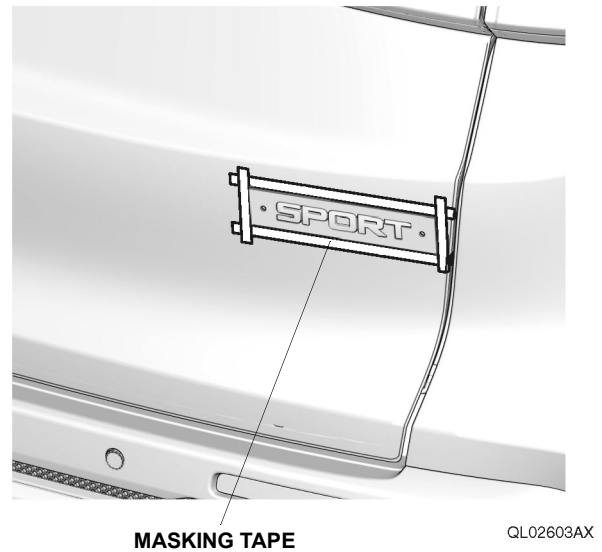

32. Remove the guide form.

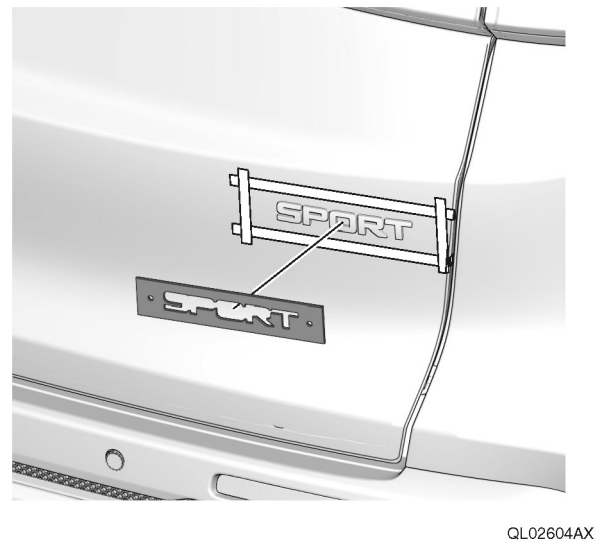


Germain Honda of College Hills

33. Remove the vehicle SPORT emblem.


NOTE

- Do not damage the tailgate when removing the vehicle SPORT emblem with the nylon string.
- Make sure to thoroughly remove the adhesive tape from the tailgate.

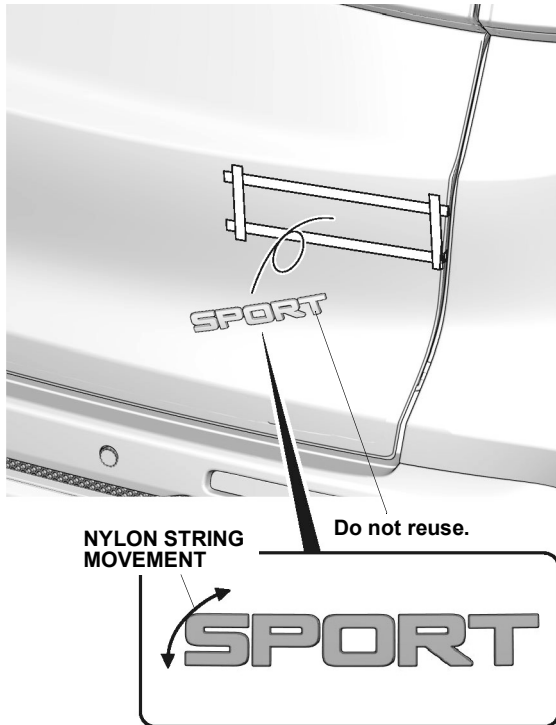

QL02605AX

34. Install the guide form.

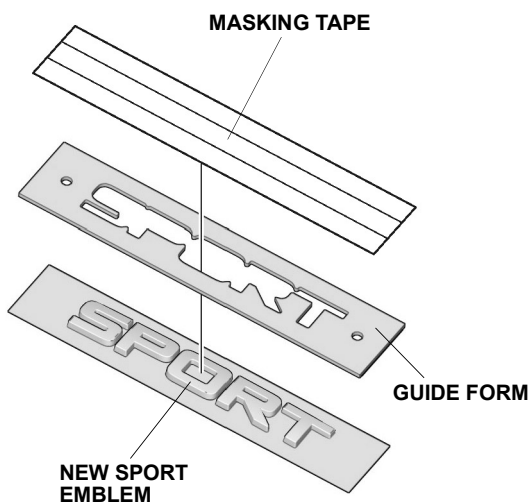


QL02606AX

35. Attach masking tape.

36. Clean the attaching area.

NOTE

Allow to dry thoroughly.

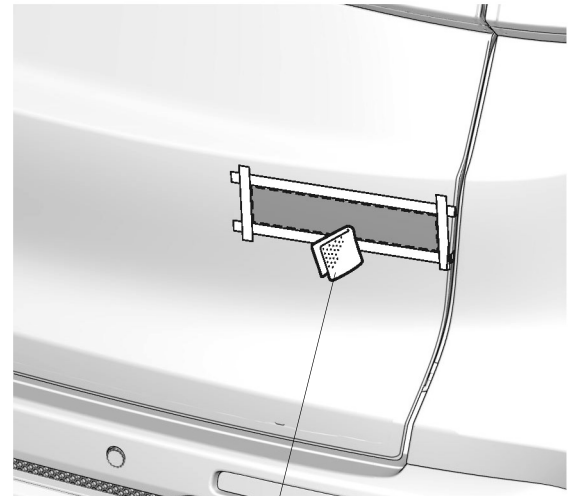


ALCOHOL WIPE

QL02607AX

37. Attach the new SPORT emblem.

NOTE

Check the position of the double-sided adhesive tapes and make sure to press firmly.

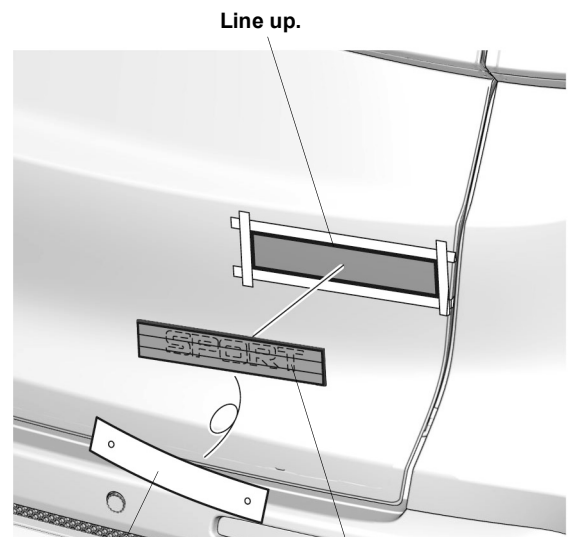

ADHESIVE BACKING
(Remove.)

5 DOUBLE-SIDED
ADHESIVE TAPES




QL02608AX

Germain Honda of College Hills

38. Secure the new SPORT emblem.



39. Remove the guide form.

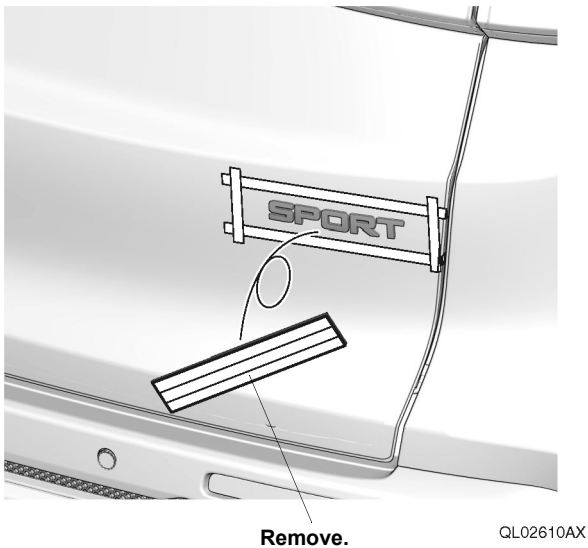

40. Remove the masking tape.

41. Choose one of these options.



• Replace the TOURING emblem

Go to step 42

• Do not replace the TOURING emblem

Go to step 48

42. Attach masking tape.

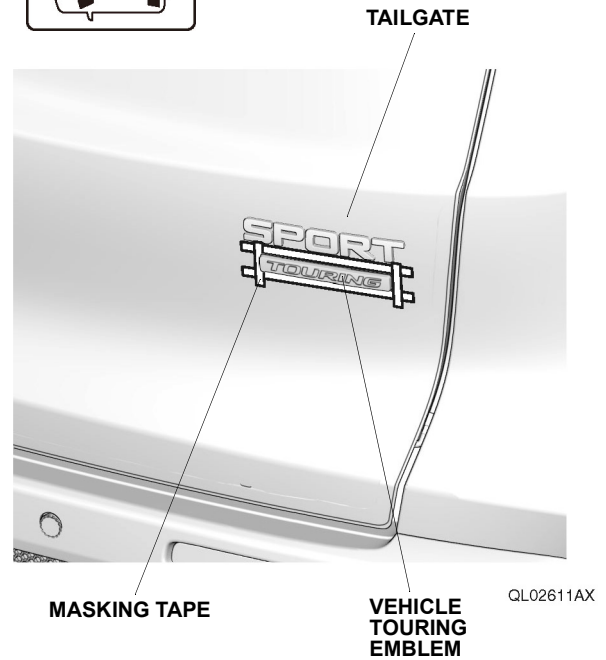

Germain Honda of College Hills

43. Remove the vehicle TOURING emblem.

NOTE

- Do not damage the tailgate when removing the vehicle TOURING emblem with the nylon string.
- Make sure to thoroughly remove the adhesive tape from the tailgate.



NYLON STRING
MOVEMENT


Do not reuse.

QL02612AX

44. Clean the attaching area.

NOTE

Allow to dry thoroughly.

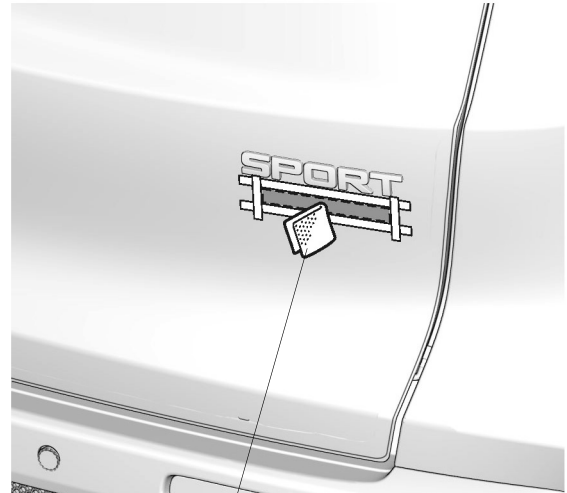


ALCOHOL WIPE

QL02701AX

45. Attach the new TOURING emblem.

NOTE

Check the position of the double-sided adhesive tape and make sure to press firmly.

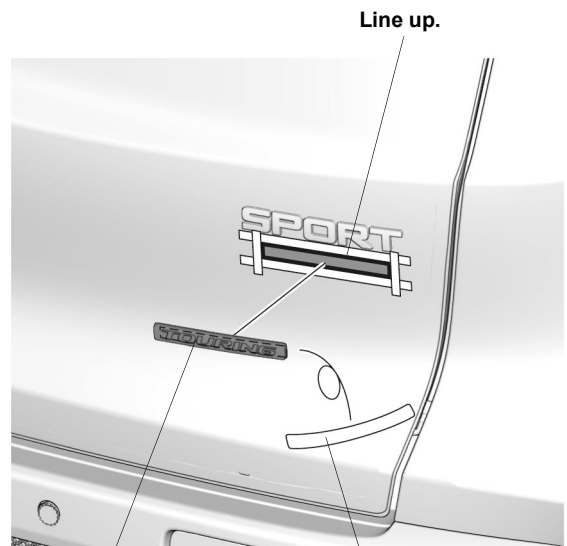

Line up.

DOUBLE-SIDED
ADHESIVE TAPE


ADHESIVE BACKING
(Remove.)

QL02702AX



Germain Honda of College Hills

46. Secure the new TOURING emblem.

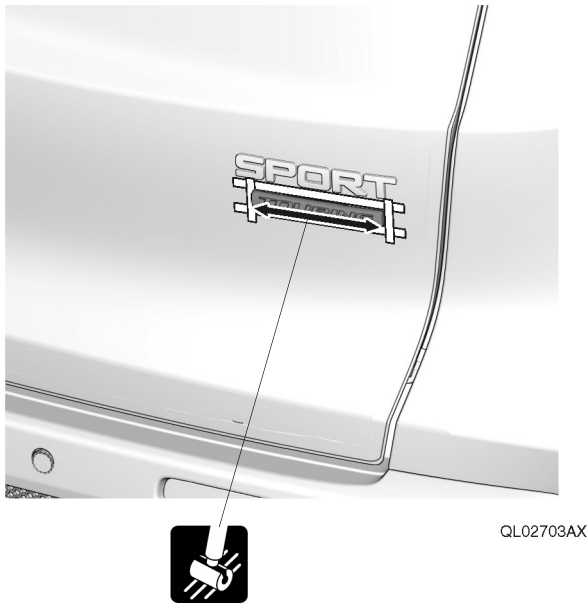


47. Remove the masking tape.
48. Check that all parts are installed and properly routed.

NOTE

- Check that all harnesses are not pulled or pinched.
- Make sure all clips and wire ties are securely installed.

49. Install all removed parts.
50. Connect the negative cable to the battery.

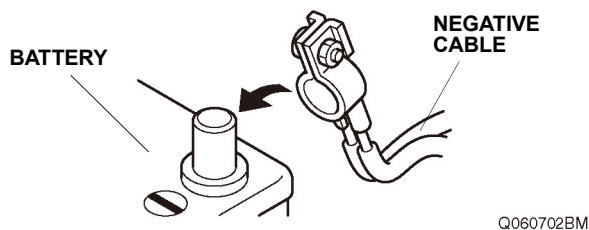

51. Make sure all accessories and systems operate properly.
52. If necessary, restore the systems back to normal operation as described in the service information.
53. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.