

# Germain Honda of College Hills



## INSTALLATION INSTRUCTIONS

Accessory

BODY SIDE MOLDINGS

Application

2023 CR-V  
MODEL SERIES

Publications No.


VERSION 1

Issue Date

AUG 2022

## GENERAL VIEW

If you are also installing door edge films (sold separately), install them before you install the body side moldings.

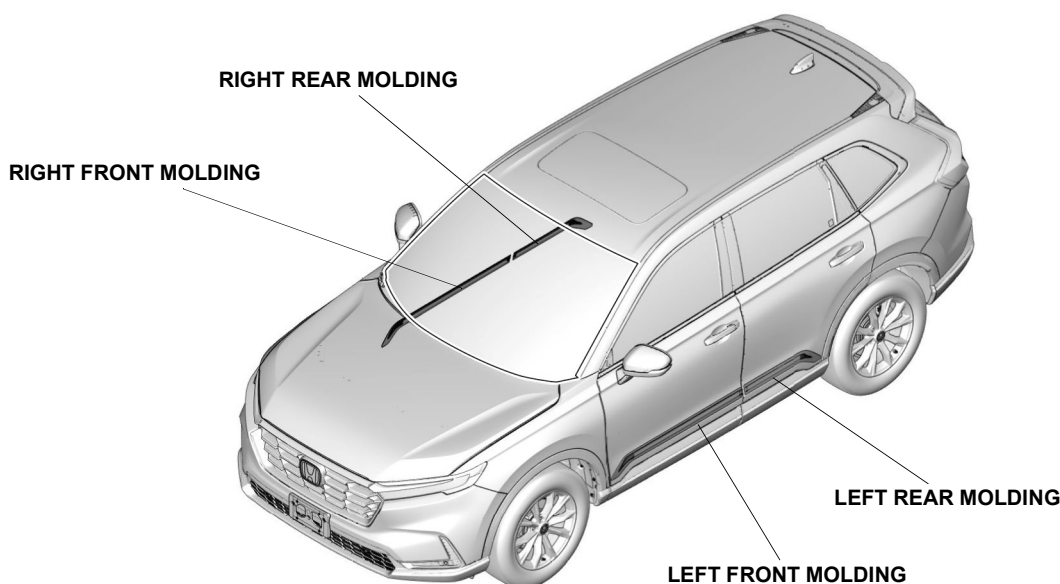

QL02001AN

## FOR YOUR SAFETY (Read carefully.)

### Warning Symbols

**Safety:** Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

\*All symbols are not used in all installation instructions.

**⚠ DANGER**

You will be killed or seriously hurt if you do not follow the instructions.

**⚠ WARNING**

You can be killed or seriously hurt if you do not follow the instructions.

**⚠ CAUTION**

You can be hurt if you do not follow the instructions.

**NOTICE**

Gives advice to prevent damage to the product, vehicle, the environment or other property.

**NOTE**

Gives helpful information or instructions to be followed when installing this product.



Indicates a prohibited action.

# Germain Honda of College Hills

## Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

\*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle.  
(Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the customer.  
(Do not reuse.)

## Safety: General

- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.


## Safety: Accessory

- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

# Germain Honda of College Hills

## PARTS LIST

Body Side Moldings Kit (P/N 08P05-3A0-100)

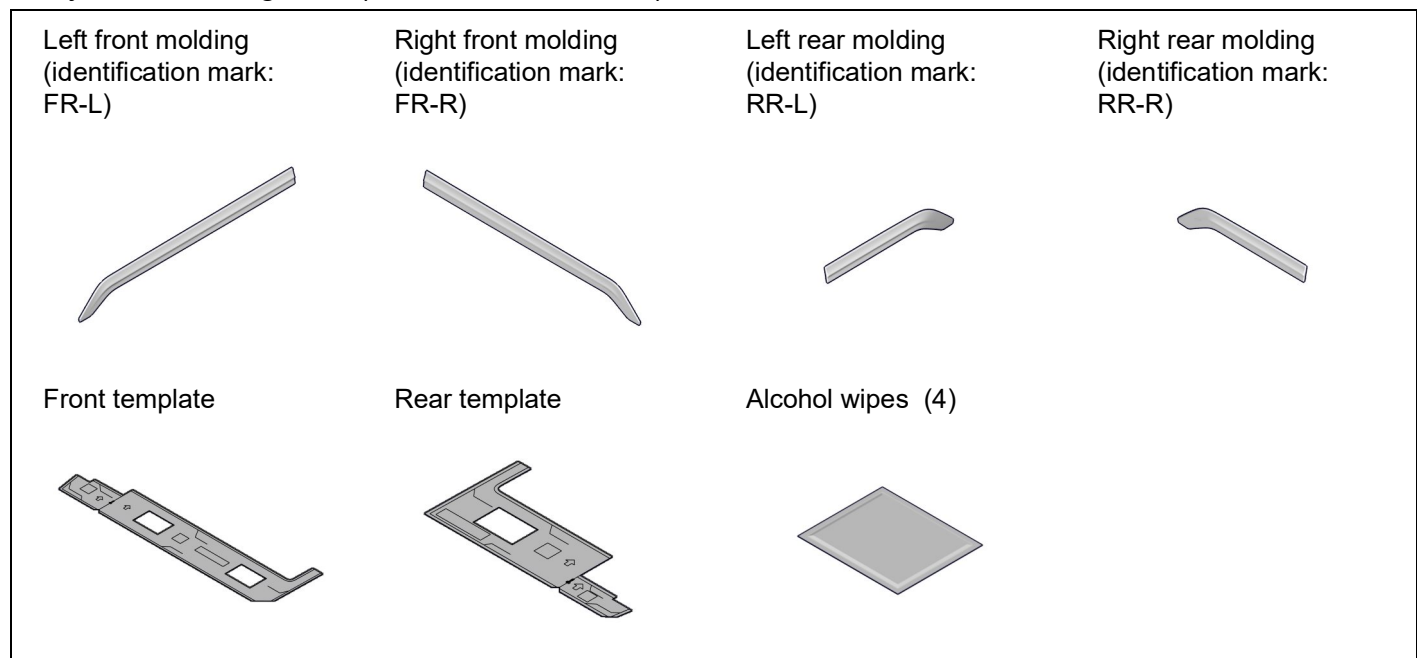

## REQUIRED TOOLS AND SUPPLIES


- Masking tape
- Scissors

The following tool is available through the Honda Tool and Equipment Program:  
Rubber Roller (T/N MHLE54D)


# Germain Honda of College Hills

## INSTALLATION


1. Cut the front template.

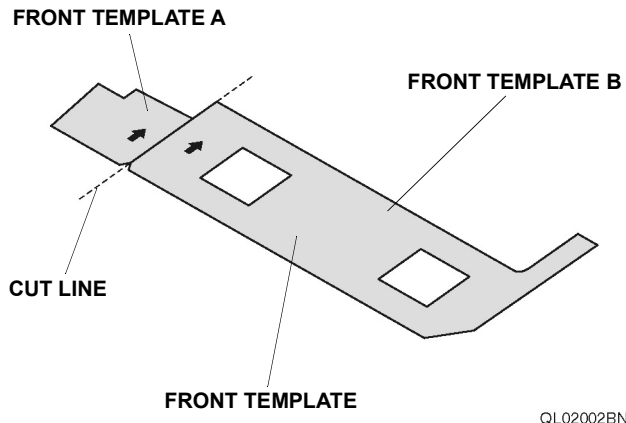

2. Secure the front template A.

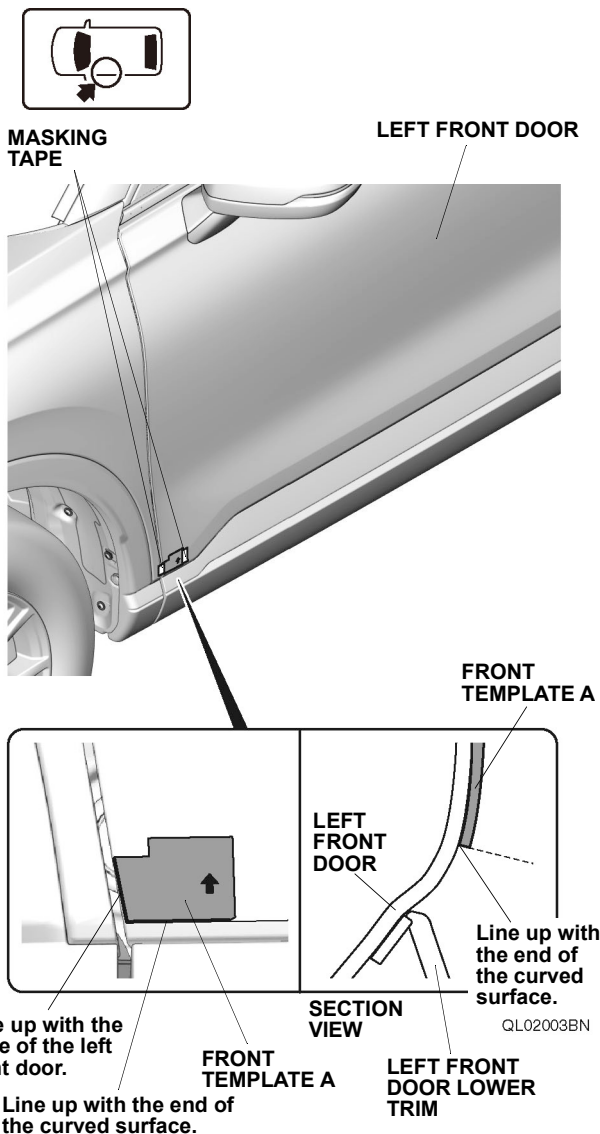

3. Secure the front template B.

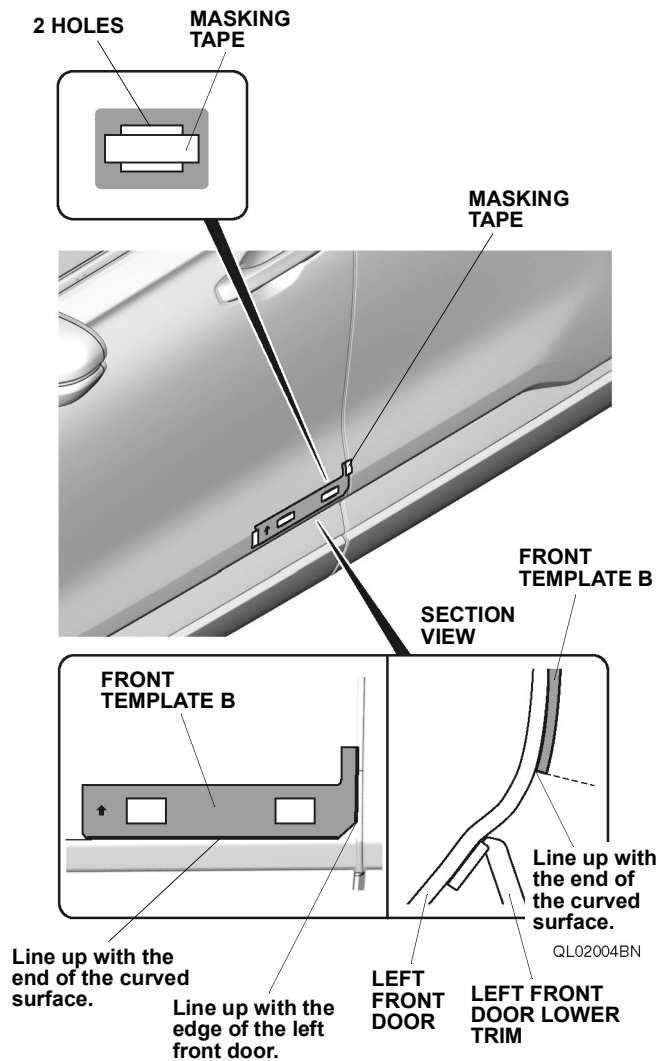


# Germain Honda of College Hills

4. Clean the attaching area.

## NOTE

Allow area to dry thoroughly.

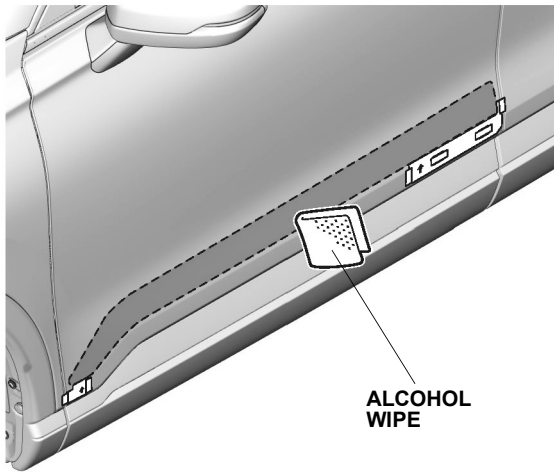


QL02005BN

5. Temporarily attach the adhesive backings.

## NOTE


Make sure to check the identification mark before installation.

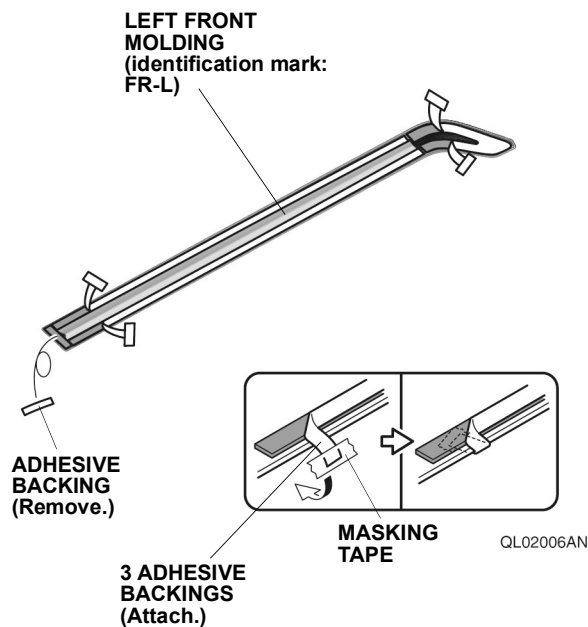

QL02006AN

6. Remove the adhesive backing.

7. Line up the left front molding.

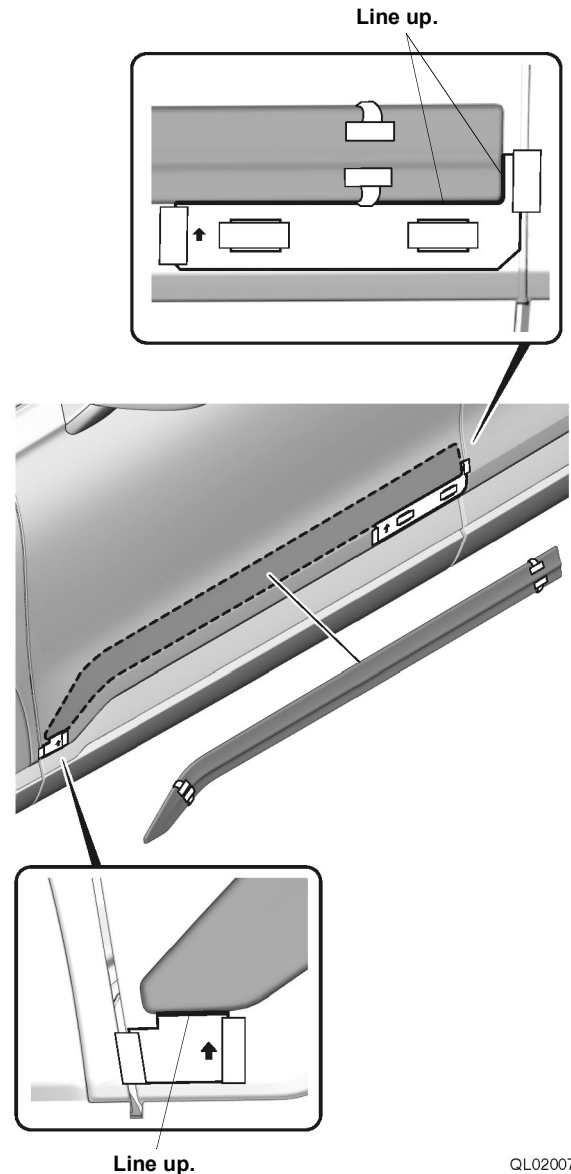


QL02007BN

# Germain Honda of College Hills


8. Secure the left front molding.

## NOTE


- Secure in the order shown.
- Check the position of the double-sided adhesive tapes and make sure to press firmly.

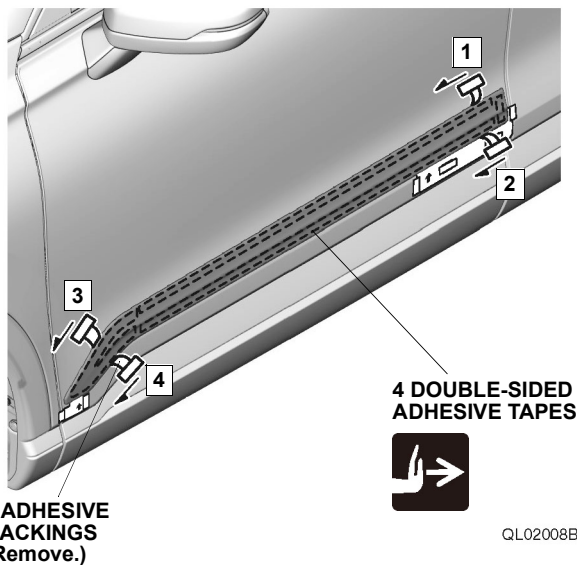


9. Remove the front templates.  
10. Secure the left front molding.

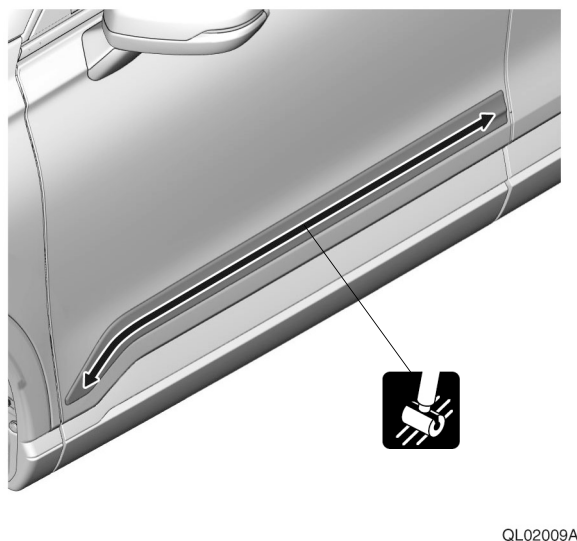

11. Flip the front templates, and repeat the same procedures on the other side.

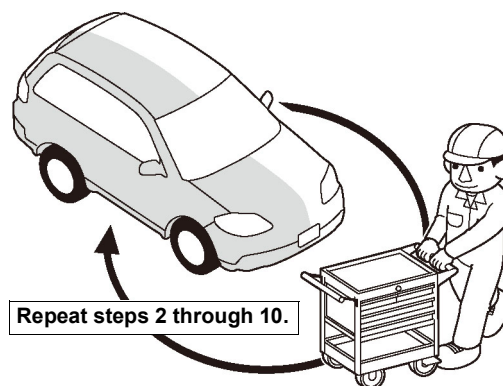


12. Cut the rear template.

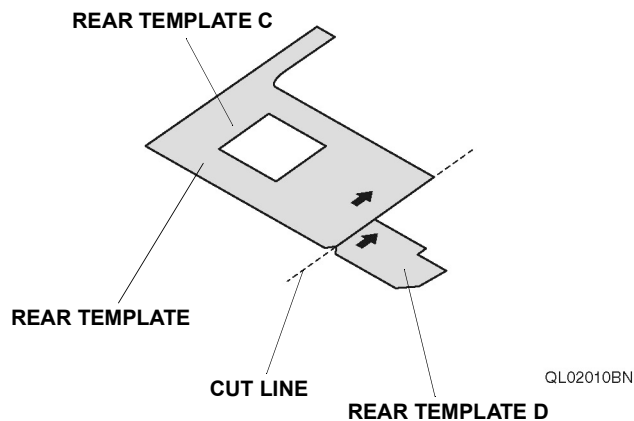


# Germain Honda of College Hills

13. Secure the rear template C.

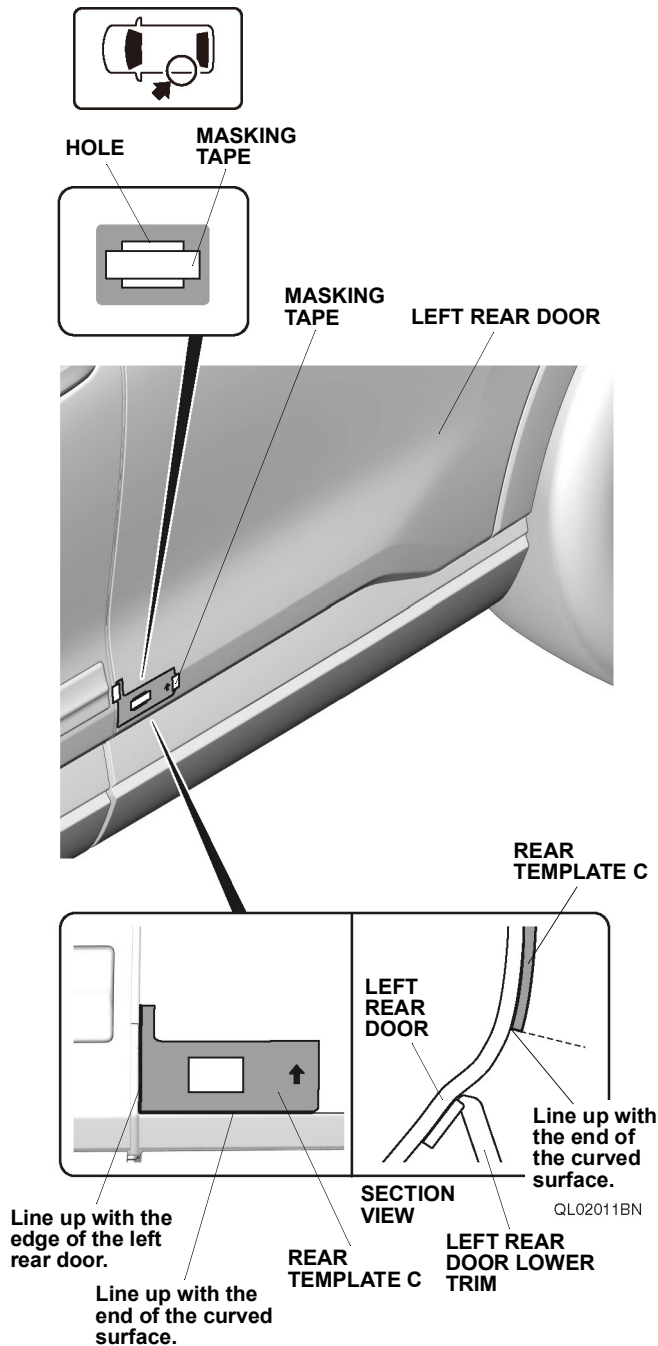

14. Secure the rear template D.

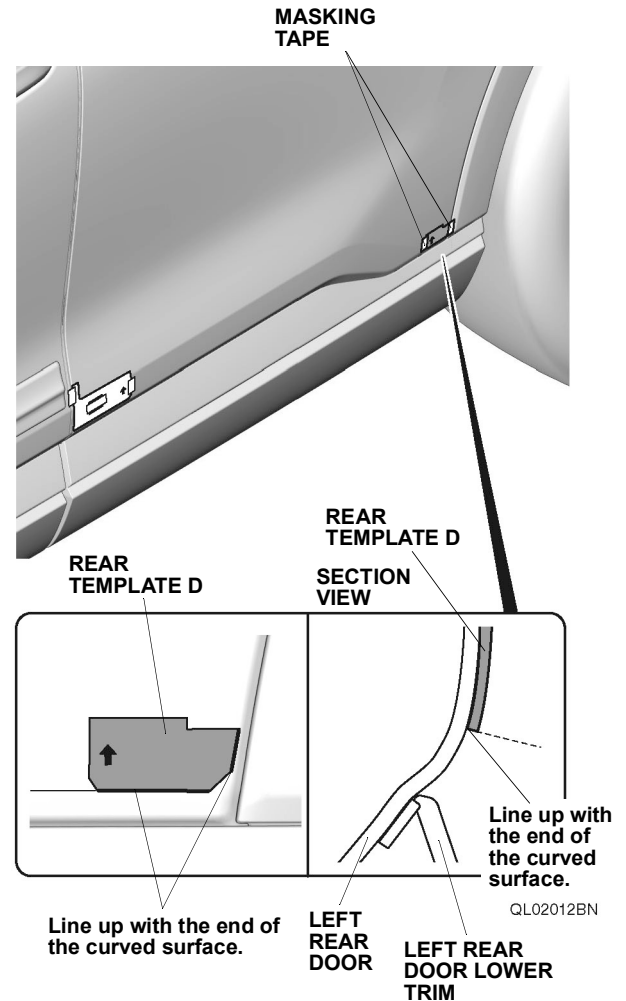


# Germain Honda of College Hills

15. Clean the attaching area.

## NOTE

Allow area to dry thoroughly.

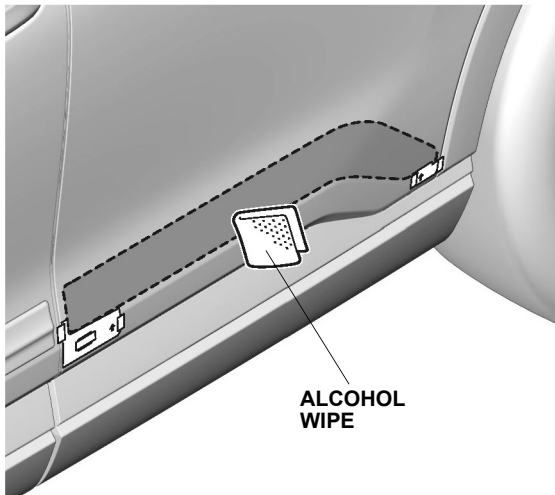


QL02013BN

16. Temporarily attach the adhesive backings.

## NOTE

Make sure to check the identification mark before installation.

**LEFT REAR MOLDING**  
(identification mark:  
RR-L)


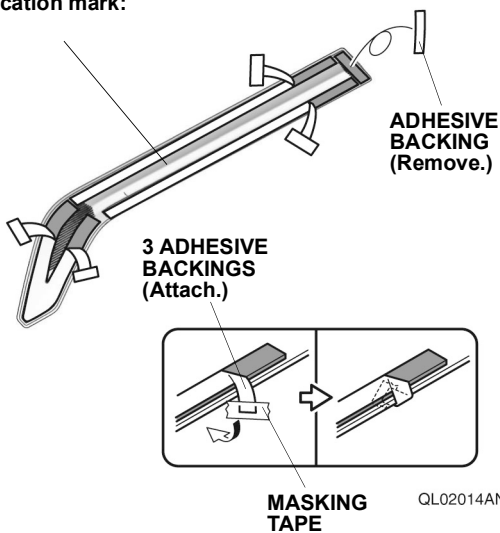


QL02014AN


17. Remove the adhesive backing.

18. Line up the left rear molding.

**LEFT FRONT MOLDING** Line up. Line up.

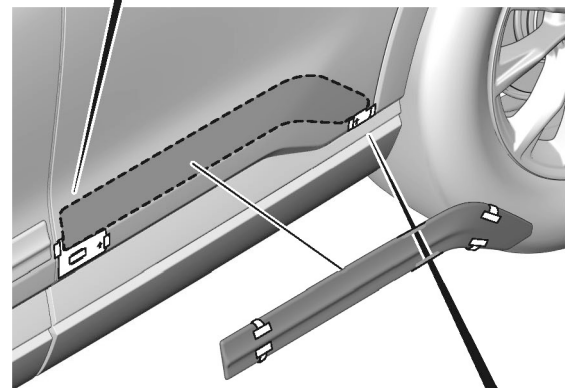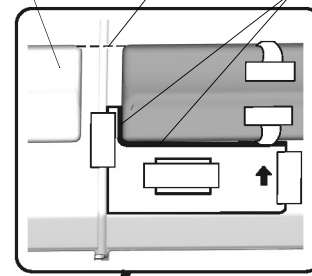

Line up.

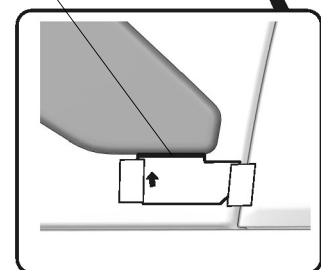

QL02015BN




# Germain Honda of College Hills

19. Secure the left rear molding.


## NOTE

- Secure in the order shown.
- Check the position of the double-sided adhesive tapes and make sure to press firmly.

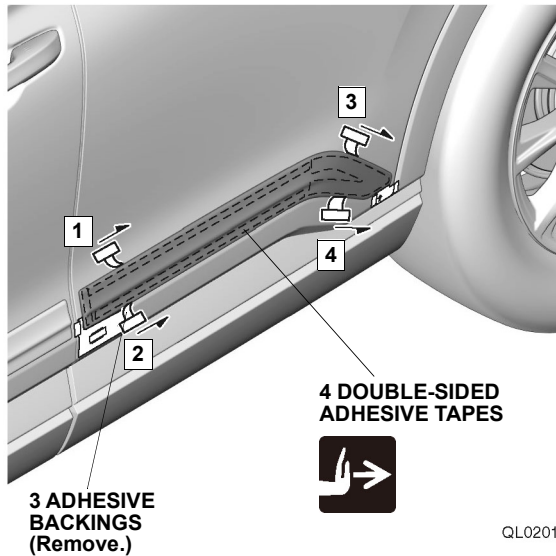


20. Remove the rear templates.

21. Secure the left rear molding.

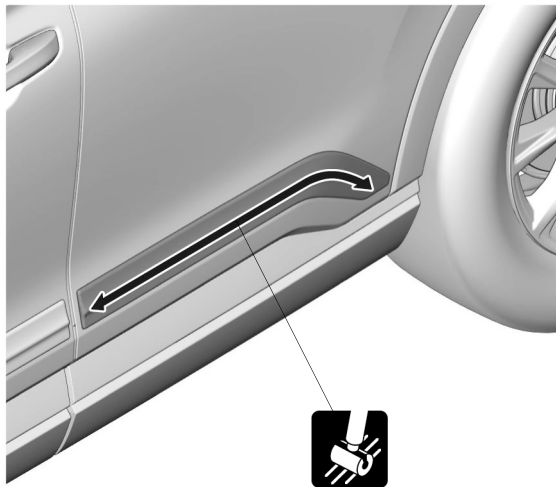

22. Flip the rear templates, and repeat the same procedures on the other side.

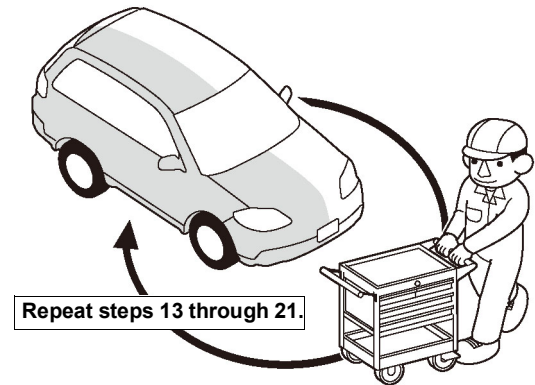

Q9D1012AE

23. Check that all parts are installed properly.