

Germain Honda of College Hills



INSTALLATION INSTRUCTIONS

Accessory

DOOR HANDLE FILMS

Application

2023 CR-V
MODEL SERIES


Publications No.

VERSION 1

Issue Date

AUG 2022

GENERAL VIEW

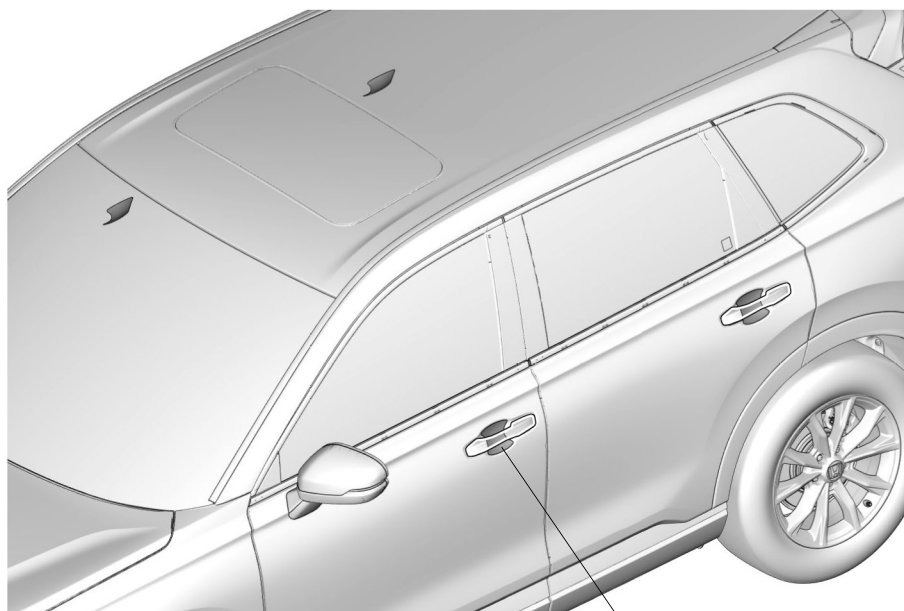

QL02201AN

4 DOOR HANDLE FILMS

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

 **DANGER**

You will be killed or seriously hurt if you do not follow the instructions.

 **WARNING**

You can be killed or seriously hurt if you do not follow the instructions.

 **CAUTION**

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.




Indicates a prohibited action.

Germain Honda of College Hills


Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle.
(Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the customer.
(Do not reuse.)

Safety: General

- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.

Safety: Accessory

- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Cover nearby parts with a shop towel to prevent getting them wet.
- Always wear gloves when working with 3M protective tape application solution.
- Use 3M protective tape application solution with a spray bottle.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.



Germain Honda of College Hills

PARTS LIST

Door Handle Films Kit (P/N 08P48-3A0-100)

Door handle films (4)

Alcohol wipes (4)




REQUIRED TOOLS AND SUPPLIES

- Shop towel
- Gloves
- 3M Protective tape application solution
- Mini Soft Spreader/Applicator (T/N SBSA2302Y5PK)

Germain Honda of College Hills

INSTALLATION

1. Insert the shop towel.



2. Clean the attaching area.


NOTE

Allow area to dry thoroughly.



3. Spray the left front door.



4. Remove the adhesive backing.

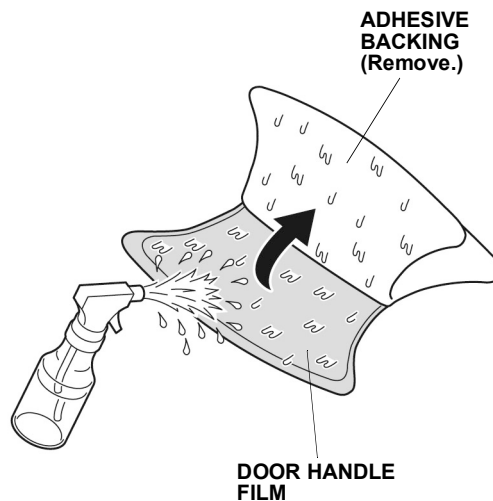

5. Spray the door handle film.
6. Line up the door handle film.

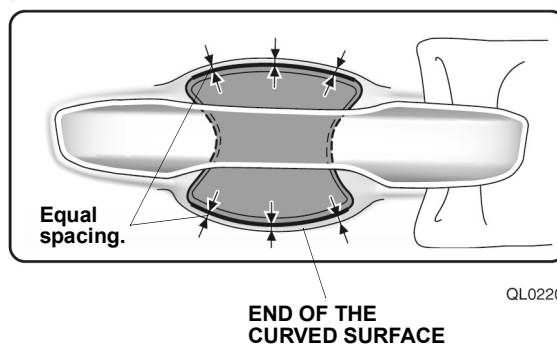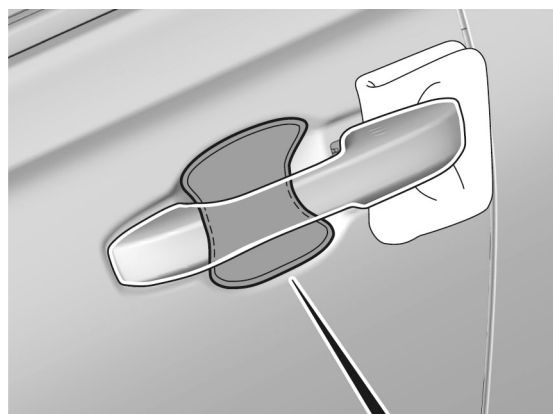


Germain Honda of College Hills

7. Secure the door handle film.

NOTE

Move the mini soft spreader/applicator in one direction only.

Work from center to outside.

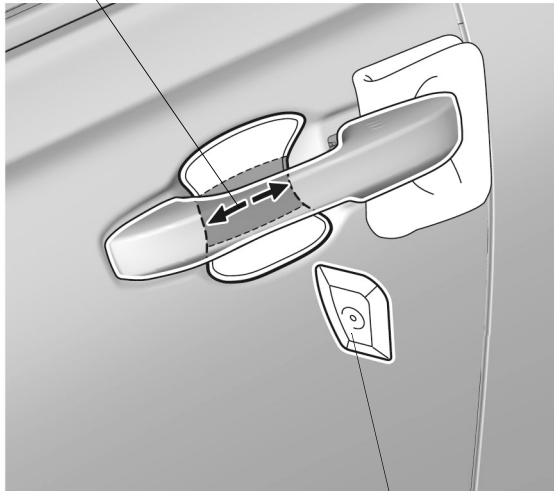

MINI SOFT
SPREADER/
APPLICATOR


QL02206AN

8. Secure the door handle film.

NOTE


Move the mini soft spreader/applicator in one direction only.

Work from center to outside.

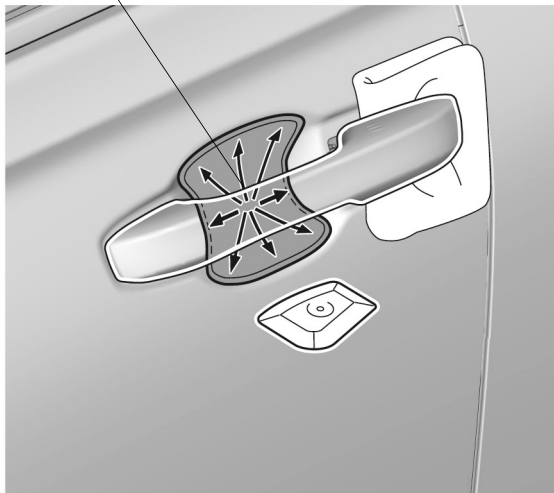

QL02207AN

9. Remove the protective film.

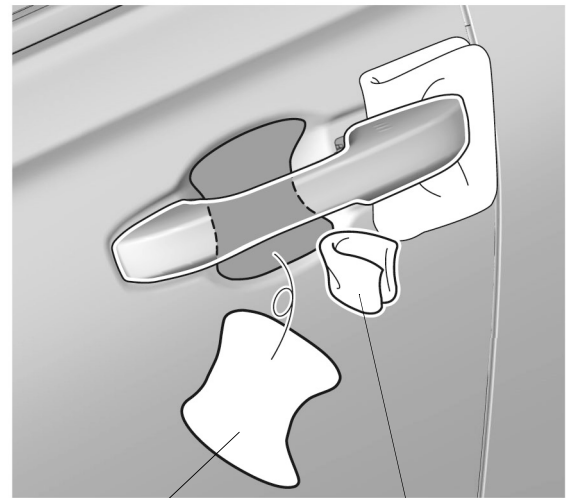

PROTECTIVE FILM
(Remove.)

SHOP
TOWEL

QL02208AN

10. Wipe off the 3M protective tape application solution.

NOTE

Allow area to dry thoroughly.

11. Remove the shop towel.
12. Repeat steps 1 through 11 for the remaining door handle films.
13. Check that all parts are installed properly.