

# Germain Honda of College Hills




## INSTALLATION INSTRUCTIONS

Accessory  
**DOOR SILL  
PROTECTION FILMS**

Application  
**2023 CR-V  
MODEL SERIES**

Publications No.  
**VERSION 1**  
Issue Date  
**AUG 2022**

## GENERAL VIEW

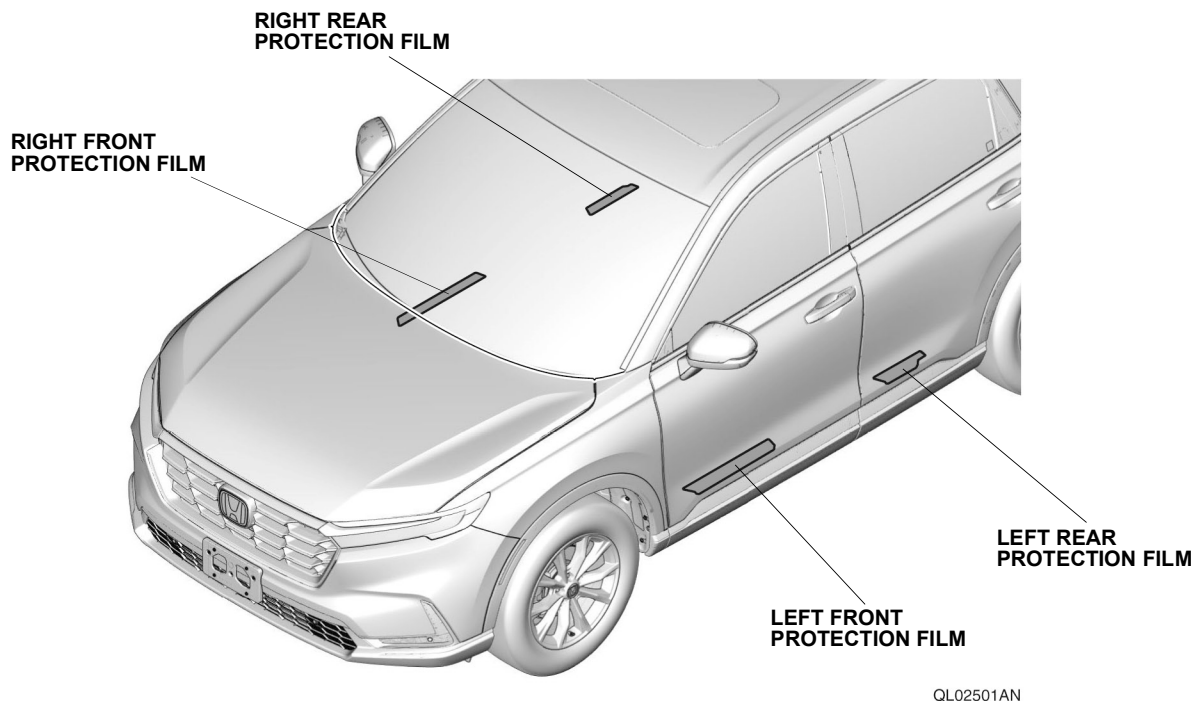

## FOR YOUR SAFETY (Read carefully.)

### Warning Symbols

**Safety:** Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

\*All symbols are not used in all installation instructions.

**⚠ DANGER**

You will be killed or seriously hurt if you do not follow the instructions.

**⚠ WARNING**

You can be killed or seriously hurt if you do not follow the instructions.

**⚠ CAUTION**

You can be hurt if you do not follow the instructions.

**NOTICE**

Gives advice to prevent damage to the product, vehicle, the environment or other property.

**NOTE**

Gives helpful information or instructions to be followed when installing this product.




Indicates a prohibited action.

# Germain Honda of College Hills


## Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

\*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle.  
(Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the customer.  
(Do not reuse.)

## Safety: General

- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.


## Safety: Accessory

- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Cover nearby parts with a shop towel to prevent getting them wet.
- Always wear gloves when working with 3M protective tape application solution.
- Use 3M protective tape application solution with a spray bottle.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

# Germain Honda of College Hills

## PARTS LIST

Door Sill Protection Films Kit (P/N 08P04-3A0-100)

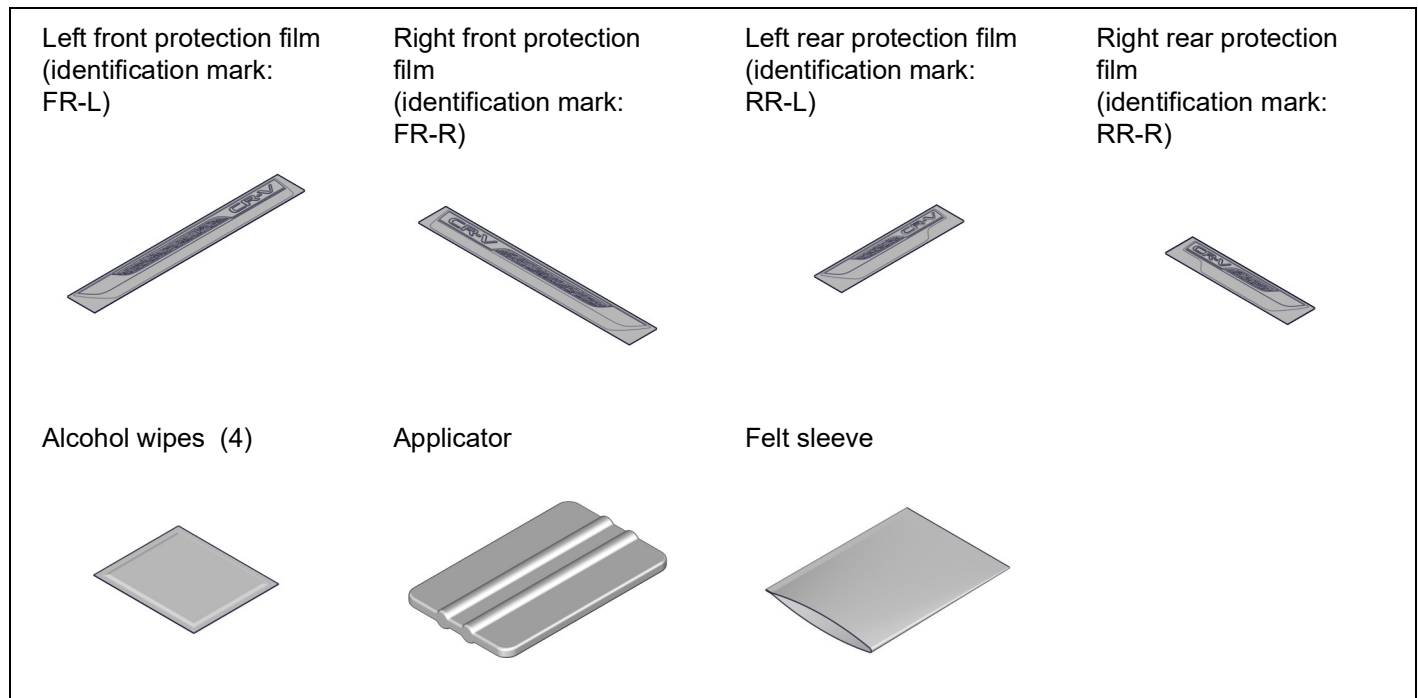


## REQUIRED TOOLS AND SUPPLIES

- Masking tape
- Shop towel
- Ruler
- 3M Protective tape application solution
- Gloves

# Germain Honda of College Hills


## INSTALLATION

1. Open the left front door.



DRIVER'S  
KICK PANEL


DRIVER'S  
DOOR SILL TRIM

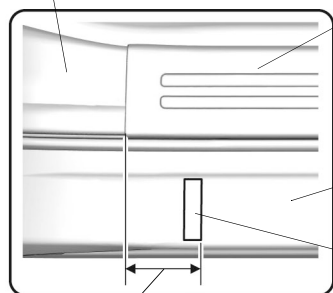

VEHICLE  
PANEL

MASKING  
TAPE

40 mm  
(1.57 in.)

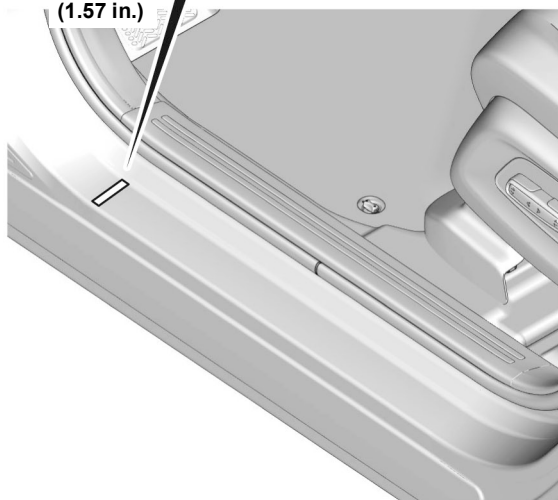


QL02502AN

2. Attach masking tape.

3. Clean the attaching area.


### NOTE

Allow area to dry thoroughly.

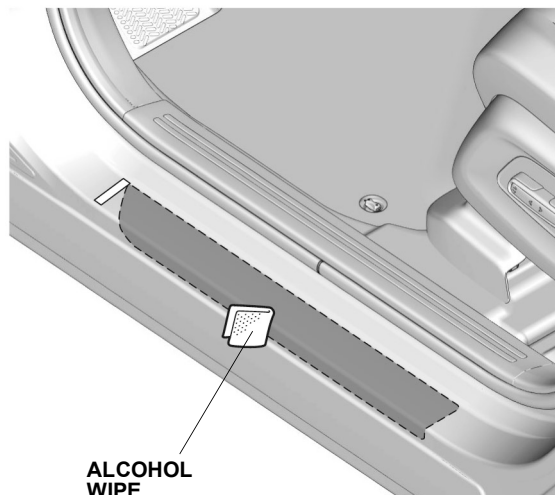

QL02503AN

4. Spray the vehicle panel.

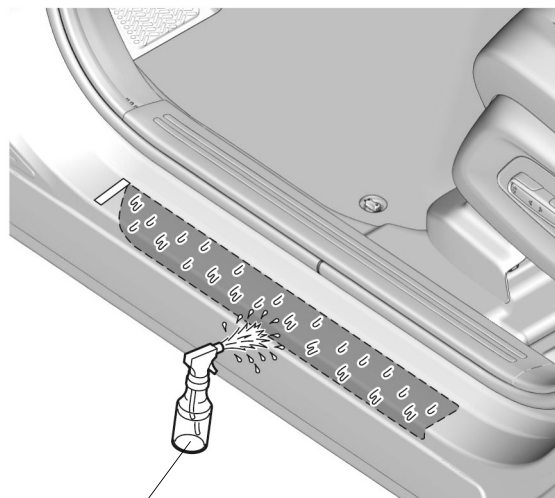

3M PROTECTIVE TAPE  
APPLICATION SOLUTION


QL02504AN

# Germain Honda of College Hills

5. Remove the adhesive backing.


## NOTE

Make sure to check the identification mark before installation.

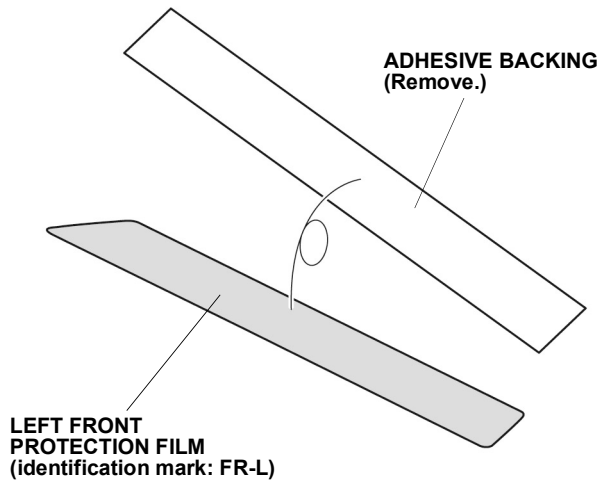

QL02505AN

6. Spray the left front protection film.


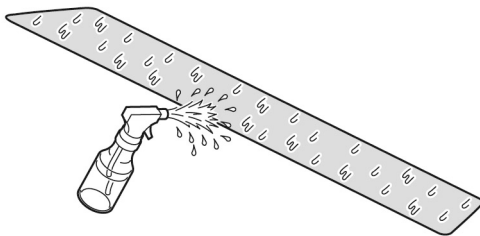


QL02506AN


7. Line up the left front protection film.

MASKING TAPE

Line up.

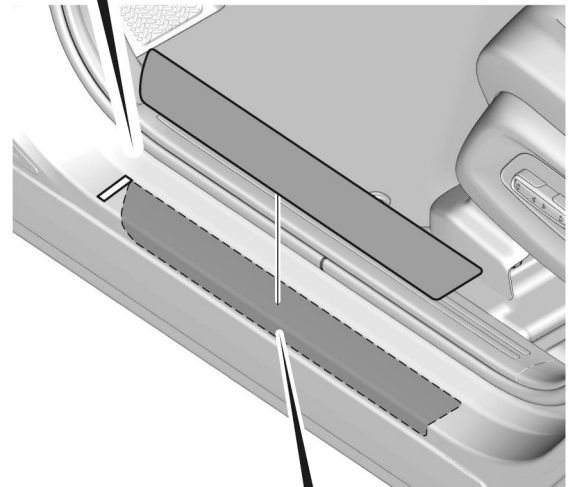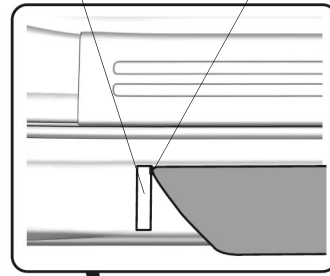

Line up with the end of  
the curved surface.

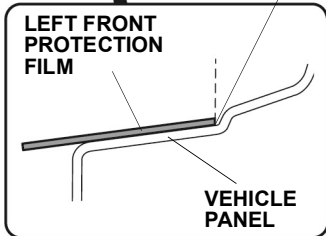



QL02507AN

# Germain Honda of College Hills


8. Secure the left front protection film.

## NOTE

Move the felt sleeve in one direction only.

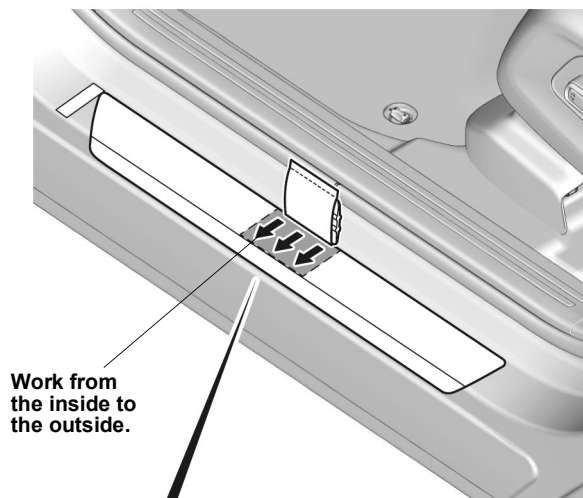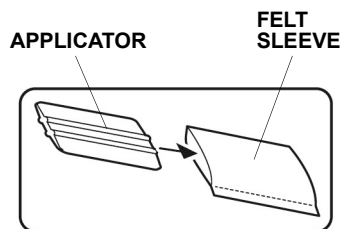

Work from the inside to the outside.

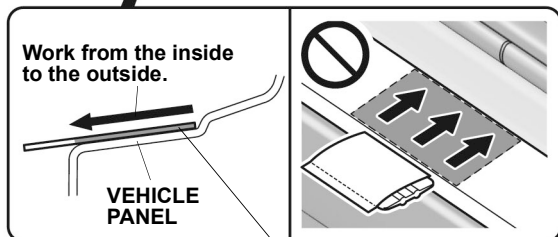

SECTION VIEW


LEFT FRONT PROTECTION FILM

QL02508AN

9. Secure the left front protection film.

## NOTE

Move the felt sleeve in one direction only.

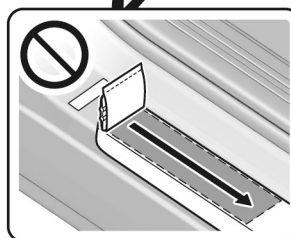

Work from the center to the outside.


QL02509AN

# Germain Honda of College Hills


10. Secure the left front protection film.

## NOTE

Move the felt sleeve in one direction only.

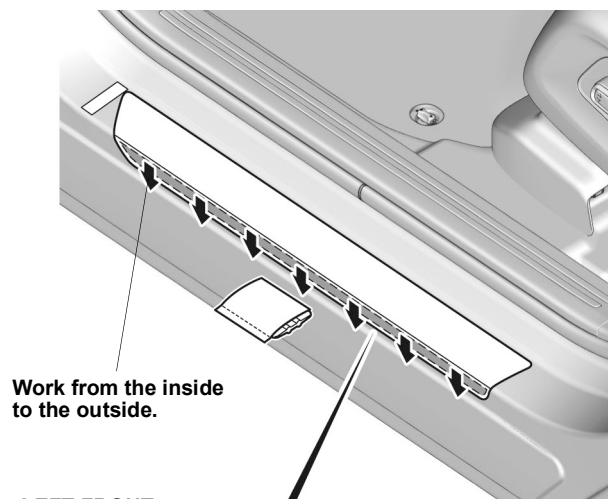

LEFT FRONT PROTECTION FILM

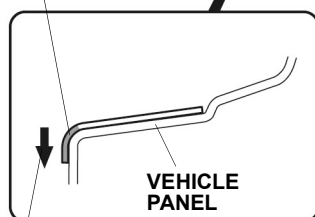

SECTION VIEW


Work from the inside to the outside.

QL02510AN


11. Secure the left front protection film.

## NOTE

Move the felt sleeve in one direction only.

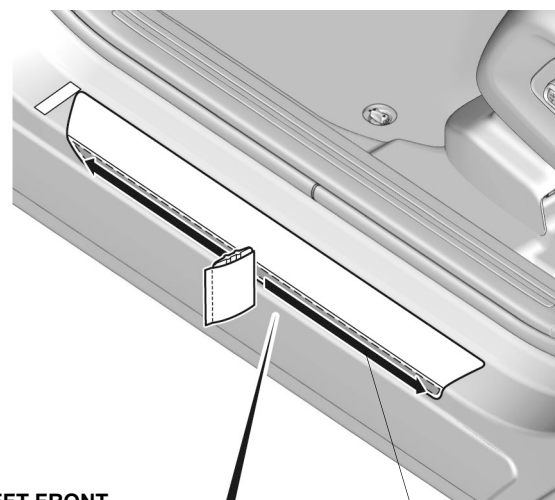

LEFT FRONT PROTECTION FILM

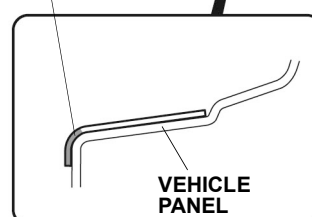

SECTION VIEW

Work from the center to the outside.


QL02511AN

# Germain Honda of College Hills

12. Wipe off the 3M protective tape application solution.

## NOTE


Allow area to dry thoroughly.

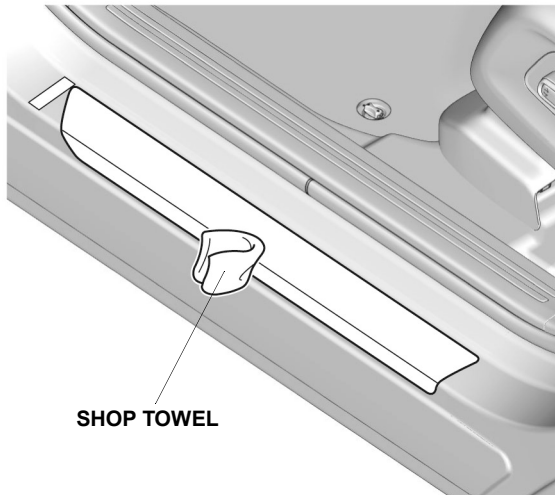

QL02512AN



13. Remove the masking tape.

14. Open the left rear door.



LEFT B-PILLAR  
LOWER TRIM

LEFT REAR  
DOOR SILL TRIM

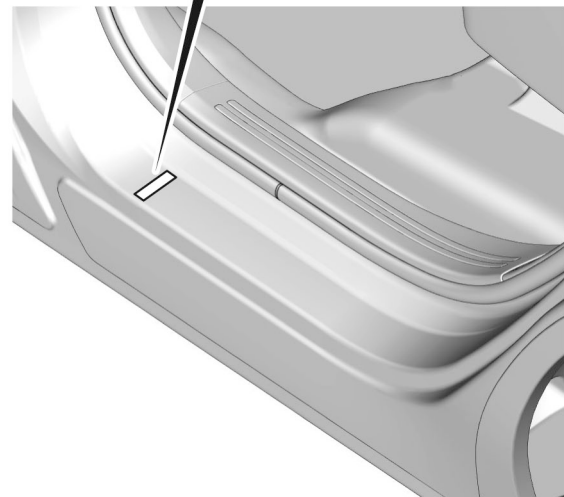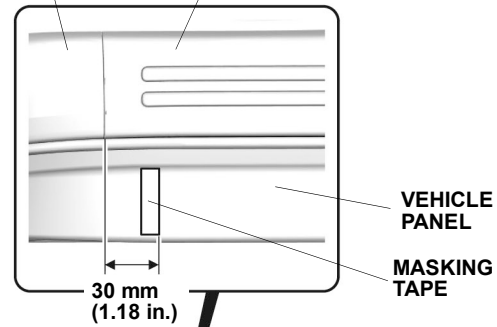

QL02513AN

15. Attach masking tape.




# Germain Honda of College Hills

16. Clean the attaching area.


## NOTE

Allow area to dry thoroughly.

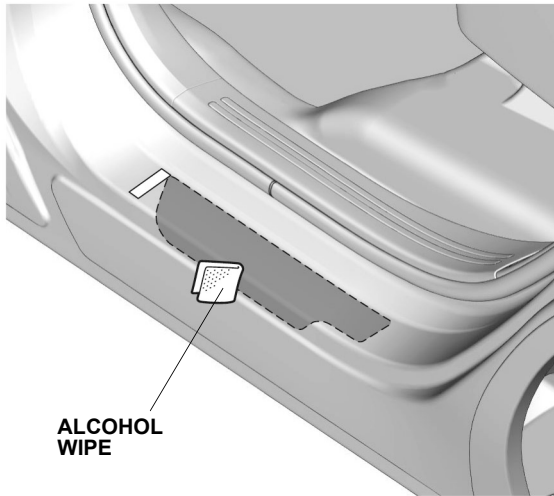

QL02514AN

17. Spray the vehicle panel.

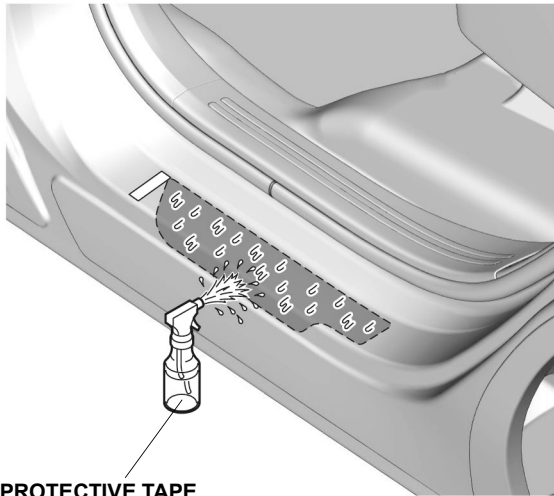


QL02515AN

18. Remove the adhesive backing.

## NOTE


Make sure to check the identification mark before installation.

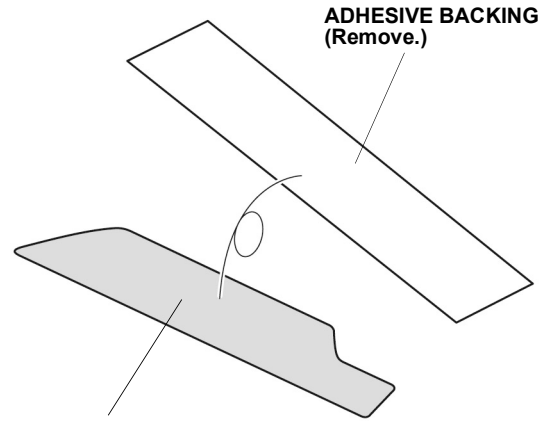

LEFT REAR PROTECTION FILM  
(identification mark: RR-L)

QL02516AN

19. Spray the left rear protection film.


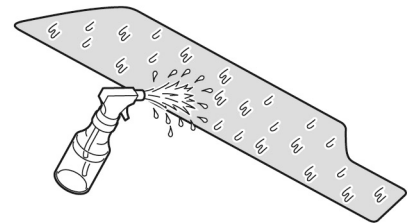


QL02517AN

# Germain Honda of College Hills


20. Line up the left rear protection film.

**MASKING TAPE**      **Line up.**

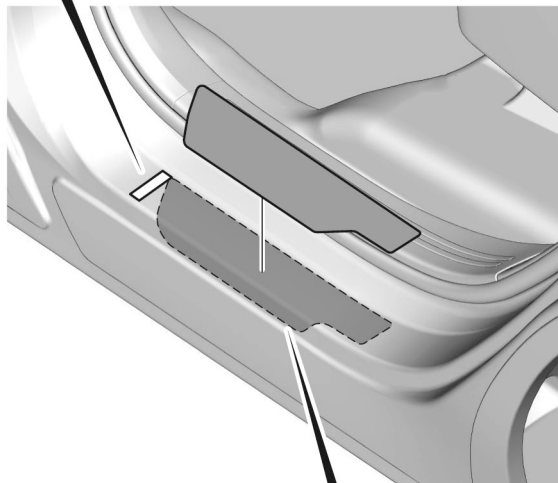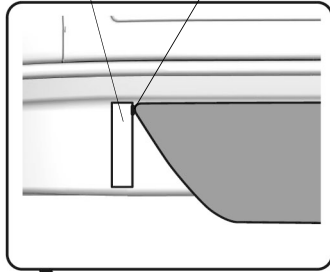

**LEFT REAR  
PROTECTION  
FILM**

**Line up with the end of  
the curved surface.**

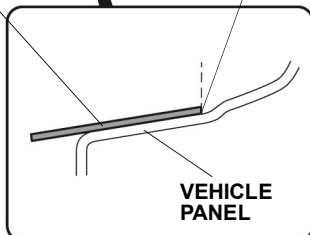

**VEHICLE  
PANEL**

**SECTION VIEW**


QL02518AN

21. Secure the left rear protection film.

## **NOTE**


Move the felt sleeve in one direction only.

**FELT SLEEVE**

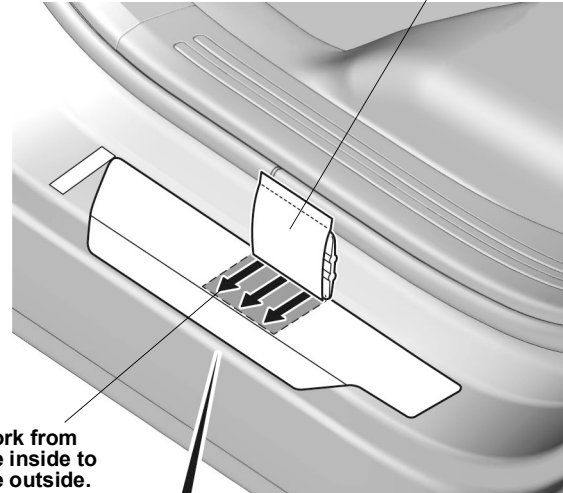

**Work from the  
inside to  
the outside.**

**Work from the inside  
to the outside.**

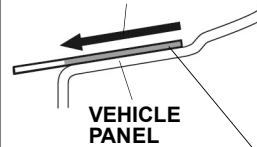

**SECTION VIEW**

**LEFT REAR  
PROTECTION  
FILM**


QL02519AN

# Germain Honda of College Hills

22. Secure the left rear protection film.

## NOTE

Move the felt sleeve in one direction only.

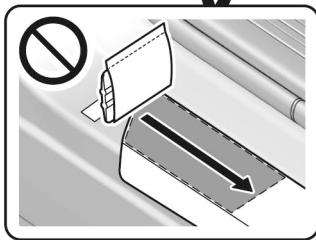

Work from the center to the outside.

QL02520AN


23. Secure the left rear protection film.

## NOTE

Move the felt sleeve in one direction only.



LEFT REAR PROTECTION FILM

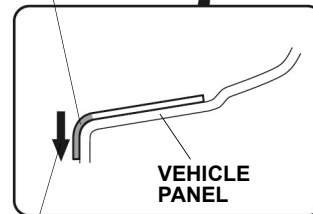

SECTION VIEW

Work from the inside to the outside.

Work from the inside to the outside.


QL02521AN

# Germain Honda of College Hills

24. Secure the left rear protection film.

## NOTE

Move the felt sleeve in one direction only.

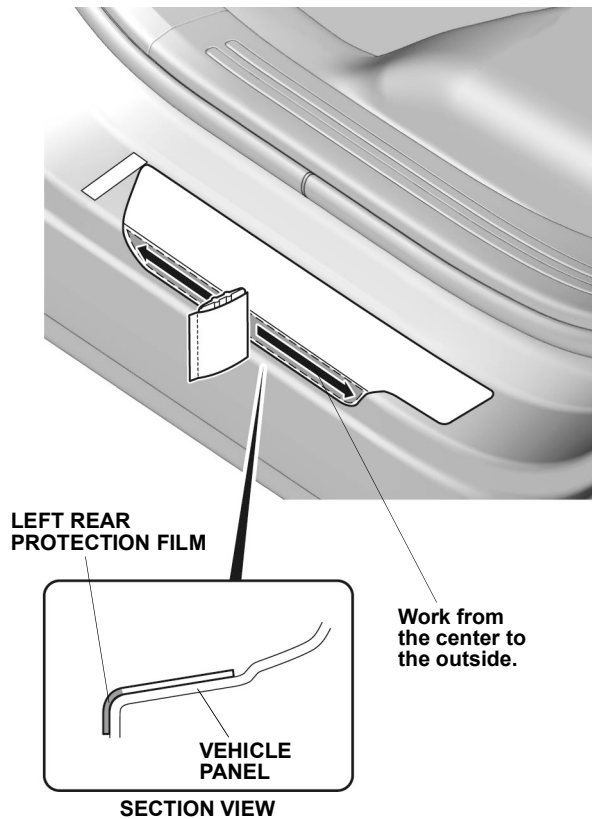

QL02522AN

25. Wipe off the 3M protective tape application solution.

## NOTE


Allow area to dry thoroughly.



QL02523AN

26. Remove the masking tape.

27. Repeat the same procedures on the other side.

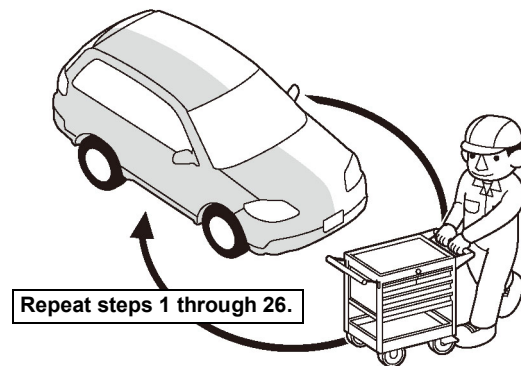

Q9D1014AM

28. Check that all parts are installed properly.