INSTALLATION INSTRUCTIONS

FRONT FENDER TRIMS

Accessory


2023 CR-V **MODEL SERIES**

Application

VERSION 1 Issue Date **AUG 2022**

Publications No.

GENERAL VIEW

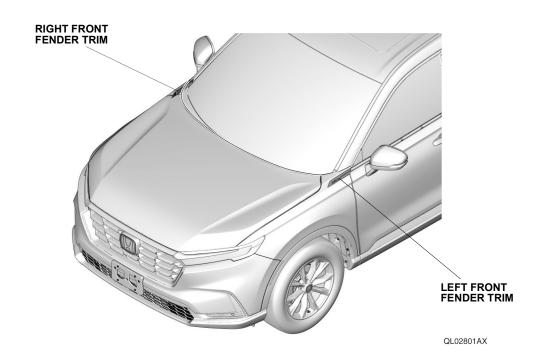

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

▲ DANGER	You will be killed or seriously hurt if you do not follow the instructions.
▲ WARNING	You can be killed or seriously hurt if you do not follow the instructions.
A CAUTION	You can be hurt if you do not follow the instructions.
NOTICE	Gives advice to prevent damage to the product, vehicle, the environment or other property.
NOTE	Gives helpful information or instructions to be followed when installing this product.
\bigcirc	Indicates a prohibited action.

Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle. (Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the customer. (Do not reuse.)

Safety: General


- Be careful not to damage the vehicle or the parts.
- · The illustrations may differ slightly from the actual accessory.

Safety: Accessory

- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

PARTS LIST

Front Fender Trims Kit (P/N 08F59-3A0-100)

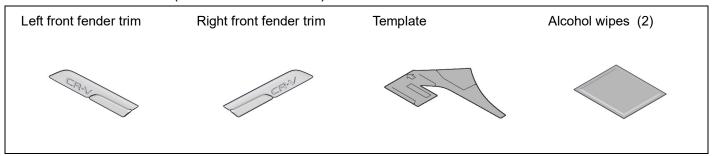

REQUIRED TOOLS AND SUPPLIES


Masking tape

The following tool is available through the Honda Tool and Equipment Program:


Rubber Roller (T/N MHLE54D)

INSTALLATION

Secure the template.

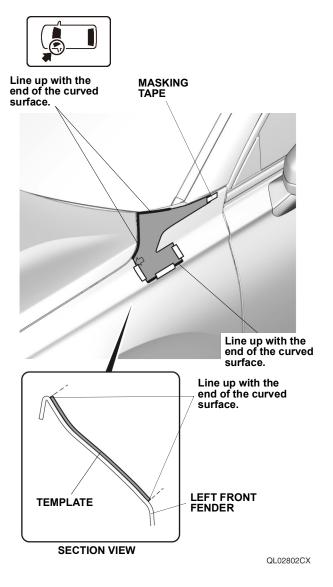


2. Clean the attaching area.






3. Temporarily attach the adhesive backings.

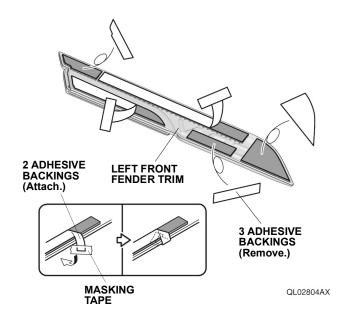

Remove the adhesive backings.


5. Line up the left front fender trim.

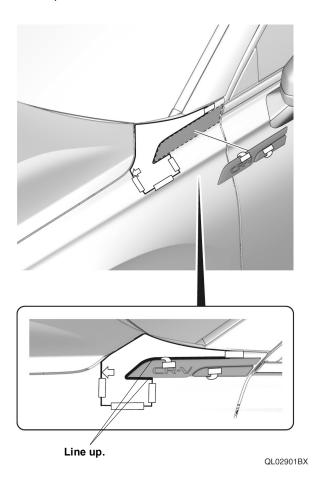


6. Secure the left front fender trim.

NOTE

Check the position of the double-sided adhesive tapes and make sure to press firmly.

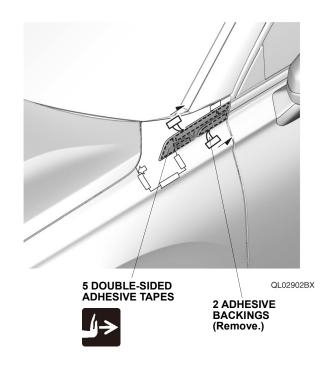


7. Secure the left front fender trim.

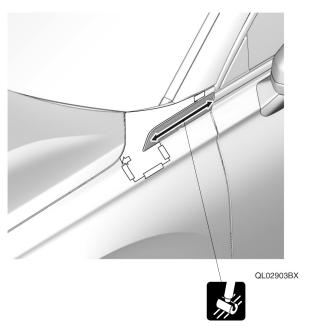

8. Remove the template.

9. Flip the template, and repeat the same procedures on the other side.

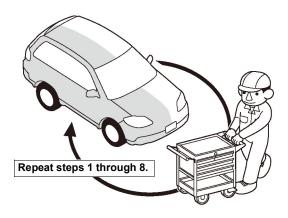

Q9D1012AE

10. Check that all parts are installed properly.