INSTALLATION INSTRUCTIONS

Accessory
FENDER FLARES

2023 CR-V MODEL SERIES

Application


VERSION 1

Issue Date
AUG 2022

Publications No.

GENERAL VIEW

If you are also installing body side moldings (sold separately), install them before you install the fender flares.

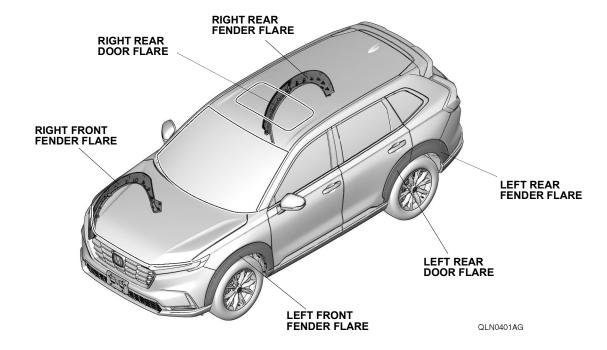

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

Indicates a prohibited action.


^{*}All symbols are not used in all installation instructions.

▲ DANGER	You will be killed or seriously hurt if you do not follow the instructions.			
A WARNING	You can be killed or seriously hurt if you do not follow the instructions.			
A CAUTION	You can be hurt if you do not follow the instructions.			
NOTICE	Gives advice to prevent damage to the product, vehicle, the environment or other property.			
NOTE	Gives helpful information or instructions to be followed when installing this product.			

Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle. (Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the customer. (Do not reuse.)

Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- · Be careful not to damage the vehicle or the parts.
- Be extremely careful when handling retaining tabs and clips.
- The illustrations may differ slightly from the actual accessory.

Safety: Accessory

- · Always use the parts and tools specified in the installation instructions.
- · Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- · When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

PARTS LIST

Fender Flares Kit (P/N 08P21-3A0-100)					
Left front fender flare	Right front fender flare	Left rear door flare	Right rear door flare		
Left rear fender flare	Right rear fender flare	Front template A (identification mark: A, FR)	Front template B (identification mark: B, FR)		
			E & S		
Front template C (identification mark: C, FR)	Rear template A (identification mark: A, RR)	Rear template B (identification mark: B, RR)	Clips A (12)		
	The state of the s	Low R.			
Clips B (6)	Clips C (4)	Clips D (8)	Clips E (2)		
Fasteners (30)	Alcohol wipes (6)				

REQUIRED TOOLS AND SUPPLIES

Phillips screwdriver

- · Stubby Phillips screwdriver
- · Masking tape

The following tools are available through the Honda Tool and Equipment Program:


• Trim Tool Set (T/N SOJATP2014)

• Plastic Trim Tool (T/N SILTRIMTL10) • Rubber Roller (T/N MHLE54D)

INSTALLATION


Remove the self-tapping screws and clips.



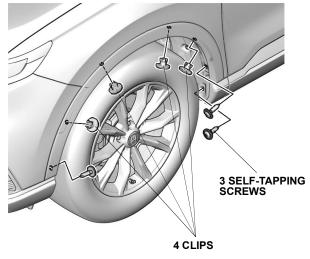


QLN0402AG

2. Remove the left front wheel arch protector.

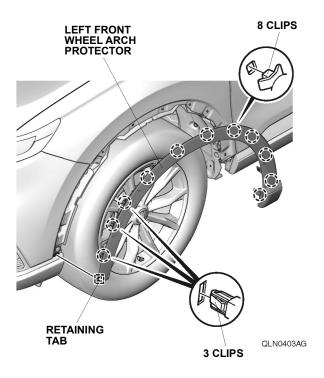


3. Remove the reflector.

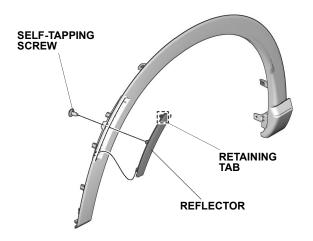


QLN0404AG

4. Remove the bracket, clips, and spring nuts.

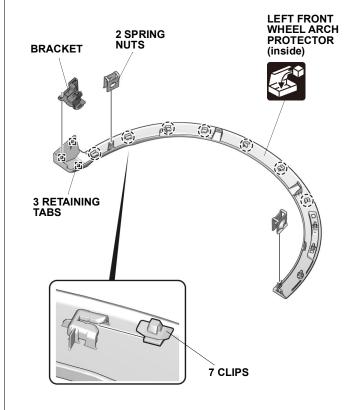

QLN0405BG

5. Install the reflector.

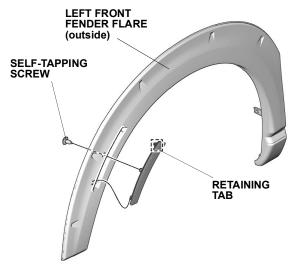


QLN0406AG


Install the bracket, clips, and spring nuts.

NOTE

Make sure to install the spring nuts in the correct orientation.

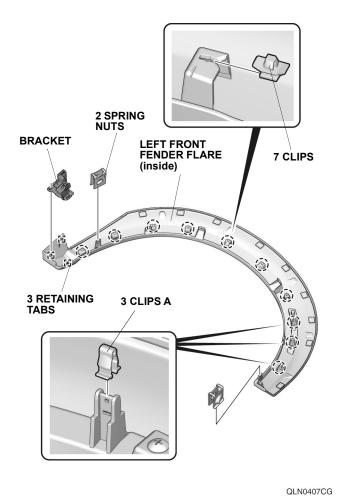

7. Attach masking tape.

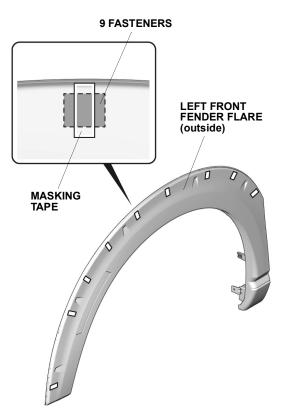

QM30920BA

8. Secure the front templates A, B and C.

NOTE


Make sure to check the identification mark before installation.

Line up with the end of the FRONT TEMPLATE B FRONT TEMPLATE A curved surface. (identification mark: (identification mark: B, FR) À, FR) Line up with the end of the curved surface. **MASKING LEFT FRONT FENDER** TAPE FRONT TEMPLATE C (identification mark: **FRONT BUMPER** Line up with the end QLN0408BG of the curved surface.


9. Clean the attaching areas.

NOTE


Allow area to dry thoroughly.

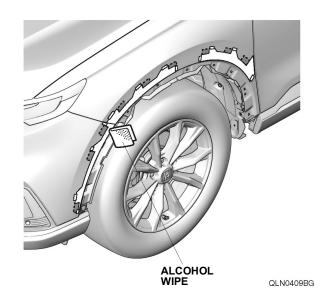

10. Attach the fasteners.

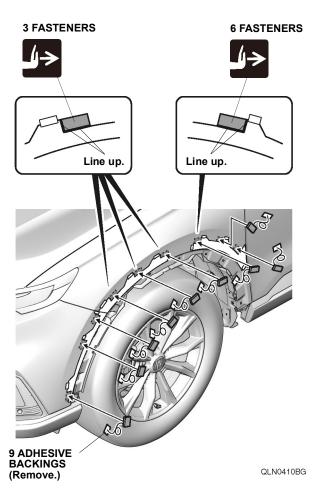


11. Secure the fasteners.

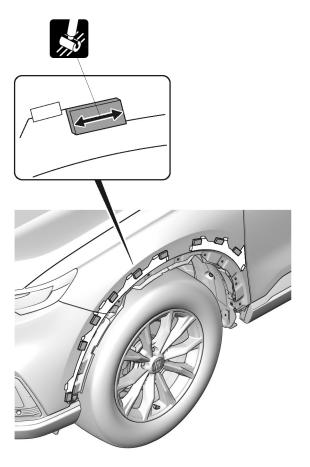


QM33001AG

- 12. Remove the front templates.
- 13. Install the left front fender flare.

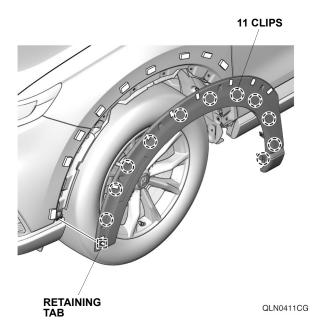


14. Secure the left front fender flare.

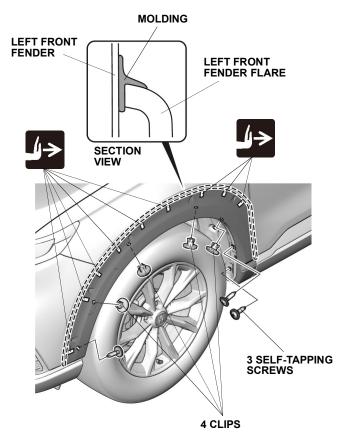


QLN0412CG

- 15. Remove the masking tape.
- 16. Remove the self-tapping screw.

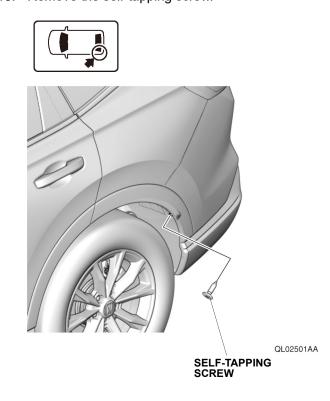


17. Open the left rear door.

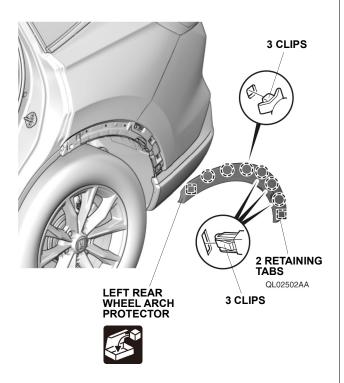


18. Remove the left rear wheel arch protector.

19. Install the clips.

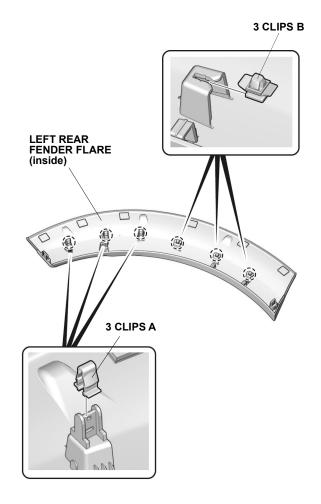

QLN0413BG


20. Attach masking tape.

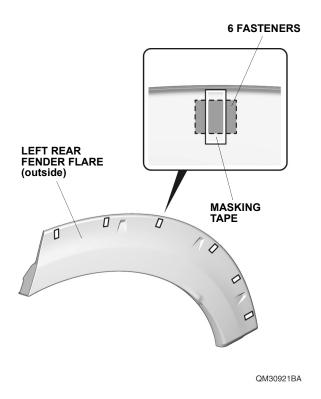

21. Secure the rear templates A and B.

NOTE


Make sure to check the identification mark before installation.

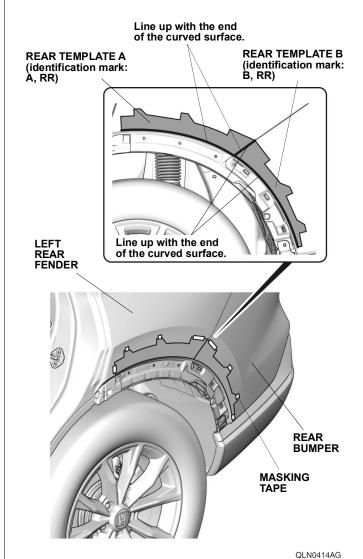

22. Clean the attaching areas.


NOTE

Allow area to dry thoroughly.

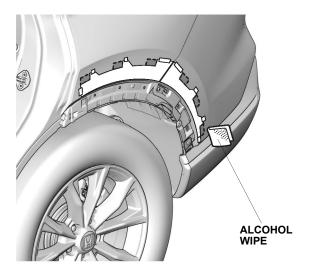


QLN0415AG

23. Attach the fasteners.

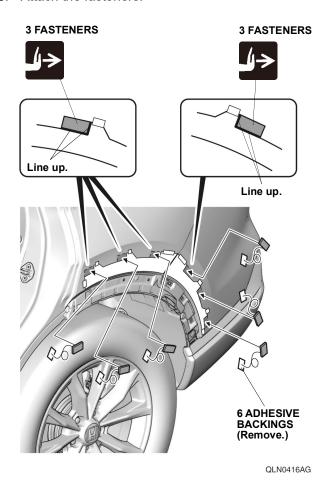


24. Secure the fasteners.

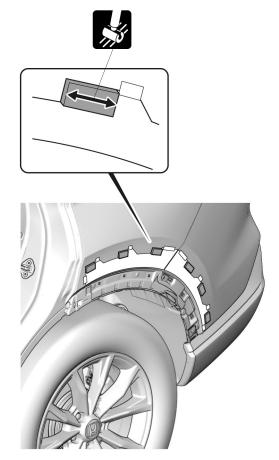


QM33002AG

- 25. Remove the rear templates.
- 26. Install the left rear fender flare.

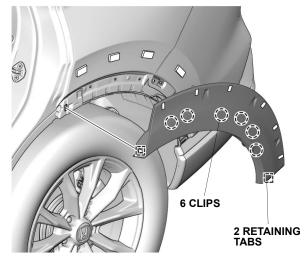


QLN0417CG

27. Secure the left rear fender flare.

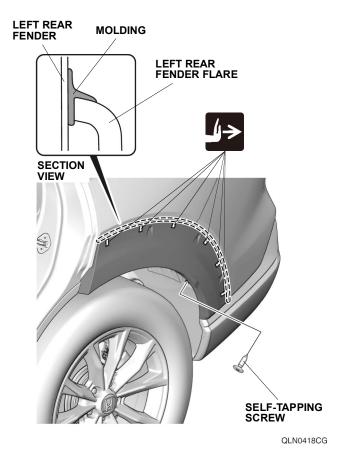


28. Remove the masking tape.

29. Attach masking tape to protect the vehicle.

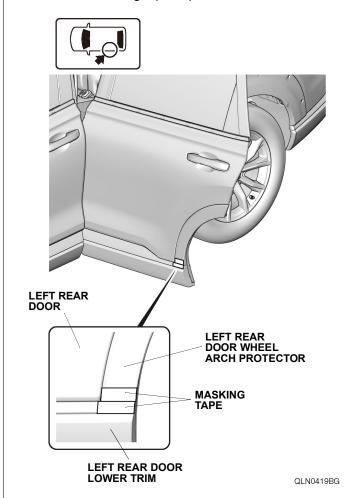


30. Remove the clip.

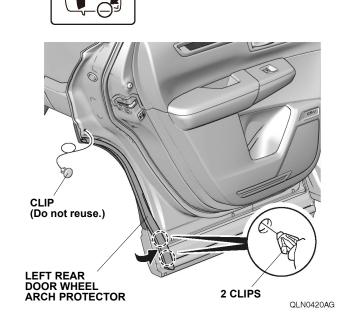


31. Release the left rear door wheel arch protector.

32. Remove the left rear door wheel arch protector.

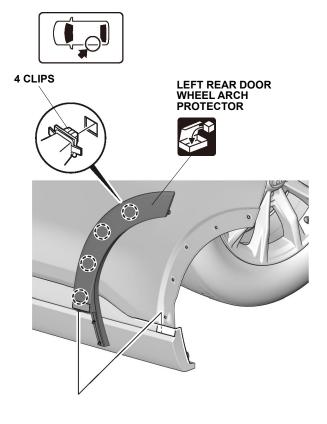

QLN0421BG


33. Attach masking tape to protect the vehicle.

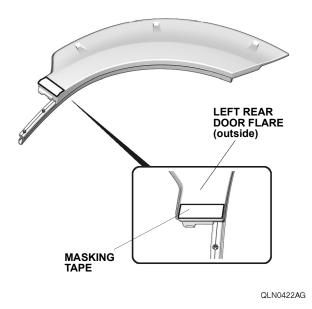

34. Install the clips.


NOTE

Make sure to install the clips in the correct orientation.

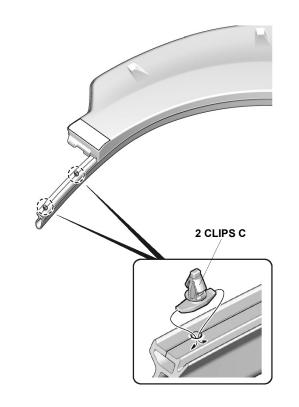

QLN0423AG


35. Install the clips.

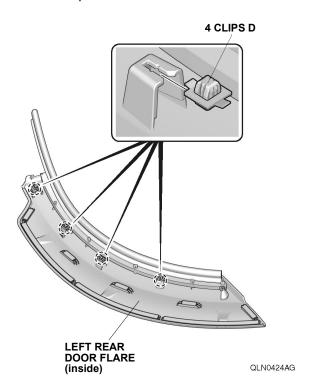

36. Clean the attaching area.


NOTE

Allow area to dry thoroughly.

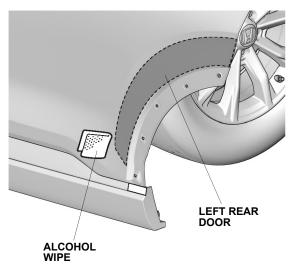

QLN0425BG


37. Temporarily attach the adhesive backings.

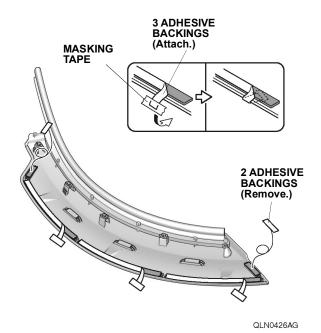

38. Remove the adhesive backings.

39. Install the left rear door flare.

4 CLIPS

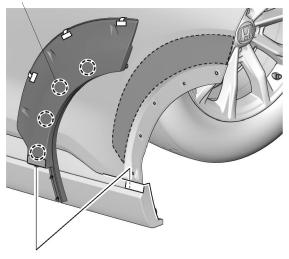


QLN0427BG

- 40. Remove the masking tape.
- 41. Secure the left rear door flare.

NOTE

Make sure to use the replacement clip provided in this kit




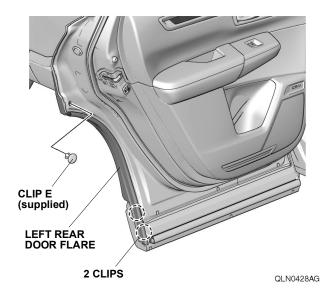

42. Secure the left rear door flare.

NOTE

Check the position of the double-sided adhesive tapes and make sure to press firmly.

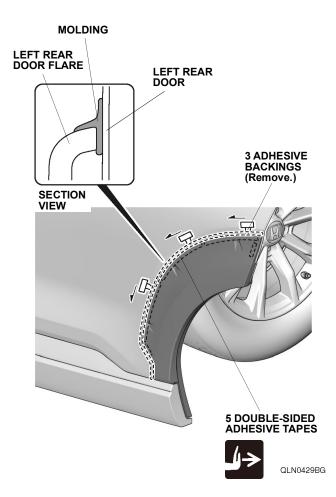


43. Secure the left rear door flare.



QLN0430AG

44. Flip the front and rear templates, and repeat the same procedures on the other side.

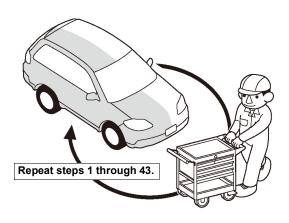

Q9D1012AE

45. Check that all parts are installed properly.