

Germain Honda of College Hills



INSTALLATION INSTRUCTIONS

Accessory

FRONT LOWER TRIMS

Application

2023 CR-V
MODEL SERIES


Publications No.

VERSION 1

Issue Date

AUG 2022

GENERAL VIEW

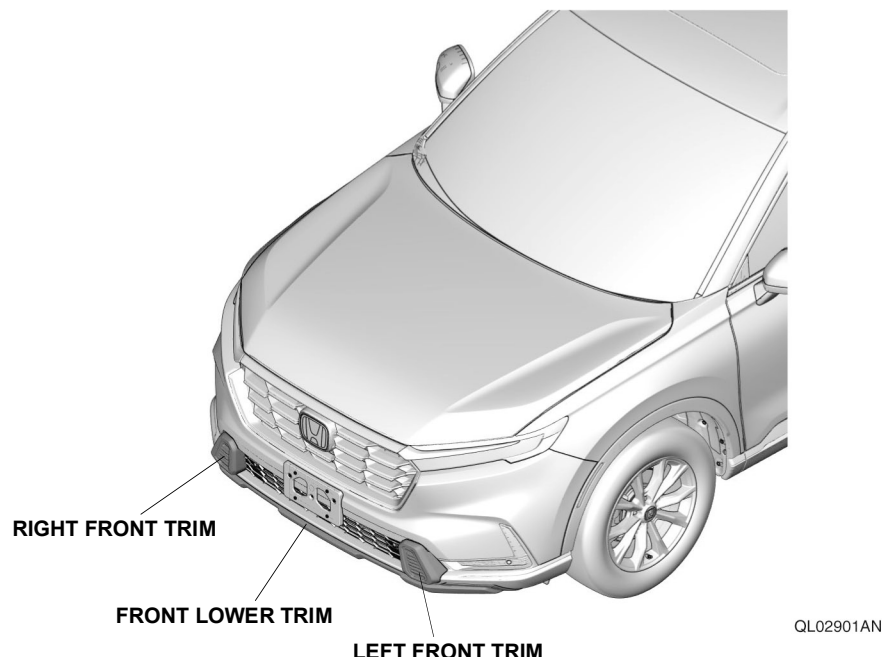

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

DANGER

You will be killed or seriously hurt if you do not follow the instructions.

WARNING

You can be killed or seriously hurt if you do not follow the instructions.

CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.



Indicates a prohibited action.

Germain Honda of College Hills

Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle.
(Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.




Clean with isopropyl alcohol.




Return the original part to the customer.
(Do not reuse.)


Wire Harness Routing Precaution

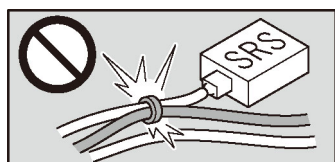


Do not secure the accessory harness to the SRS harness. (except for instruction cases.)

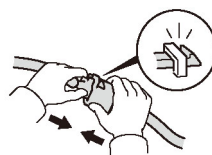


Push the connectors and terminals together until they lock.

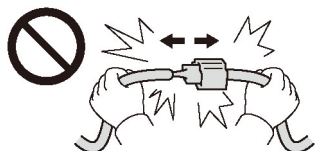

Do not pull the harness to unplug the connectors.

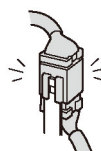

Install removed connectors in their original location.

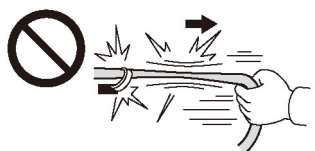


Do not pull the harness.



Secure the accessory harness as shown.



Do not pinch the harness.

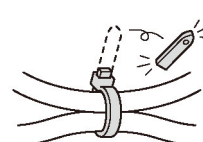

Cut off the excess wire tie.

Germain Honda of College Hills

Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Be careful not to damage the vehicle or the parts.
- Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- The illustrations may differ slightly from the actual accessory.

Safety: Electric Parts









Always disconnect the negative cable from the battery before beginning work.

Safety: Accessory

- Always use the parts and tools specified in the installation instructions.
- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

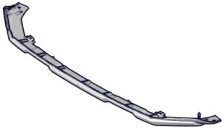PARTS LIST

Front Lower Trim Kit (P/N 08F23-3A0-100A)

Front lower trim	Left front trim	Right front trim	Clips (2)
			
Female clips (4)	Spring nuts (11)	Self-tapping screws (11)	Alcohol wipe
			

Germain Honda of College Hills

REQUIRED TOOLS AND SUPPLIES

- 10 mm Open end wrench
- Masking tape
- Drill
- Eye protection (face shield, safety goggles, etc.)
- Phillips screwdriver
- File
- Diagonal cutters
- Blanket
- Pushpin
- 3 mm, 6 mm, 8 mm, and 10 mm Drill bits

The following tools are available through the Honda Tool and Equipment Program:

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)
- Rubber Roller (T/N MHLE54D)




Germain Honda of College Hills

INSTALLATION

1. Disconnect the negative cable from the battery.

NOTE

With the driver's door open, turn the vehicle to the OFF (LOCK) mode, then wait at least 3 minutes before disconnecting the 12 volt negative battery cable.

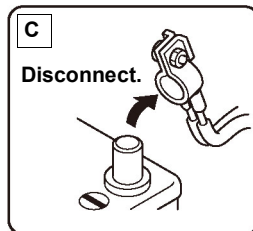
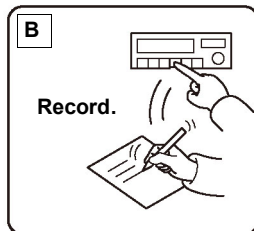
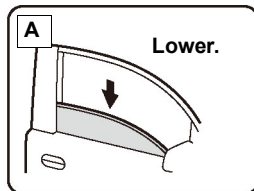


QCD0502BM

2. Wrap a shop towel.

NOTE

Do not remove the shop towel until after the parts are installed.

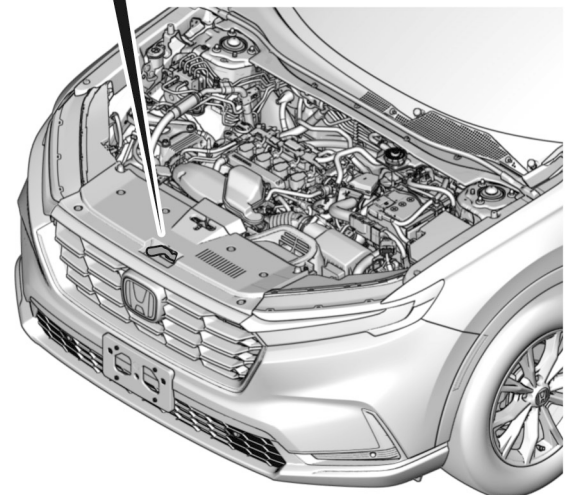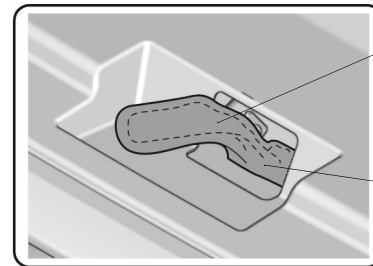


QL01802AA

Germain Honda of College Hills

3. Remove the front bulkhead cover.



6 CLIPS

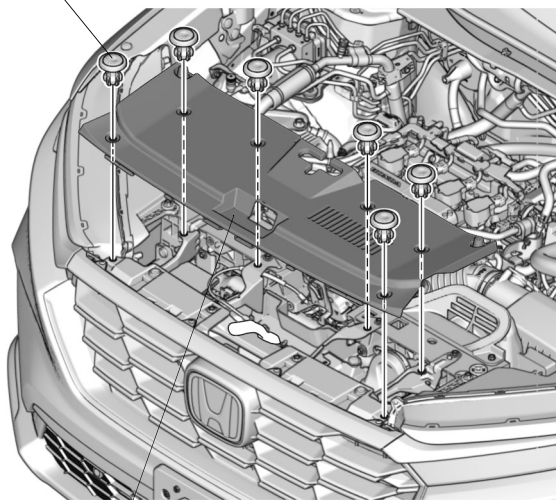

FRONT BULKHEAD COVER

QL01803AA

4. Remove the self-tapping screws and clips.

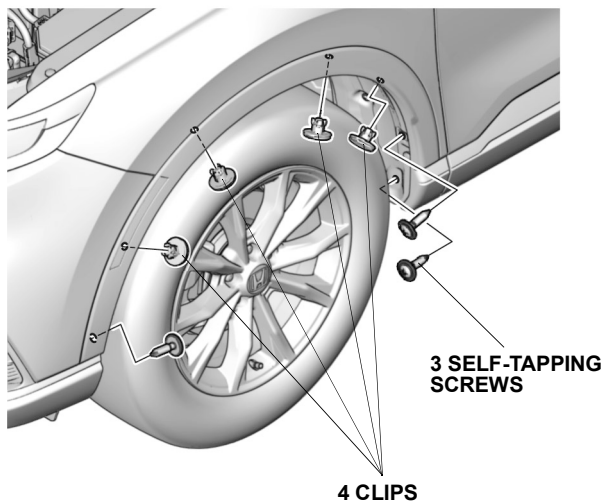

3 SELF-TAPPING SCREWS


4 CLIPS

QL01804AA

5. Remove the left front wheel arch protector.

LEFT FRONT WHEEL ARCH PROTECTOR

8 CLIPS

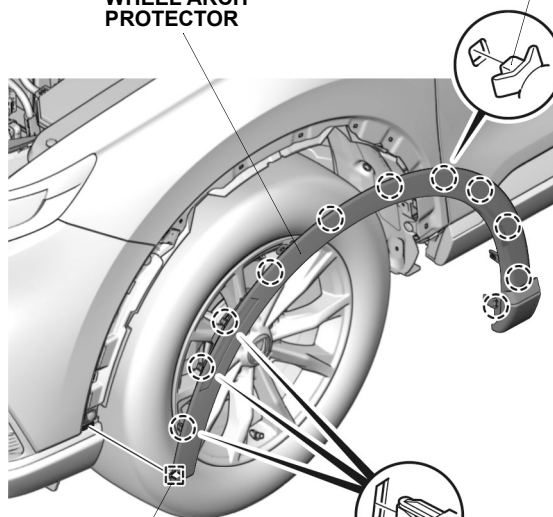


RETAINING TAB

3 CLIPS

QL01805AA

6. Repeat the same procedures on the other side.

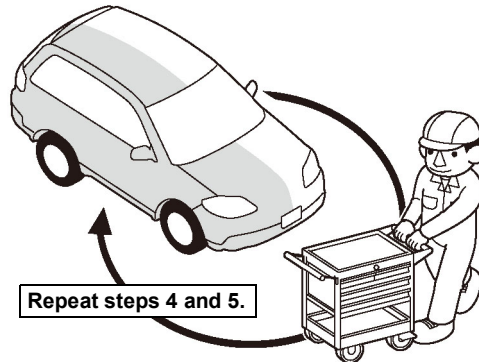




Q9D1014AM

Germain Honda of College Hills

7. Attach masking tape to protect the vehicle.

NOTE

Do not remove the masking tape until after the parts are installed.

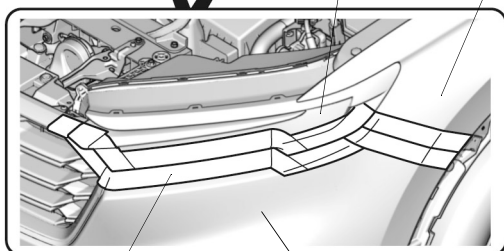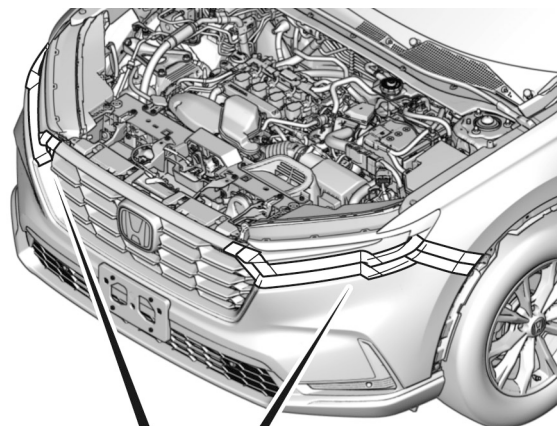

MASKING
TAPE


FRONT
BUMPER

HEADLIGHT

FRONT
FENDER

QL01806AA

8. Remove the bolts and clips.

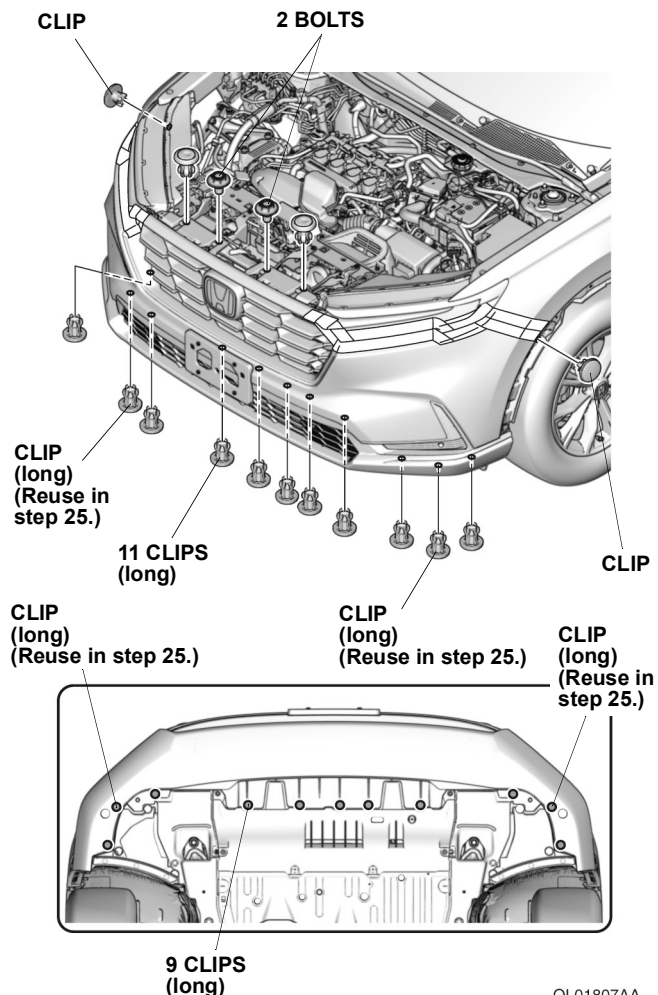


QL01807AA

Germain Honda of College Hills



9. Release the retaining tabs.

NOTE


- Release the retaining tabs starting from outside working in.
- Make sure to release the retaining tabs in the correct orientation.



4 RETAINING
TABS

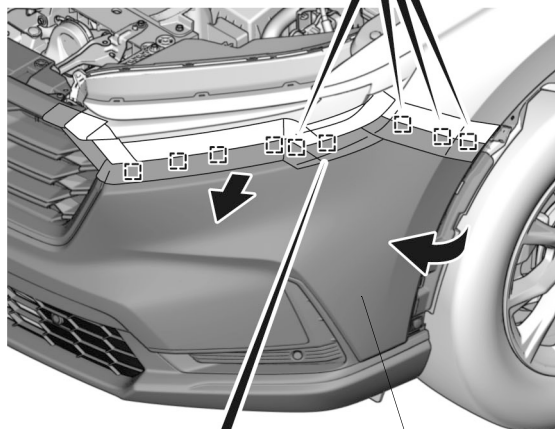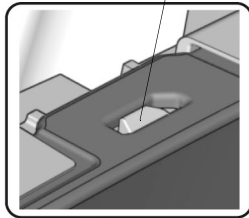

FRONT
BUMPER

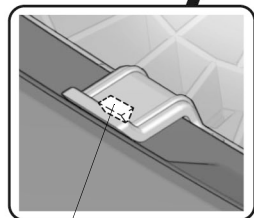


5 RETAINING
TABS


QL01808AA

10. Repeat step 9 on the other side.

11. Remove the front bumper.



OPPOSITE SIDE VIEW

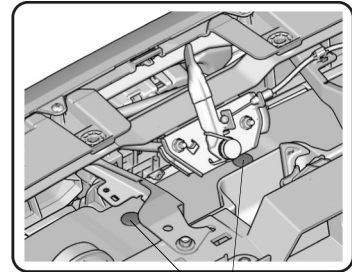


2 CLIPS



2 CLIPS

2 CLIPS

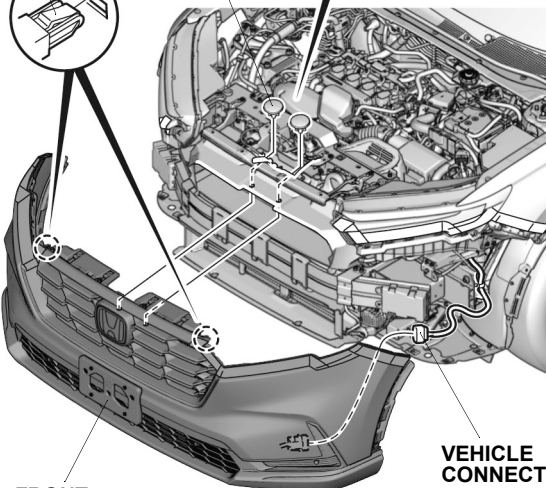


FRONT
BUMPER

VEHICLE
CONNECTOR
(if equipped)

QL01809AA

Germain Honda of College Hills

12. Remove the front license plate base.

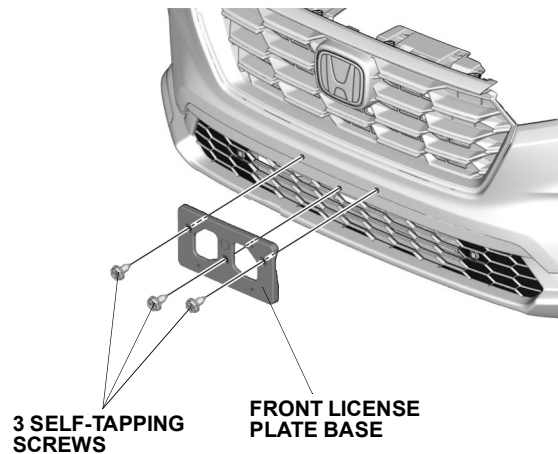


QL02902AN

13. Choose one of these options.


- | | |
|---------------------------------|---------------|
| • With front parking sensors | Go to step 14 |
| • Without front parking sensors | Go to step 16 |

14. Unplug the vehicle connectors.

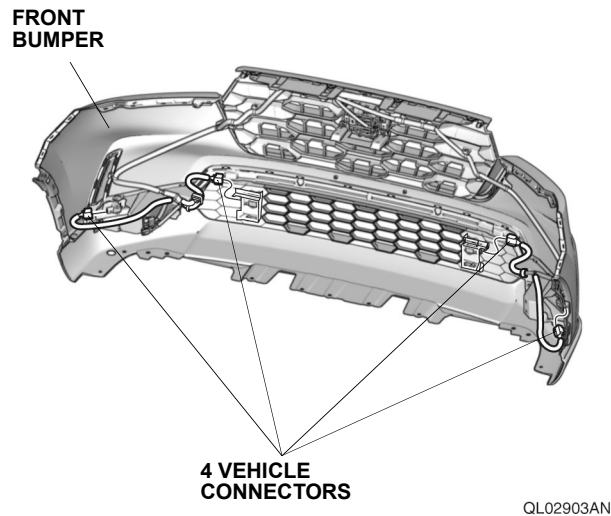


QL02903AN

15. Remove the parking sensor guards.

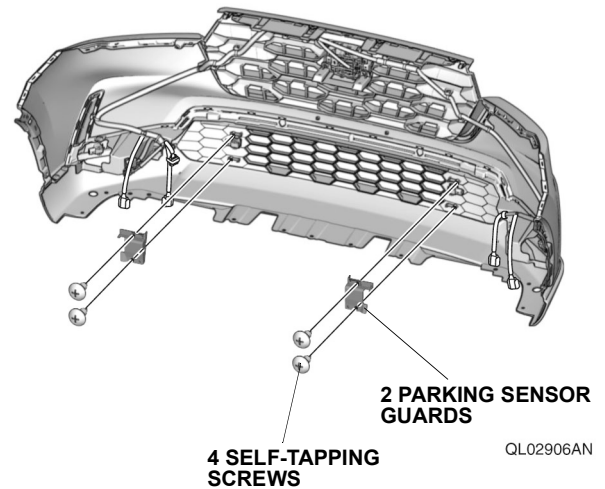

QL02906AN


16. Remove the clips and self-tapping screws.

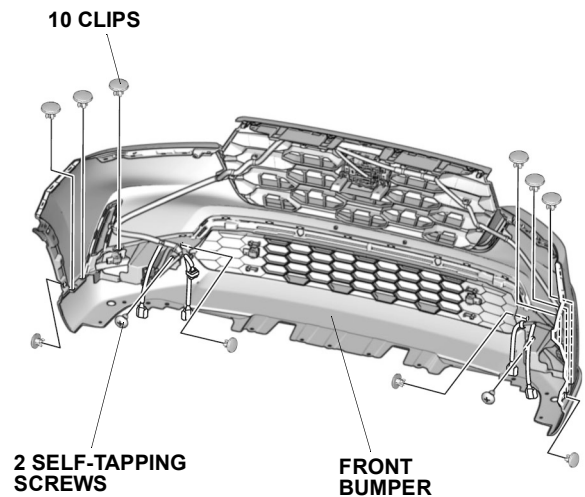

QL02904AN

Germain Honda of College Hills


17. Remove the front lower bumper.

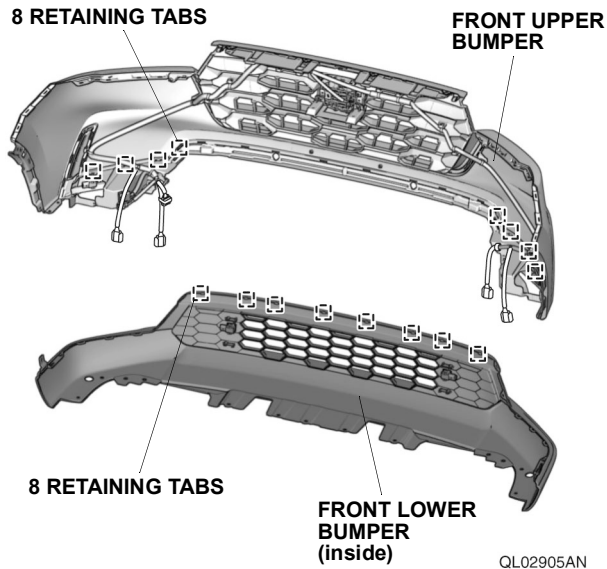

18. Pierce the front lower bumper.

NOTE


Make sure to locate the correct scribe marks.

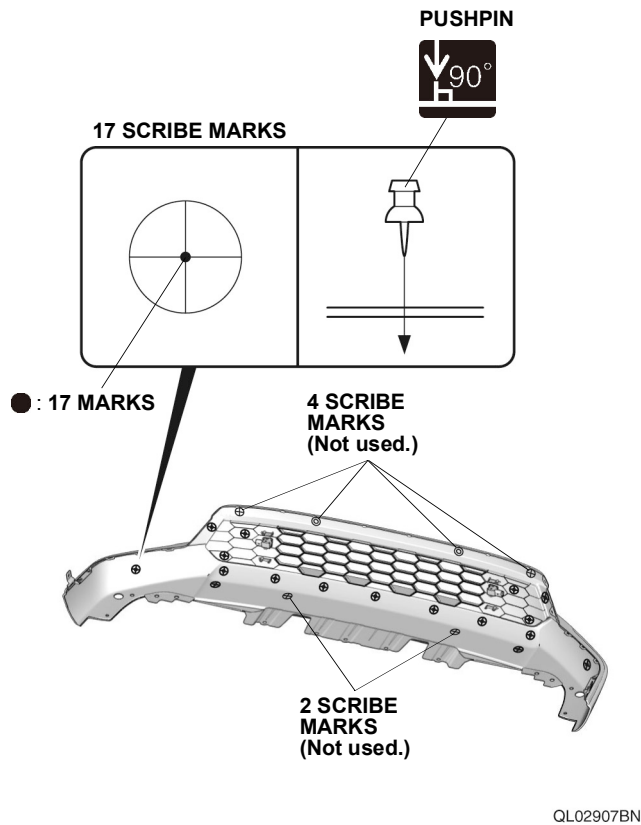

19. Drill the front lower bumper.

NOTE


Make sure to drill the correct position.

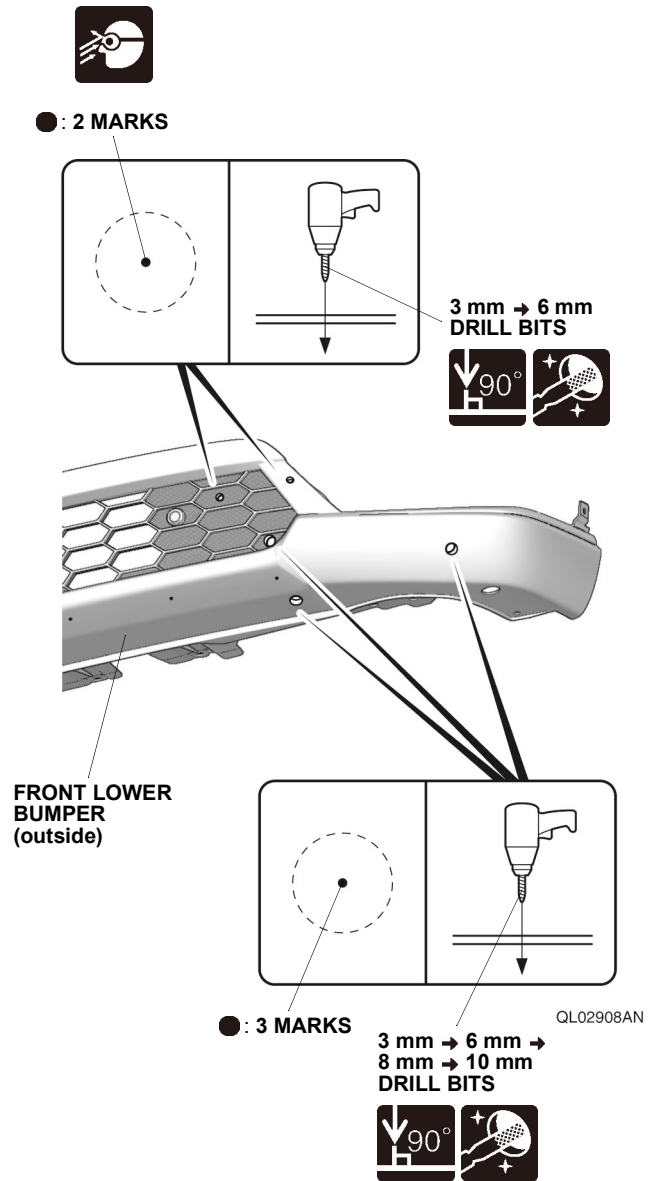

20. Repeat step 19 on the other side.

Germain Honda of College Hills


21. Drill the front lower bumper.

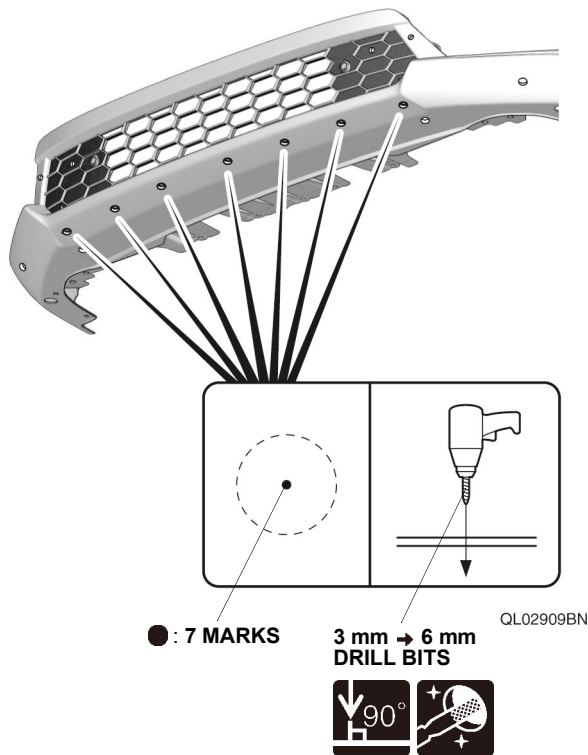

22. Install the spring nuts.

NOTE


Make sure to install the spring nuts in the correct orientation.

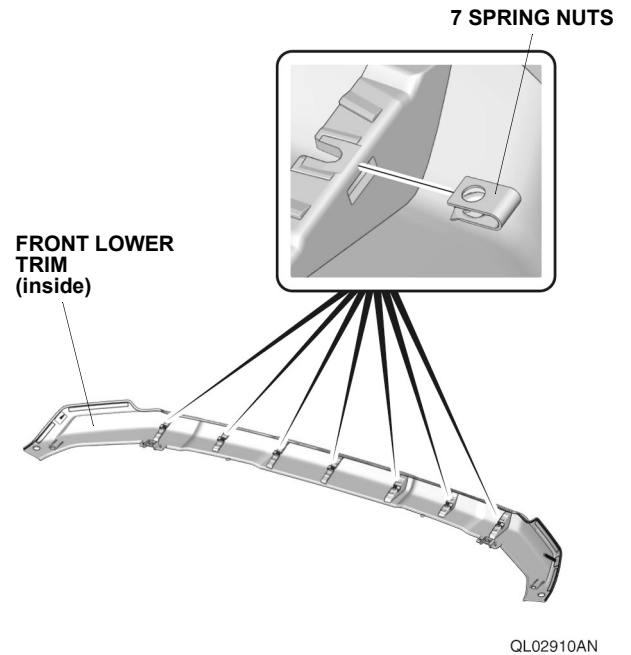

23. Clean the attaching area.


NOTE

Allow to dry thoroughly.

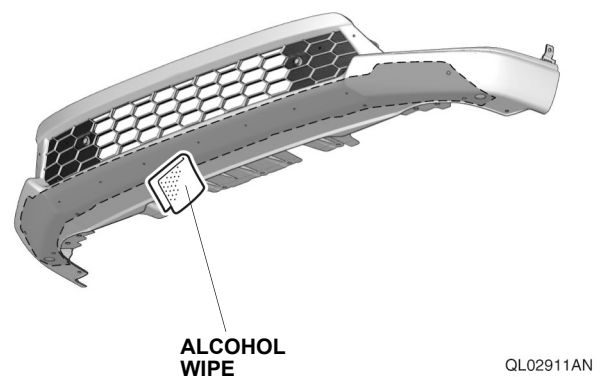


Germain Honda of College Hills

24. Temporarily attach the adhesive backings.

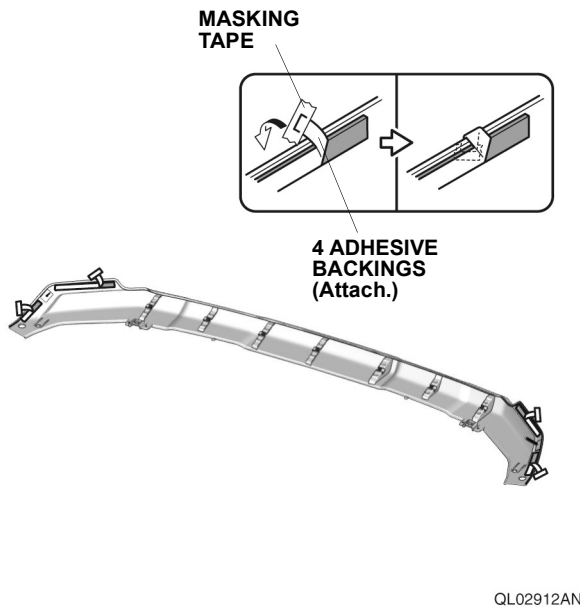


25. Loosely install the front lower trim.

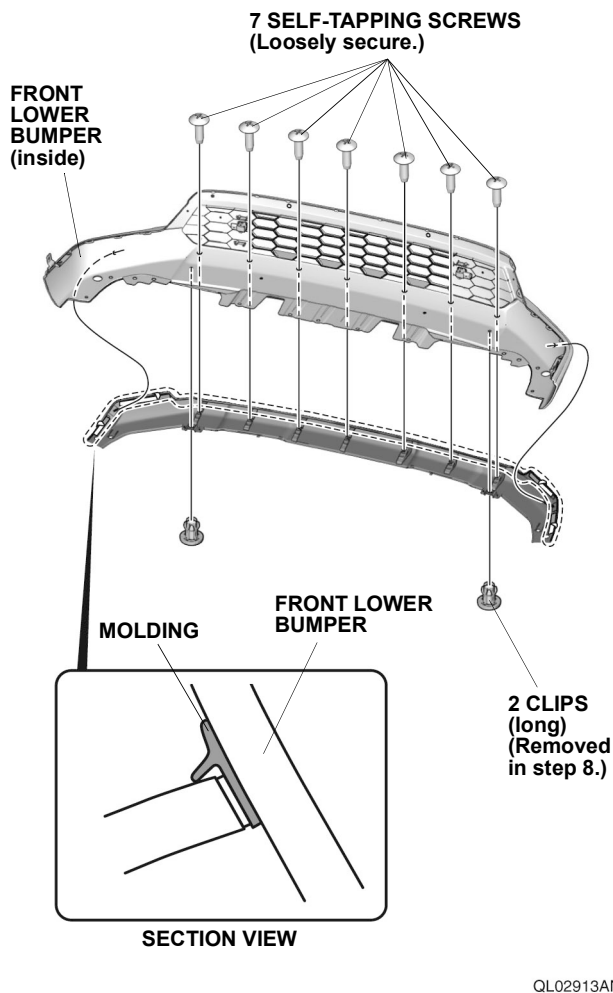


26. Secure the front lower trim.

NOTE

Check the position of the double-sided adhesive tapes and make sure to press firmly.

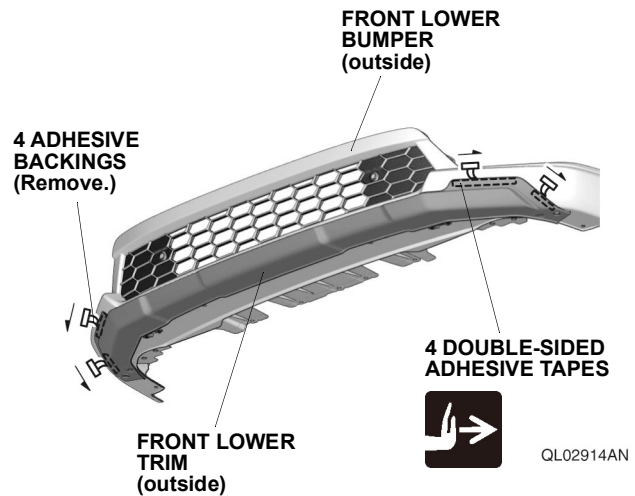

27. Secure the front lower trim.

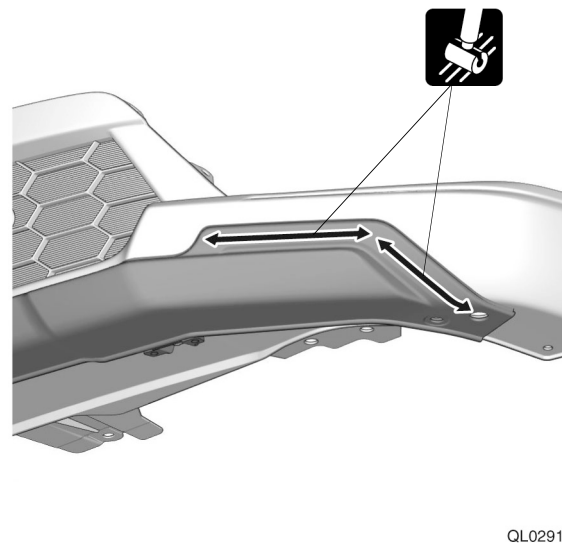

28. Repeat step 27 on the other side.


Germain Honda of College Hills

29. Secure the front lower trim.


NOTICE

Do not push the female clips too tight; you could deform the front lower trim. If necessary, readjust the female clips.

2 FEMALE
CLIPS

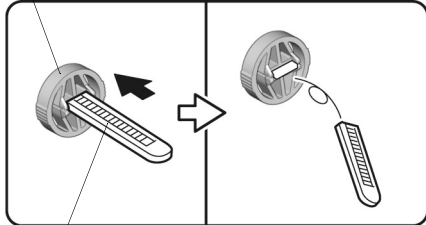

2 MALE
CLIPS

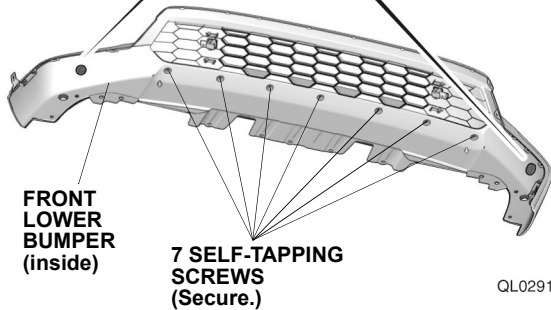

FRONT
LOWER
BUMPER
(inside)

7 SELF-TAPPING
SCREWS
(Secure.)



QL02916AN

30. Install the spring nuts.

NOTE

Make sure to install the spring nuts in the correct orientation.

2 SPRING NUTS

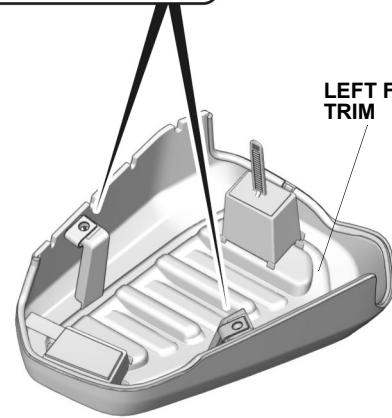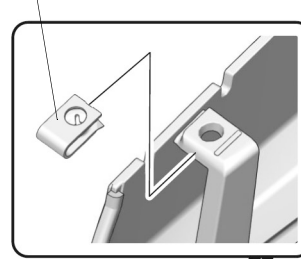

LEFT FRONT
TRIM


QL02917AN

Germain Honda of College Hills


31. Clean the attaching area.

NOTE


Allow to dry thoroughly.

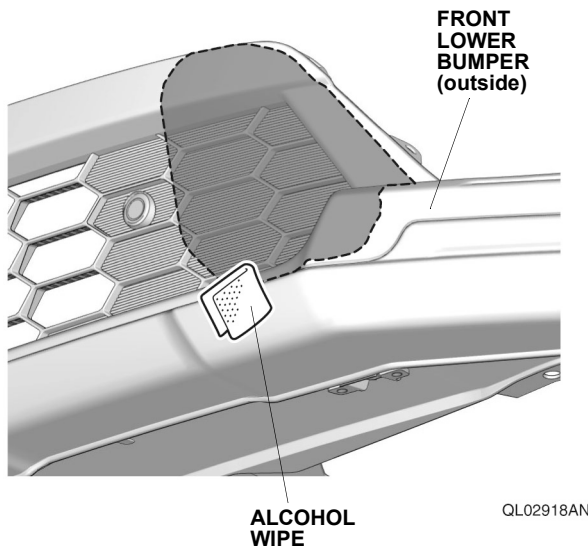

32. Temporarily attach the adhesive backing.

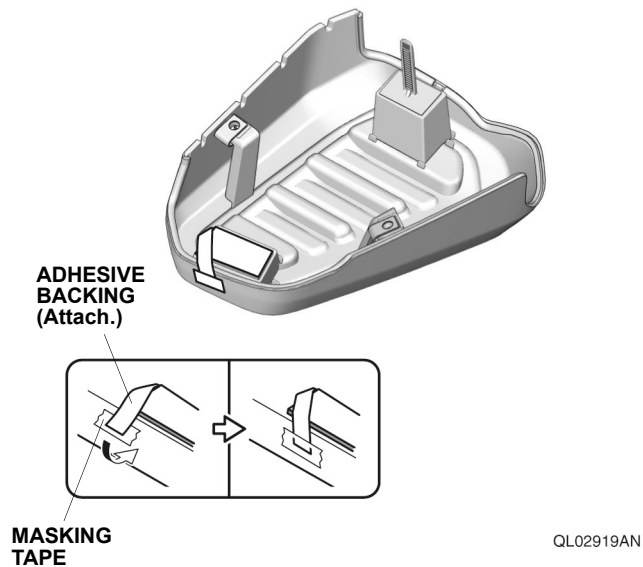


33. Loosely install the left front trim.

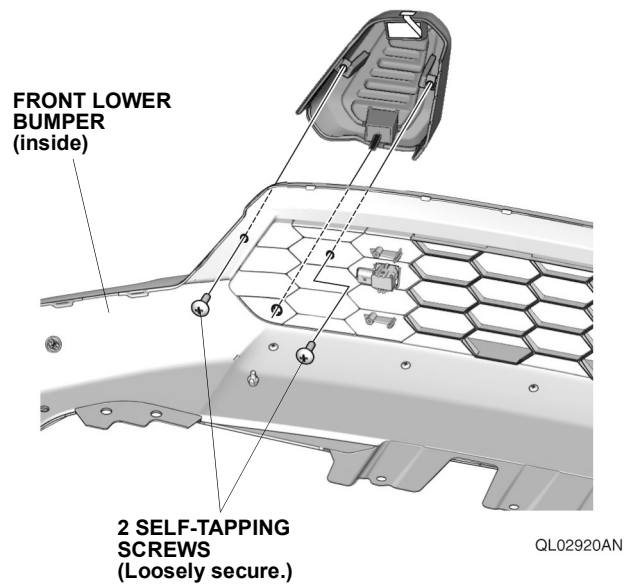

34. Secure the left front trim.


NOTE

Check the position of the double-sided adhesive tape and make sure to press firmly.

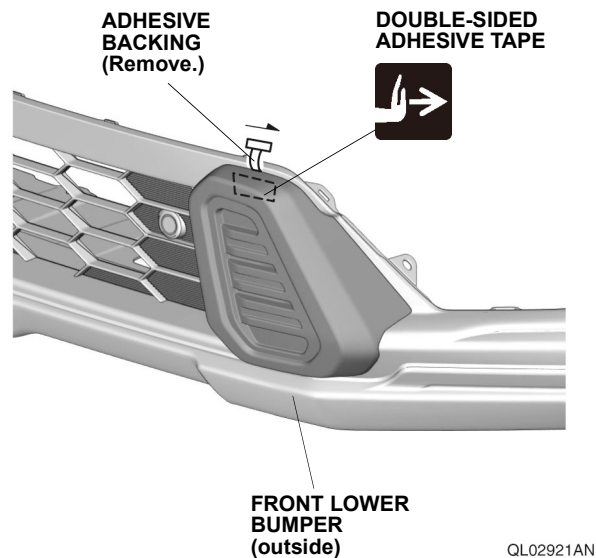

Germain Honda of College Hills

35. Secure the left front trim.

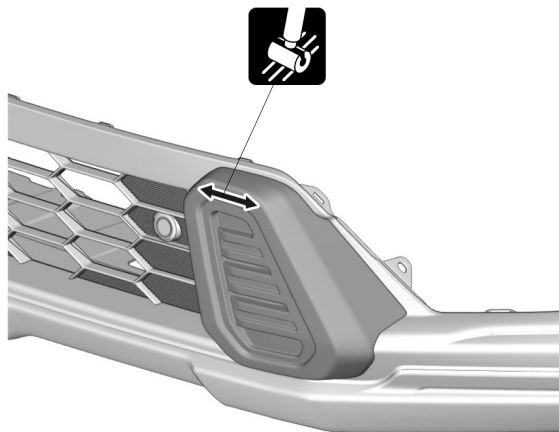


QL02922AN

36. Secure the left front trim.


NOTICE

Do not push the female clip too tight; you could deform the front trim. If necessary, readjust the female clips.

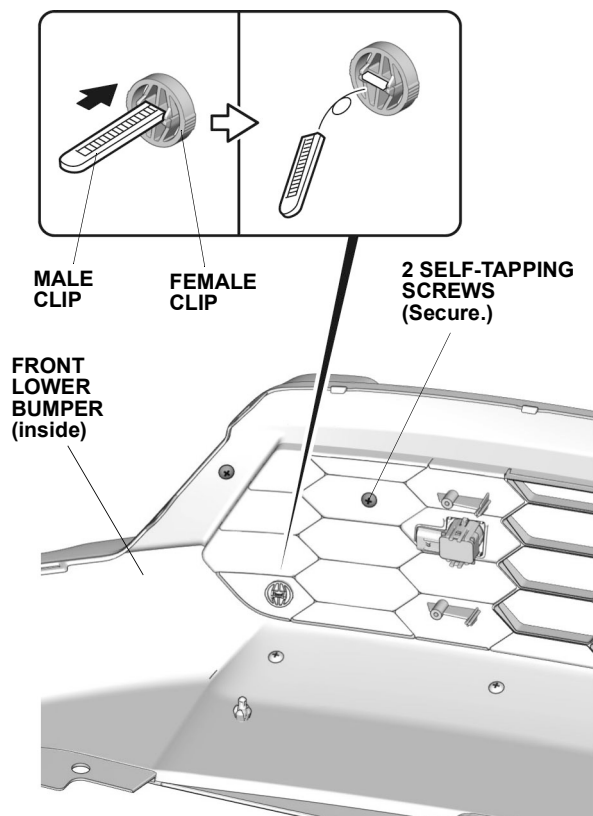

QL02923AN



37. Repeat the same procedures on the other side.

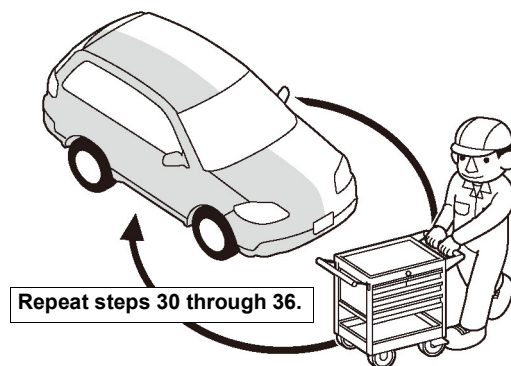


Q9D1014AM

Germain Honda of College Hills

38. Install the front lower bumper.

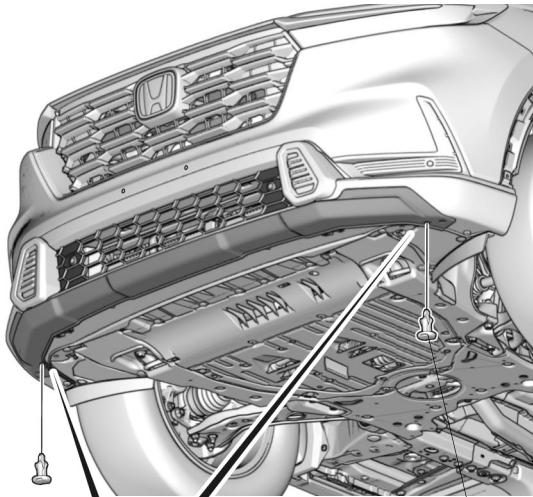

**2 CLIPS
(supplied)**

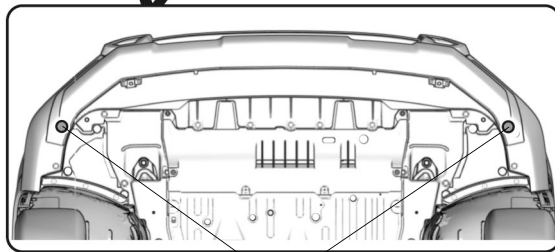

**2 CLIPS
(supplied)**

QL02924BN

39. Install the front bumper.

40. Secure the front lower trim.


41. Check that all parts are installed and properly routed.

NOTE

- Check that all harnesses are not pulled or pinched.
- Make sure all clips and wire ties are securely installed.

42. Install all removed parts.

43. Connect the negative cable to the battery.

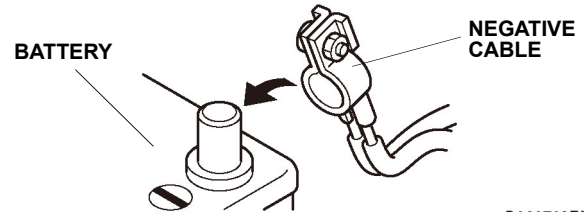

Q060702BM

44. Make sure all accessories and systems operate properly.

45. If necessary, restore the systems back to normal operation as described in the service information.

46. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions