

Germain Honda of College Hills




INSTALLATION INSTRUCTIONS

Accessory
**ILLUMINATED
DOOR SILL TRIMS**

Application
**2023 CR-V
MODEL SERIES**

Publications No.
VERSION 1
Issue Date
AUG 2022

GENERAL VIEW

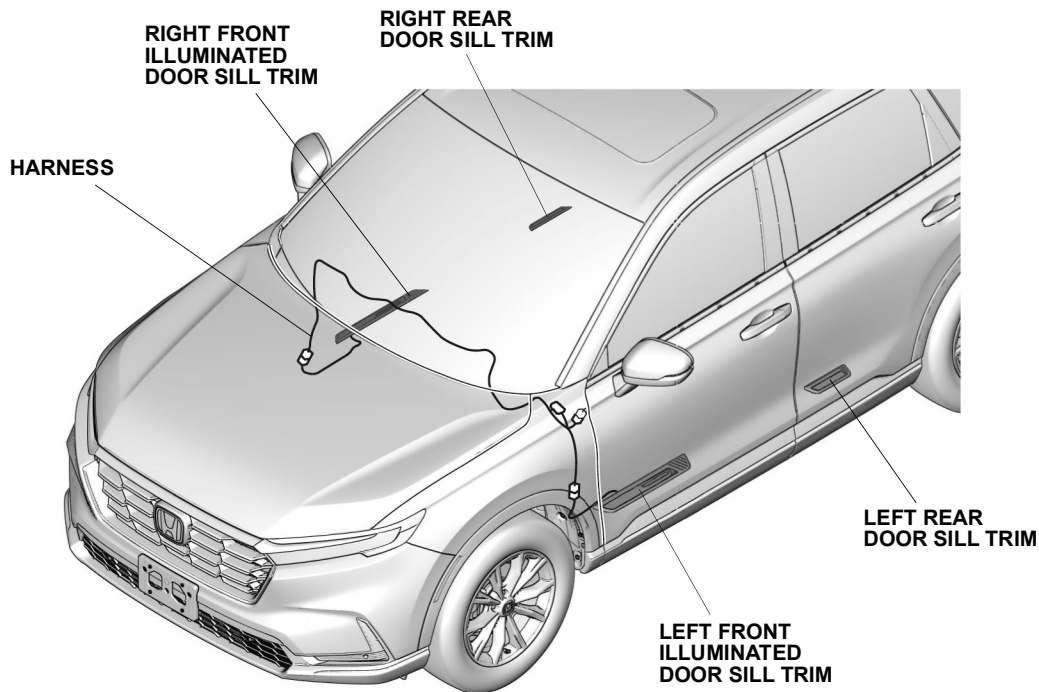

QL01307AB

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

⚠ DANGER

You will be killed or seriously hurt if you do not follow the instructions.

⚠ WARNING

You can be killed or seriously hurt if you do not follow the instructions.

⚠ CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.




Indicates a prohibited action.

Germain Honda of College Hills


Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.

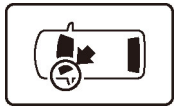

The location on the vehicle.

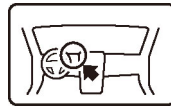

The location in the vehicle.
(Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.




Clean with isopropyl alcohol.




Return the original part to the customer.
(Do not reuse.)


Wire Harness Routing Precaution

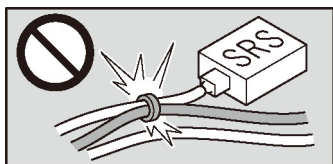


Do not secure the
accessory harness to the
SRS harness.
(except for instruction
cases.)

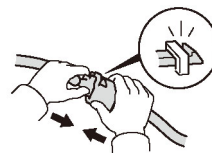


Push the connectors and
terminals together until
they lock.

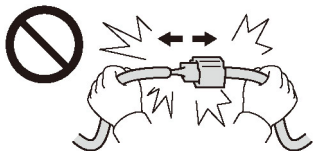

Do not pull the harness to
unplug the connectors.

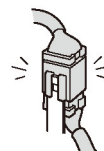

Install removed
connectors in their original
location.

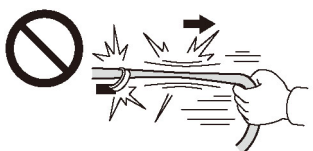


Do not pull the harness.



Secure the accessory
harness as shown.



Do not pinch the harness.

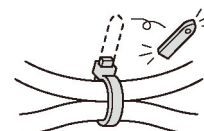

Cut off the excess wire tie.

Germain Honda of College Hills

Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Be careful not to damage the vehicle or the parts.
- Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- The illustrations may differ slightly from the actual accessory.

Safety: Electric Parts







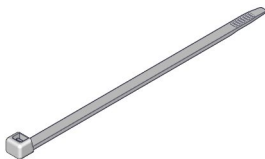
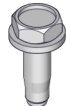
Always disconnect the negative cable from the battery before beginning work.

Safety: Accessory


- Always use the parts and tools specified in the installation instructions.
- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

PARTS LIST

Illuminated Door Sill Trims Kit (P/N 08E12-3A0-100)

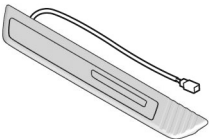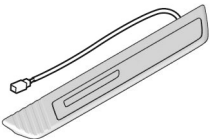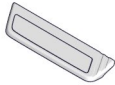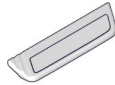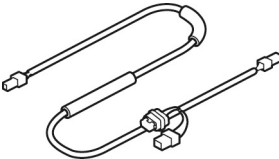Left front illuminated door sill trim (identification mark: L)	Right front illuminated door sill trim (identification mark: R)	Left rear door sill trim (identification mark: L)	Right rear door sill trim (identification mark: R)
			
Harness	Wire tires A (22)	Wire tires B (narrow) (3)	Washer-bolts (4)
			

Germain Honda of College Hills

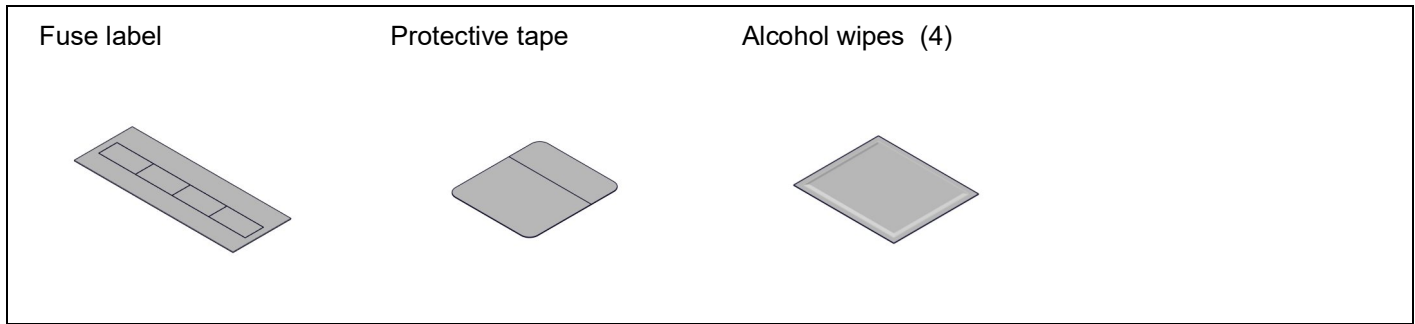

REQUIRED TOOLS AND SUPPLIES

- Ratchet
- Shop towel
- Isopropyl alcohol
- Torque wrench
- 10 mm Socket
- Masking tape
- Diagonal cutters
- Ruler
- 10 mm Open end wrench
- Scissors
- Phillips screwdriver


The following tools are available through the Honda Tool and Equipment Program:

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)
- Rubber Roller (T/N MHLE54D)



Germain Honda of College Hills

INSTALLATION

1. Fix the tilt lever of the column in the lowest position and the telescopic in the position that is pulled most.

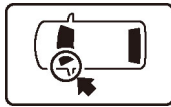

**STEERING
WHEEL**

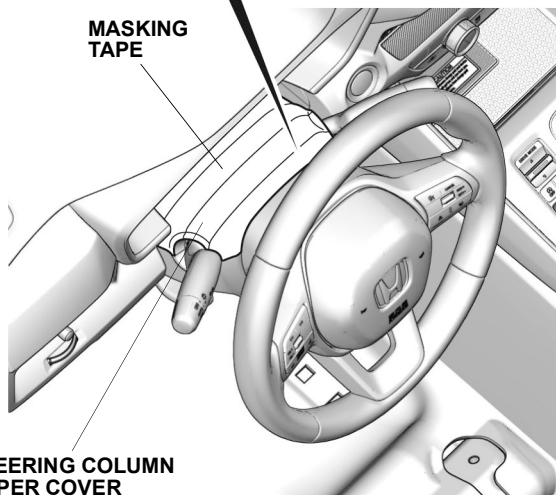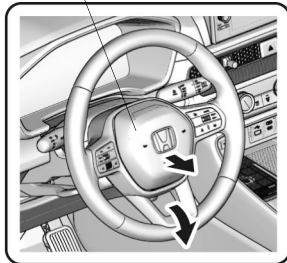



QL01101AB

2. Attach masking tape to protect the vehicle.

NOTE

Do not remove the masking tape until after the parts are installed.

3. Turn the steering wheel 90° counterclockwise.

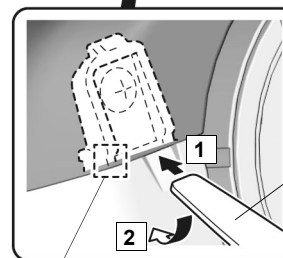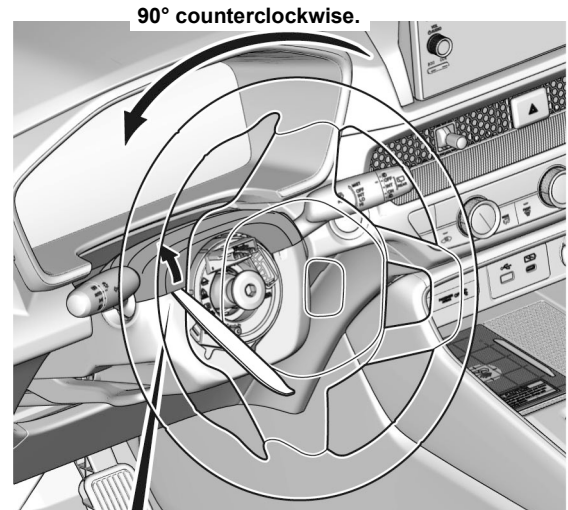

**PLASTIC
TRIM TOOL**

**RETAINING
TAB**

QL01102AB



4. Release the left side of the steering column upper cover.

NOTE

Release in the order shown.

Germain Honda of College Hills

5. Turn the steering wheel 180° clockwise.

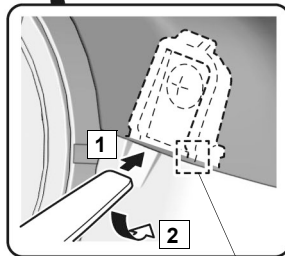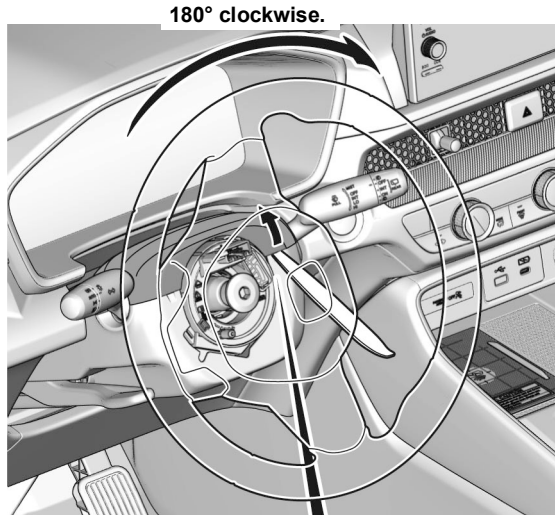


RETAINING TAB
QL01103AB

6. Release the right side of the steering column upper cover.

NOTE

Release in the order shown.


7. Release the steering column upper cover.

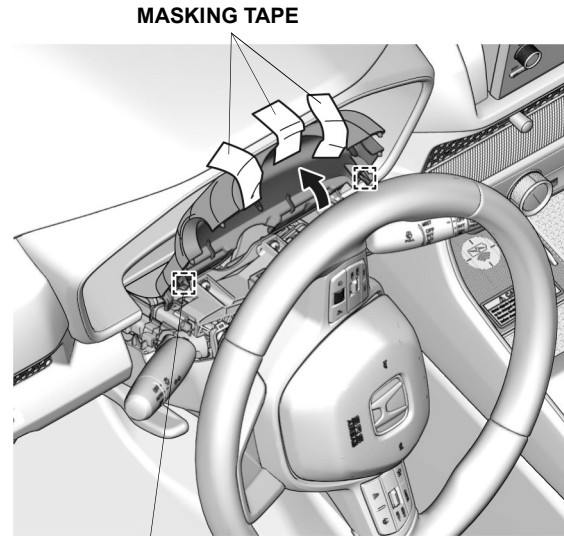

2 RETAINING
TABS

QL01104AB


8. Secure the steering column upper cover.
9. Remove the self-tapping screw.

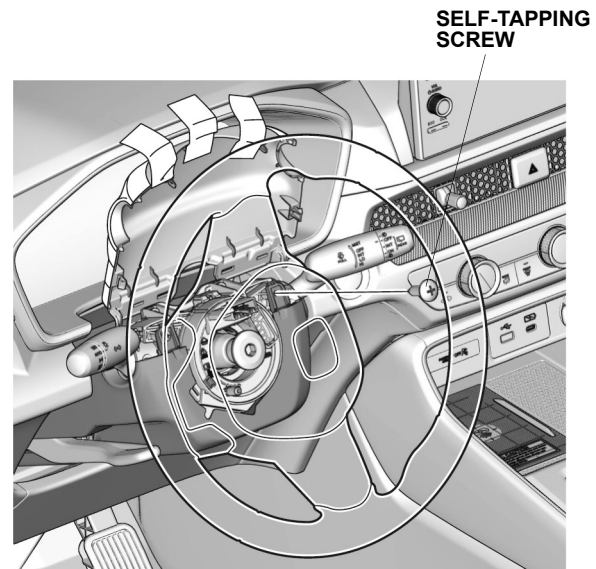

QL01105AB

Germain Honda of College Hills




10. Turn the steering wheel 180° counterclockwise.

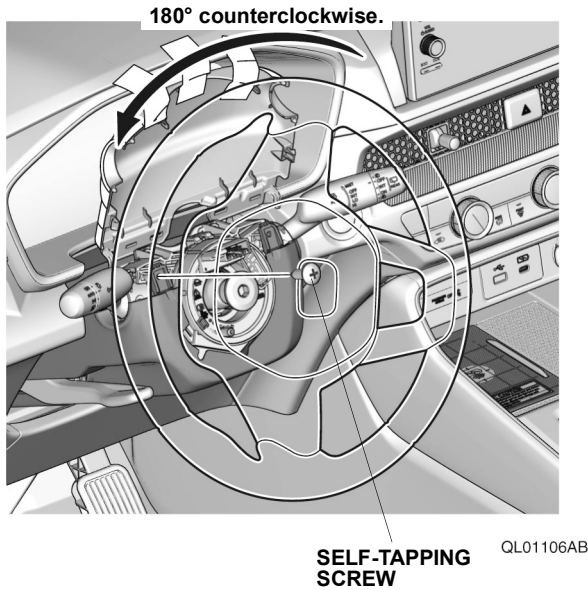

11. Remove the self-tapping screw.
12. Disconnect the negative cable from the battery.


NOTE

With the driver's door open, turn the vehicle to the OFF (LOCK) mode, then wait at least 3 minutes before disconnecting the 12 volt negative battery cable.

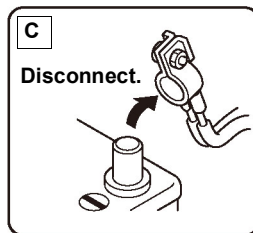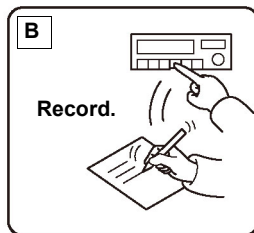
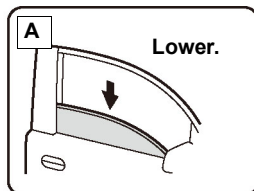


QCD0502BM

13. Move the shift lever to the "D" position.

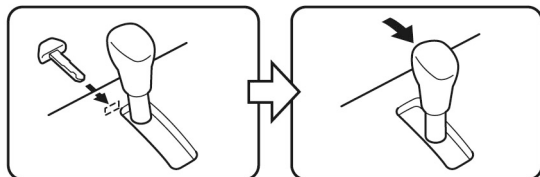

14. Remove the passenger's dashboard side lid.

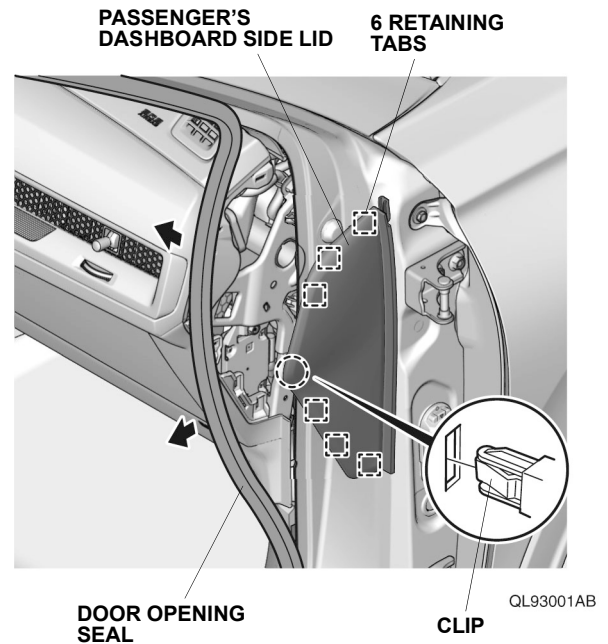


Germain Honda of College Hills


15. Attach masking tape to protect the vehicle.

NOTE


Do not remove the masking tape until after the parts are installed.



METER VISOR
MASKING TAPE
INSTRUMENT PANEL

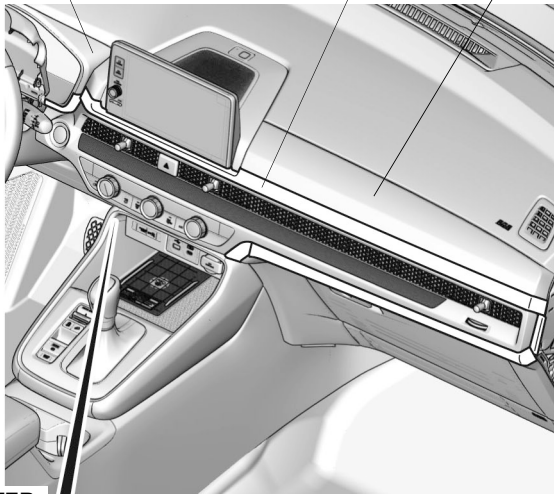

METER VISOR
OPPOSITE SIDE VIEW

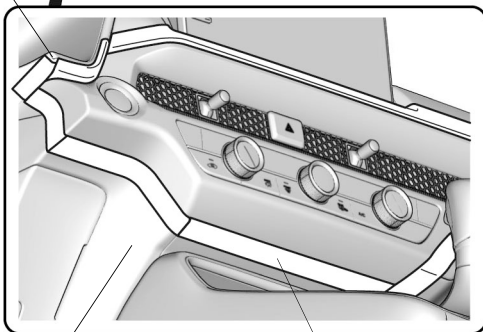


INSTRUMENT PANEL
MASKING TAPE

QM22501AB

16. Remove the center trim panel.

VEHICLE CONNECTORS

14 CLIPS

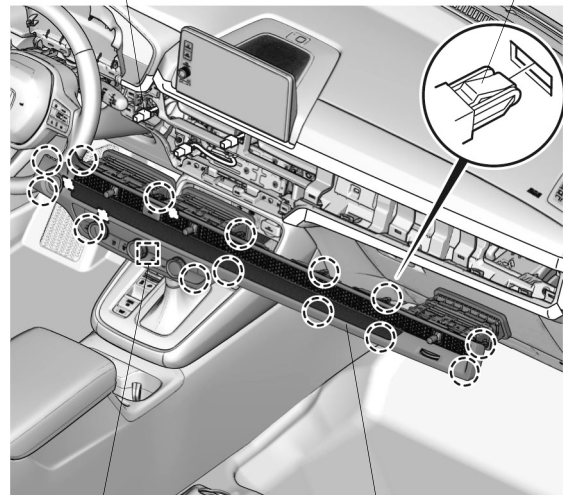

RETAINING TAB

CENTER TRIM PANEL

QL93002BB


17. Attach masking tape to protect the vehicle.

NOTE

Do not remove the masking tape until after the parts are installed.

SHIFT LEVER


MASKING TAPE

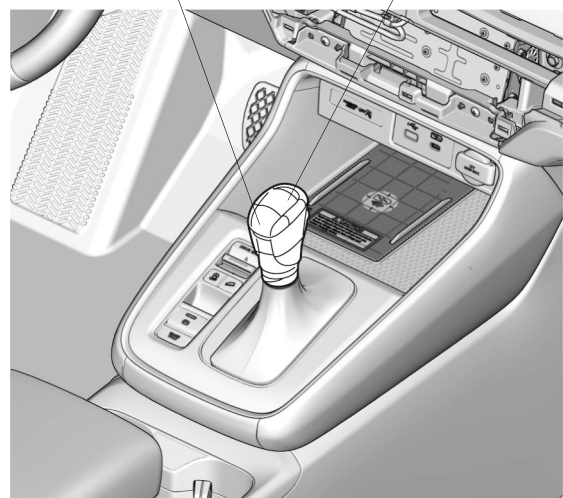


QL93003AB

Germain Honda of College Hills


18. Remove the shift lever panel.

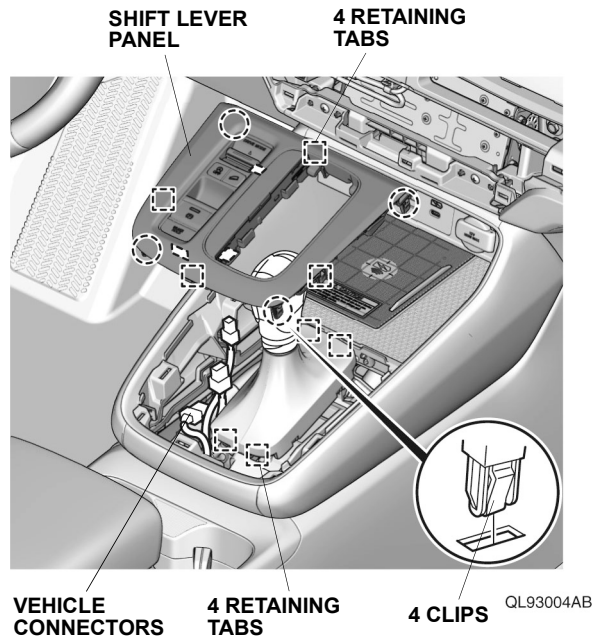

19. Remove the console panel.

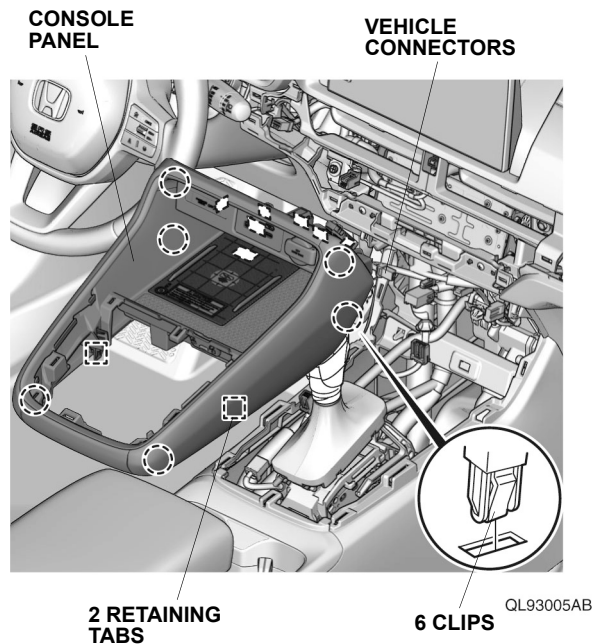

20. Remove the passenger's dashboard under cover.

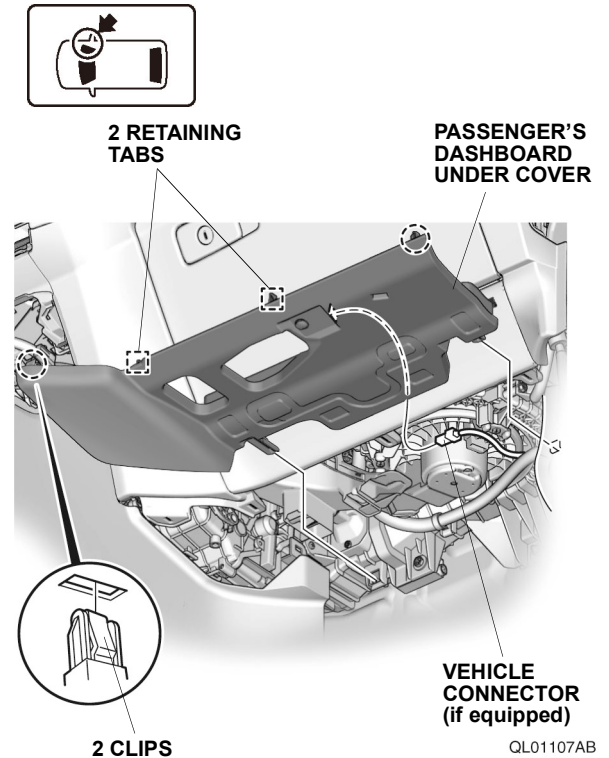


Germain Honda of College Hills

21. Remove the passenger's knee airbag.


NOTICE

- Do not drop the removed knee airbag or hit it on an object.
- Place the removed knee airbag in a safe place with the padded surface (top) facing upward.

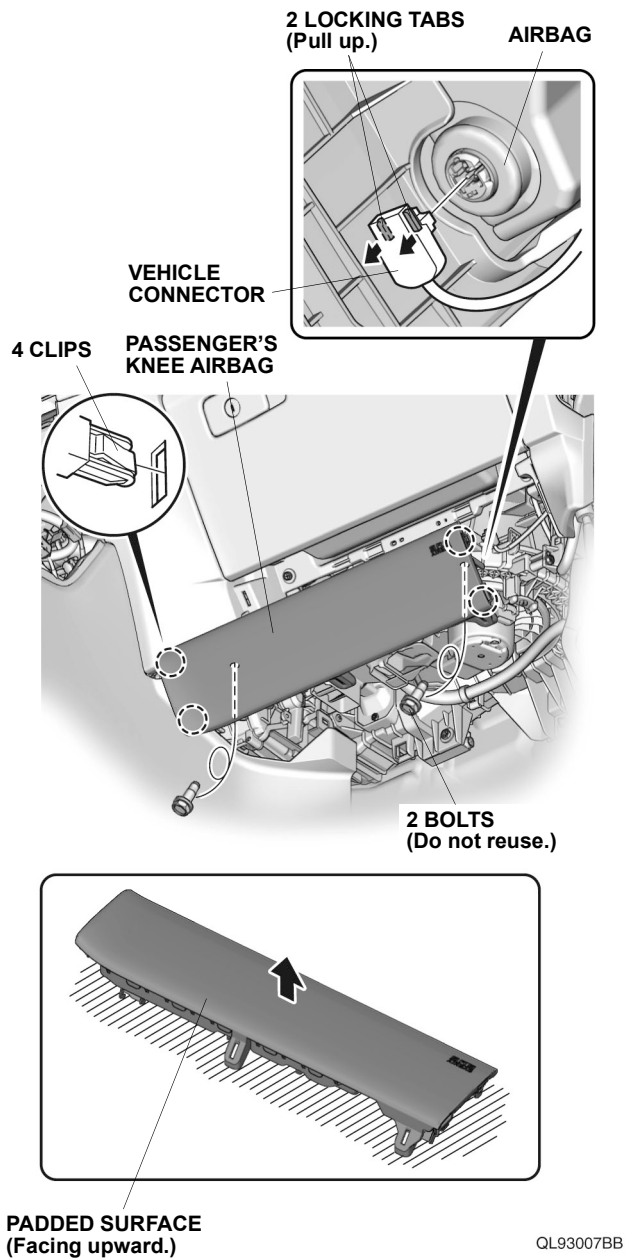

22. Open the glove box.


2 SELF-TAPPING SCREWS

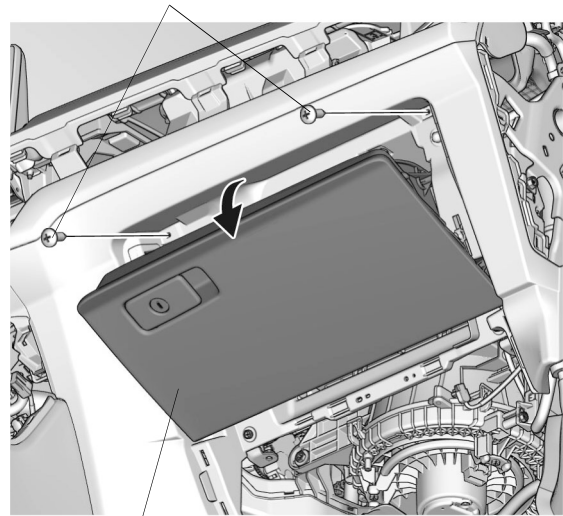

23. Remove the self-tapping screws.


24. Close the glove box.

25. Remove the glove box.

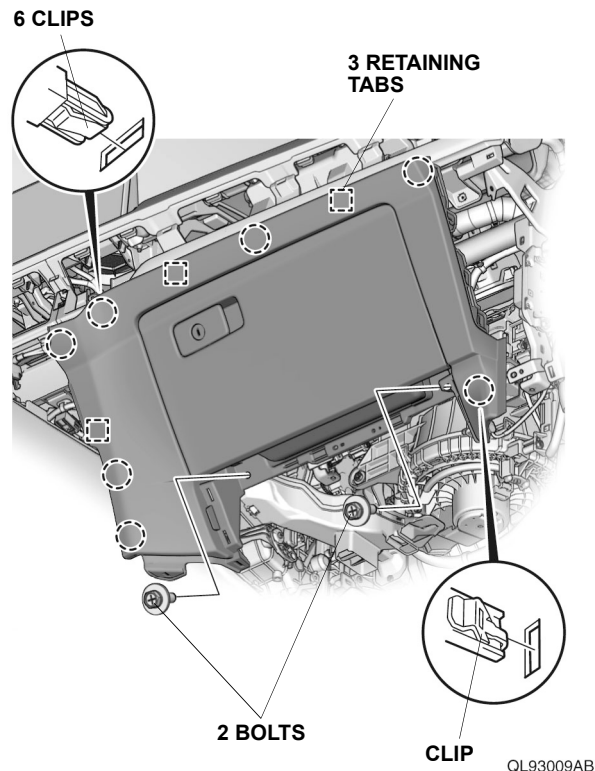



Germain Honda of College Hills

26. Release the integrated management unit.

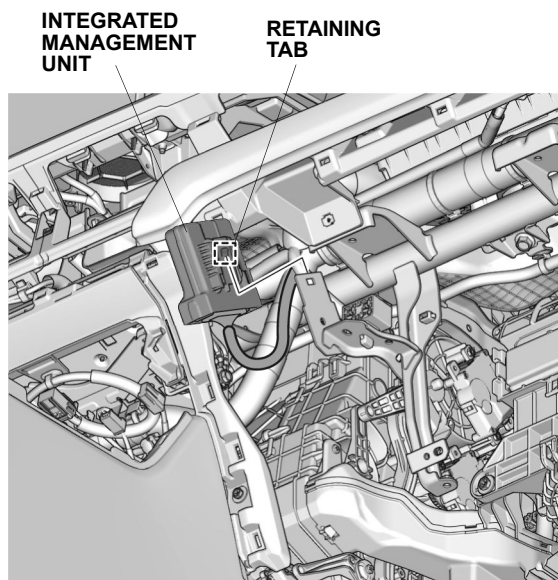

QL93010AB


27. Remove the passenger's door sill trim.

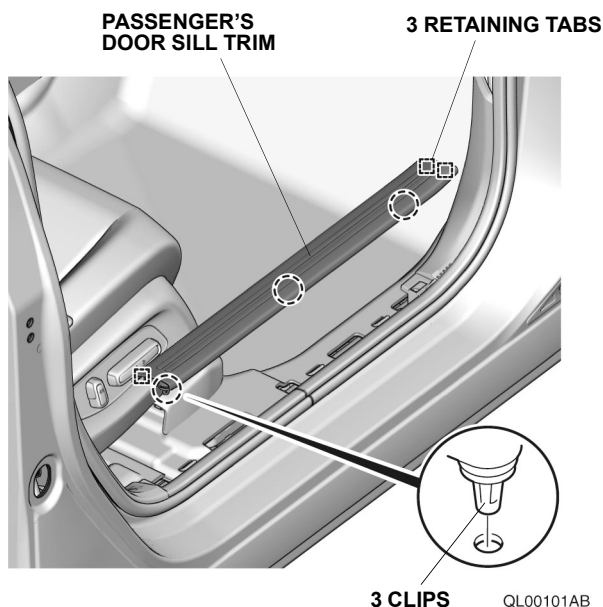

3 CLIPS

QL00101AB



28. Remove the passenger's kick panel.

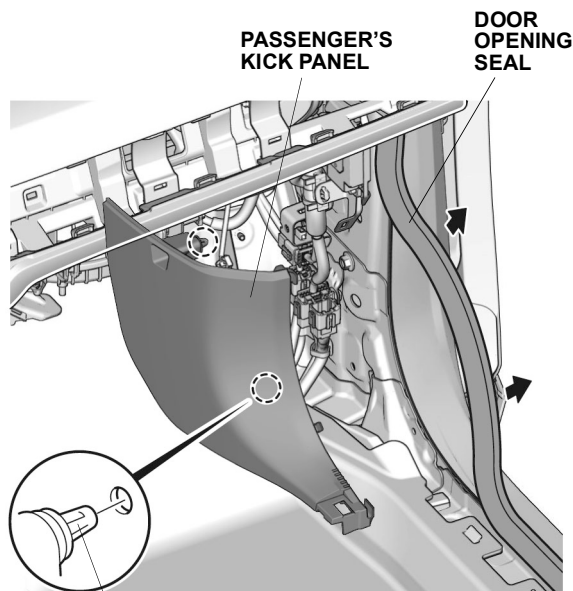

2 CLIPS

QL00102AB

29. Remove the right rear door sill trim.

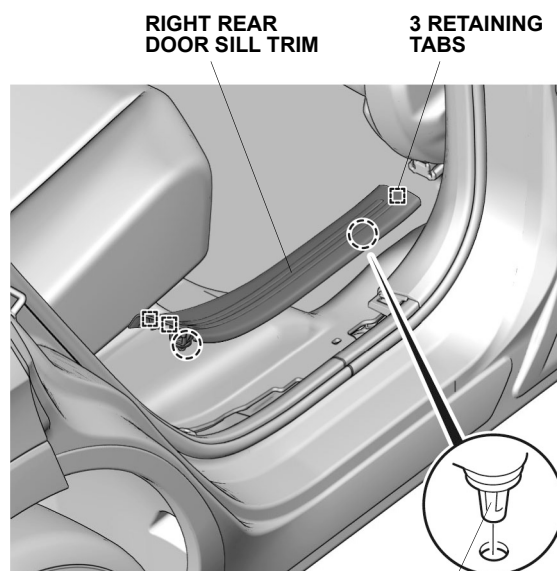


2 CLIPS

QL01108AB


Germain Honda of College Hills

30. Remove the driver's outside lower cover.



2 VEHICLE CLIPS

VEHICLE CONNECTOR

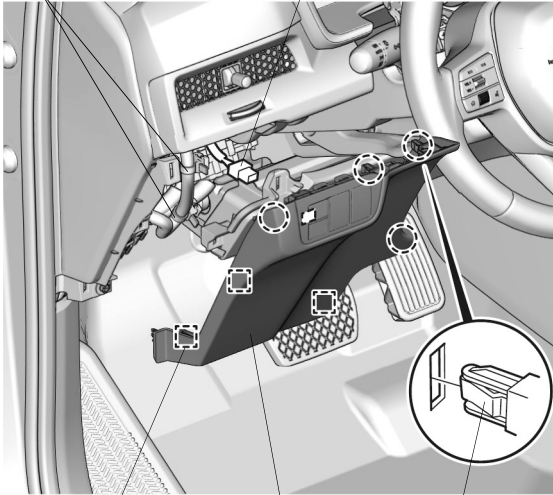

3 RETAINING TABS

DRIVER'S OUTSIDE LOWER COVER

4 CLIPS

QL00103BB

31. Remove the driver's knee airbag.



NOTICE

- Do not drop the removed knee airbag or hit it on an object.
- Place the removed knee airbag in a safe place with the padded surface (top) facing upward.


2 LOCKING TABS (Pull up.)
VEHICLE CONNECTOR

AIRBAG

2 RETAINING TABS

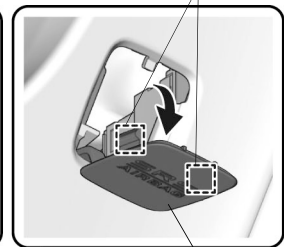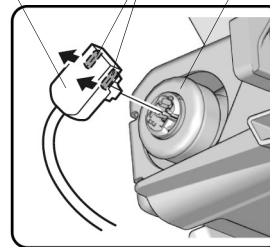

CAP

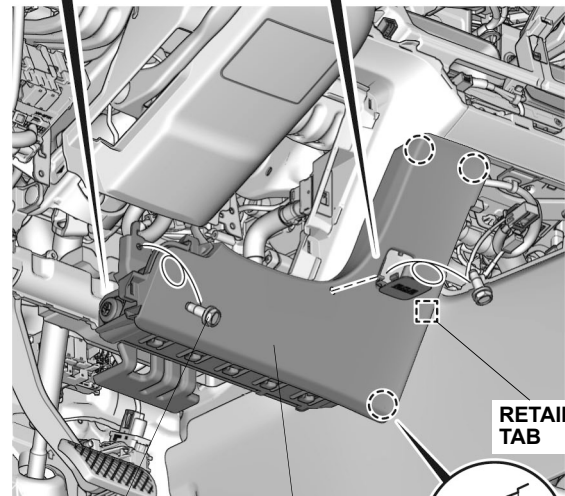


2 BOLTS (Do not reuse.)

DRIVER'S KNEE AIRBAG

RETAINING TAB

3 CLIPS

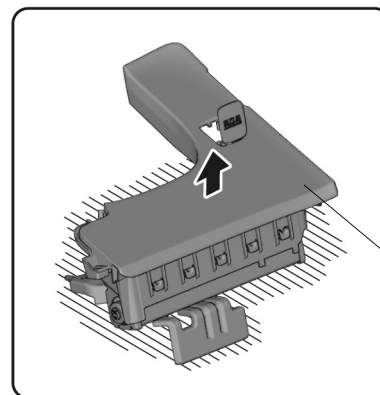


PADDED SURFACE (Facing upward.)


QL00104AB

Germain Honda of College Hills


32. Remove the steering column lower cover.

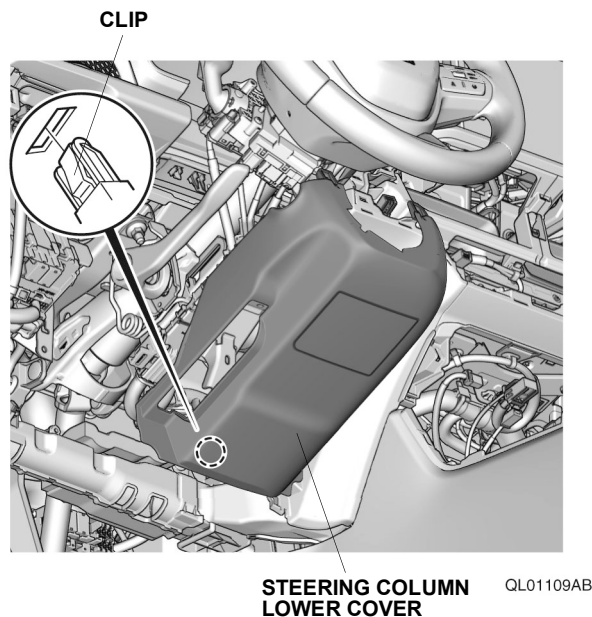


33. Remove the driver's door sill trim.



34. Remove the driver's kick panel.

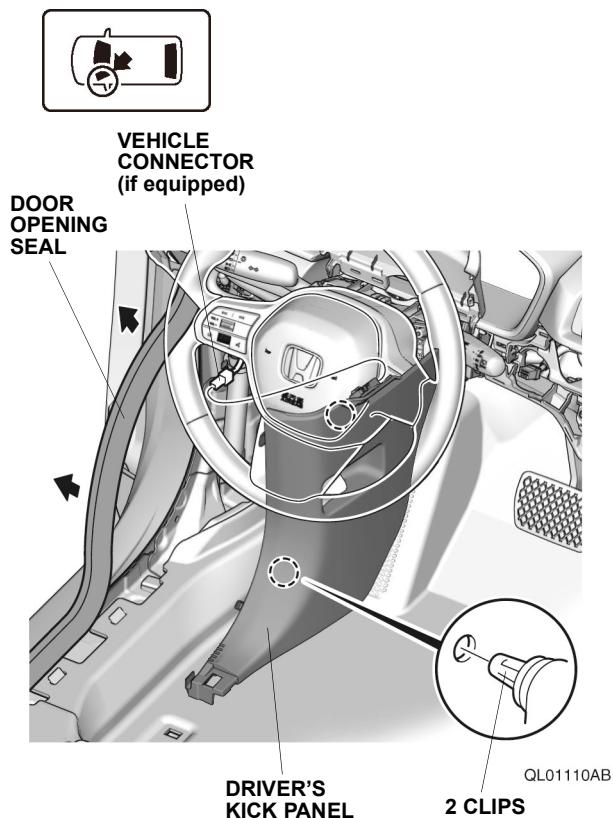


35. Remove the left rear door sill trim.


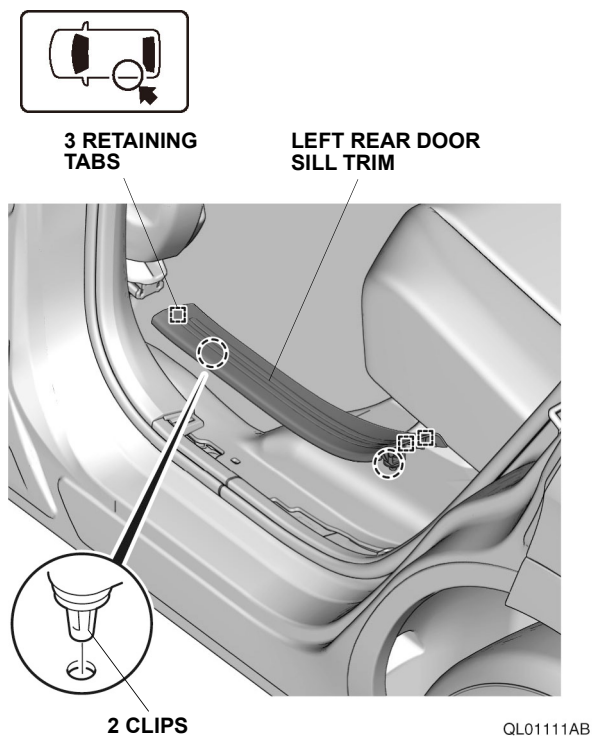


Germain Honda of College Hills

36. Cut the protective tape.

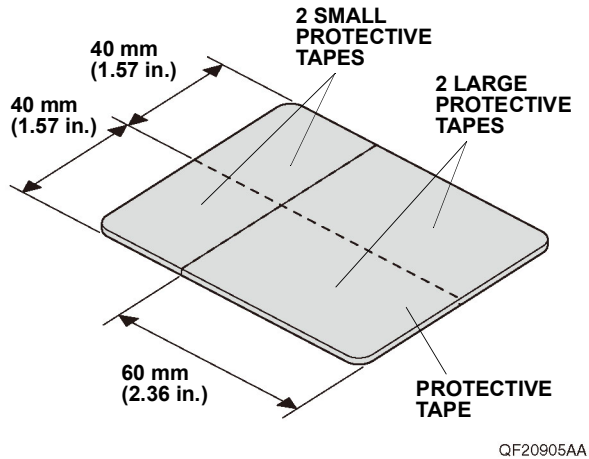


37. Attach masking tape.

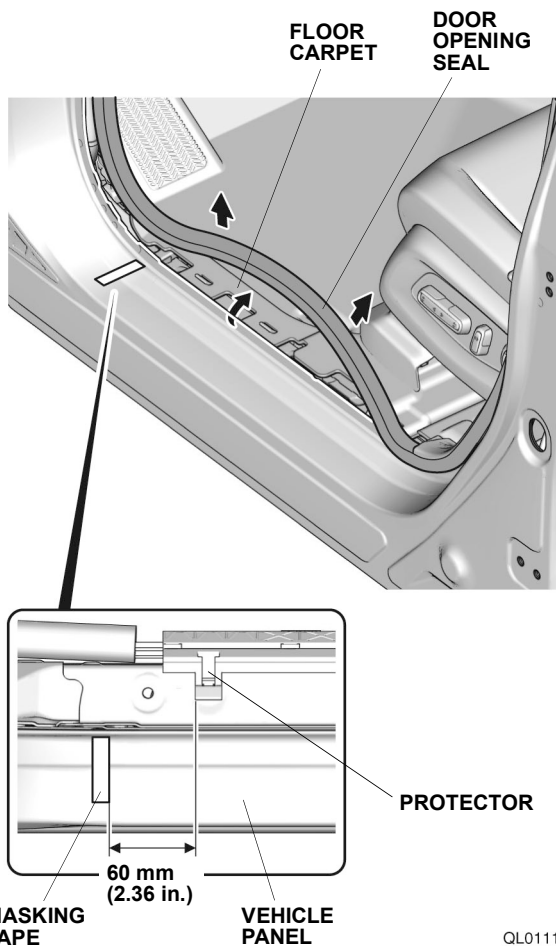

38. Clean the attaching area.

NOTE

Allow to dry thoroughly.

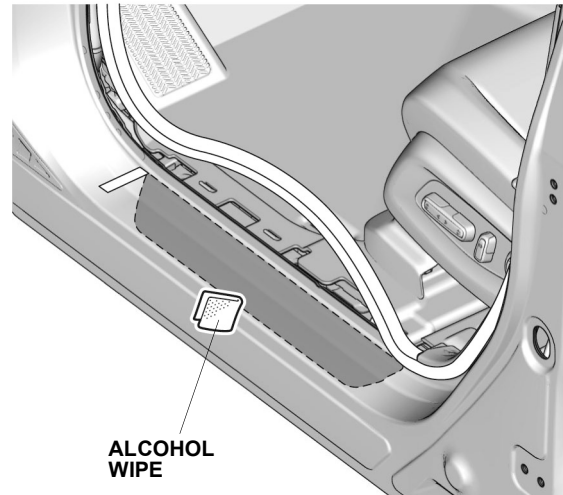

Germain Honda of College Hills


39. Secure the left front illuminated door sill trim.

NOTE


- Check the identification mark and the installation position of the illuminated door sill trim.
- Check the position of the double-sided adhesive tapes and make sure to press firmly.

Line up.

LEFT FRONT
ILLUMINATED
DOOR SILL TRIM

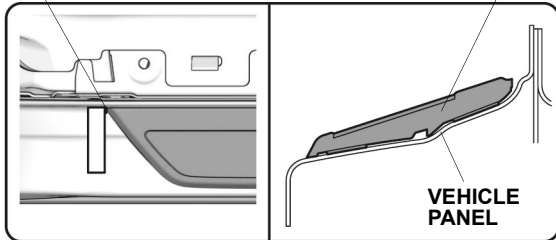

SECTION
VIEW

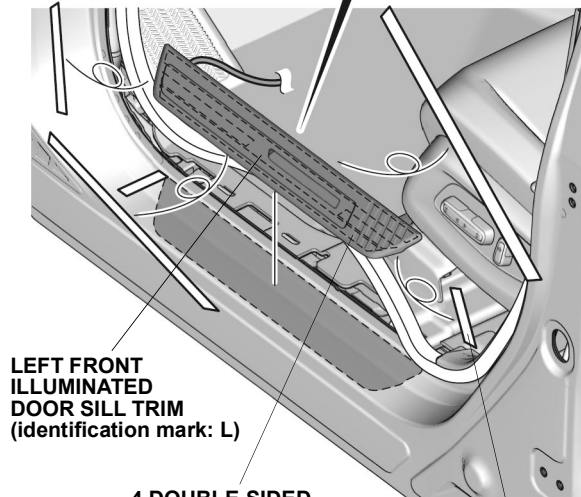

4 DOUBLE-SIDED
ADHESIVE TAPES




4 ADHESIVE
BACKINGS
(Remove.)

QL01114BB

40. Remove the masking tape.

41. Secure the left front illuminated door sill trim.

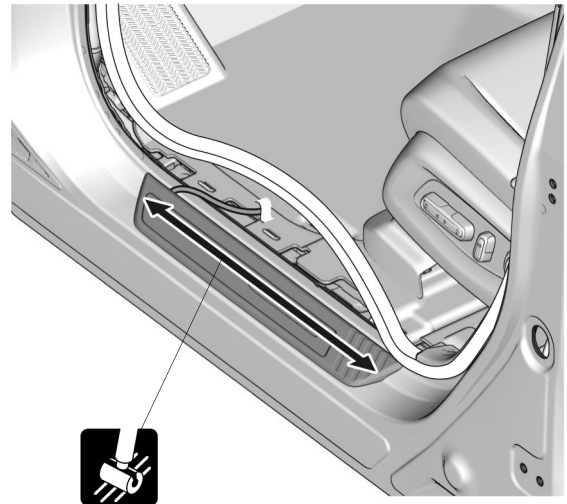



42. Secure the left front illuminated door sill trim harness.

LEFT FRONT
ILLUMINATED
DOOR SILL TRIM
HARNESS

SMALL
PROTECTIVE
TAPE





LARGE
PROTECTIVE
TAPE

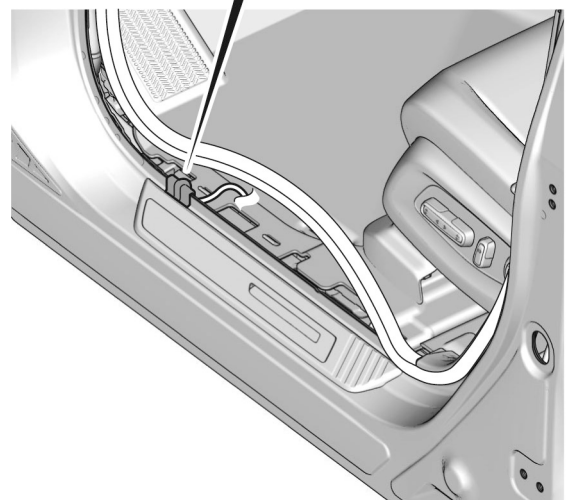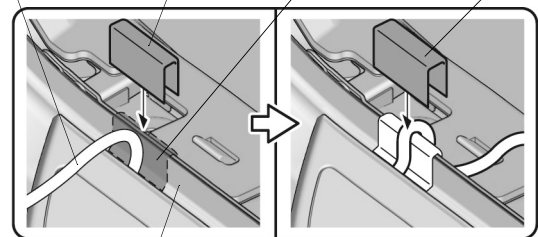

Germain Honda of College Hills

43. Attach masking tape.

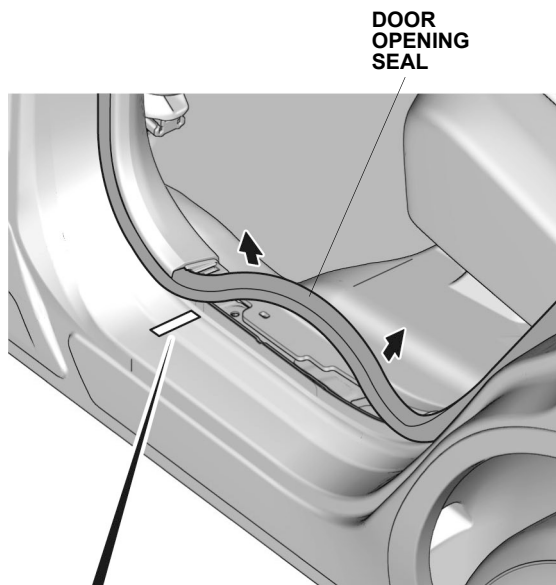

DOOR
OPENING
SEAL

VEHICLE
PANEL

EDGE OF THE LEFT
B-PILLAR LOWER
TRIM PANEL


MASKING
TAPE

QL01117BB

44. Clean the attaching area.

NOTE

Allow to dry thoroughly.

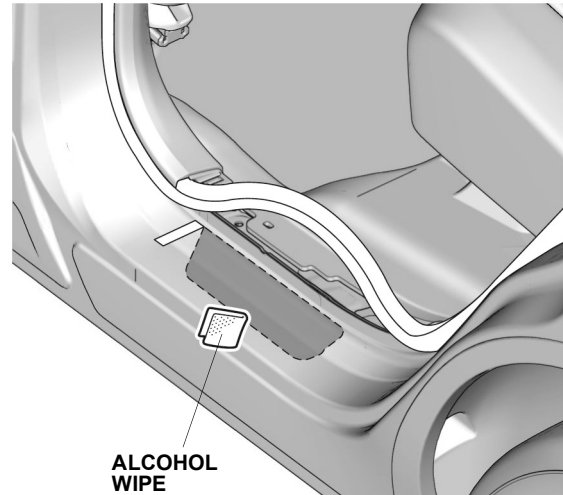

ALCOHOL
WIPE


QL01118AB

Germain Honda of College Hills

45. Secure the left rear door sill trim.


NOTE

- Check the identification mark and the installation position of the door sill trim.
- Check the position of the double-sided adhesive tapes and make sure to press firmly.

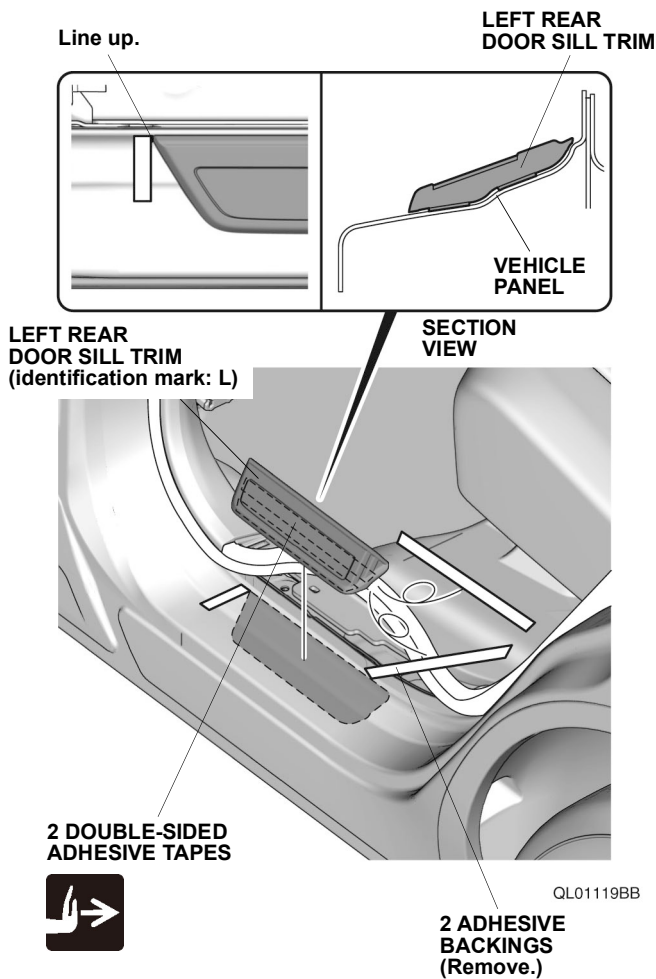


46. Remove the masking tape.

47. Secure the left rear door sill trim.

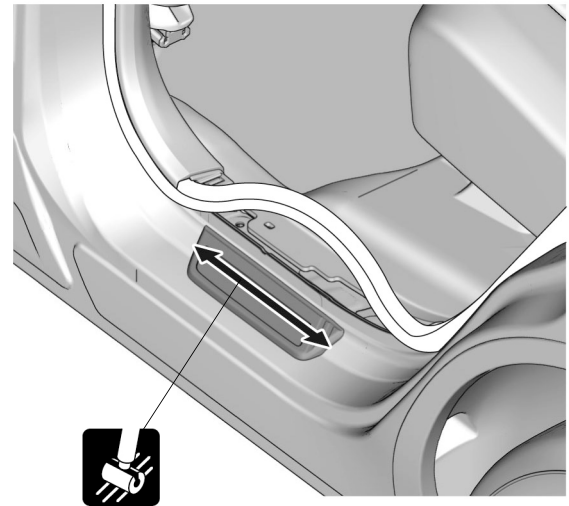


48. Repeat the same procedures on the other side.

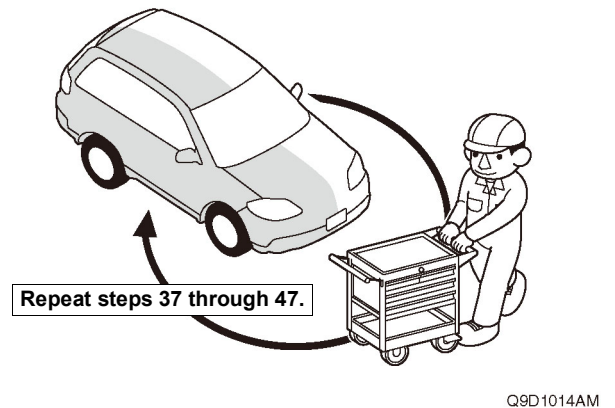


Germain Honda of College Hills


49. Attach the fuse label.

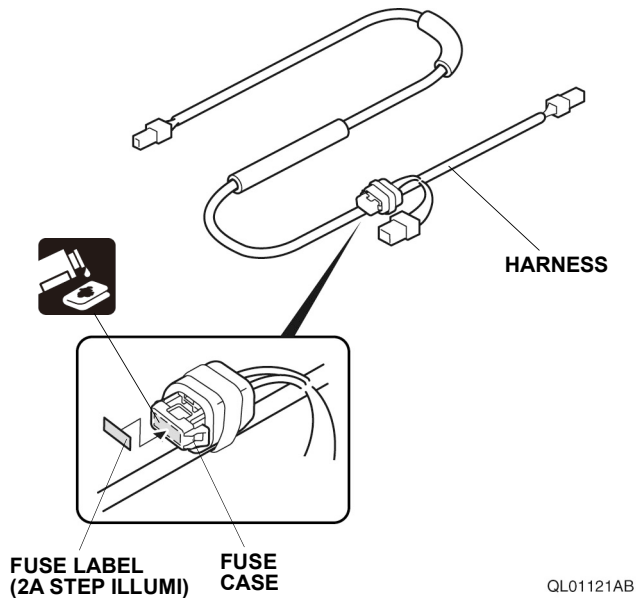


50. Secure the harness.

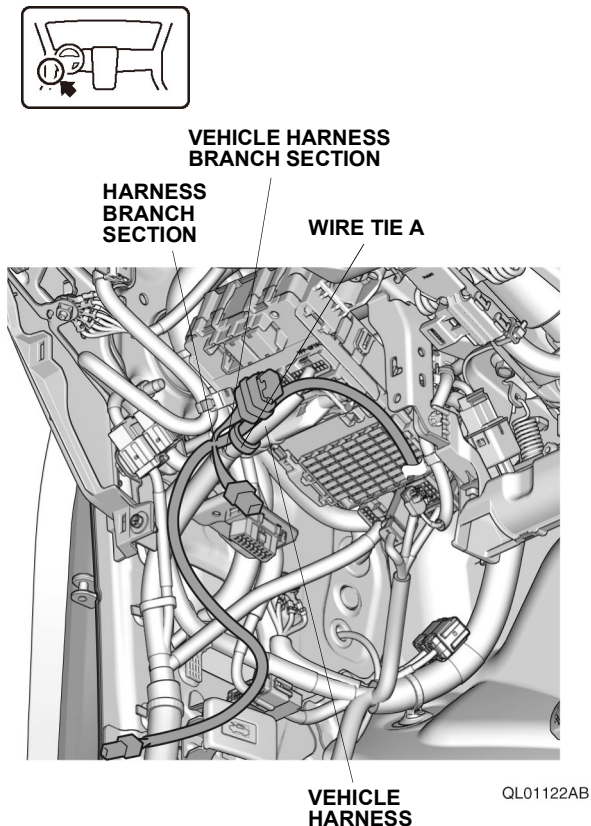

51. Plug-in the harness connector.

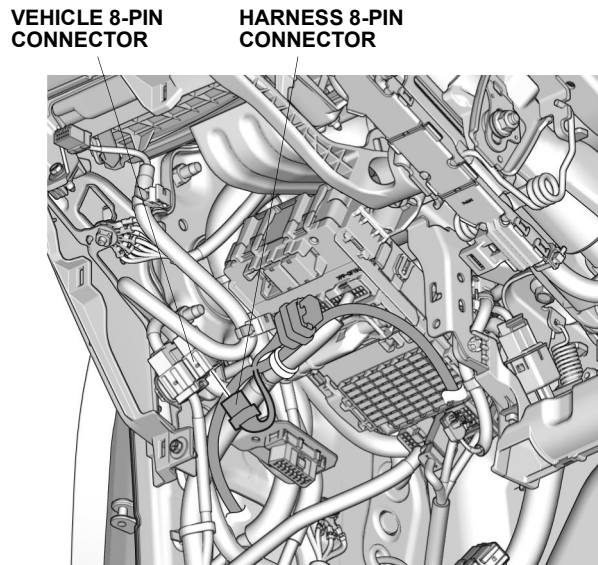



WITH OTHER ACCESSORY HARNESS
If the dummy connector is plugged, unplug it.

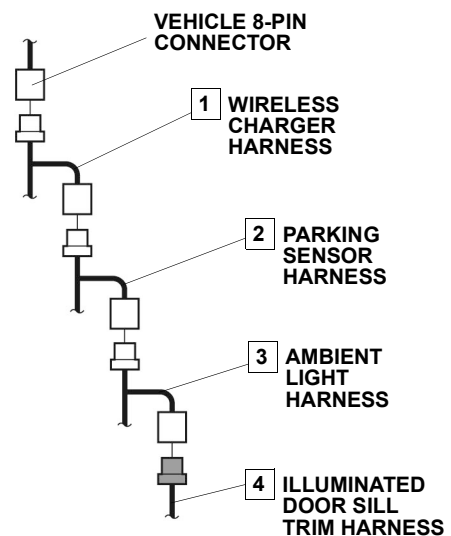

QL01123AB

Germain Honda of College Hills



52. Secure the left front illuminated door sill trim harness.

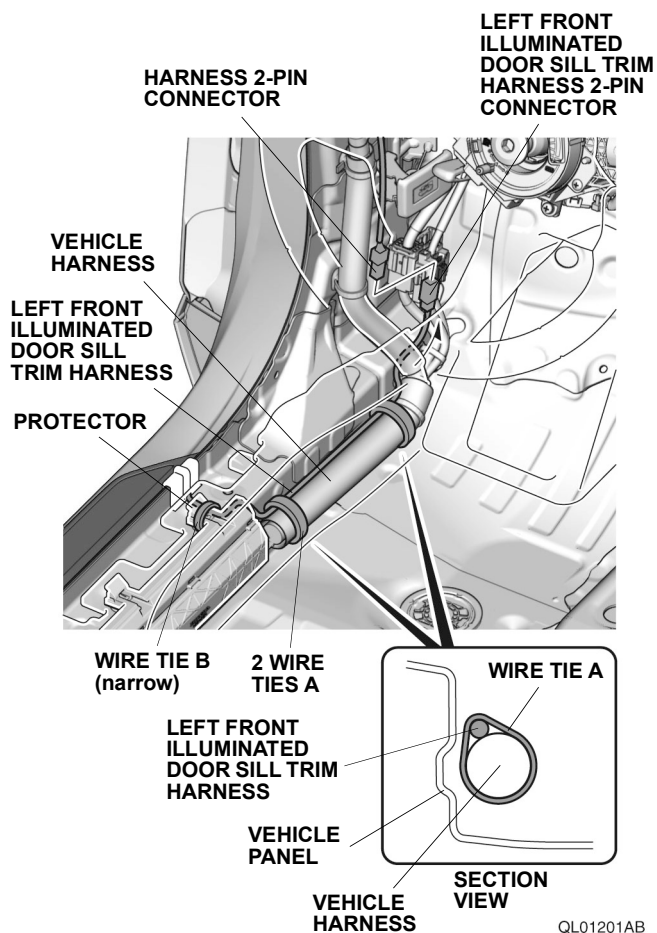

QL01201AB

53. Plug-in the harness connector.

54. Secure the harness and connectors.

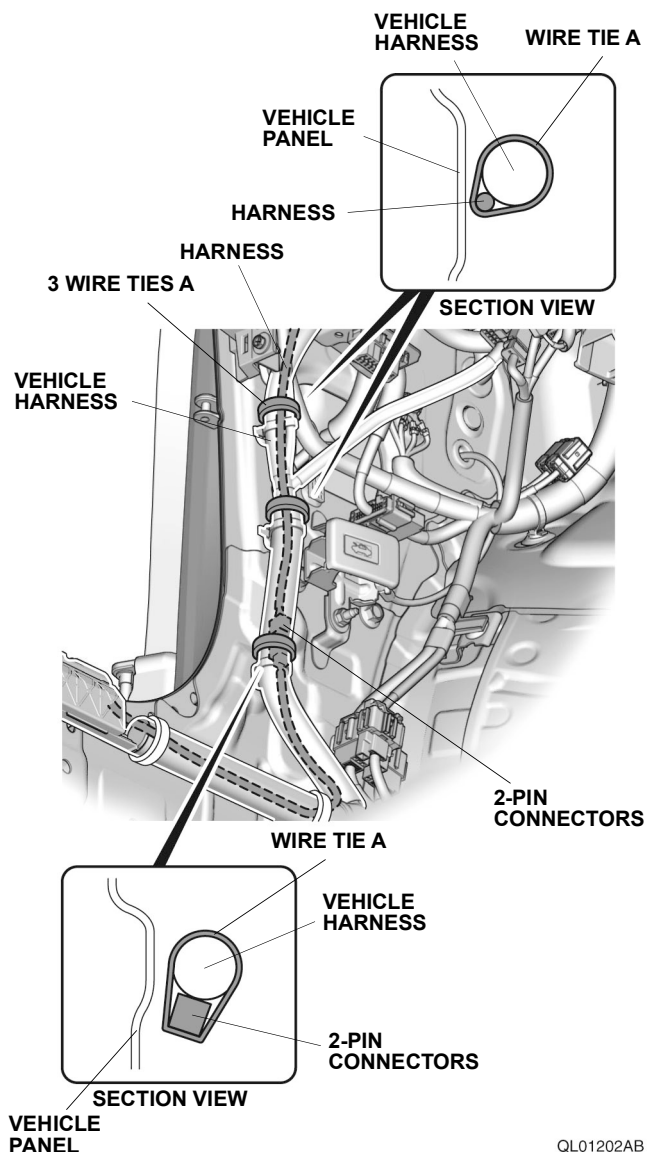





QL01202AB

Germain Honda of College Hills

55. Secure the harness.

NOTE




Be careful not to damage the harness.

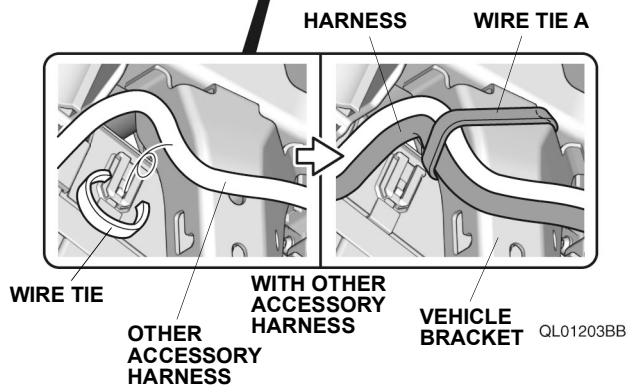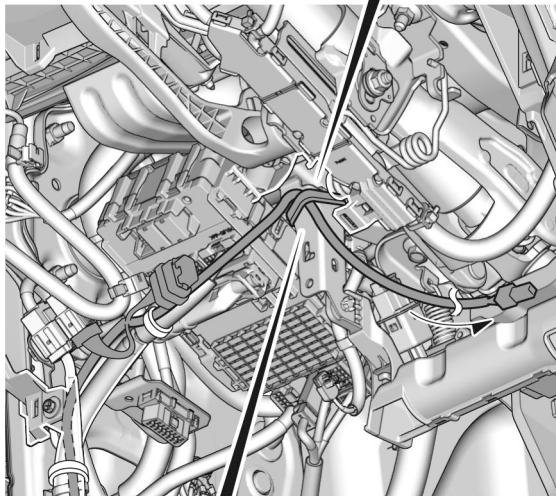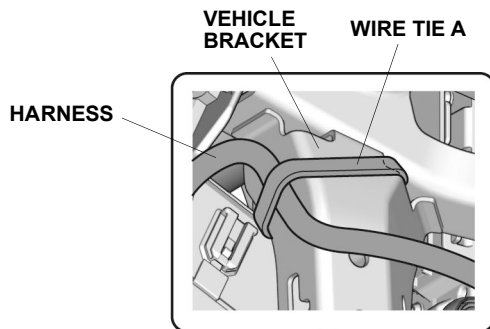

56. Secure the harness.

NOTE

Be careful not to damage the harness.

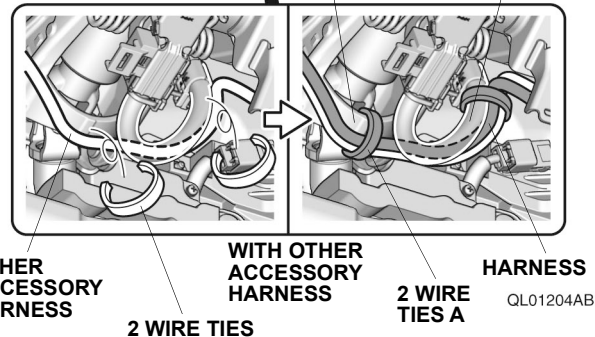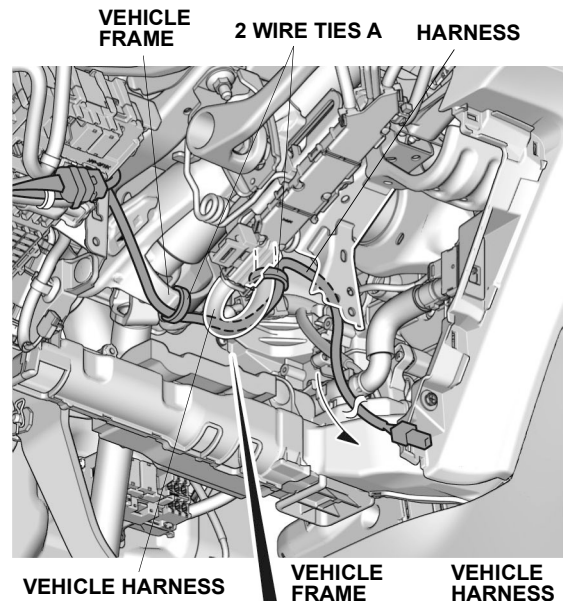


Germain Honda of College Hills

57. Secure the harness.


NOTE

Be careful not to damage the harness.




VEHICLE
BRACKET

WIRE TIE B
(narrow)

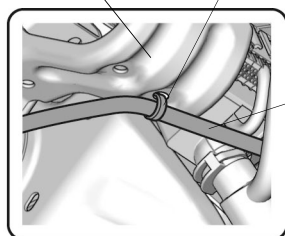


HARNESS

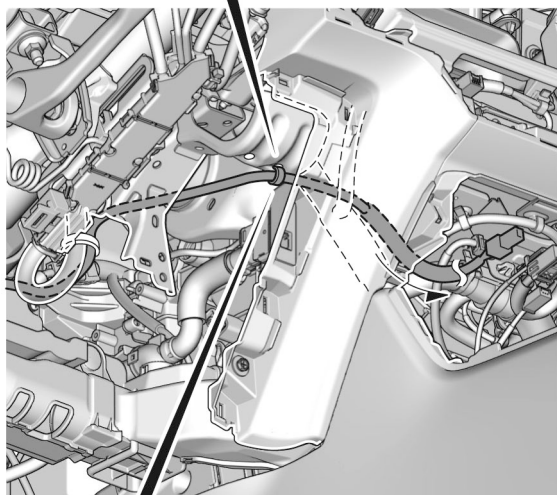

VEHICLE
BRACKET

HARNESS

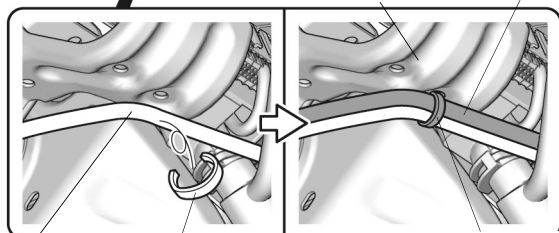

OTHER
ACCESSORY
HARNESS


WIRE TIE

WITH OTHER
ACCESSORY
HARNESS


WIRE TIE B
(narrow)

QL01205BB

58. Route the harness.




HARNESS

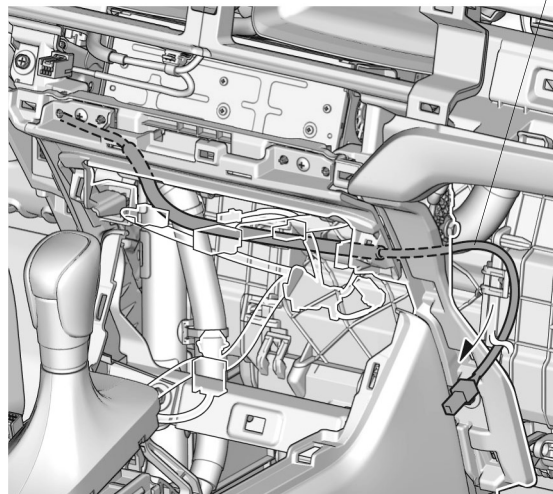


QL01206AB

59. Secure the harness.



VEHICLE
HARNESS

HARNESS

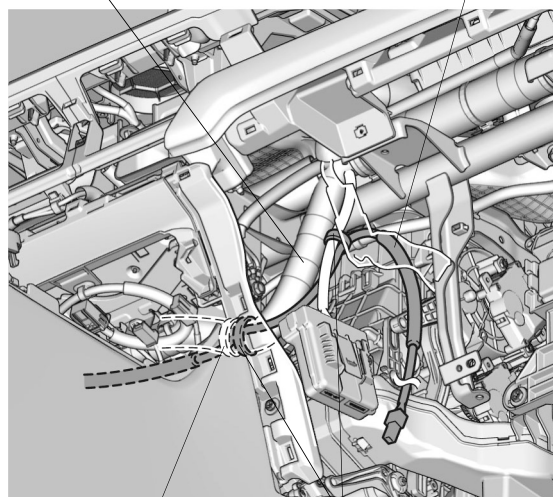


VEHICLE
CLIP

2 WIRE
TIES A


QL01207AB

Germain Honda of College Hills

60. Secure the harness.

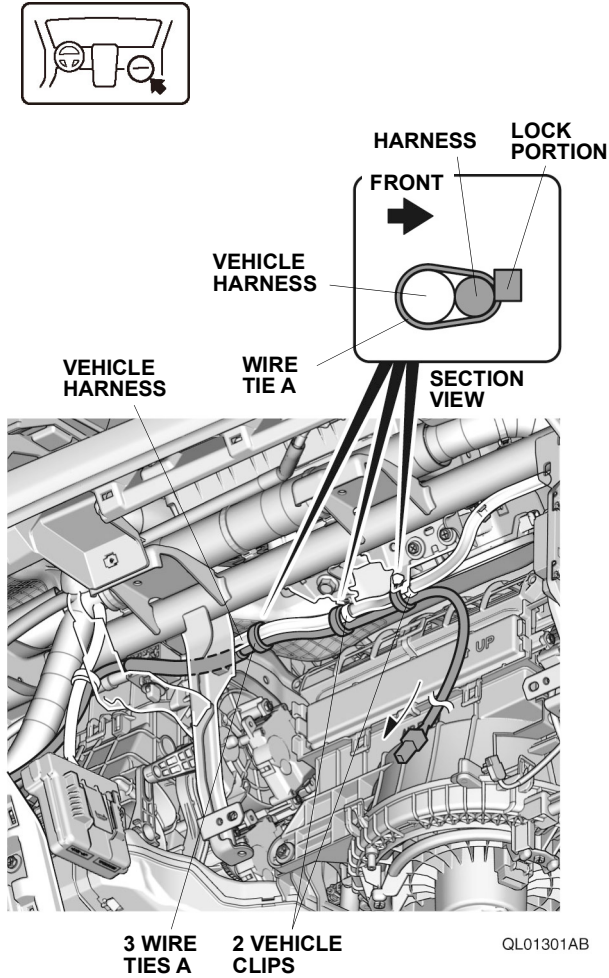


61. Secure the harness.

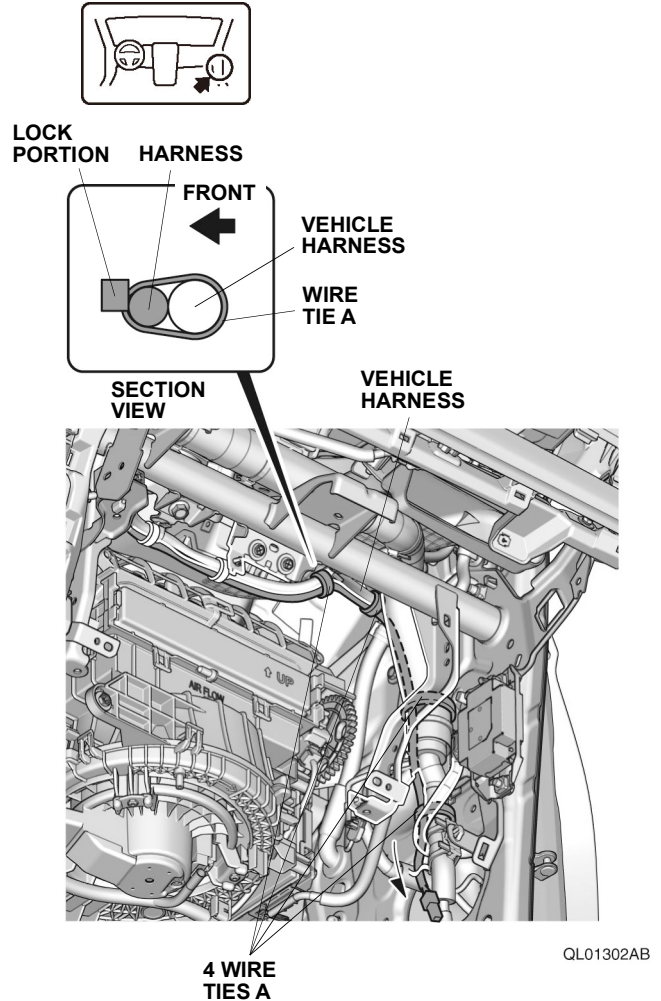

Germain Honda of College Hills



62. Secure the right front illuminated door sill trim harness.



RIGHT FRONT
ILLUMINATED
DOOR SILL TRIM
HARNESS 2-PIN
CONNECTOR

HARNESS 2-PIN
CONNECTOR

RIGHT FRONT
ILLUMINATED
DOOR SILL
TRIM HARNESS

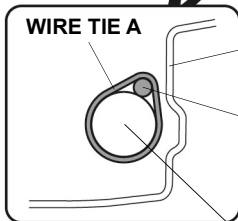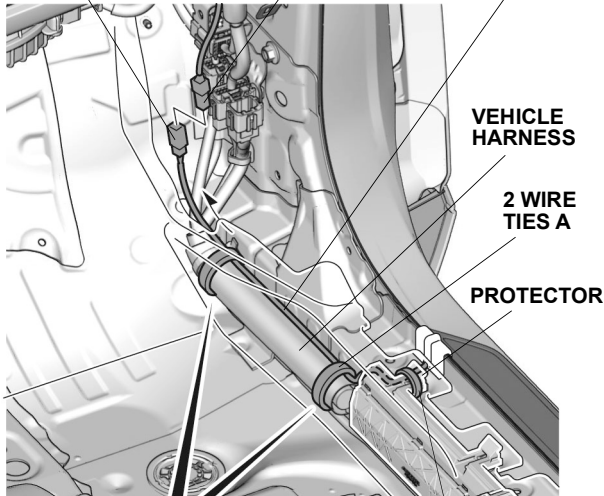

SECTION
VIEW


VEHICLE
HARNESS

WIRE TIE B
(narrow)

QL01303AB

63. Plug-in the harness connector.



64. Secure the harness and connectors.



VEHICLE
HARNESS

HARNESS

WIRE TIE A

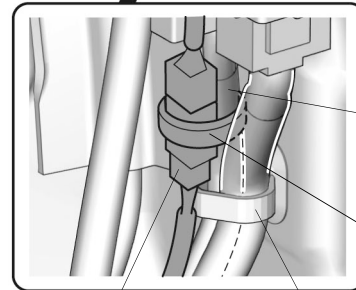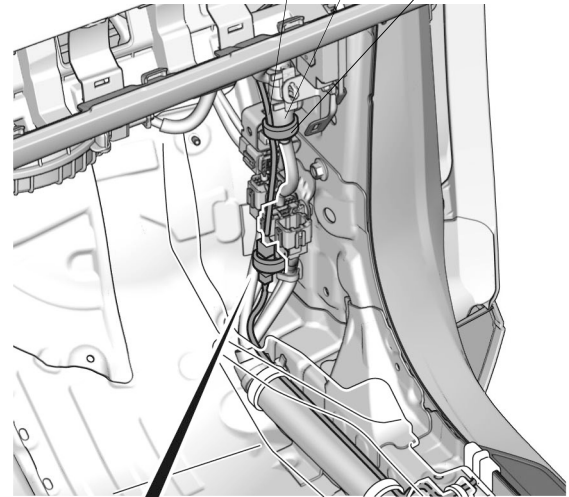

VEHICLE
HARNESS

WIRE TIE A

2-PIN CONNECTORS

VEHICLE
CLIP

QL01304AB

65. Remove the protective films if necessary.

Germain Honda of College Hills

66. Check that all parts are installed and properly routed.

NOTE

- Check that all harnesses are not pulled or pinched.
- Make sure all clips and wire ties are securely installed.


67. Install all removed parts except for the self-tapping screws removed in steps 9 and 11 and steering column upper cover.

<Installing the Driver's Knee Airbag>

68. Install the driver's knee airbag.



NOTE

Make sure to replace with the washer-bolts included in this kit.



VEHICLE
CONNECTOR

AIRBAG

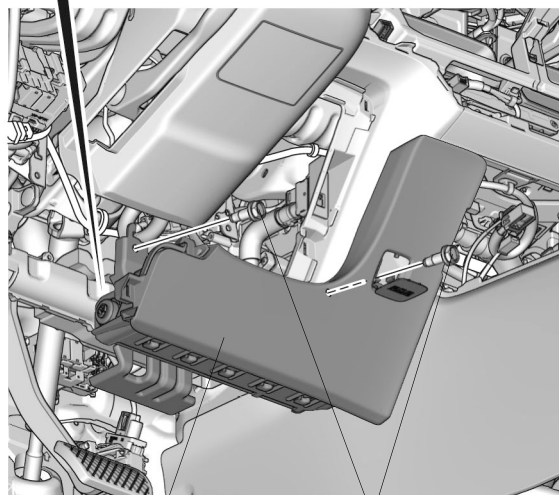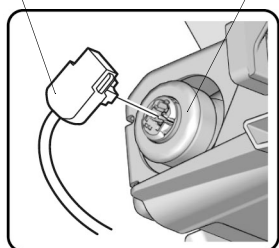

DRIVER'S
KNEE AIRBAG

2 WASHER-BOLTS
(supplied)

QL01305AB




5.1-11 lb-ft
(6.9-14.4 N·m)

<Installing the Passenger's Knee Airbag>

69. Install the passenger's knee airbag.



NOTE

Make sure to replace with the washer-bolts included in this kit.



AIRBAG

VEHICLE
CONNECTOR

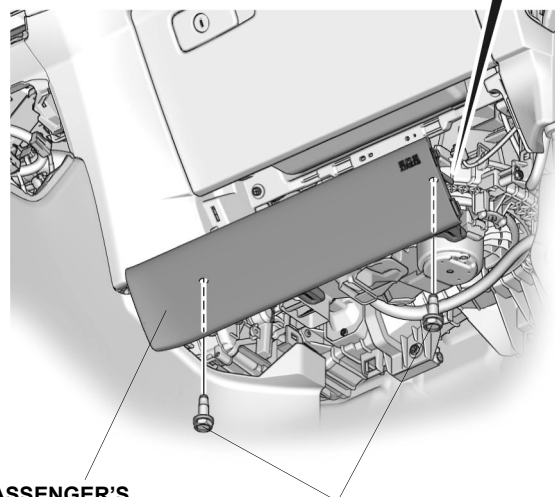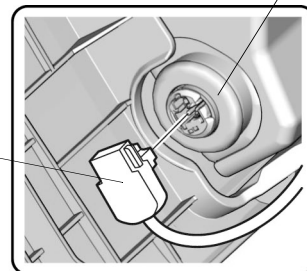

PASSENGER'S
KNEE AIRBAG

2 WASHER-BOLTS
(supplied)


QL01306AB



5.1-11 lb-ft
(6.9-14.4 N·m)

Germain Honda of College Hills

70. Connect the negative cable to the battery.

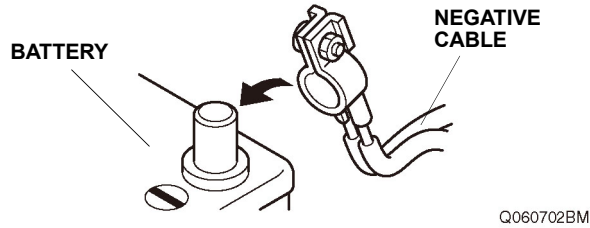

71. Install the self-tapping screws removed in steps 9 and 11 and steering column upper cover.
72. Turn the engine switch (power switch) to ON; the SRS indicator should come on for about 6 seconds and then go off.
73. Check that the front illuminated door sill trim comes on when opening the door.
74. Make sure all accessories and systems operate properly.
75. If necessary, restore the systems back to normal operation as described in the service information.
76. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.