

Germain Honda of College Hills




INSTALLATION INSTRUCTIONS

Accessory
FDOOR LOWER TRIMS

Application
2023 CR-V
MODEL SERIES

Publications No.
VERSION 1
Issue Date
AUG 2022

GENERAL VIEW

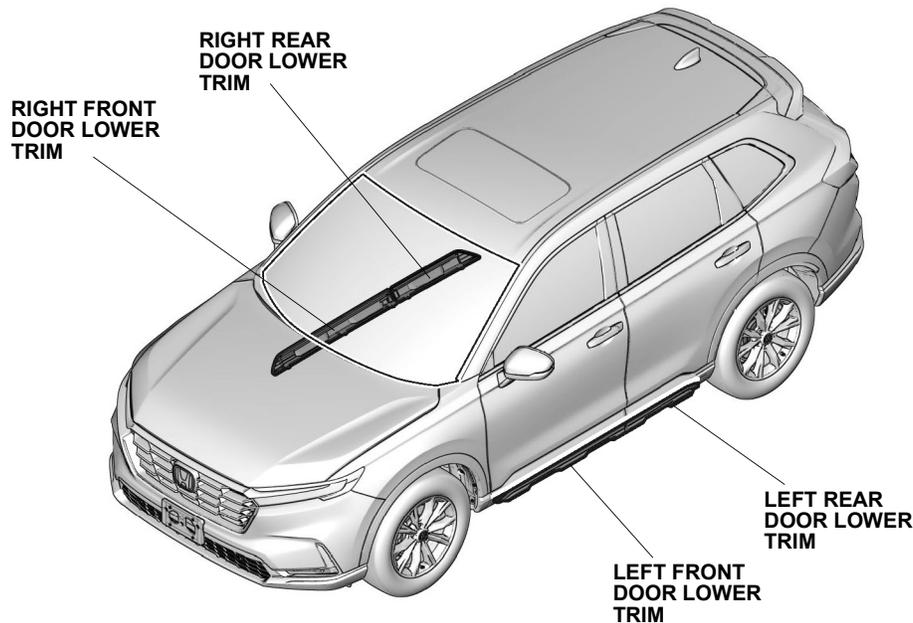

QL00601AG

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

⚠ DANGER

You will be killed or seriously hurt if you do not follow the instructions.

⚠ WARNING

You can be killed or seriously hurt if you do not follow the instructions.

⚠ CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.




Indicates a prohibited action.

Germain Honda of College Hills


Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle.
(Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the customer.
(Do not reuse.)

Safety: General

- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.


Safety: Accessory

- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

Germain Honda of College Hills

PARTS LIST

Door Lower Trims Kit (P/N 08F57-3A0-100)

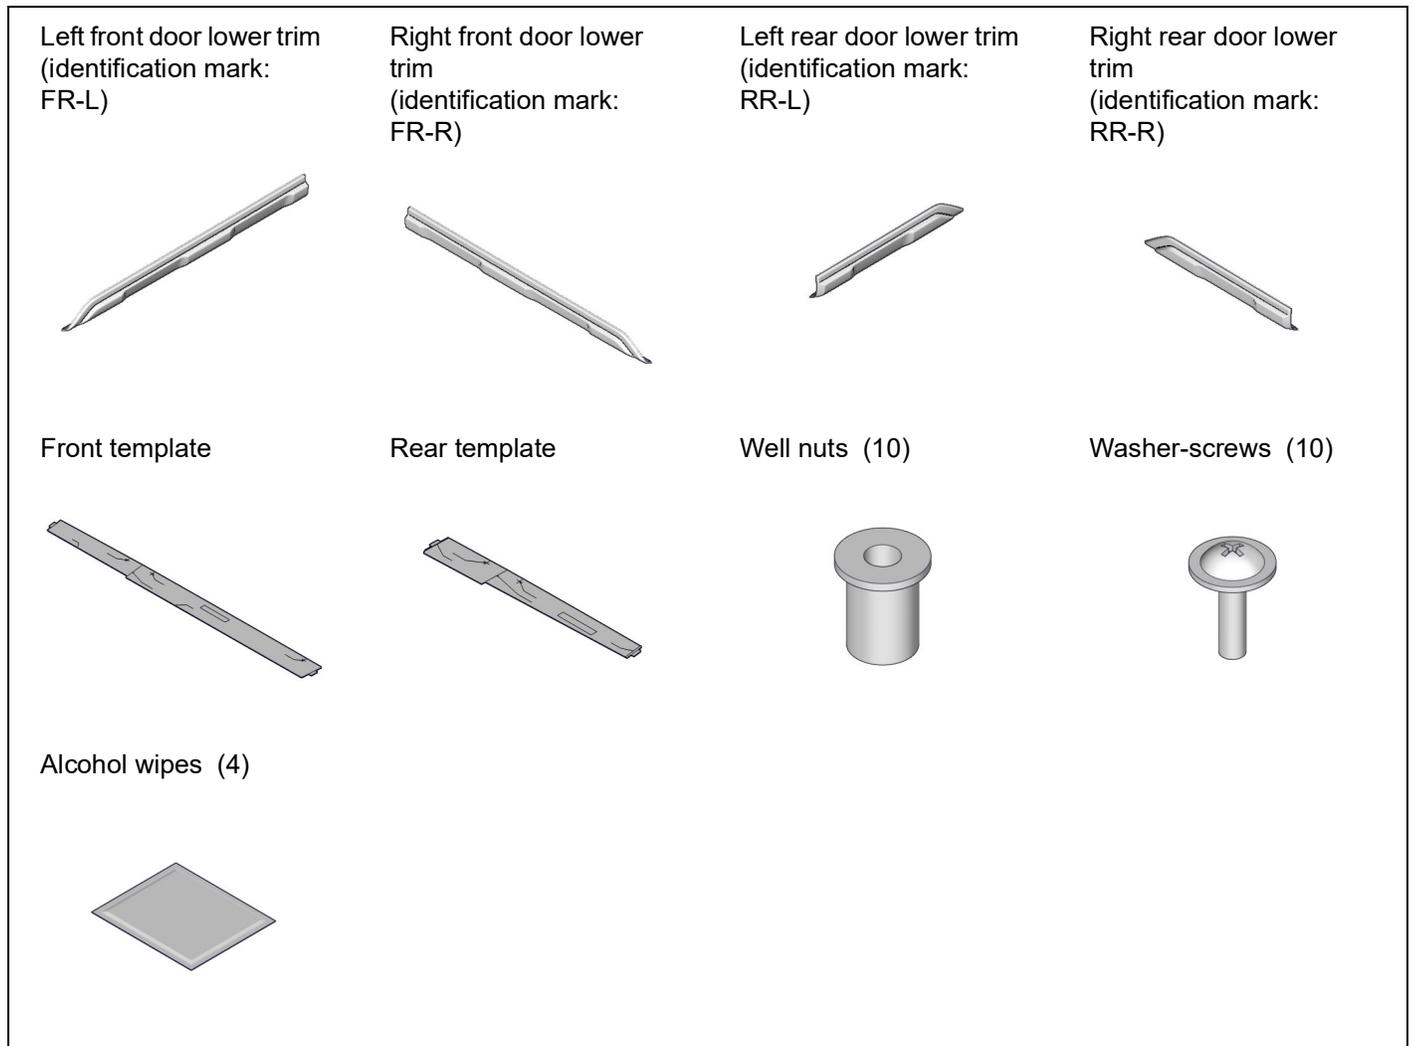

REQUIRED TOOLS AND SUPPLIES


- Phillips screwdriver
- Drill
- Ruler
- Pushpin
- File
- 3 mm, 6 mm, 8 mm, and 10 mm Drill bits
- Masking tape
- Scissors
- Eye protection (face shield, safety goggles, etc.)

The following tool is available through the Honda Tool and Equipment Program:
Rubber Roller (T/N MHLE54D)

Germain Honda of College Hills

INSTALLATION

1. Lift up the vehicle.
2. Cut the front template.

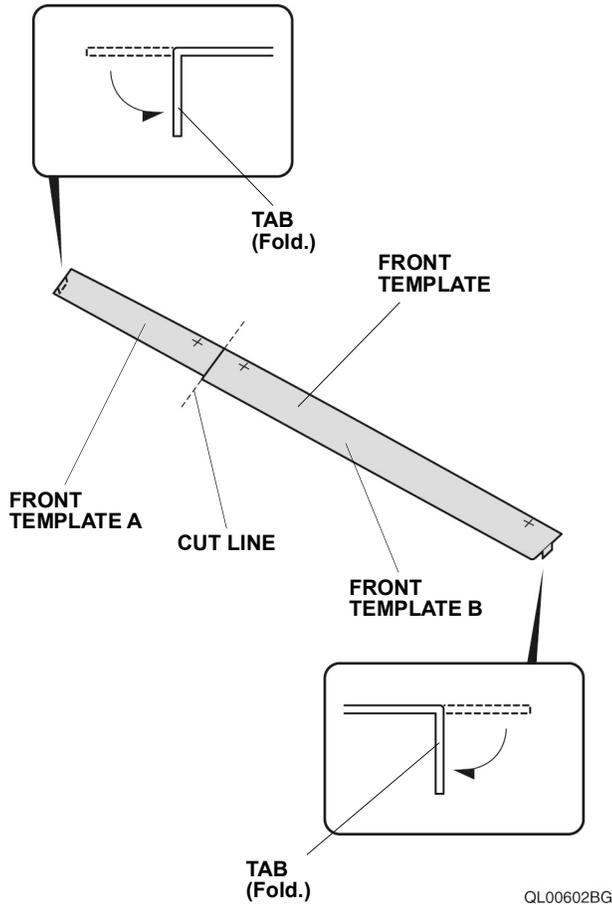


3. Fold the tabs.



4. Secure the front template A.



LEFT FRONT DOOR FRONT TEMPLATE A LEFT FRONT DOOR

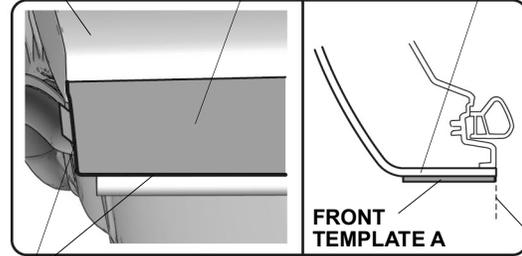

Line up with the edge of the left front door.

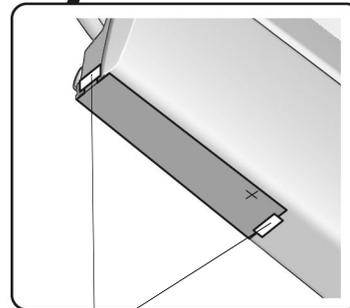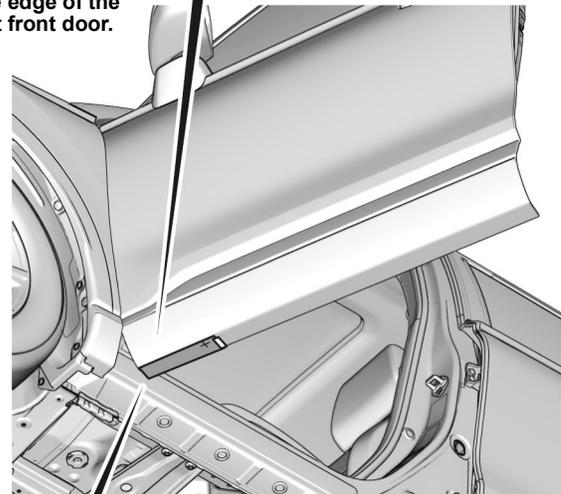


MASKING TAPE



QL00603BG

Germain Honda of College Hills

5. Secure the front template B.

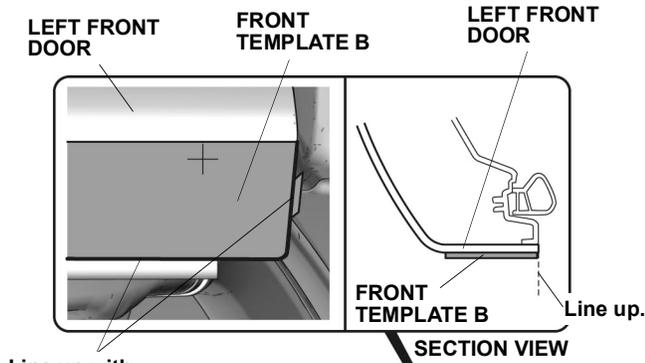


Line up with the edge of the left front door.

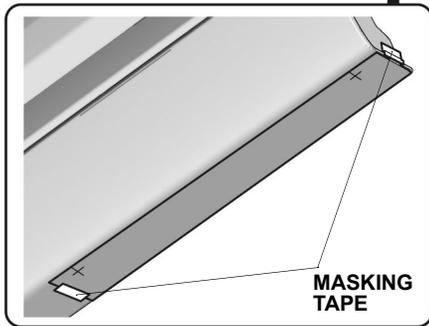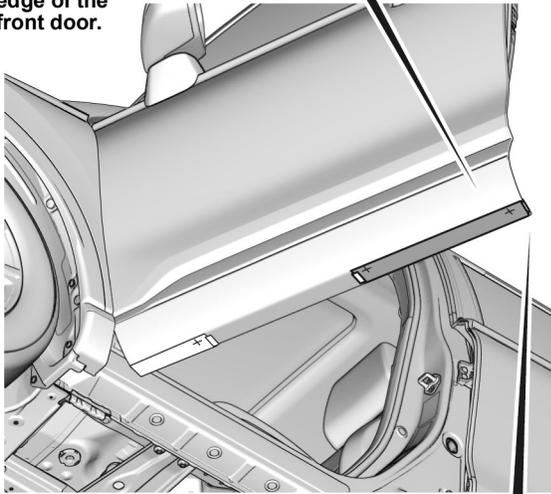

QL00604BG

6. Pierce the left front door.

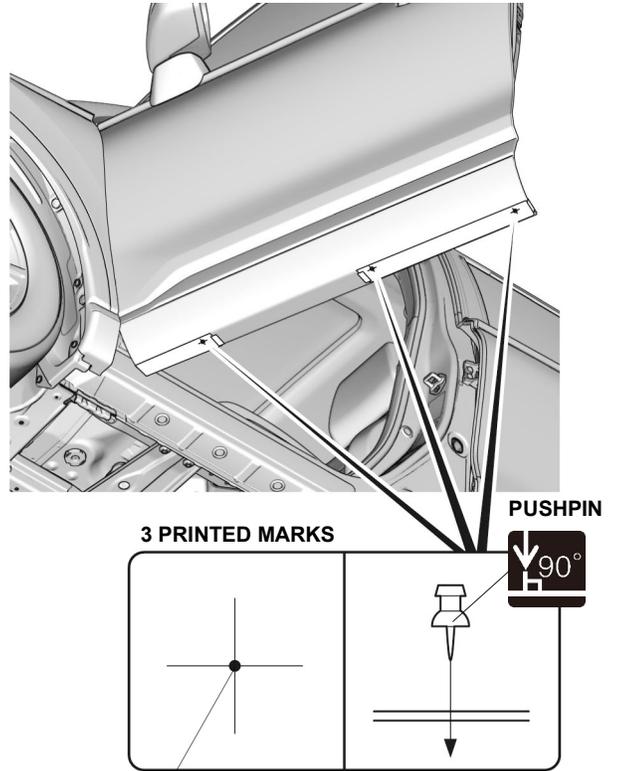

● : 3 MARKS



QL00605BG

7. Remove the front templates.

8. Close the left front door.

Germain Honda of College Hills

9. Drill the left front door.

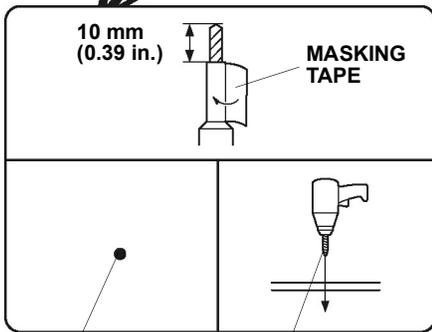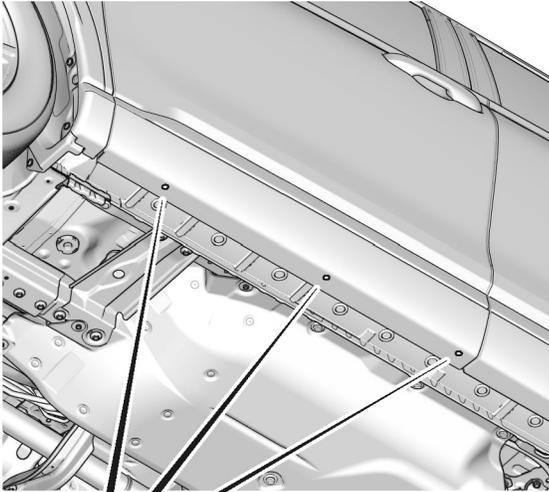

● : 3 MARKS

3 mm → 6 mm → 8 mm →
10 mm DRILL BITS




QL00607AG

10. Clean the attaching area.

NOTE

Allow area to dry thoroughly.

ALCOHOL
WIPE

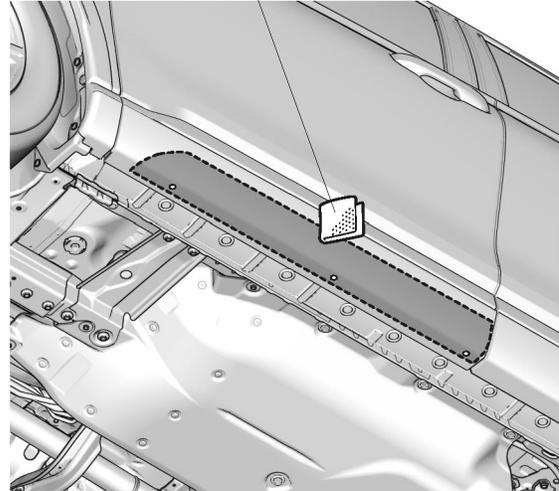


QL00608AG

Germain Honda of College Hills

11. Temporarily attach the tabs.

NOTE



Make sure to check the identification mark before installation.

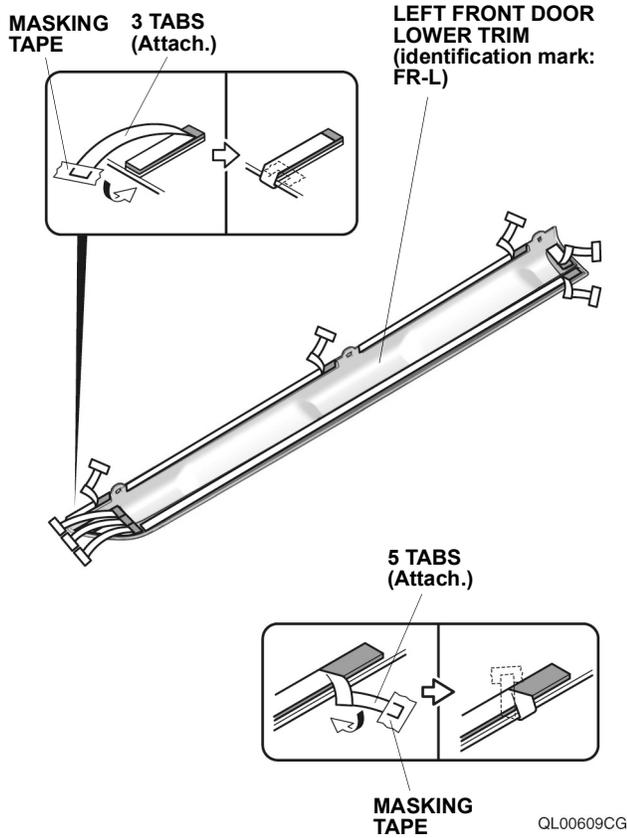

12. Loosely secure the left front door lower trim.

LEFT FRONT DOOR

SECTION VIEW

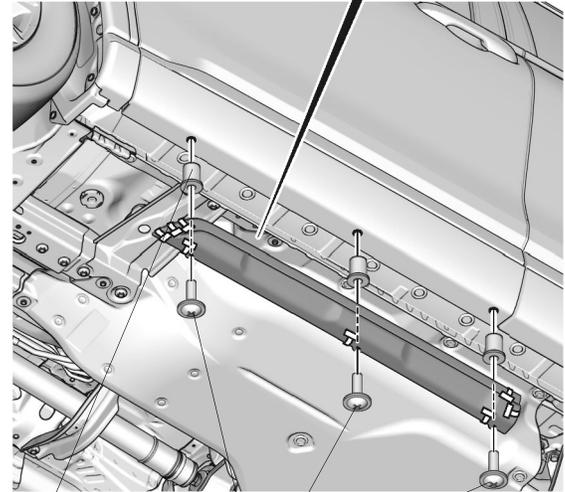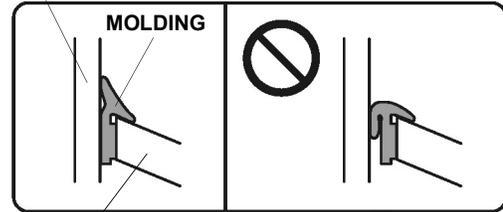


3 WELL NUTS

3 WASHER-SCREWS
(Loosely secure.)

QL00610AG

Germain Honda of College Hills


13. Line up the left front door lower trim.

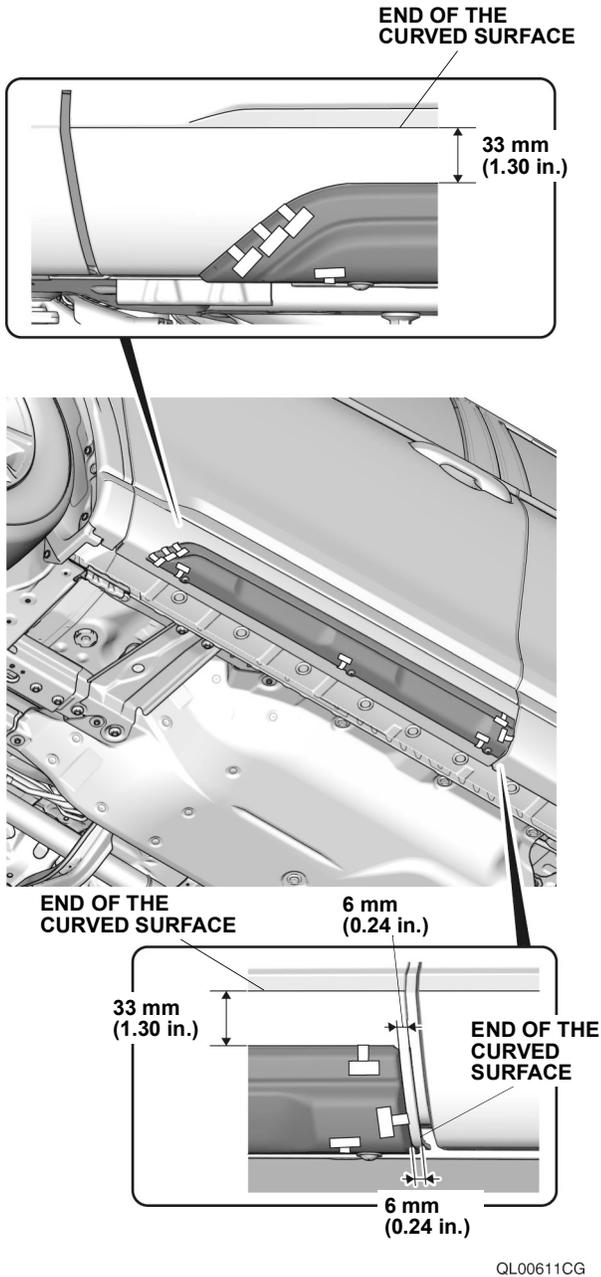


14. Secure the left front door lower trim.

NOTE

- Install in the order shown.
- Check the position of the double-sided adhesive tapes and make sure to press firmly.

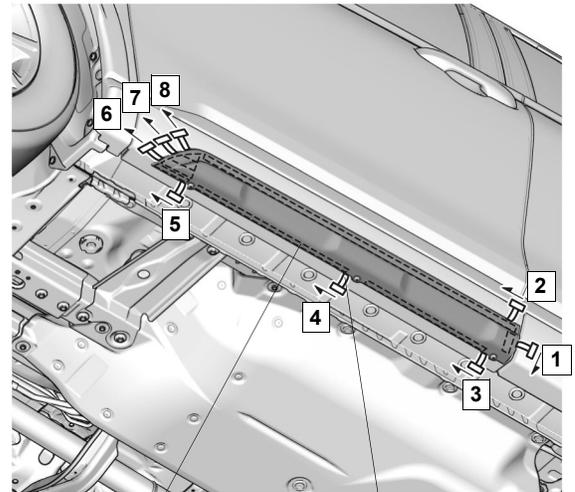

15. Secure the left front door lower trim.

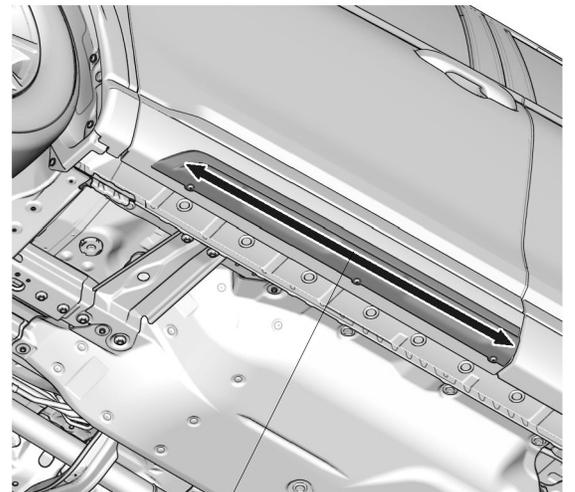


Germain Honda of College Hills

16. Secure the left front door lower trim.

NOTE


Secure in the order shown.

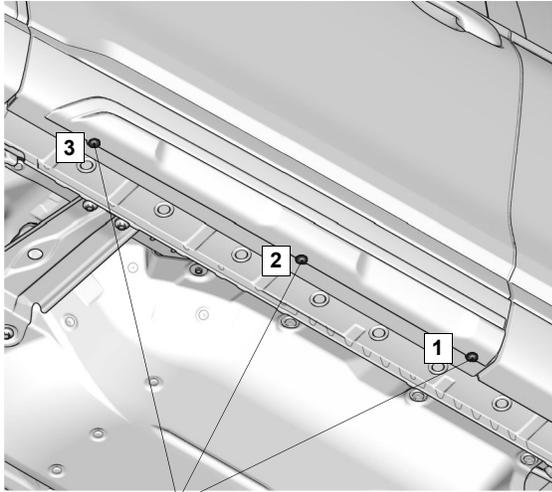

**3 WASHER-SCREWS
(Tighten.)**

QL00614AG


17. Flip the front templates, and repeat the same procedures on the other side.

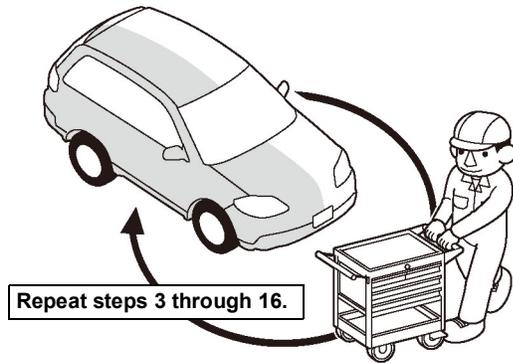

Repeat steps 3 through 16.

Q9D1014AM

18. Cut the rear template.

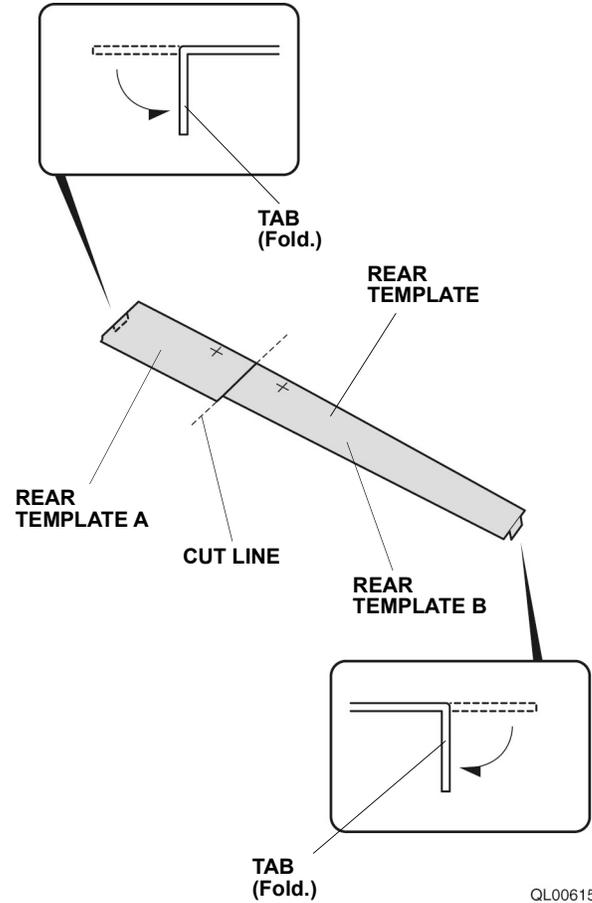


QL00615BG


19. Fold the tabs.

Germain Honda of College Hills

20. Secure the rear template A.

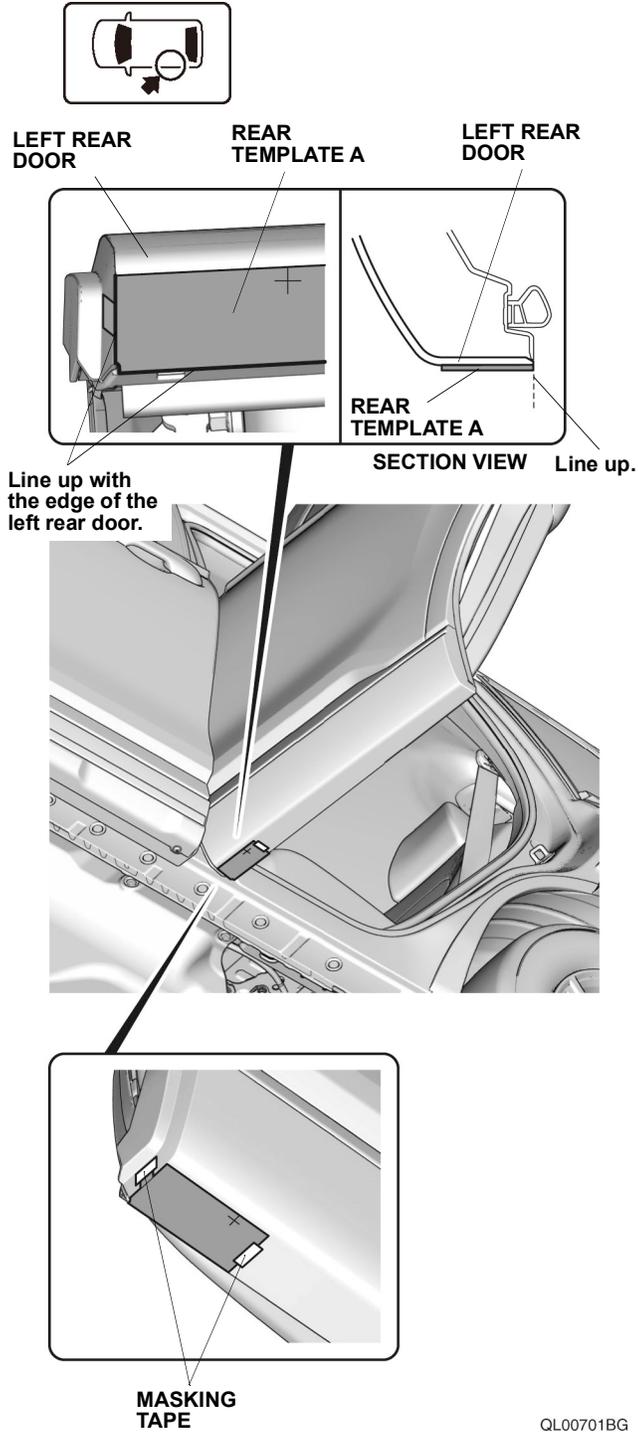


21. Secure the rear template B.

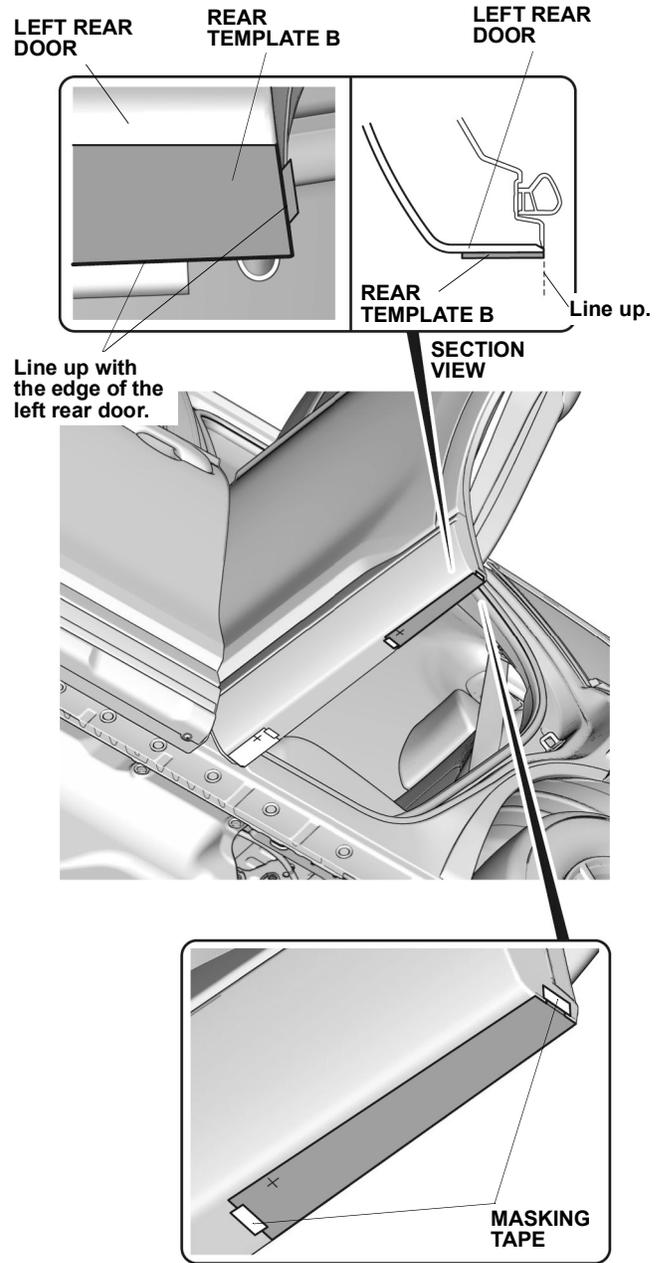

QL00702BG

Germain Honda of College Hills


22. Pierce the left rear door.

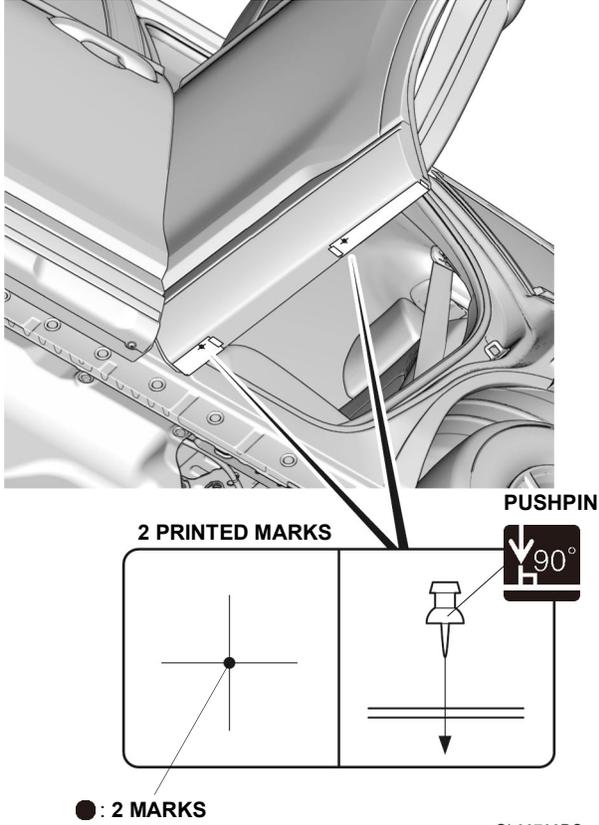

23. Remove the rear templates.

24. Close the left rear door.

25. Drill the left rear door.

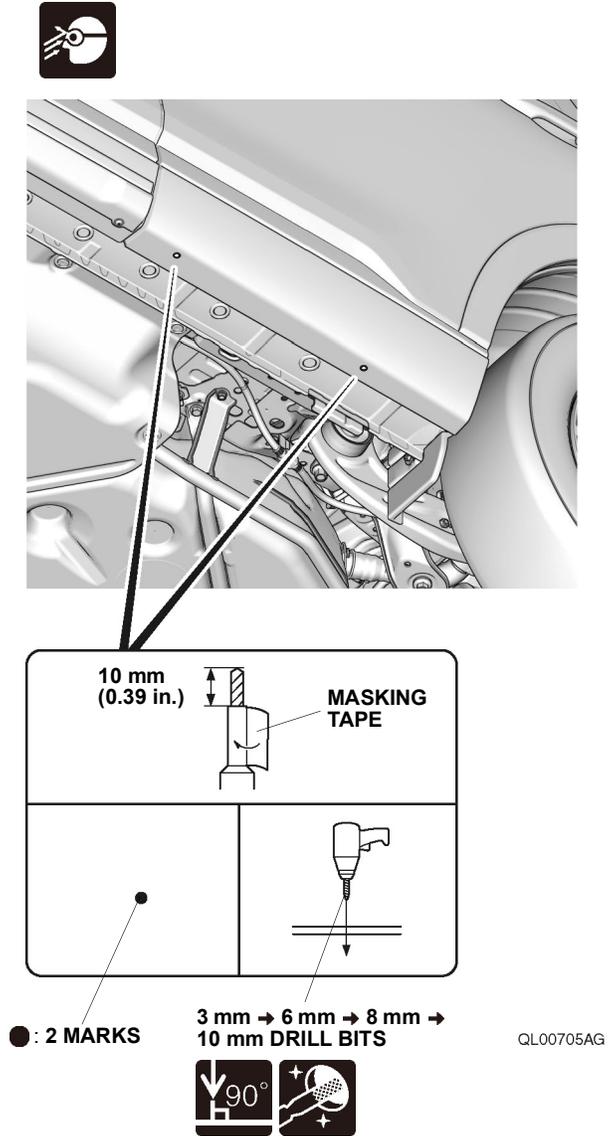


Germain Honda of College Hills

26. Clean the attaching area.

NOTE

Allow area to dry thoroughly.

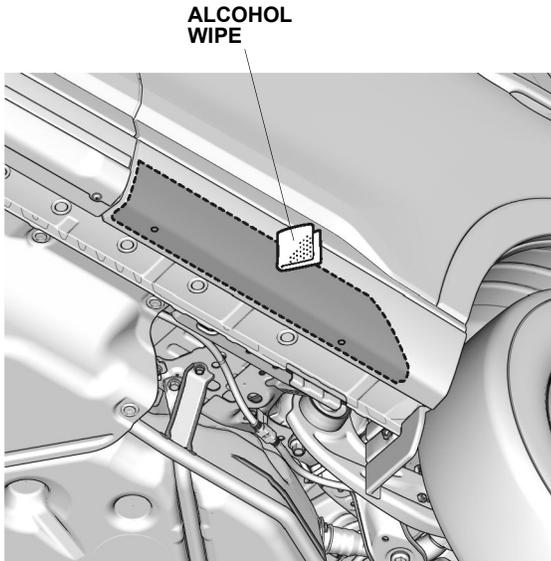


QL00706AG

27. Temporarily attach the tabs.


NOTE

Make sure to check the identification mark before installation.

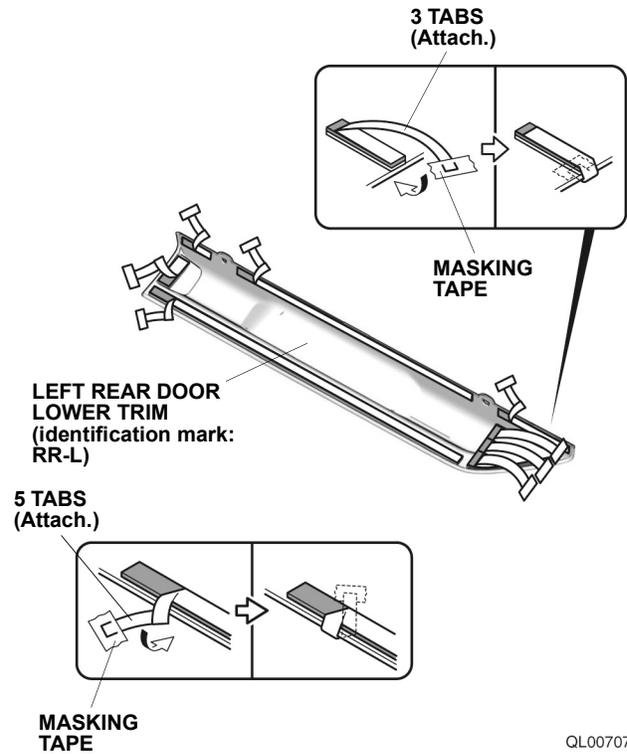


Germain Honda of College Hills

28. Loosely secure the left rear door lower trim.

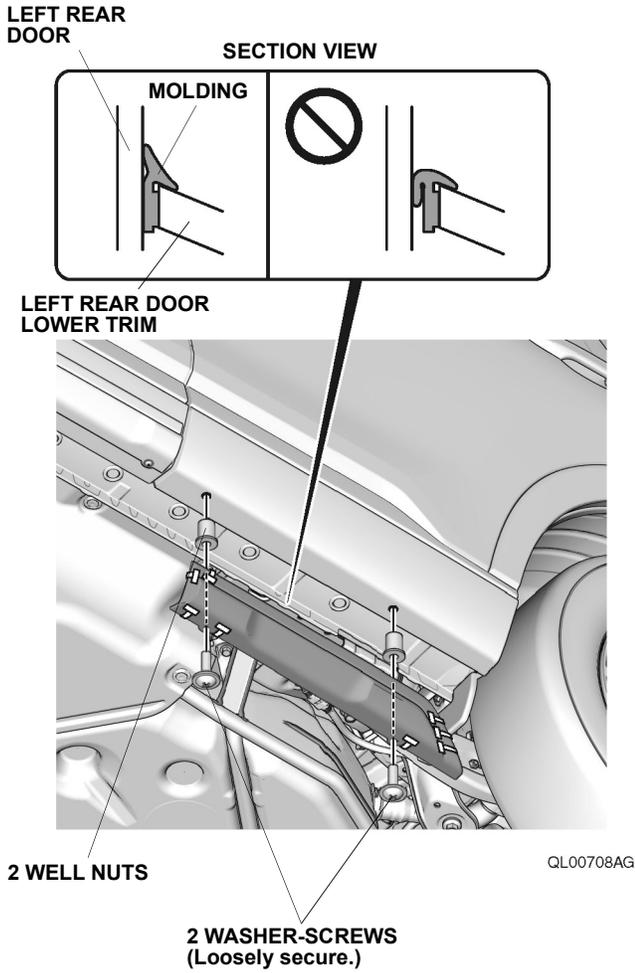

29. Line up the left rear door lower trim.

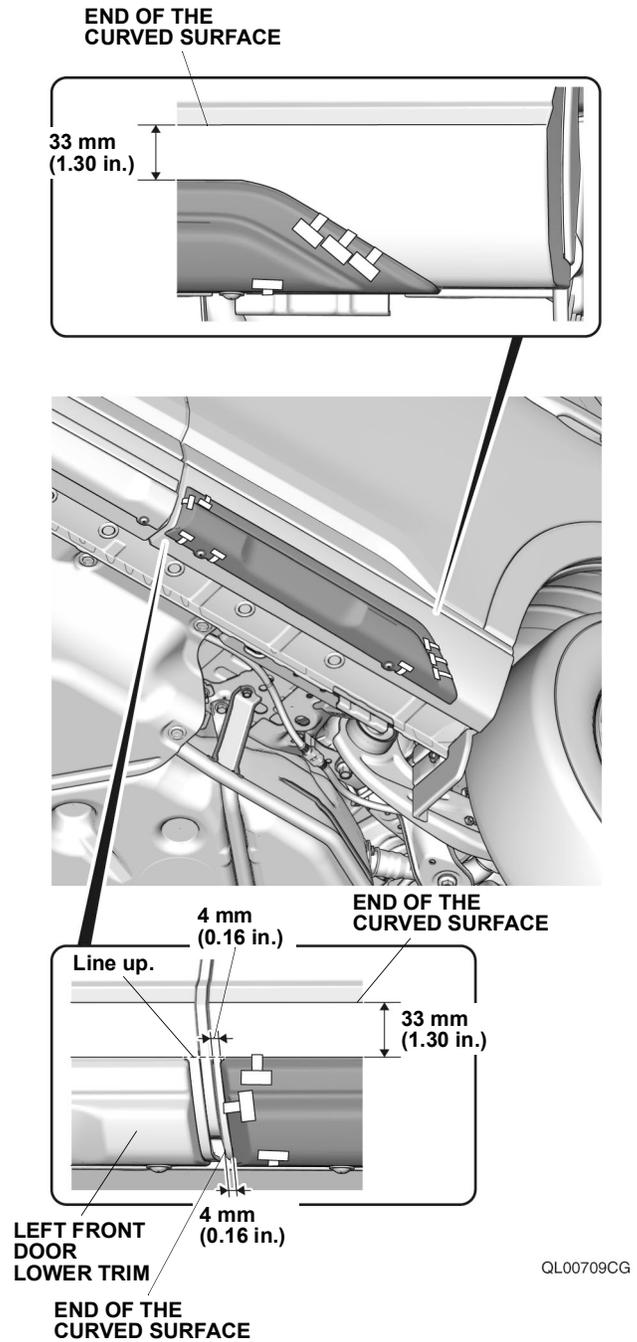


Germain Honda of College Hills

30. Secure the left rear door lower trim.

NOTE

- Install in the order shown.
- Check the position of the double-sided adhesive tapes and make sure to press firmly.

8 ADHESIVE BACKINGS (Remove.)

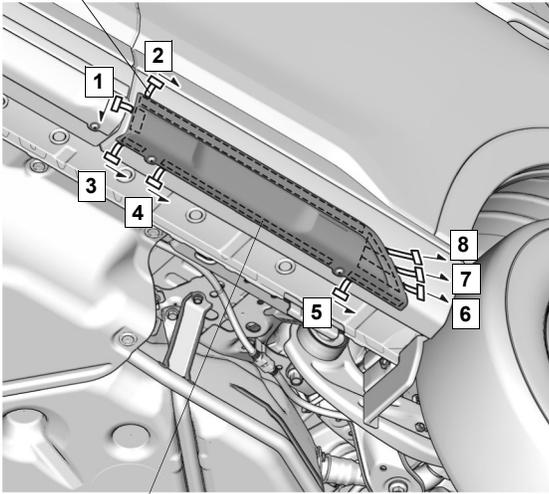


8 DOUBLE-SIDED ADHESIVE TAPES

QL00710CG



31. Secure the left rear door lower trim.

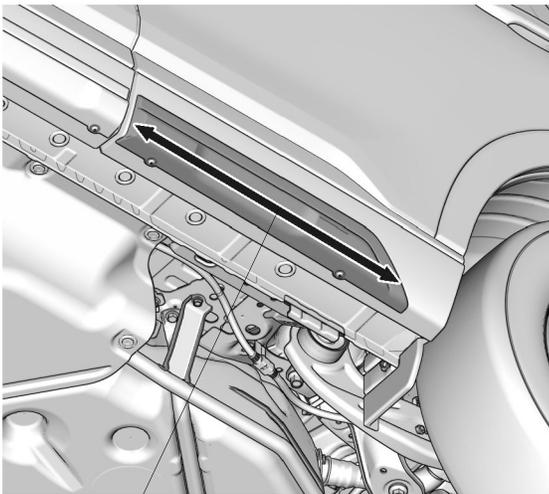


QL00711AG



32. Secure the left rear door lower trim.

NOTE


Secure in the order shown.

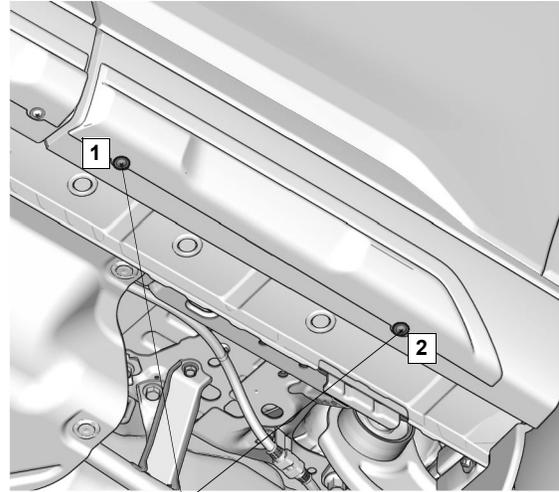

2 WASHER-SCREWS (Tighten.)

QL00712AG

33. Flip the rear templates, and repeat the same procedures on the other side.

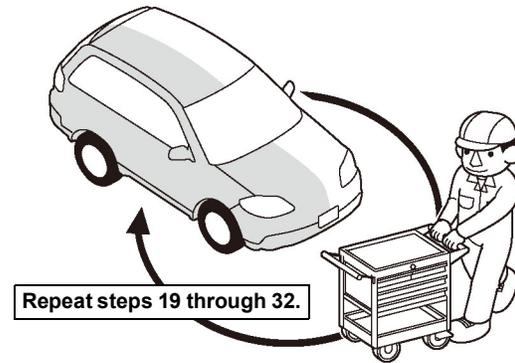

Q9D1014AM

34. Check that all parts are installed properly.