

Germain Honda of College Hills



INSTALLATION INSTRUCTIONS

Accessory

MOONROOF VISOR

Application

2023 CR-V
MODEL SERIES


Publications No.

VERSION 1

Issue Date

AUG 2022

GENERAL VIEW

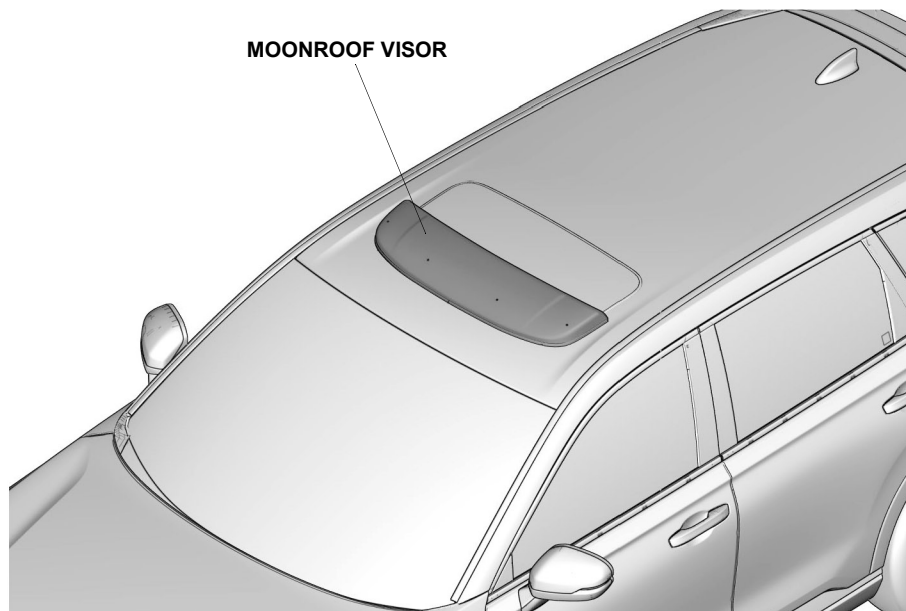

QL00501AG

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.



DANGER

You will be killed or seriously hurt if you do not follow the instructions.



WARNING

You can be killed or seriously hurt if you do not follow the instructions.



CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.



Indicates a prohibited action.

Germain Honda of College Hills

Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle.
(Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the customer.
(Do not reuse.)

Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.









Safety: Accessory

- Always use the parts and tools specified in the installation instructions.
- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

Germain Honda of College Hills

PARTS LIST

Moonroof Visor Kit (P/N 08R01-3A0-100)

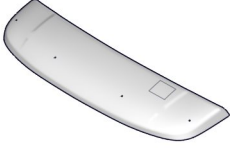Moonroof visor 	Brackets A (identification mark: T20 A) (2) 	Left bracket B (identification mark: 3A0-L B) 	Right bracket B (identification mark: 3A0-R B) 
Screws (4) 	Nuts (4) 	Protective films (4) 	Alcohol wipes (2) 

REQUIRED TOOLS AND SUPPLIES


- Phillips screwdriver
- Shop towel
- 10 mm Offset wrench
- Masking tape
- Ruler
- Felt-tip pen

The following tool is available through the Honda Tool and Equipment Program:
Torque Screwdriver (T/N CDI401SM)

Germain Honda of College Hills


INSTALLATION

1. Open the moonroof.



ROOF PANEL

AIR DEFLECTOR

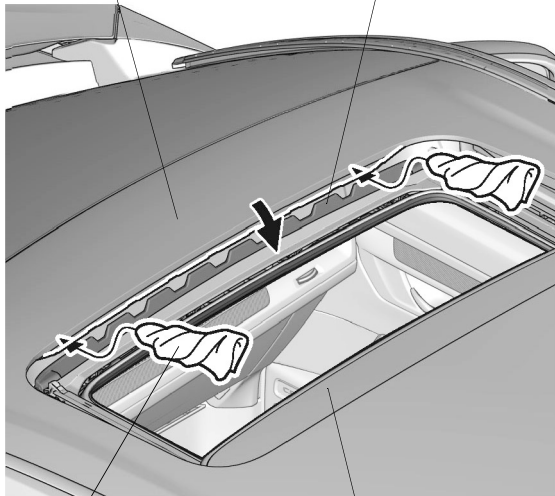


2 SHOP TOWELS
(Roll up and insert into the corner.)

MOONROOF


QL00502AG

2. Lower the air deflector.

3. Mark the roof panel.

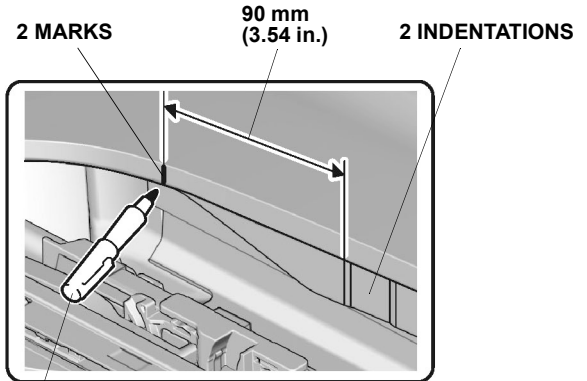

FELT-TIP PEN

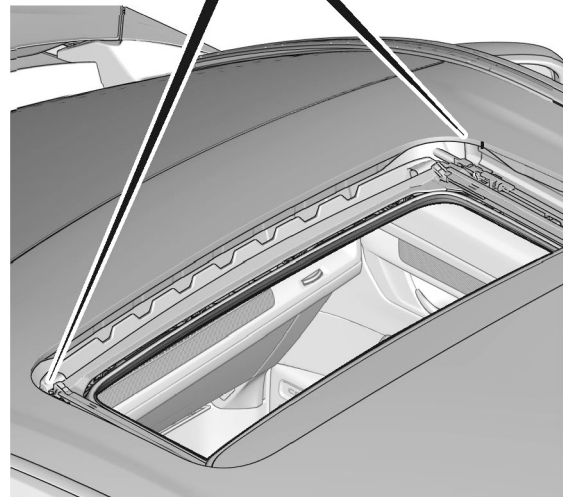


QL00503AG

Germain Honda of College Hills

4. Clean the attaching areas.

NOTE

Allow area to dry thoroughly.

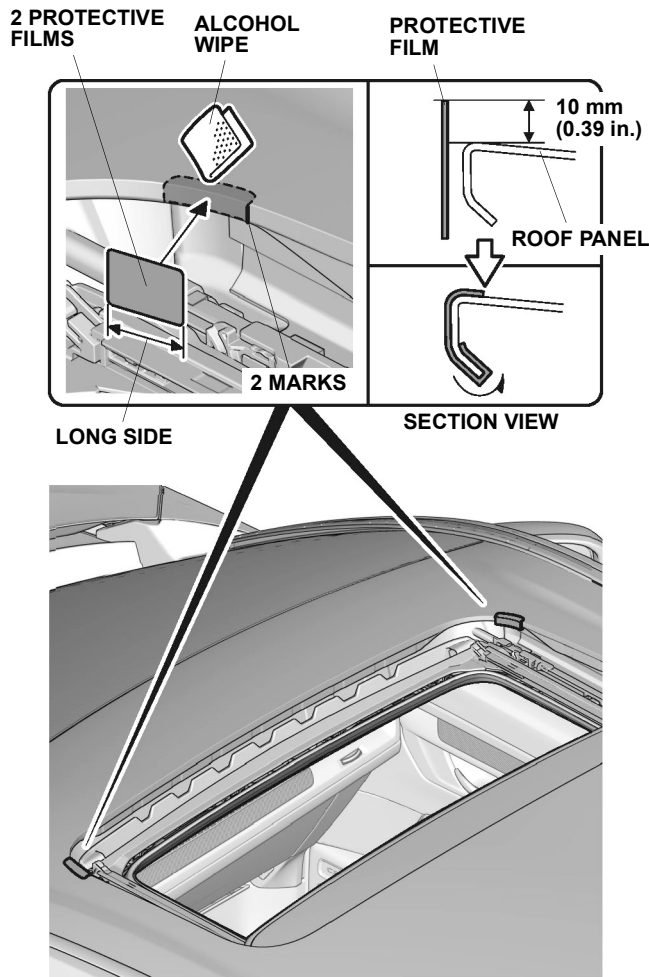


QL00504AG

5. Attach the protective films.

6. Clean the attaching areas.

NOTE

Allow area to dry thoroughly.

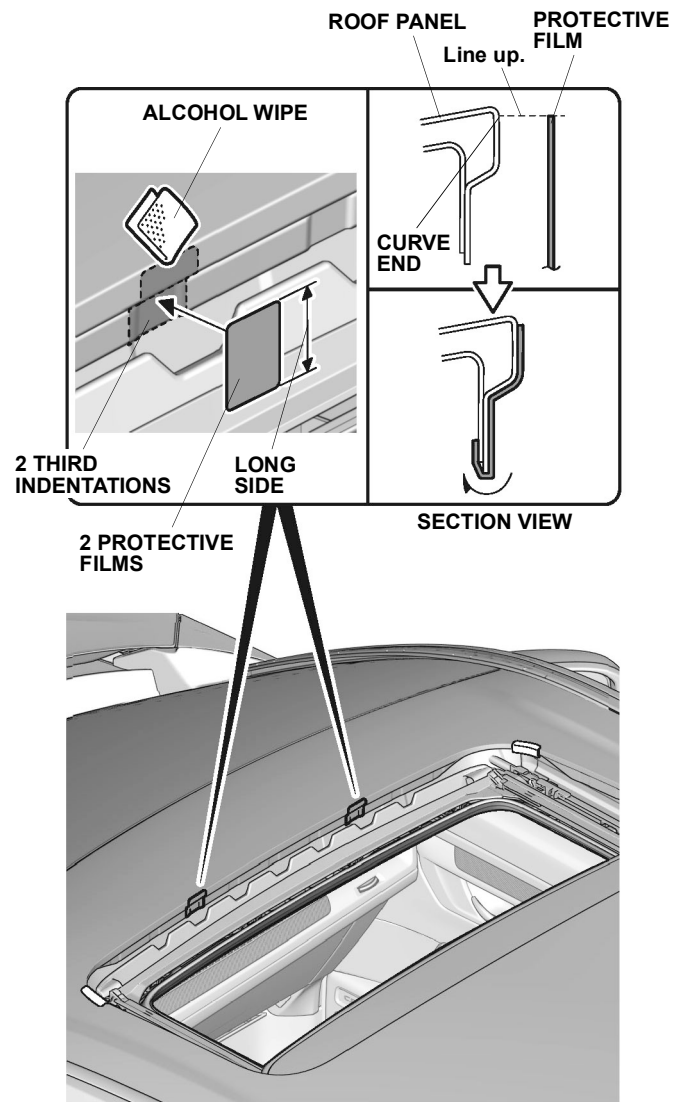

QL00505AG


7. Attach the protective films.

Germain Honda of College Hills

8. Place the left and right brackets B.

NOTE


- Make sure to check the identification mark before installation.
- Be careful not to crease the protective films.

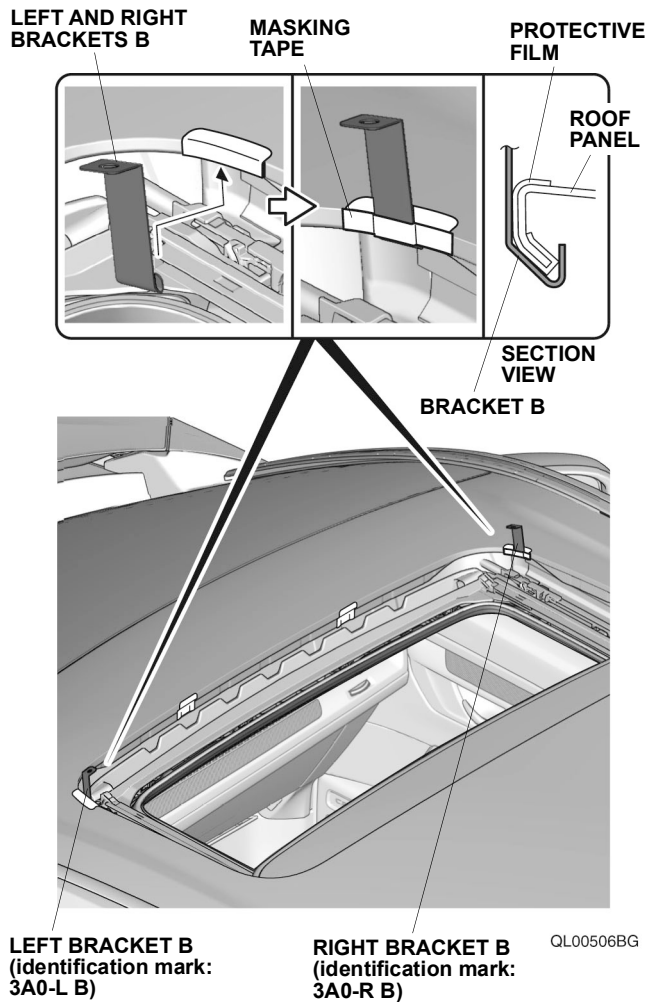

9. Place the brackets A.


NOTE

- Make sure to check the identification mark before installation.
- Be careful not to crease the protective films.

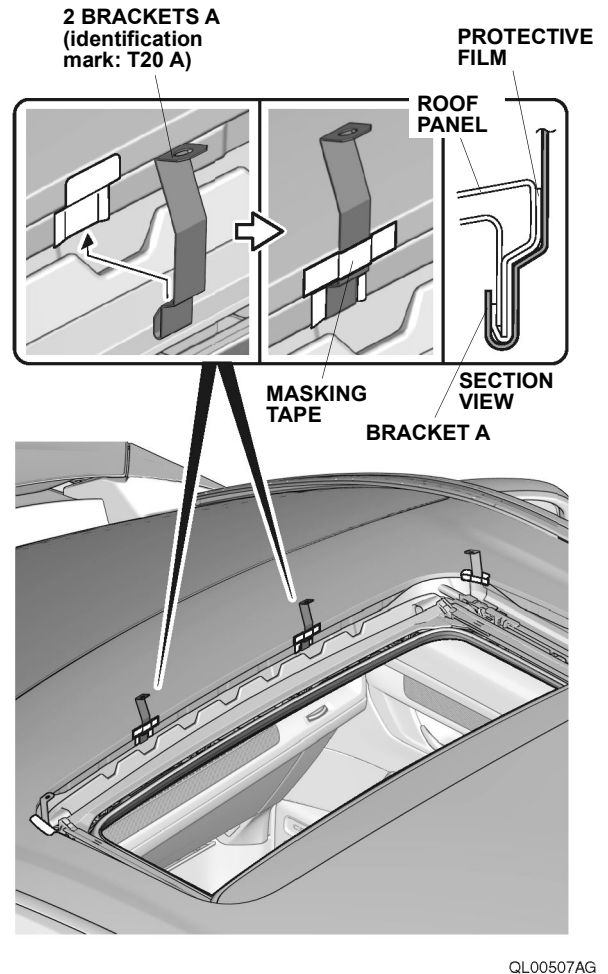


Germain Honda of College Hills

10. Loosely install the moonroof visor.



2 SCREWS
(Loosely install.)

MOONROOF VISOR

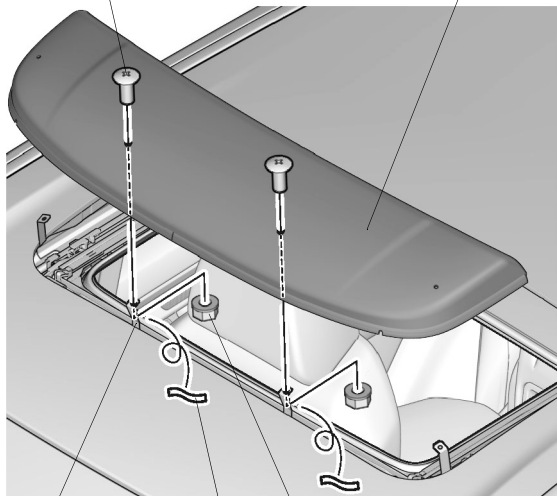

2 BRACKETS A


2 NUTS

MASKING TAPE
(Remove.)

QL00508AG

11. Remove the masking tape.

12. Loosely install the moonroof visor.

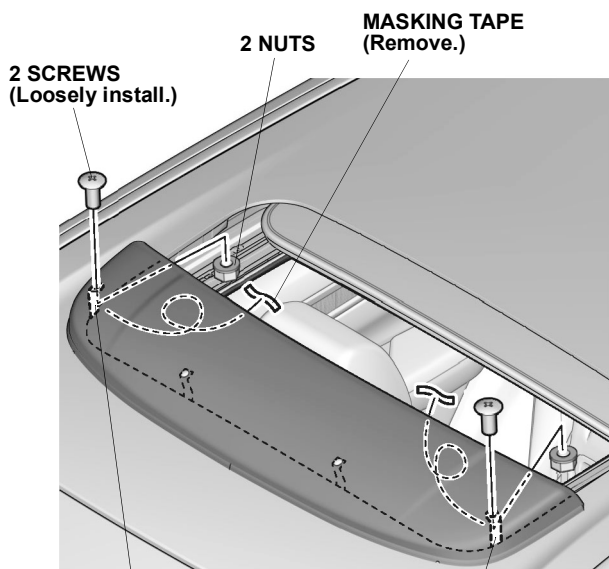

2 SCREWS
(Loosely install.)

2 NUTS

MASKING TAPE
(Remove.)


RIGHT BRACKET B

LEFT BRACKET B

QL00509AG

13. Remove the masking tape.

14. Check the information on the IMPORTANT INFORMATION label.

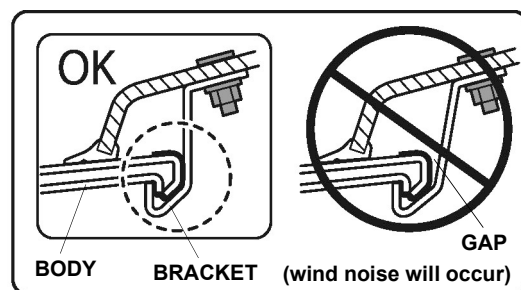


OK

BODY

BRACKET

GAP

(wind noise will occur)

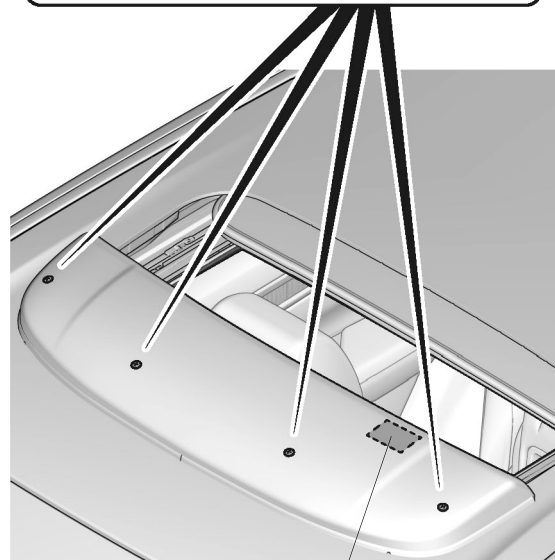


IMPORTANT INFORMATION LABEL

QL00510AG


Germain Honda of College Hills

15. Secure the moonroof visor.

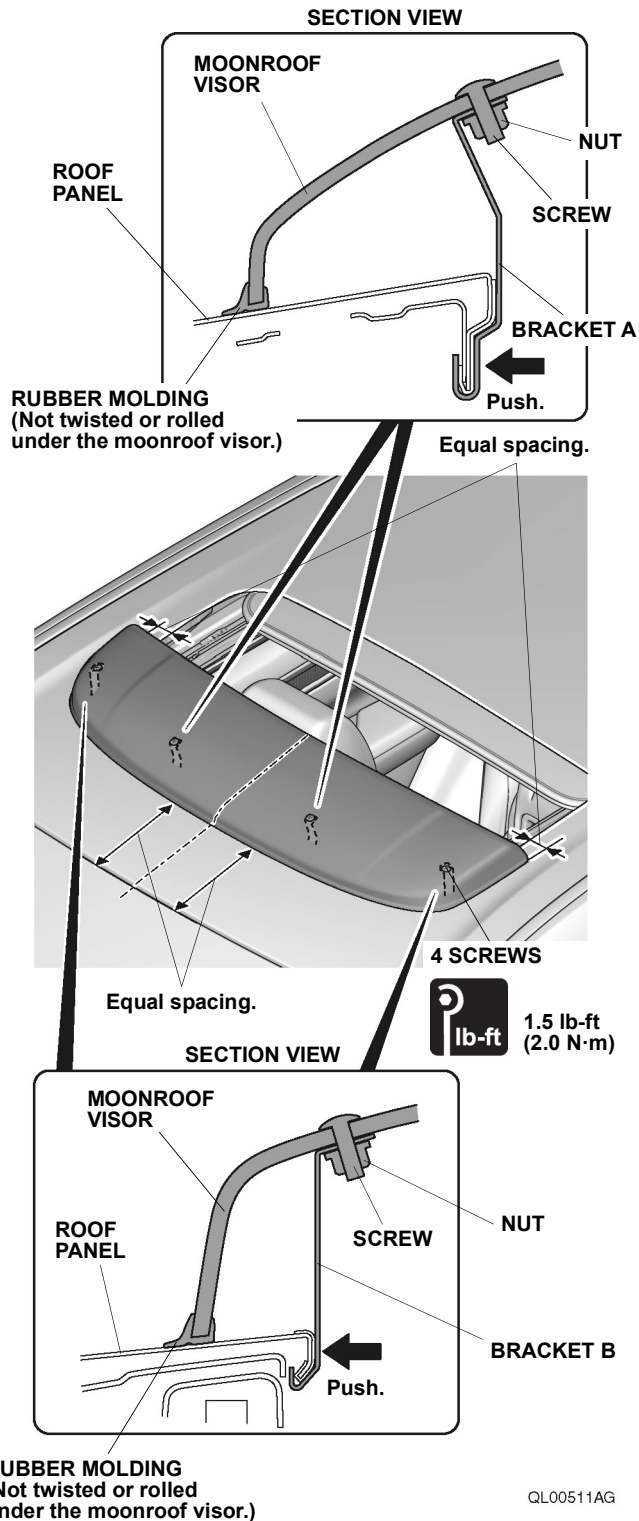

16. Remove the shop towels.

17. Remove the IMPORTANT INFORMATION label.

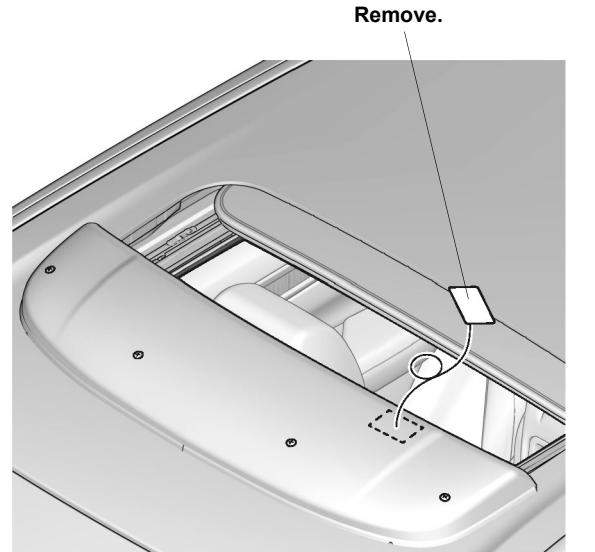

QL00512AG

18. Check that all parts are installed properly.

Germain Honda of College Hills

Please give your customer a copy of this page.

MOONROOF VISOR

Care of the Moonroof Visor

- To avoid damaging the surface, never use ammonia-based cleaners or solvents to clean the moonroof visor.
- Clean with a solution of mild dishwashing soap and water using a soft cloth or chamois.
- To remove fine scratches and restore the original luster, use Meguiar's Mirror Glaze plastic cleaner and polish or an equivalent high-quality plastic cleaner.