

Germain Honda of College Hills




INSTALLATION INSTRUCTIONS

Accessory
SUNSHADES

Application
**2023 CR-V
MODEL SERIES**

Publications No.
VERSION 1
Issue Date
AUG 2022

GENERAL VIEW

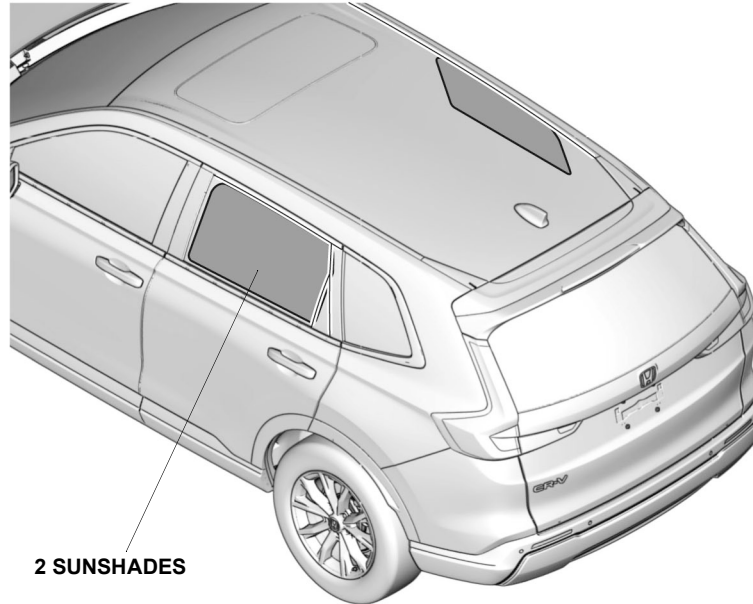

2 SUNSHADES

QL01201AA

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

⚠ DANGER

You will be killed or seriously hurt if you do not follow the instructions.

⚠ WARNING

You can be killed or seriously hurt if you do not follow the instructions.

⚠ CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.



Indicates a prohibited action.

Germain Honda of College Hills

Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle.
(Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the customer.
(Do not reuse.)

Safety: General

- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.


Safety: Accessory

- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle or moisten it for 24 hours to allow the adhesive to cure.

Germain Honda of College Hills

PARTS LIST

Sunshades Kit (P/N 08R13-3A0-100)

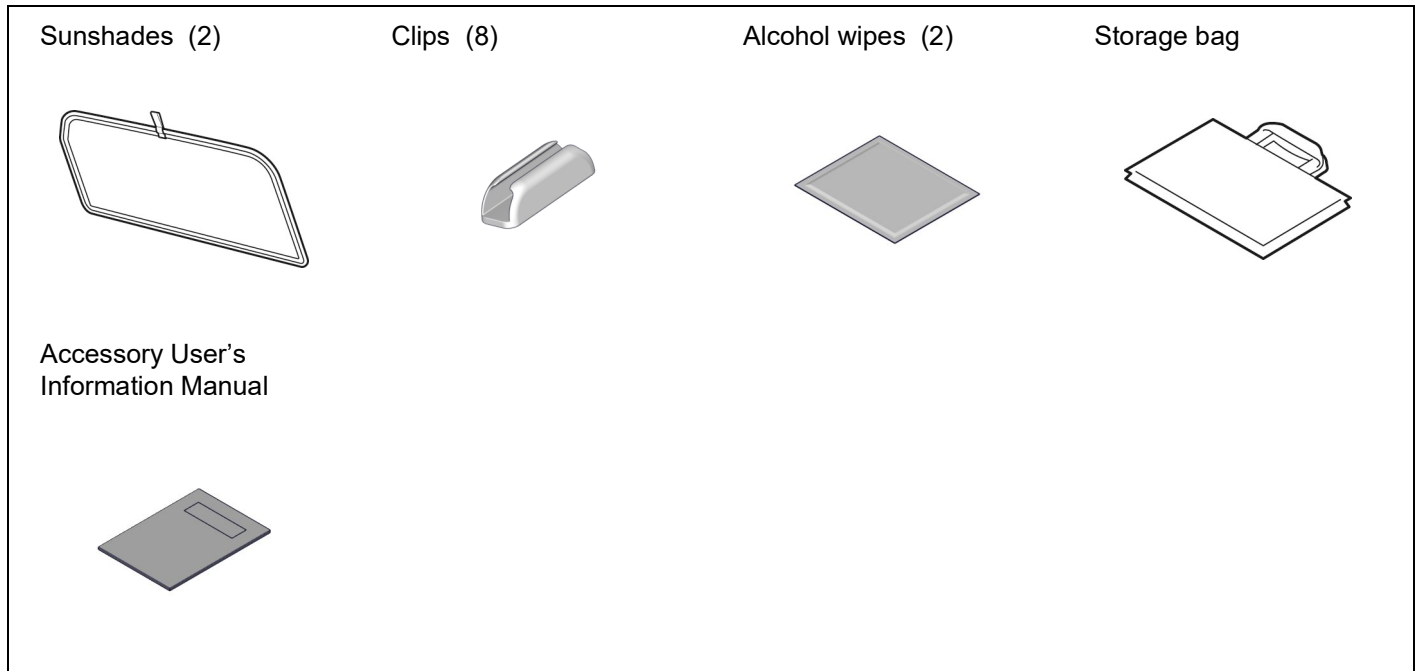


REQUIRED TOOLS AND SUPPLIES

- Masking tape
- Ruler

Germain Honda of College Hills

INSTALLATION

1. Fully open the left and right rear windows.

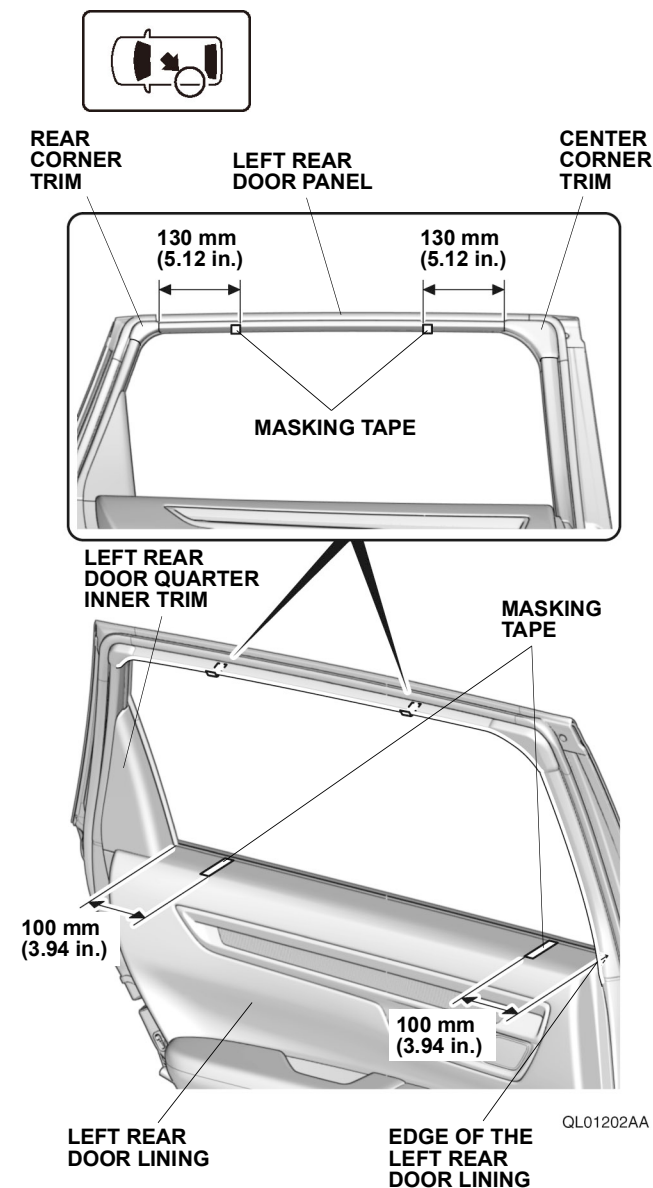


2. Attach masking tape.

3. Clean the attaching areas.

NOTE

Allow area to dry thoroughly.

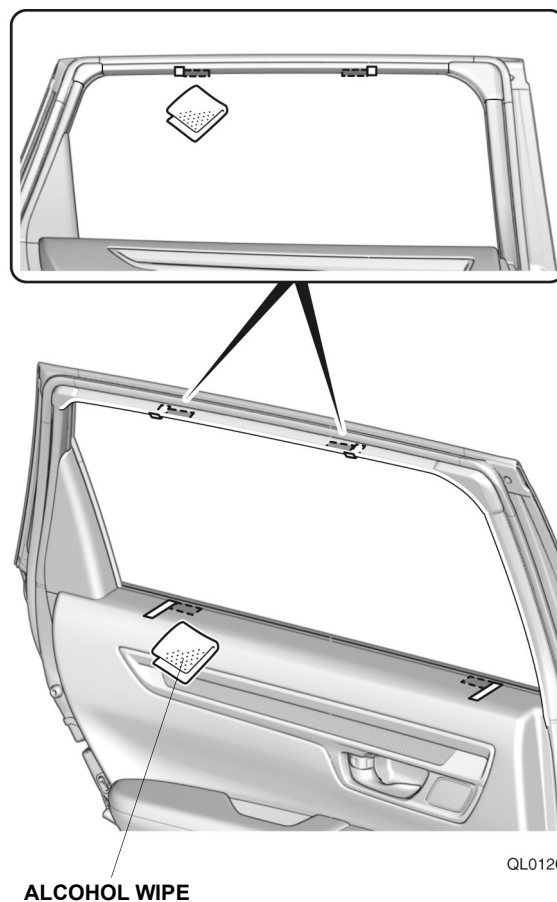


Germain Honda of College Hills

4. Attach the clips.

NOTE


- Check the position of the double-sided adhesive tapes and make sure to press firmly.
- Make sure to install the clips in the correct orientation.
- Press and hold each clip in place for 30 seconds to set the adhesive.

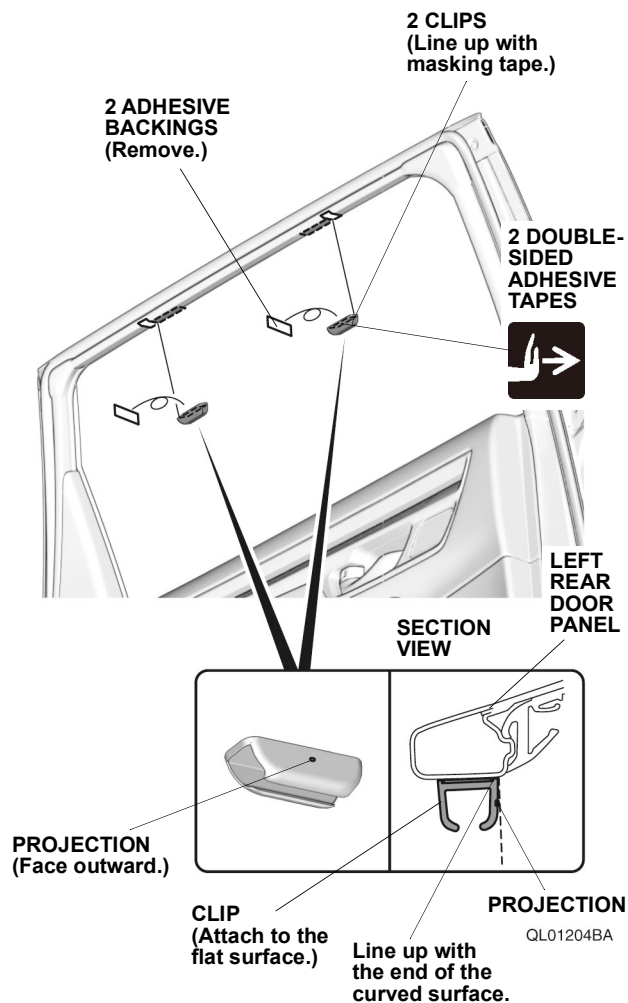

5. Attach the clips.

NOTE


- Check the position of the double-sided adhesive tapes and make sure to press firmly.
- Make sure to install the clips in the correct orientation.
- Press and hold each clip in place for 30 seconds to set the adhesive.

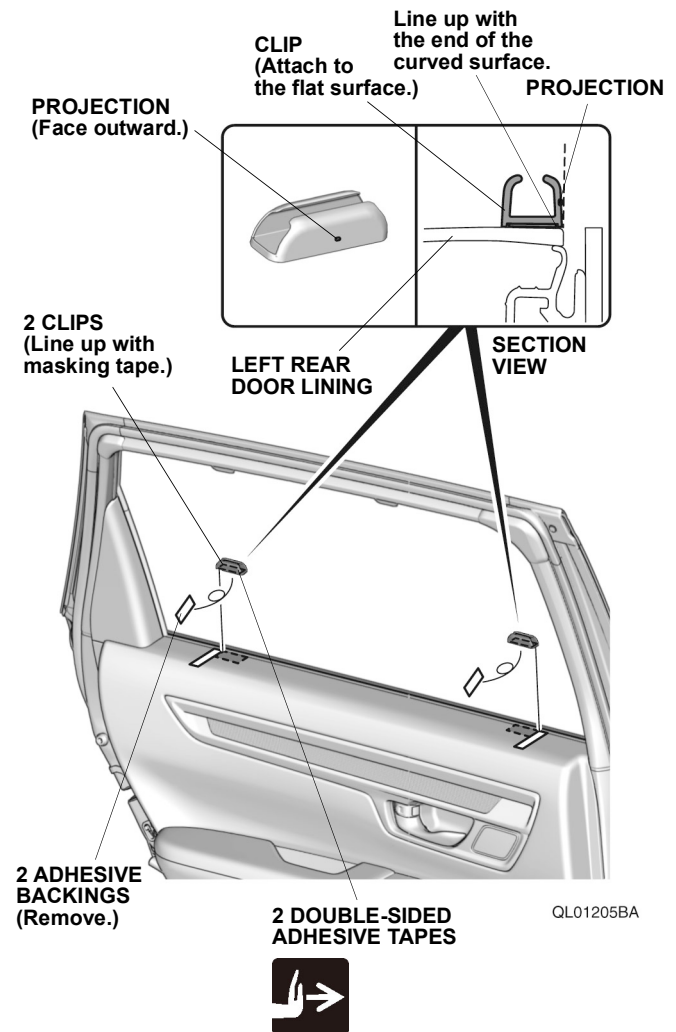


6. Remove the masking tape.

Germain Honda of College Hills


7. Install the sunshade.

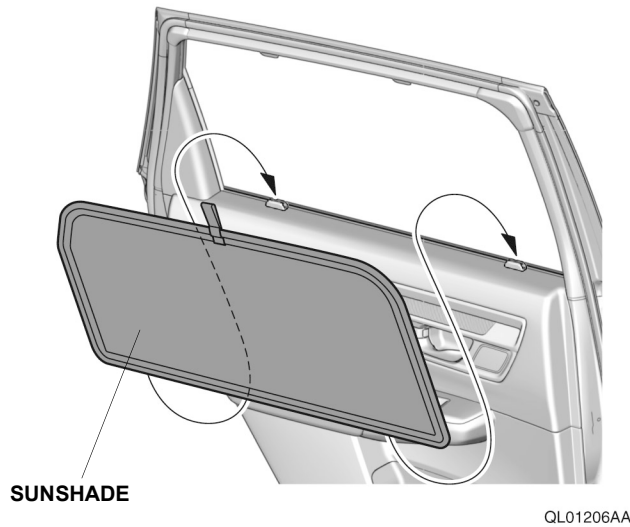

8. Install the sunshade.

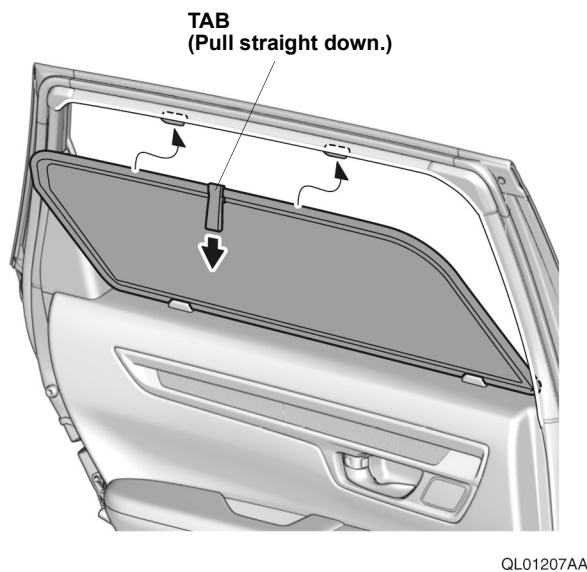

9. Repeat the same procedures on the other side.

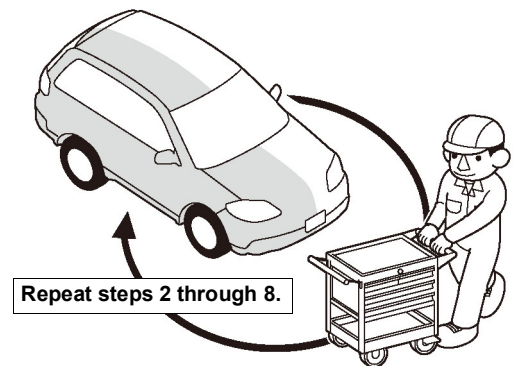

Q9D1014AM

10. Check that all parts are installed properly.
11. Give the storage bag and Accessory User's Information Manual to the customer.