

Germain Honda of College Hills




INSTALLATION INSTRUCTIONS

Accessory
TAILGATE SPOILER

Application
**2023 CR-V
MODEL SERIES**

Publications No.
VERSION 1
Issue Date
AUG 2022

GENERAL VIEW

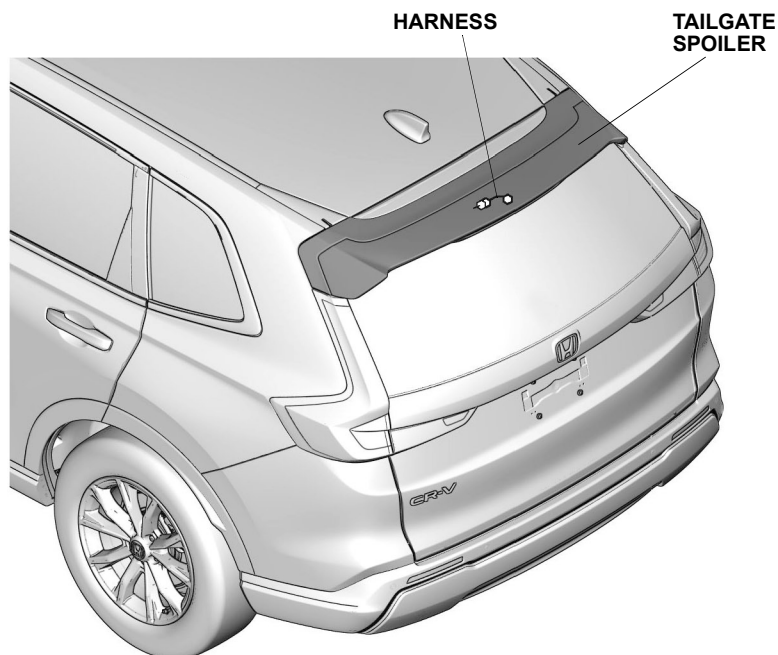

QLN0201AG

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

⚠ DANGER

You will be killed or seriously hurt if you do not follow the instructions.

⚠ WARNING

You can be killed or seriously hurt if you do not follow the instructions.

⚠ CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.



Indicates a prohibited action.

Germain Honda of College Hills

Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle.
(Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.




Clean with isopropyl alcohol.




Return the original part to the customer.
(Do not reuse.)


Wire Harness Routing Precaution

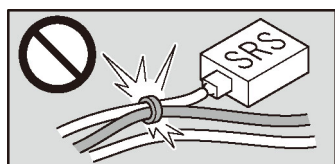


Do not secure the
accessory harness to the
SRS harness.
(except for instruction
cases.)

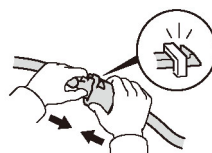


Push the connectors and
terminals together until
they lock.

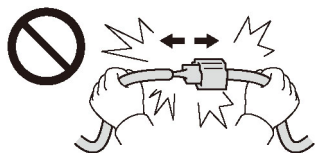

Do not pull the harness to
unplug the connectors.

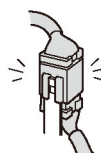

Install removed
connectors in their original
location.

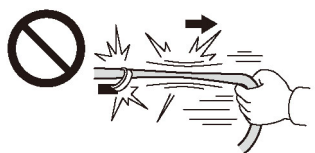


Do not pull the harness.



Secure the accessory
harness as shown.



Do not pinch the harness.

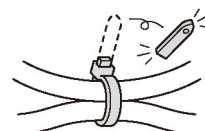

Cut off the excess wire tie.

Germain Honda of College Hills

Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Be careful not to damage the vehicle or the parts.
- Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- The illustrations may differ slightly from the actual accessory.

Safety: Electric Parts




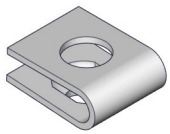

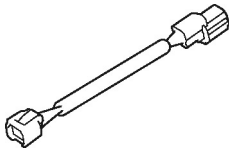

Always disconnect the negative cable from the battery before beginning work.

Safety: Accessory

- Always use the parts and tools specified in the installation instructions.
- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

PARTS LIST

Tailgate Spoiler Kit (P/N 08F02-3A0-100)

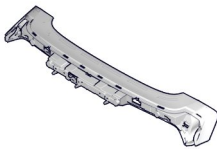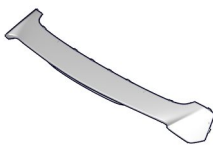Tailgate spoiler	Tailgate spoiler trim	Clips (6)	Spring nuts (8)
			
Self-tapping screws (8)	Harness	Wire tie with clip	
			

Germain Honda of College Hills

REQUIRED TOOLS AND SUPPLIES

- 10 mm Open end wrench
- 8 mm and 10 mm Sockets
- Needle nose pliers
- Isopropyl alcohol
- Blanket
- Phillips screwdriver
- Diagonal cutters
- Shop towel
- Ratchet
- Torque wrench
- Ruler
- Masking tape

The following tools are available through the Honda Tool and Equipment Program:

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)
- Rubber Roller (T/N MHLE54D)





Germain Honda of College Hills

INSTALLATION

1. Disconnect the negative cable from the battery.


NOTE

- With the driver's door open, turn the vehicle to the OFF (LOCK) mode, then wait at least 3 minutes before disconnecting the 12 volt negative battery cable.
- Take countermeasures to prevent from locking the tailgate.

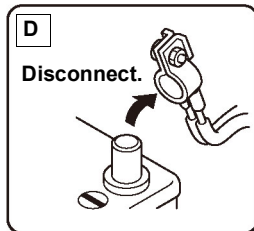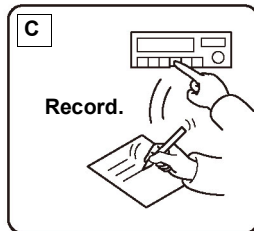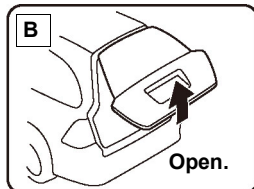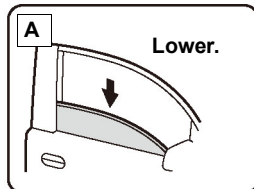


QCD0504BM

2. Remove the tailgate upper trim panel.

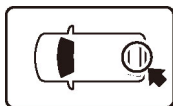


2 RETAINING TABS

4 CLIPS

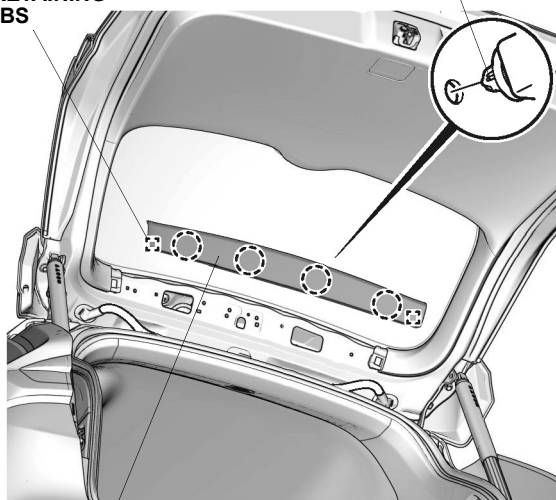

QL01902AX

3. Remove the nut and bolts.

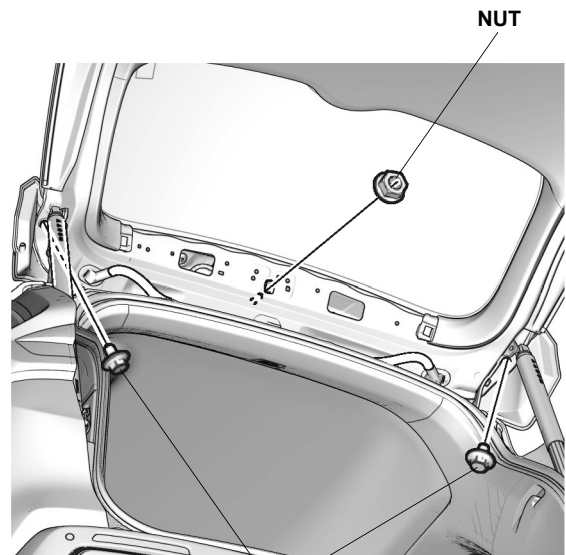


QLN0202AG

4. Remove the tailgate spoiler.



6 CLIP PINS


TAILGATE SPOILER

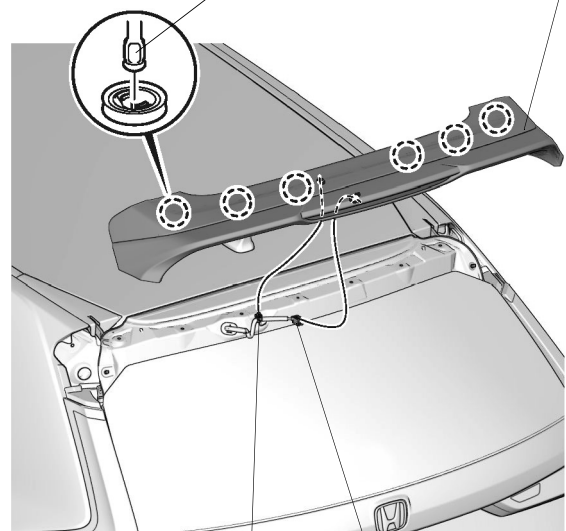

QLN0301AG

Germain Honda of College Hills



5. Remove the grommets.

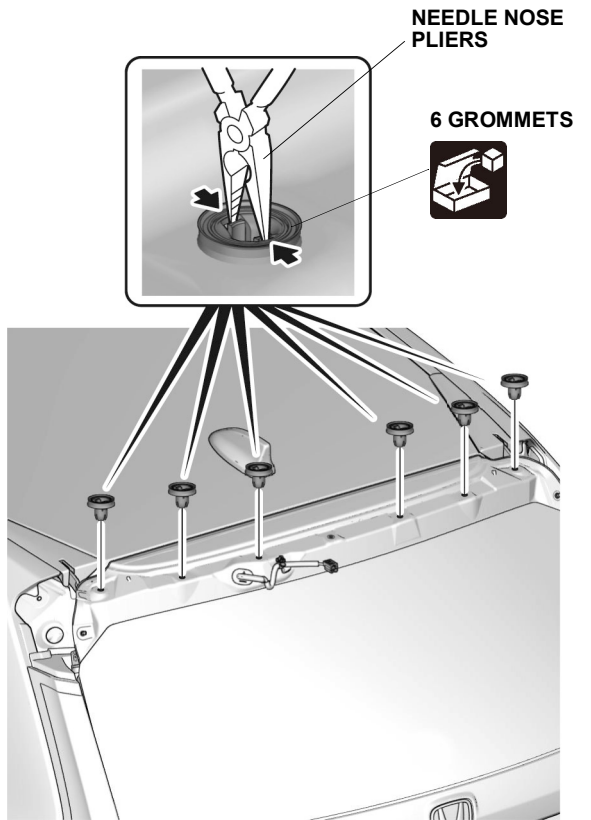


6. Remove the vehicle clip.

NOTE

Be careful not to damage the vehicle harness.

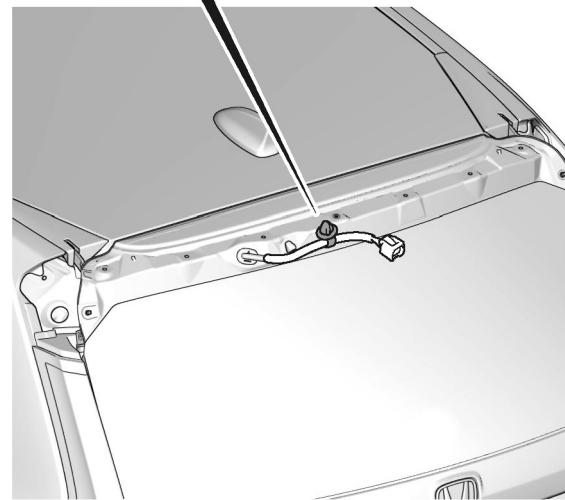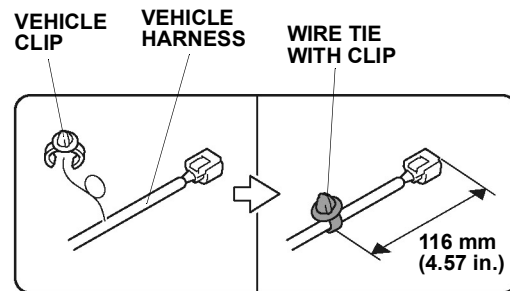


7. Install the wire tie with clip.
8. Remove the tailgate spoiler trim.

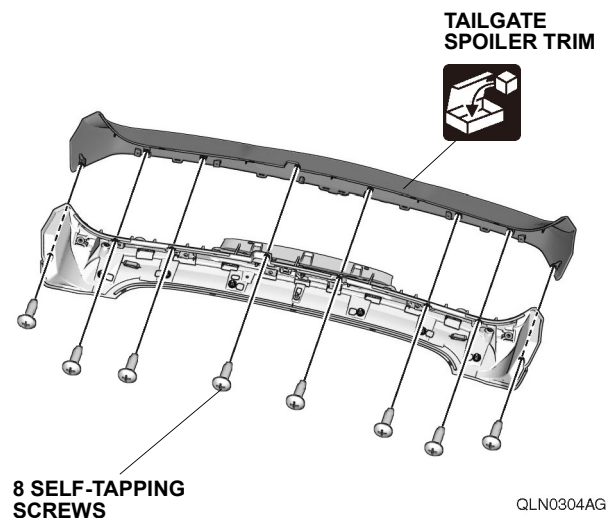


Germain Honda of College Hills

9. Remove the nuts and bolt.

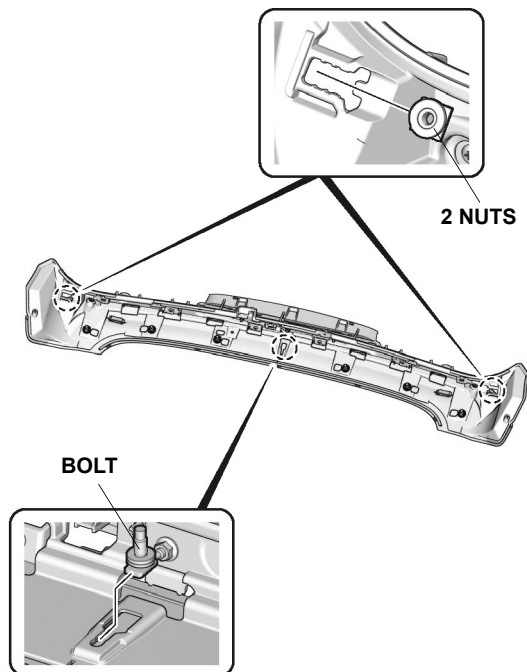


QLN0305AG

10. Remove the high mount brake light.

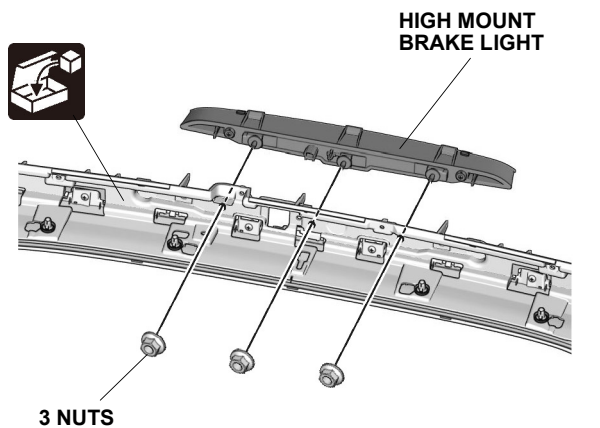

QLN0306AG

11. Install the high mount brake light.

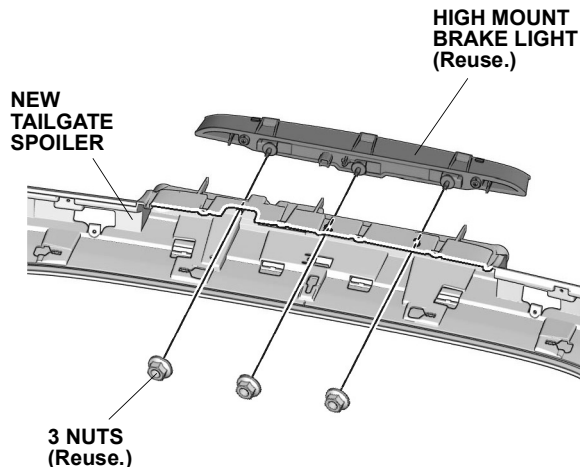


QLN0307AG

12. Install the spring nuts.

NOTE


- Make sure to install the spring nuts in the correct orientation.
- Use masking tape to hold the spring nuts in place.

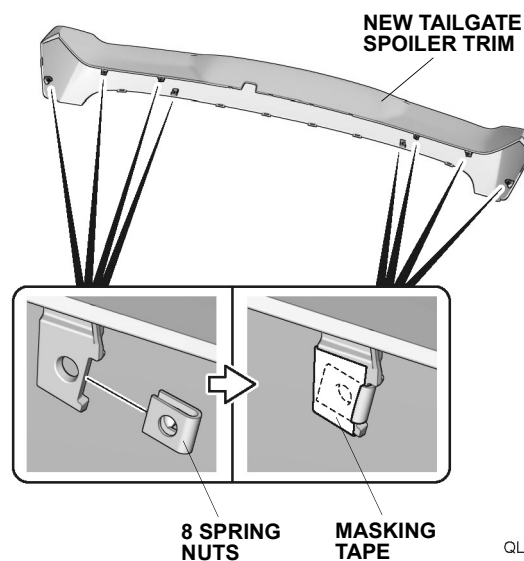


QLN0308BG

Germain Honda of College Hills


13. Clean the attaching areas.

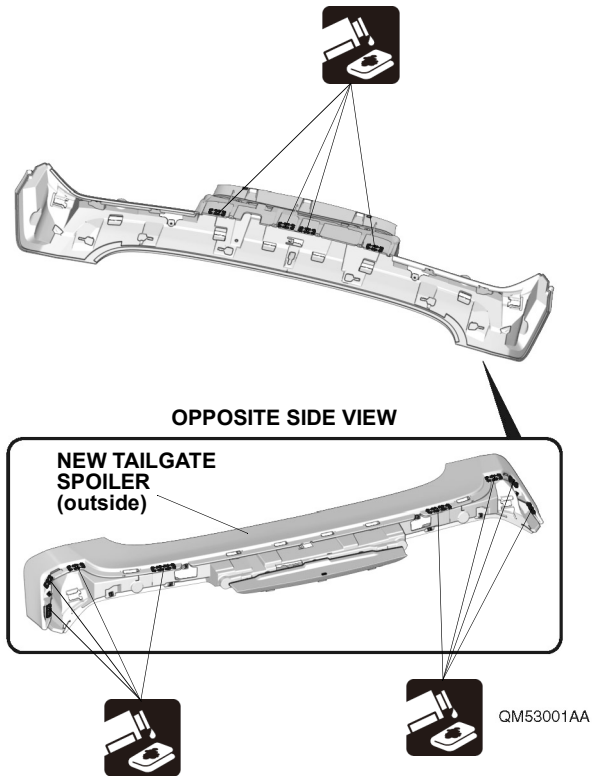


14. Temporarily attach the tabs.

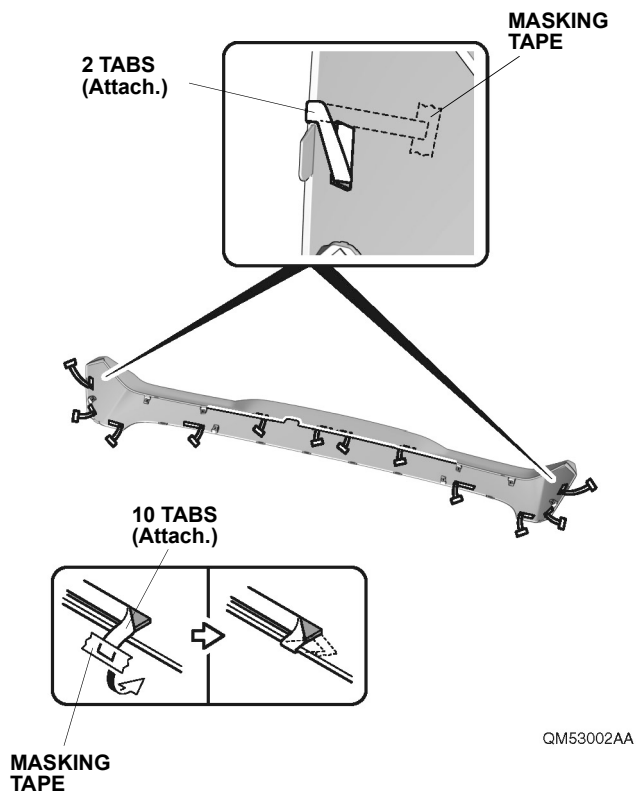

15. Loosely install the new tailgate spoiler trim.

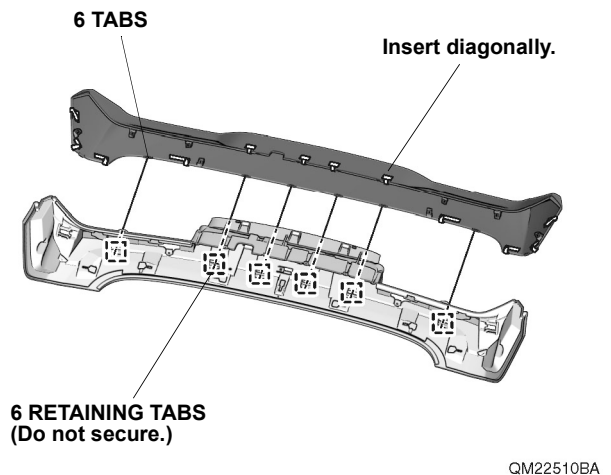

16. Loosely secure the new tailgate spoiler trim.

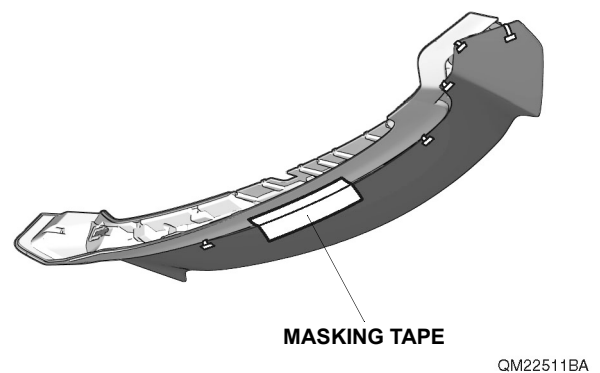


Germain Honda of College Hills

17. Secure the new tailgate spoiler trim.


NOTE

Make sure to secure all the hooks and the retaining tabs properly.

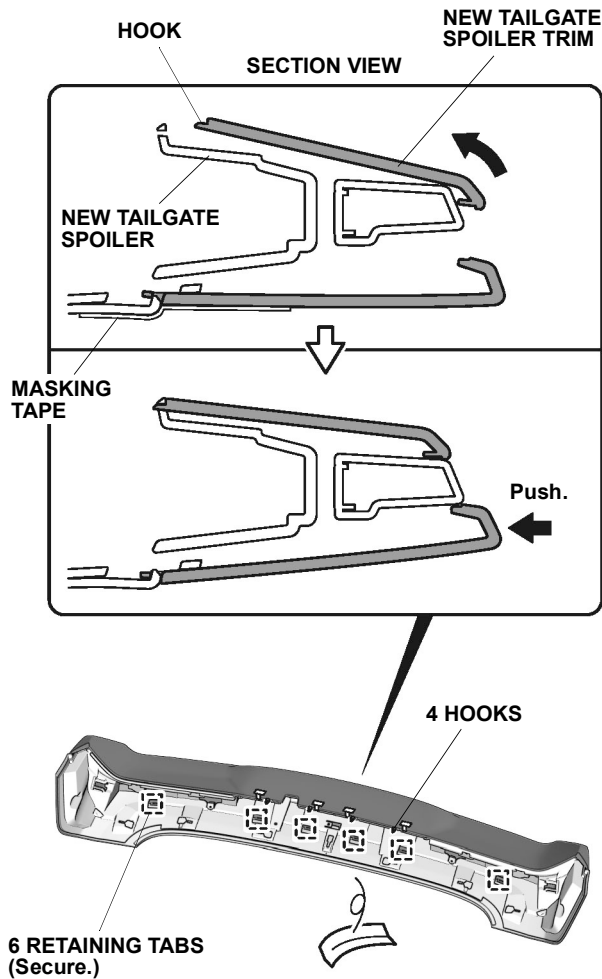

QM22512CA

18. Remove the masking tape.
19. Loosely secure the new tailgate spoiler trim.

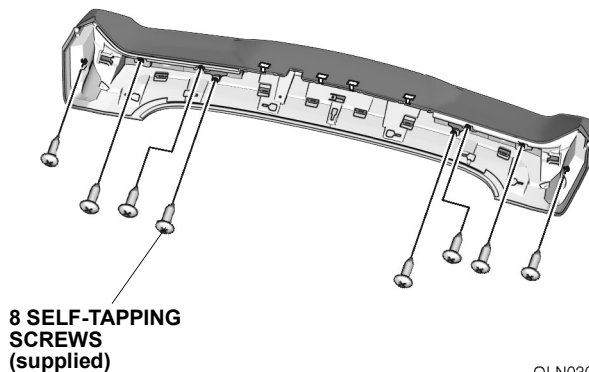


QLN0309CG

20. Secure the new tailgate spoiler trim.

NOTE


Check the position of the double-sided adhesive tapes and make sure to press firmly.

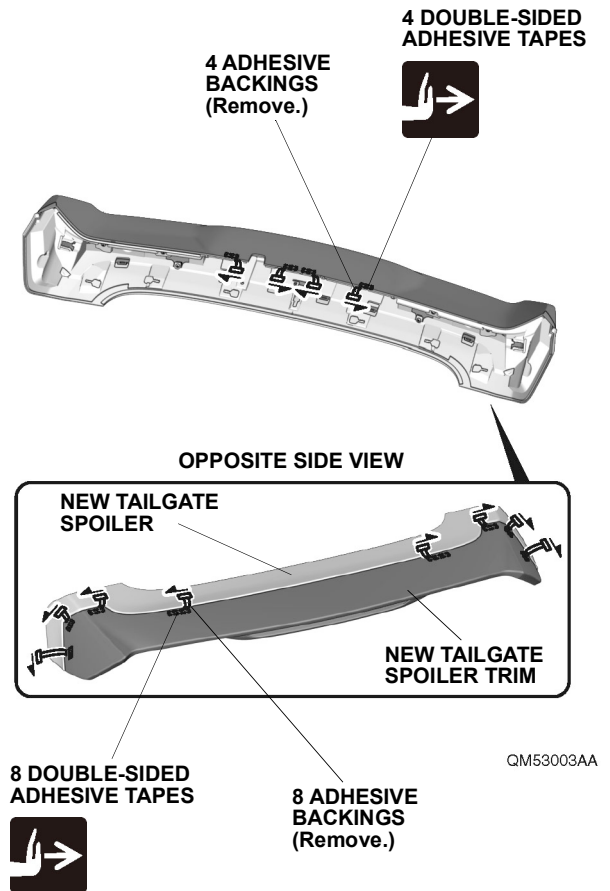


QM53003AA

Germain Honda of College Hills

21. Secure the new tailgate spoiler trim.

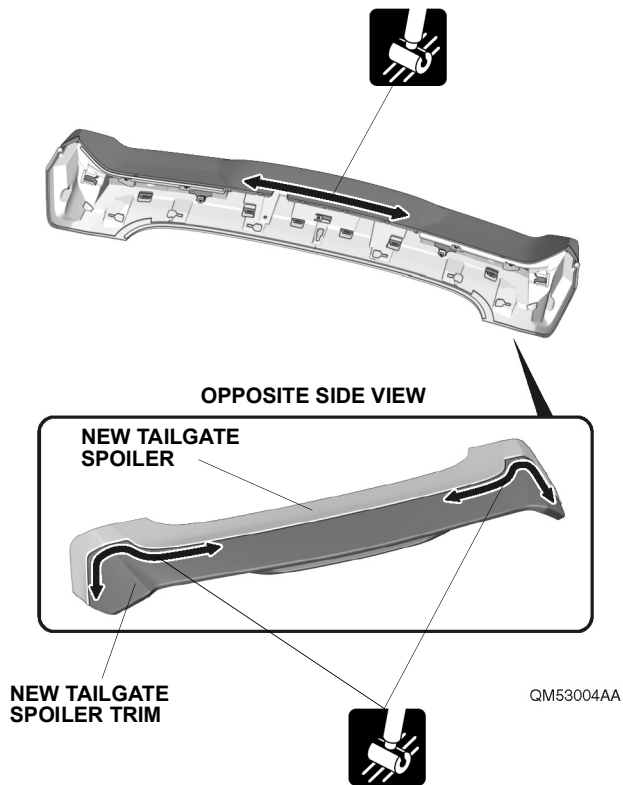


22. Secure the new tailgate spoiler trim.

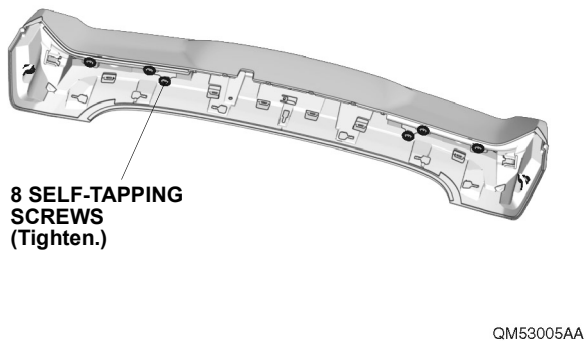

23. Install the bolt and clips.


NOTE

Make sure to install the bolt and clips in the correct positions.

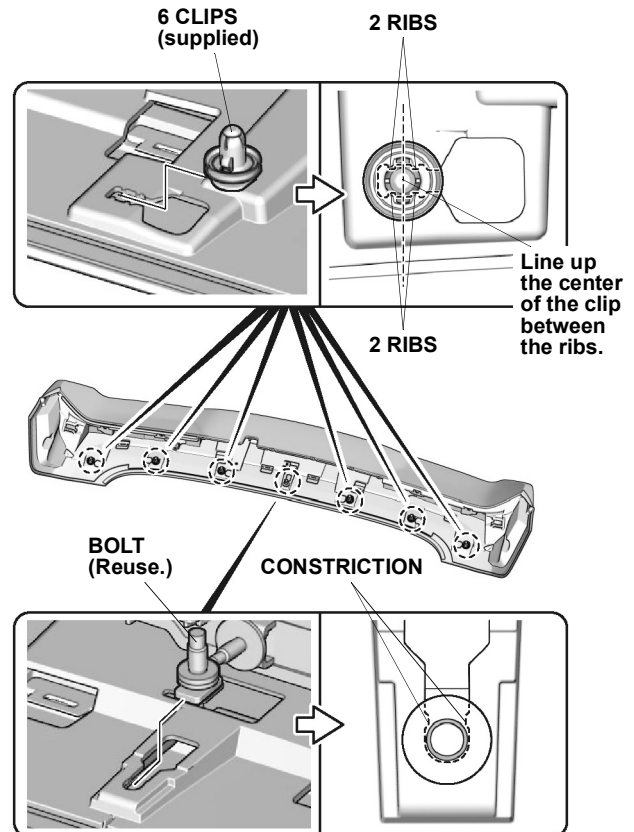


Germain Honda of College Hills

24. Install the nuts.

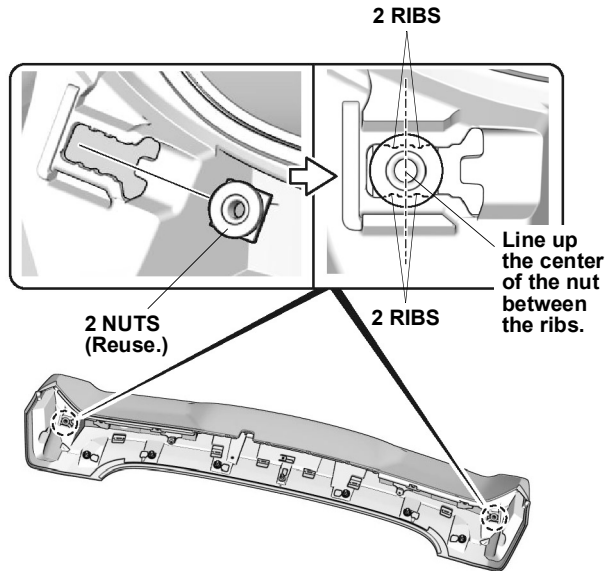


QLN0311BG

25. Plug-in the harness connector.

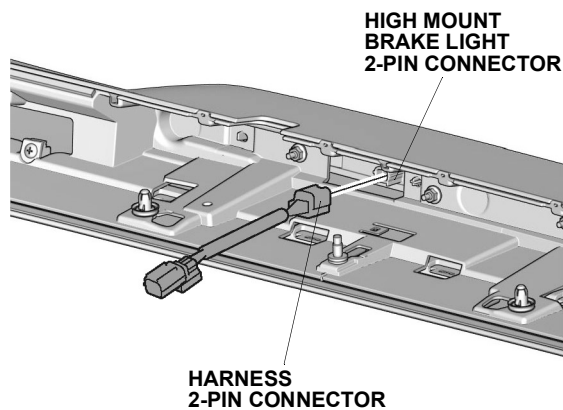


QLN0312AG

26. Secure the harness connector.

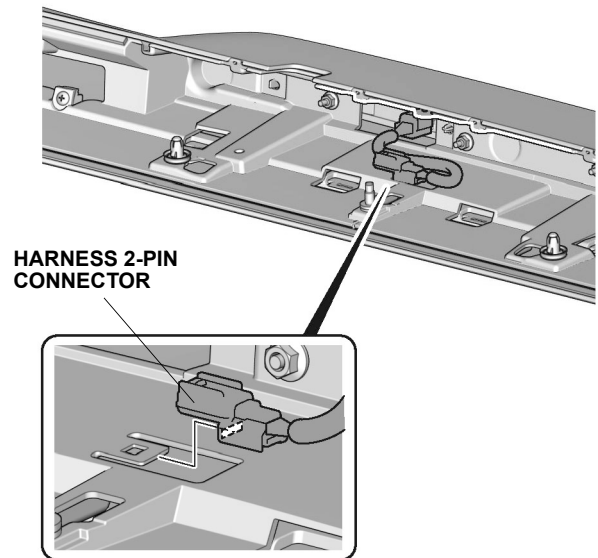

QM22801AA


27. Clean the attaching area.

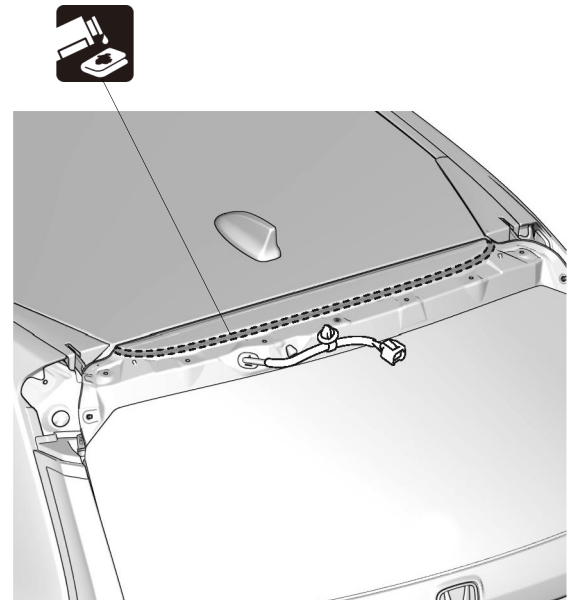


QM53006AA

Germain Honda of College Hills

28. Temporarily attach the adhesive backing.

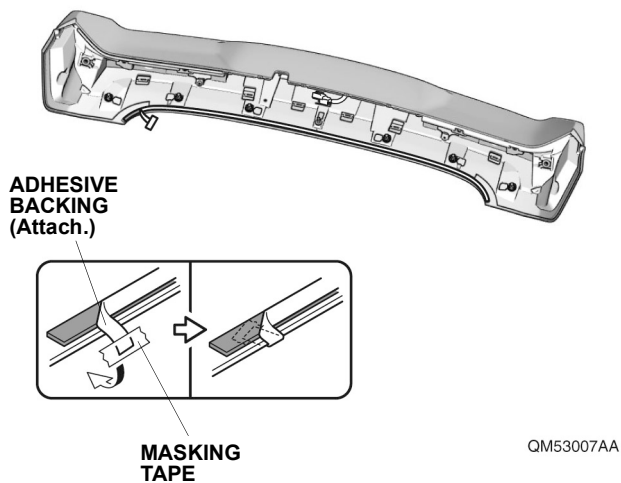

29. Plug-in the harness connector.

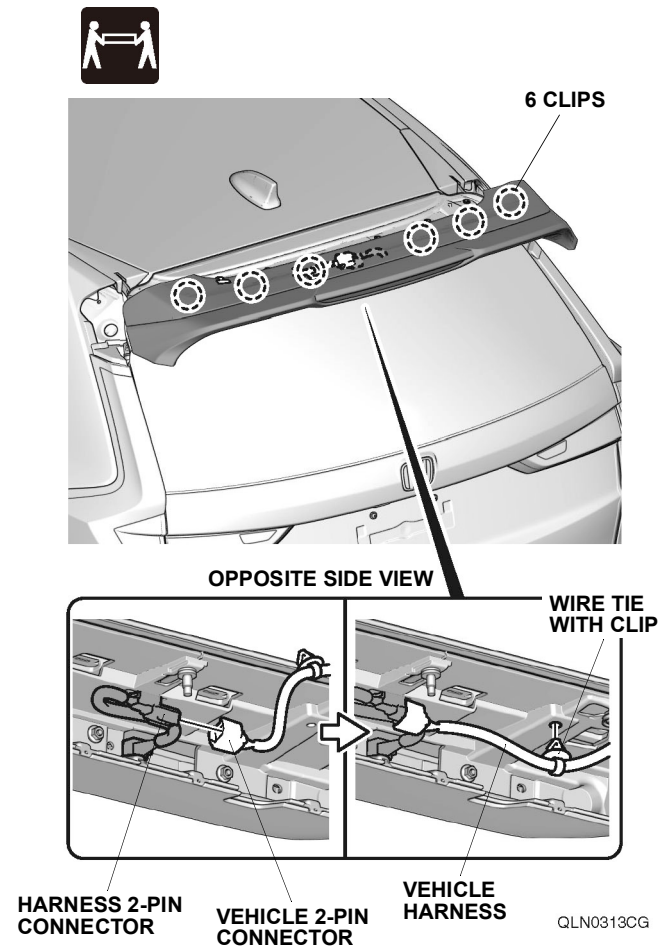

30. Secure the vehicle harness.

31. Install the new tailgate spoiler.

NOTE

To confirm clip engagement, listen for the “click” sound during installation.


Germain Honda of College Hills

32. Secure the new tailgate spoiler.

NOTE

Check the position of the double-sided adhesive tapes and make sure to press firmly.


DOUBLE-SIDED
ADHESIVE TAPE

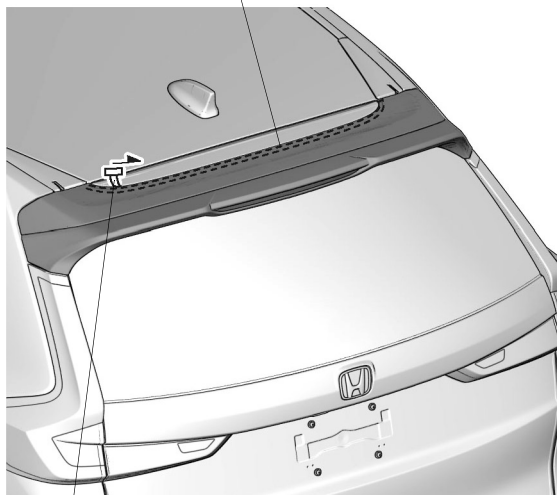

ADHESIVE
BACKING
(Remove.)

QM53008AA

33. Secure the new tailgate spoiler.

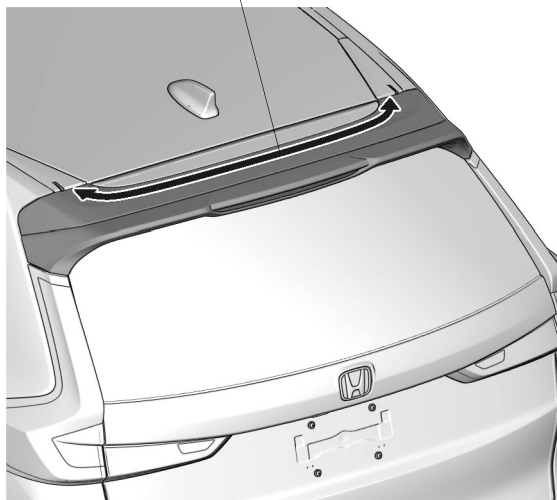


QM53009AA

34. Secure the new tailgate spoiler.

NUT



6.6 lb-ft
(9.0 N·m)

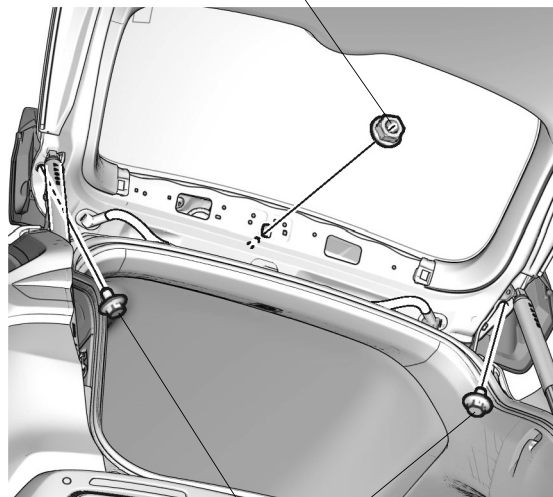

QLN0314AG

2 BOLTS



6.6 lb-ft
(9.0 N·m)


Germain Honda of College Hills

35. Check that all parts are installed and properly routed.

NOTE
<ul style="list-style-type: none">• Check that all harnesses are not pulled or pinched.• Make sure all clips and wire ties are securely installed.

36. Install all removed parts.

37. Connect the negative cable to the battery.

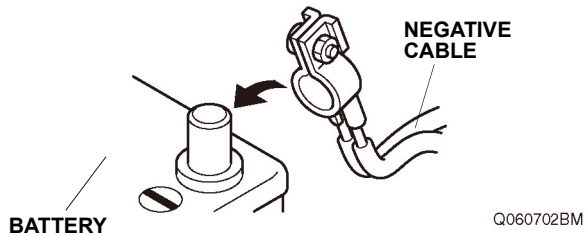

38. Make sure that the high mount brake light works properly.
39. Make sure all accessories and systems operate properly.
40. If necessary, restore the systems back to normal operation as described in the service information.
41. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.