

# Germain Honda of College Hills



## INSTALLATION INSTRUCTIONS

Accessory

WIRELESS CHARGER

Application

2023 CR-V  
MODEL SERIES


Publications No.

VERSION 1

Issue Date

AUG 2022

## GENERAL VIEW

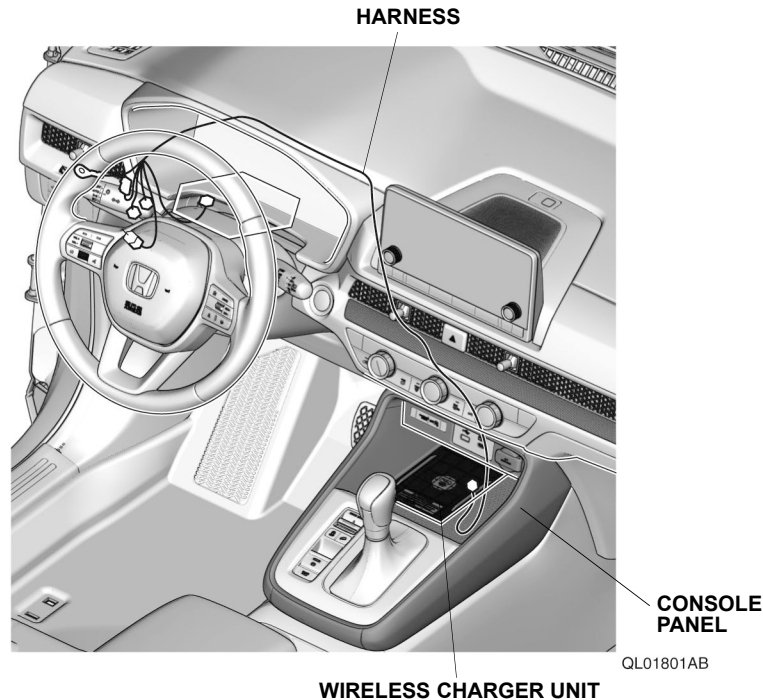

## FOR YOUR SAFETY (Read carefully.)

### Warning Symbols

**Safety:** Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

\*All symbols are not used in all installation instructions.

**⚠ DANGER**

You will be killed or seriously hurt if you do not follow the instructions.

**⚠ WARNING**

You can be killed or seriously hurt if you do not follow the instructions.

**⚠ CAUTION**

You can be hurt if you do not follow the instructions.

**NOTICE**

Gives advice to prevent damage to the product, vehicle, the environment or other property.

**NOTE**

Gives helpful information or instructions to be followed when installing this product.



Indicates a prohibited action.

# Germain Honda of College Hills

## Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

\*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle.  
(Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.




Clean with isopropyl alcohol.




Return the original part to the customer.  
(Do not reuse.)


## Wire Harness Routing Precaution

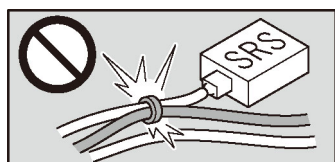


Do not secure the accessory harness to the SRS harness. (except for instruction cases.)

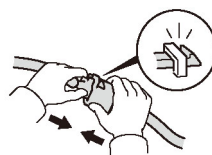


Push the connectors and terminals together until they lock.

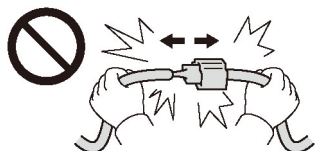

Do not pull the harness to unplug the connectors.

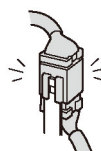

Install removed connectors in their original location.

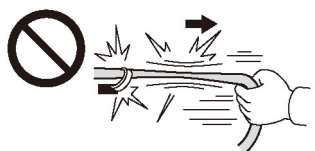


Do not pull the harness.



Secure the accessory harness as shown.



Do not pinch the harness.

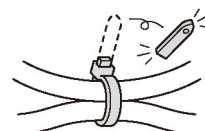

Cut off the excess wire tie.

# Germain Honda of College Hills

## Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and the safety of others.
- Be careful not to damage the vehicle or the parts.
- Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- The illustrations may differ slightly from the actual accessory.

## Safety: Electric Parts

Always disconnect the negative cable from the battery before beginning work.

## Safety: Accessory

- Always use the parts and tools specified in the installation instructions.
- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle or moisten it for 24 hours to allow the adhesive to cure.









## PARTS LIST

### Wireless Charger Kit

(P/N 08U58-3A0-100)

(P/N 08U58-3A0-100A)

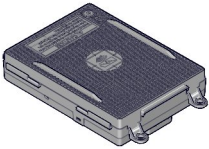(\*: The part differs depending on the kit.)

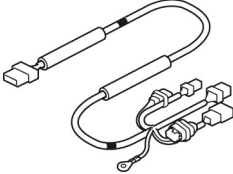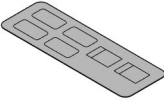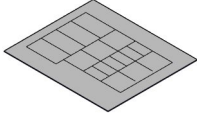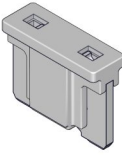Wireless charger unit	*Console panel (P/N 08U58-3A0-100)	*Console panel (P/N 08U58-3A0-100A)	Harness
			
Fuse label A	Fuse label B	15A Fuse	Wire ties (9)
	(May not be used) 	(May not be used) 	

# Germain Honda of College Hills

Self-tapping screws (4)

Washer-bolts (2)



## REQUIRED TOOLS AND SUPPLIES

- Ratchet
- Shop towel
- Isopropyl alcohol
- 10 mm Socket
- Masking tape
- Diagonal cutters
- 10 mm Open end wrench
- Phillips screwdriver
- Torque wrench

The following tools are available through the Honda Tool and Equipment Program:

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)






# Germain Honda of College Hills

## INSTALLATION

1. Disconnect the negative cable from the battery.


### NOTE

With the driver's door open, turn the vehicle to the OFF (LOCK) mode, then wait at least 3 minutes before disconnecting the 12 volt negative battery cable.

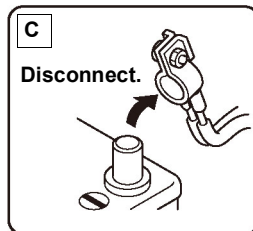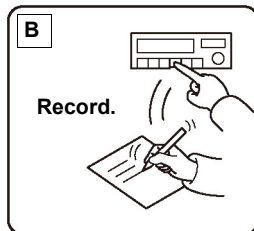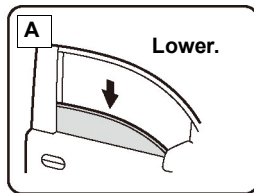

QCD0502BM

2. Move the shift lever to the "D" position.

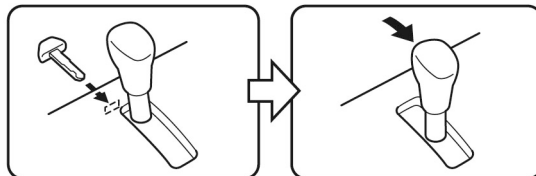


QM22301AB

3. Attach masking tape to protect the vehicle.

### NOTE


Do not remove the masking tape until after the parts are installed.

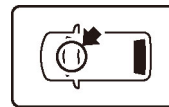

METER  
VISOR


MASKING  
TAPE

INSTRUMENT  
PANEL

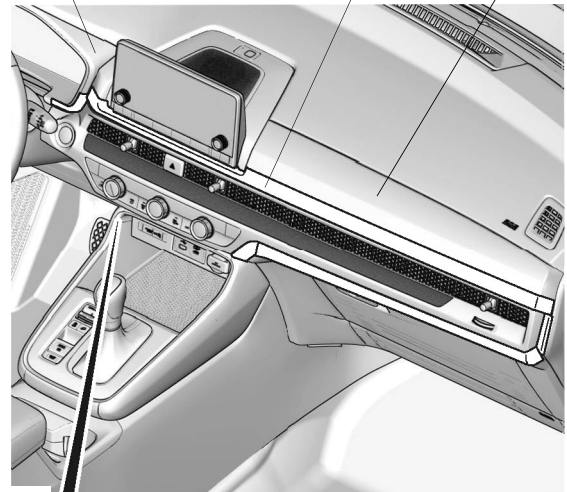

METER  
VISOR

OPPOSITE SIDE VIEW

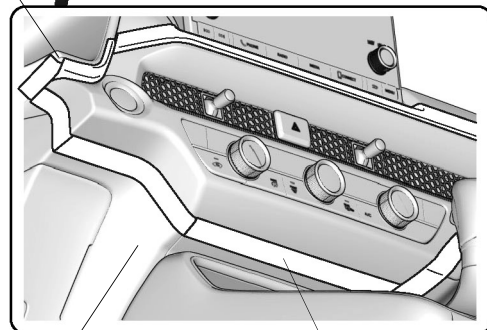


INSTRUMENT  
PANEL

MASKING  
TAPE

QM60321AA

# Germain Honda of College Hills


4. Remove the center trim panel.

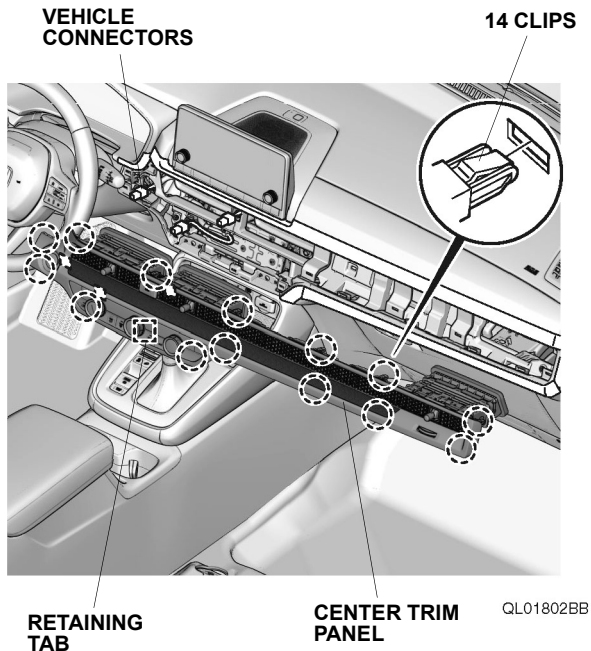


5. Attach masking tape to protect the vehicle.

## NOTE


Do not remove the masking tape until after the parts are installed.

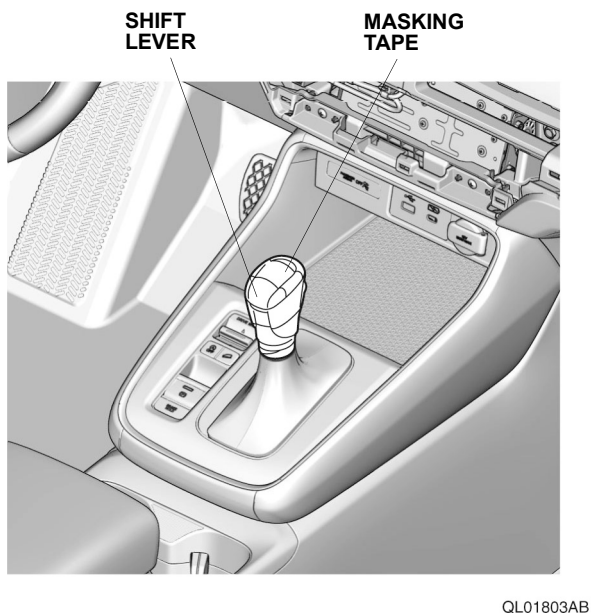

6. Remove the shift lever panel.

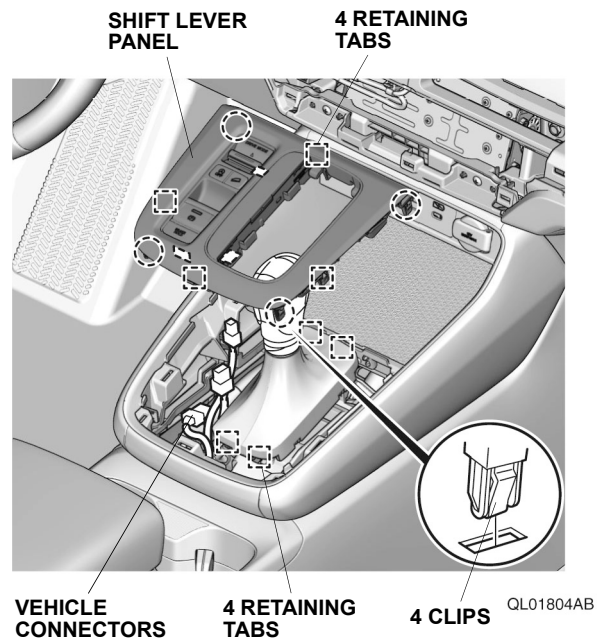

7. Remove the console panel.

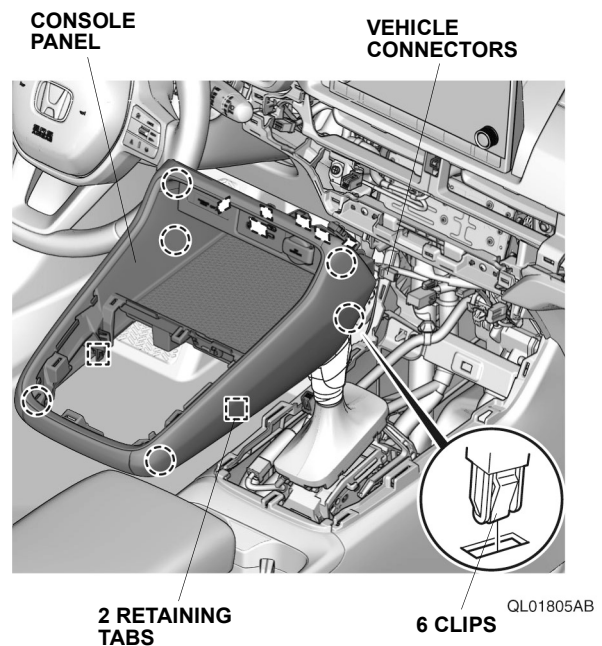


# Germain Honda of College Hills

8. Remove the driver's outside lower cover.



2 VEHICLE CLIPS

VEHICLE CONNECTOR

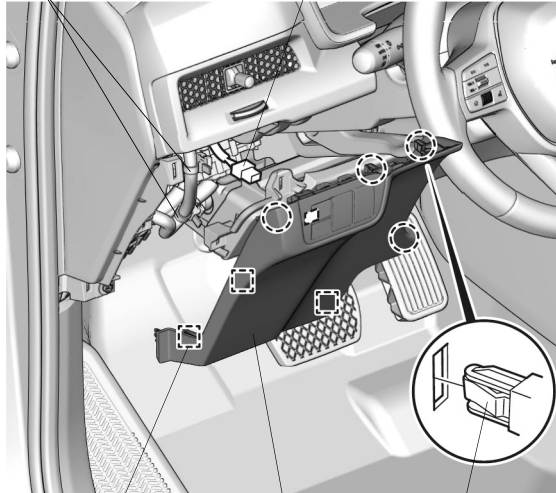

3 RETAINING TABS


DRIVER'S OUTSIDE LOWER COVER

4 CLIPS

QL01806AB

9. Remove the driver's trim.

4 CLIPS

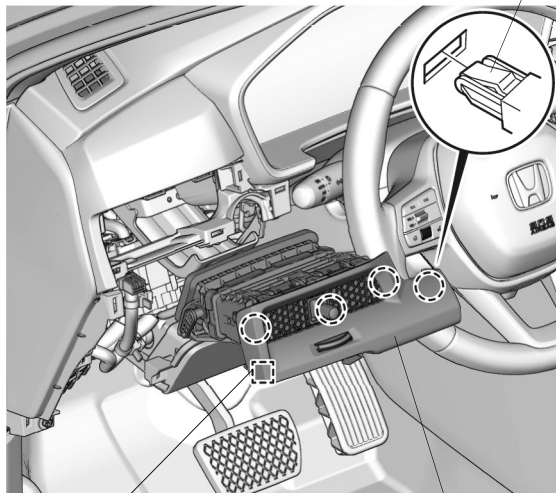


RETAINING TAB

DRIVER'S TRIM


QL01807AB

10. Fix the tilt lever of the column in the lowest position the telescopic in the position that is pulled most.

STEERING WHEEL

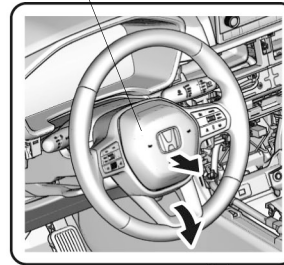

MASKING TAPE

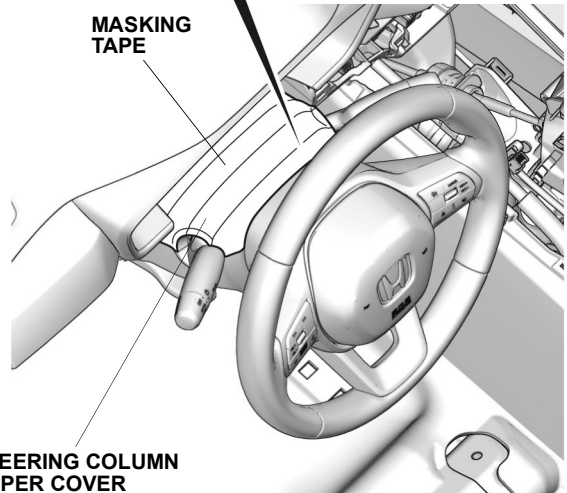

STEERING COLUMN UPPER COVER

QL01808AB


11. Attach masking tape to protect the vehicle.

## NOTE

Do not remove the masking tape until after the parts are installed.


# Germain Honda of College Hills

12. Release the blind plate.

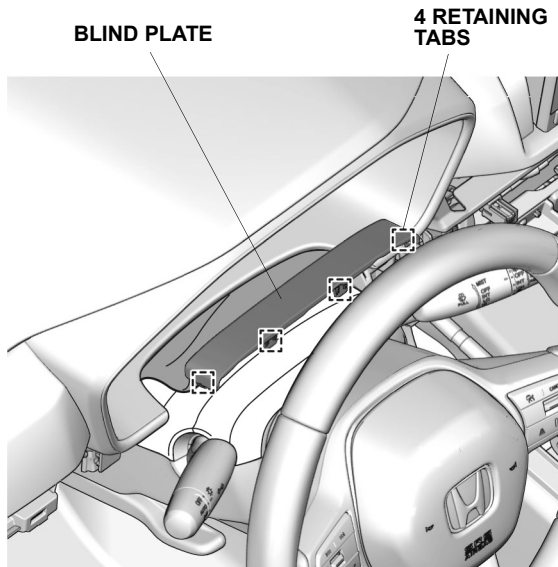

QL01901AB

13. Remove the meter visor.


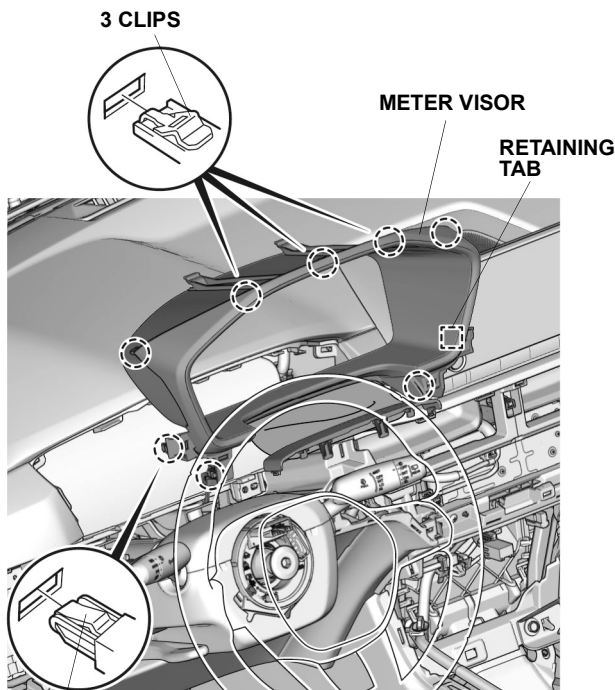


QL01902AB

14. Remove the meter.

## NOTE

Place the meter in a safe place with the screen facing upward.

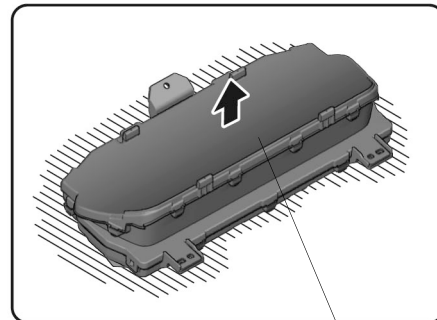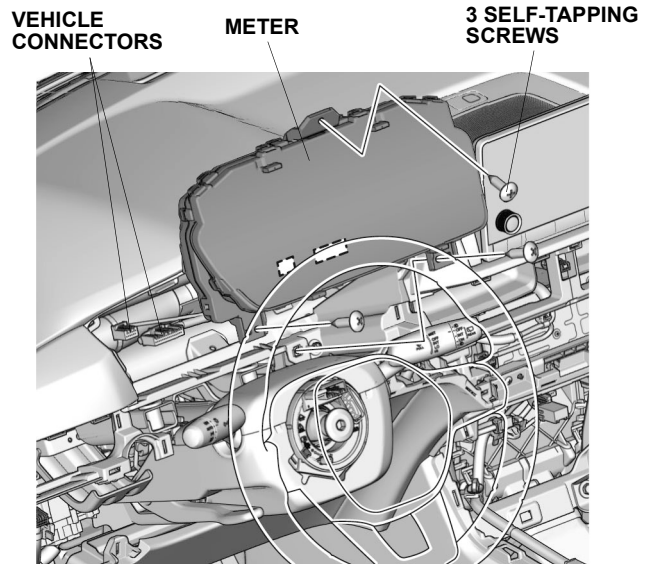

QL01903AB




# Germain Honda of College Hills

15. Remove the driver's knee airbag.


## NOTICE

- Do not drop the removed knee airbag or hit it on an object.
- Place the removed knee airbag in a safe place with the padded surface (top) facing upward.

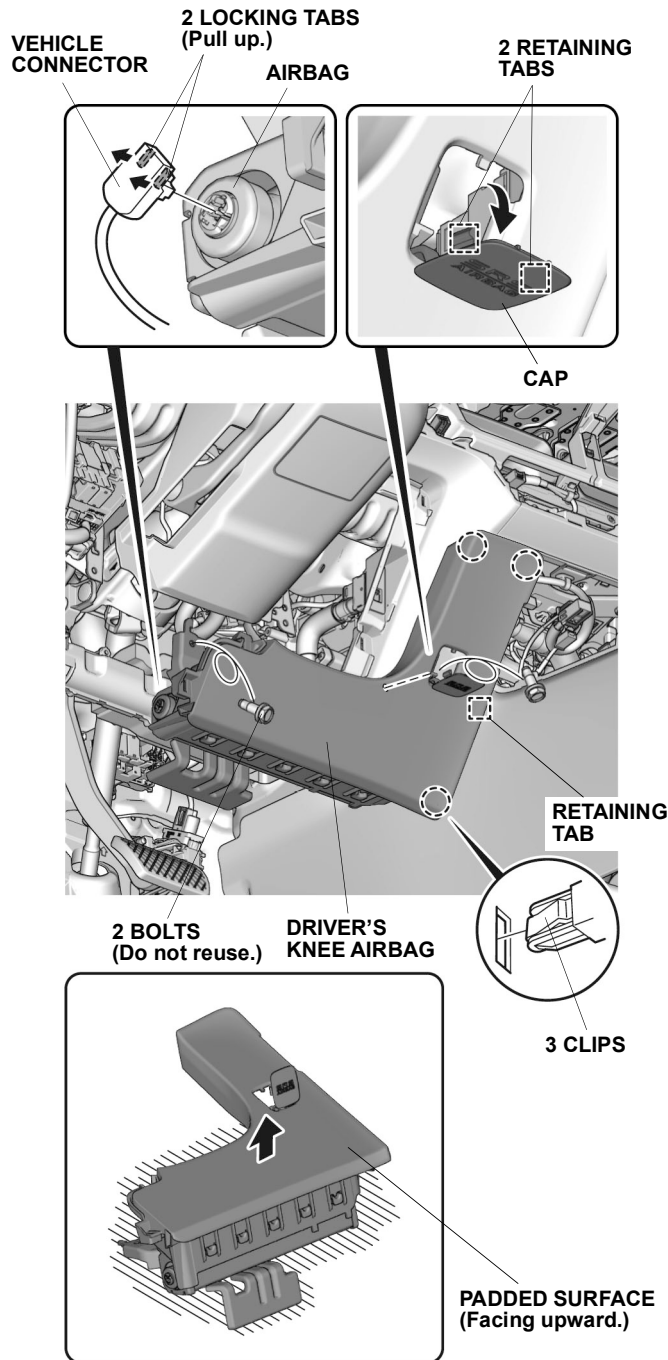


QL01904AB

16. Attach the fuse label A.

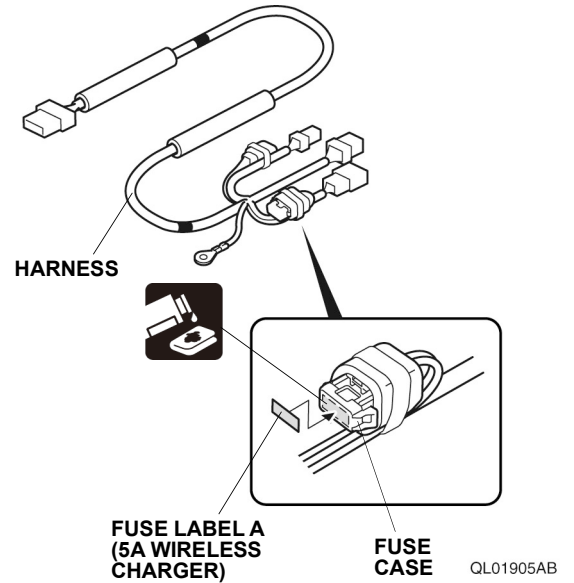



17. Secure the harness.

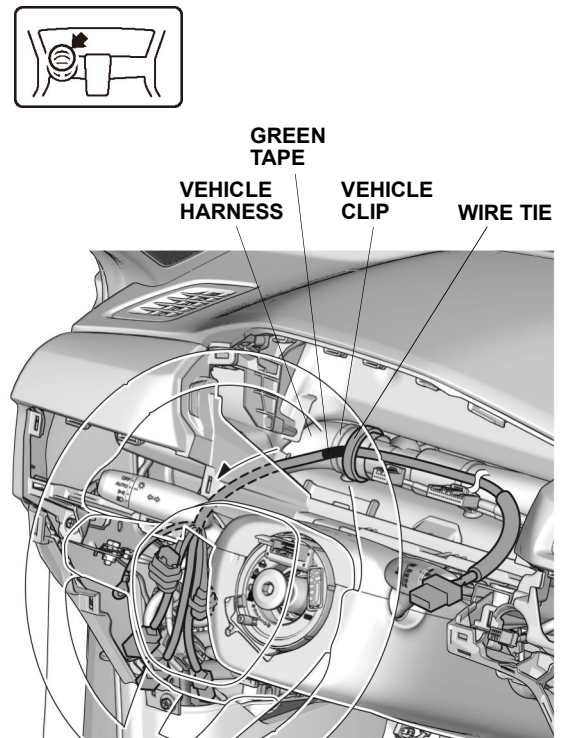

QL01906AB



# Germain Honda of College Hills

18. Plug-in the harness connector.

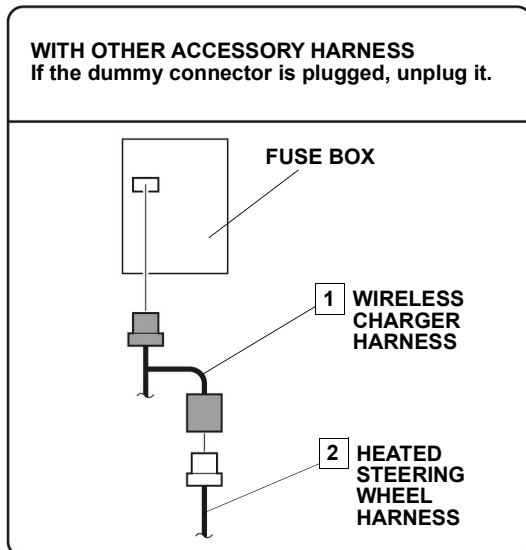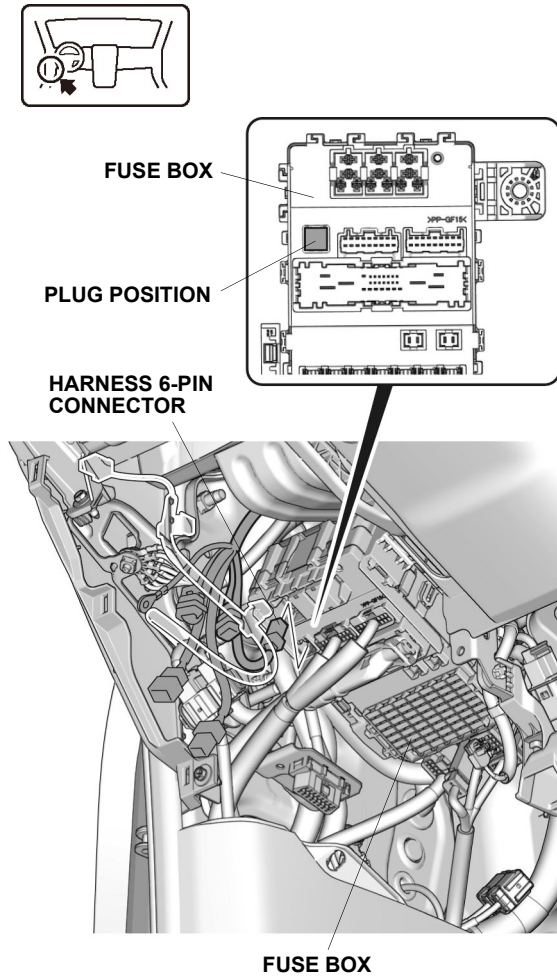

QL01907AB


19. Plug-in the harness connector.

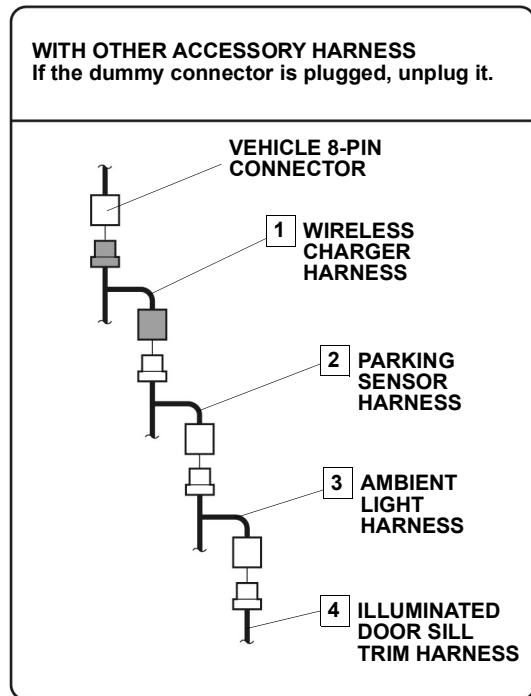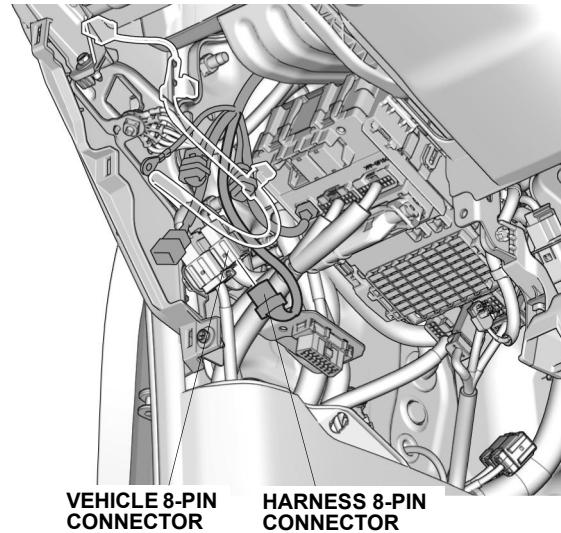


QL02001AB

# Germain Honda of College Hills

20. Secure the harness connector.

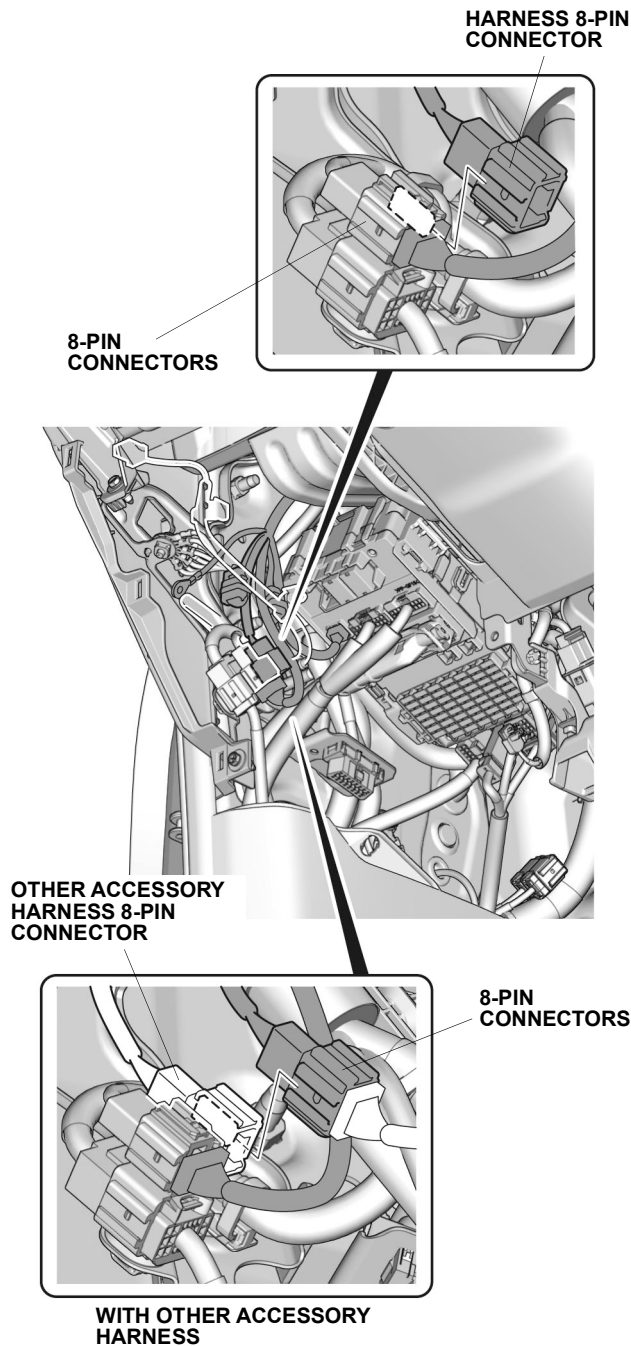

21. Remove the vehicle ground bolt.

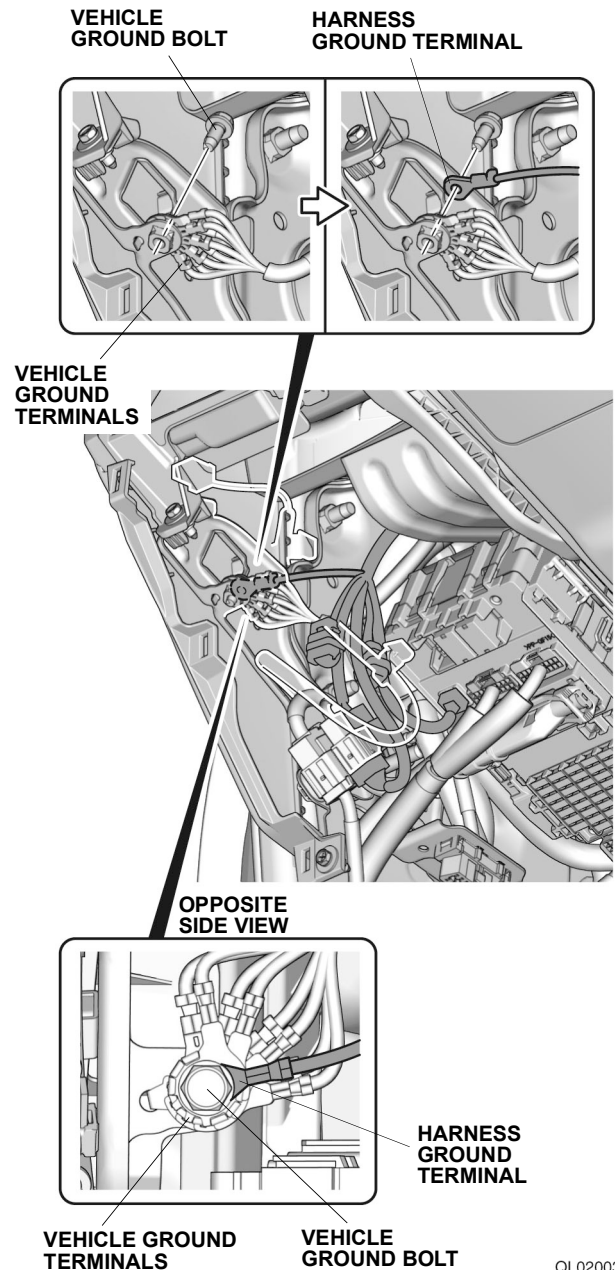

22. Secure the harness ground terminal.


## NOTE

Do not put the ground terminal caulking on top of one another.




# Germain Honda of College Hills

23. Secure the harness.

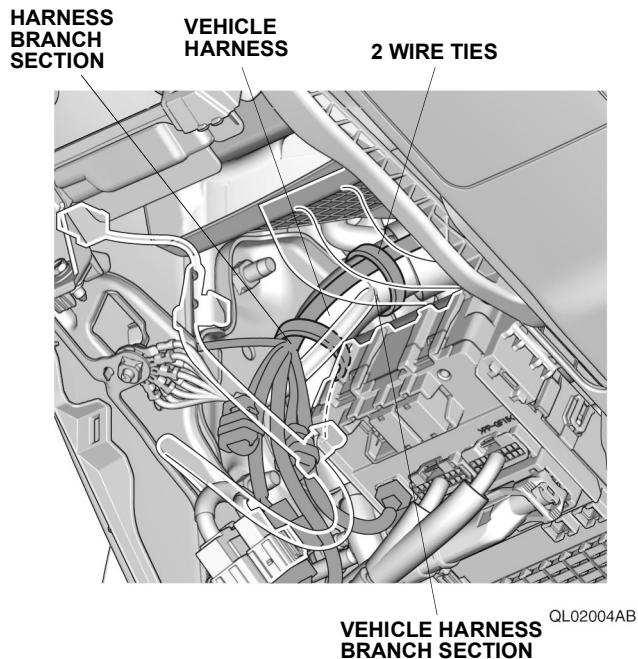



24. Secure the harness.

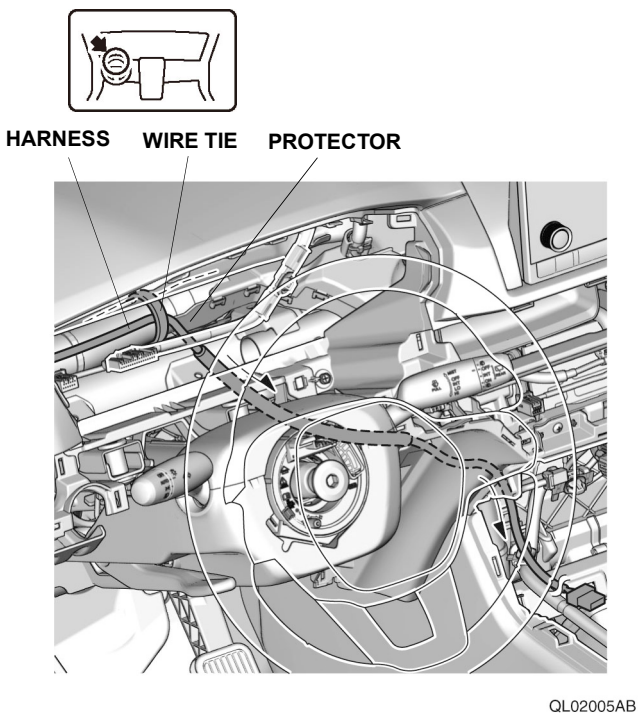

25. Secure the harness.


## NOTE

Be careful not to damage the harness.

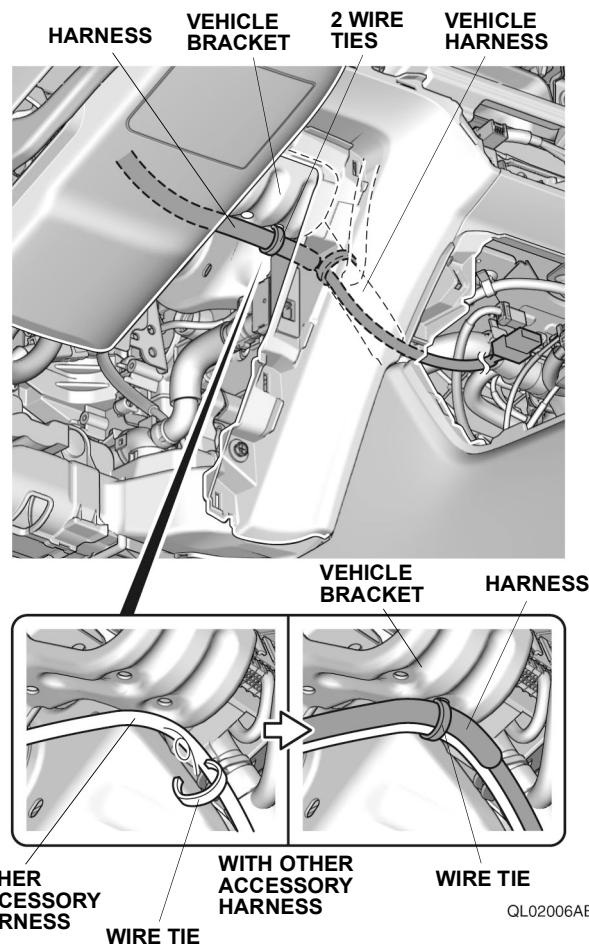


# Germain Honda of College Hills

26. Secure the harness.

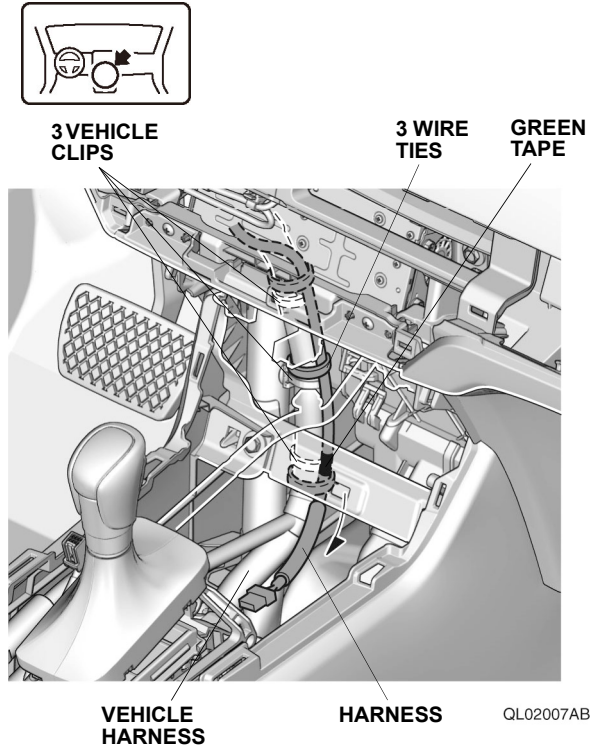


27. Remove the USB adapter holder, indicator, and console light.

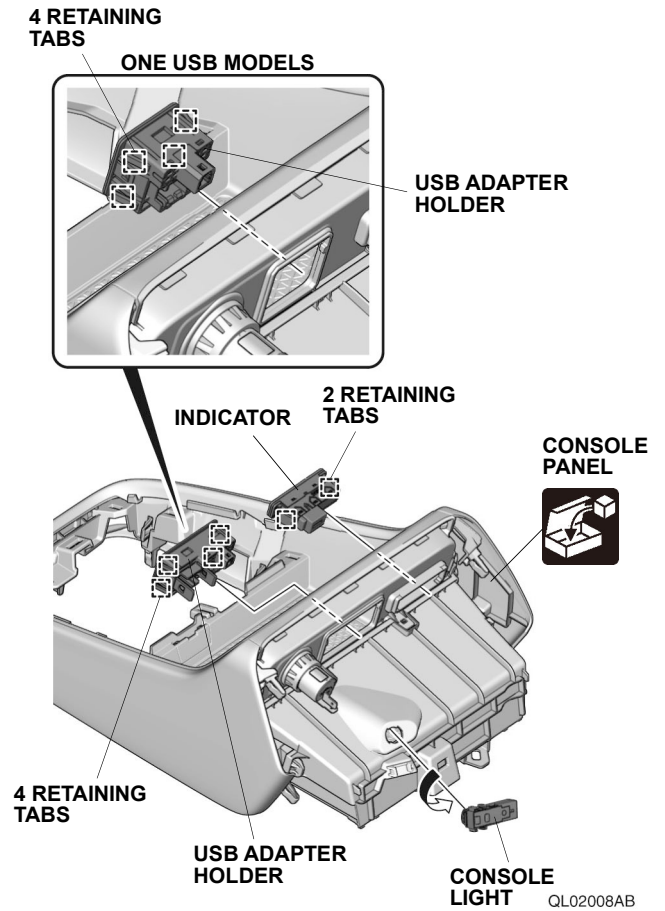


# Germain Honda of College Hills


28. Install the USB adapter holder, indicator, and console light.

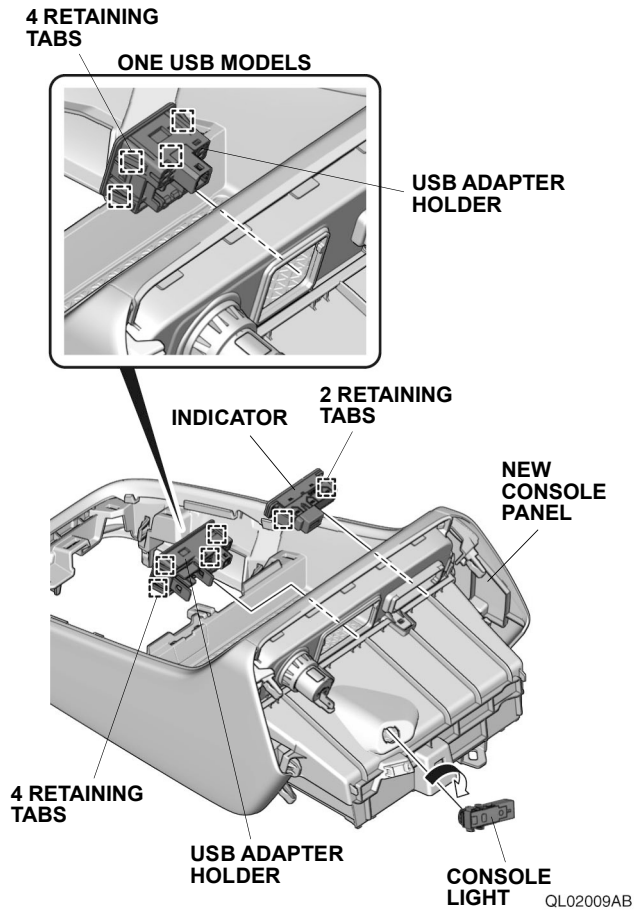

29. Install the wireless charger unit.

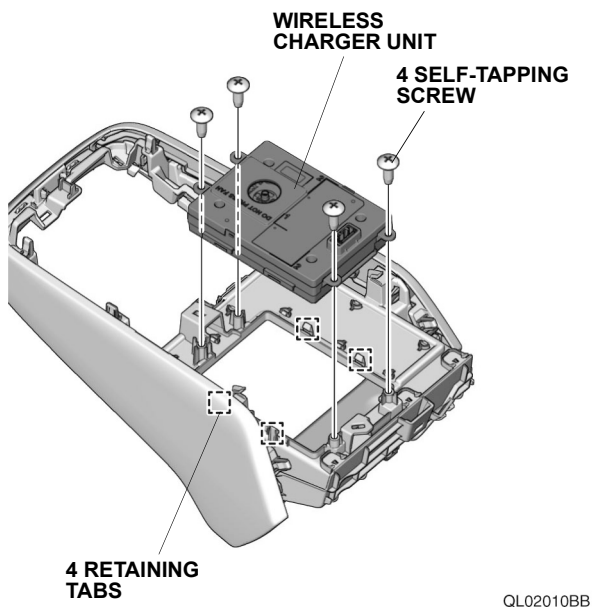



30. Plug-in the harness connector.

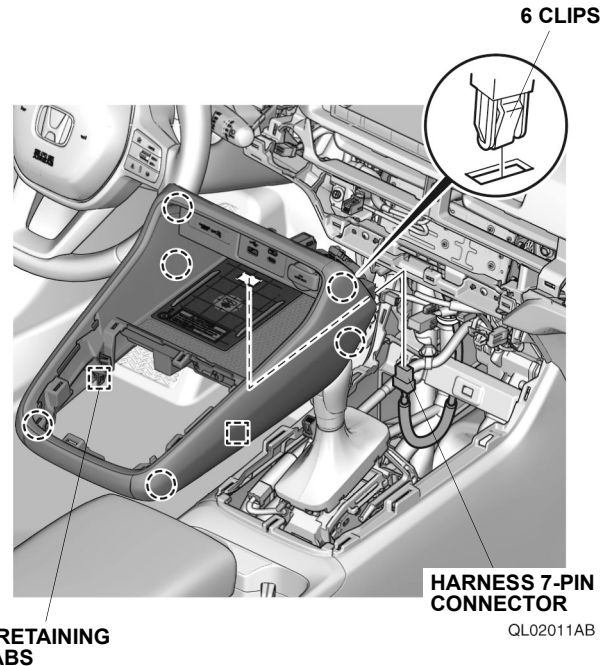

31. Install the new console panel.
32. Install the 15A fuse.

## NOTE

If the 15A fuse is already installed, do not install the fuse.

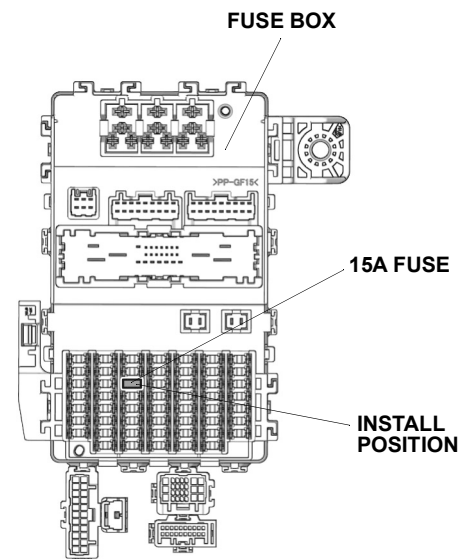




# Germain Honda of College Hills

33. Attach the fuse label B.



## NOTE

If the fuse label (15A) is already attached, do not attach the fuse label.



ATTACH  
AREA

FUSE  
LABEL

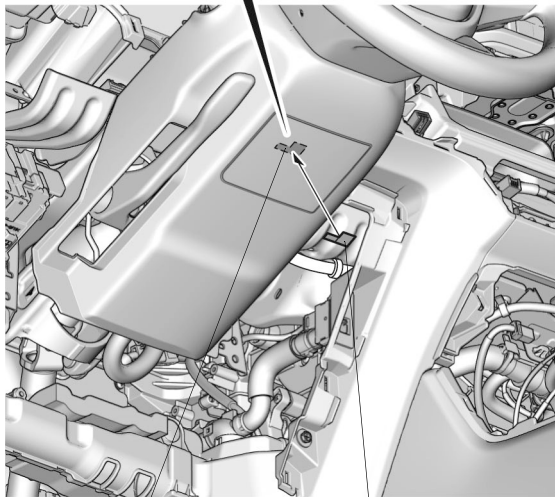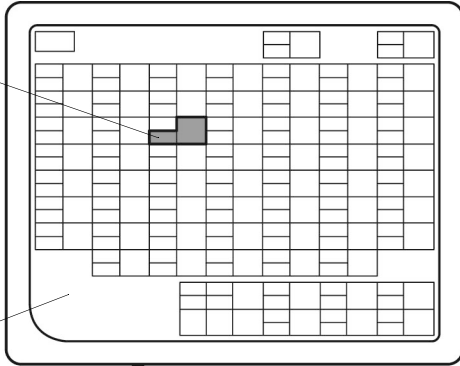

FUSE LABEL B  
(15A OPTION  
FUSE)

QL02013AB

34. Check that all parts are installed and properly routed.

## NOTE

- Check that all harnesses are not pulled or pinched.
- Make sure all clips and wire ties are securely installed.


35. Install all removed parts.

<Installing the Driver's Knee Airbag>

36. Install the driver's knee airbag.



## NOTE

Make sure to replace with the washer-bolt included in this kit.



VEHICLE  
CONNECTOR

AIRBAG

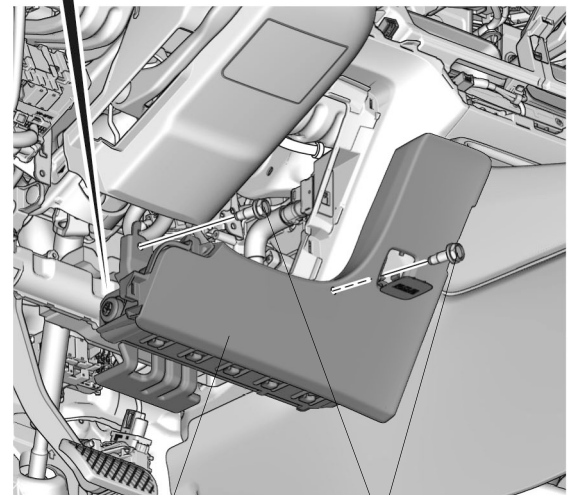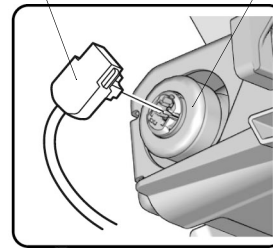

DRIVER'S  
KNEE AIRBAG

2 WASHER-BOLTS  
(supplied)


QL02014AB



5.1-11 lb-ft  
(6.9-14.4 N·m)

# Germain Honda of College Hills

37. Connect the negative cable to the battery.

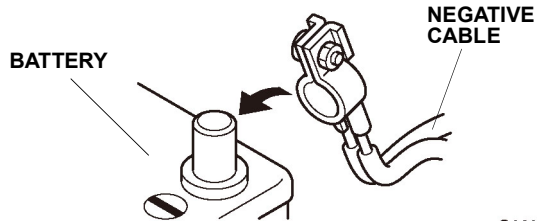

38. Turn the engine switch (power switch) to ON; the SRS indicator should come on for about 6 seconds and then go off.
39. Make sure the accessory operates as described in the vehicle owner's manual.
40. Make sure all accessories and systems operate properly.
41. If necessary, restore the systems back to normal operation as described in the service information.
42. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.