




INSTALLATION INSTRUCTIONS

Accessory
BLACK EMBLEMS

Application
**2026 CR-V
MODEL SERIES**

Publications No.
VERSION 1
Issue Date
MAY 2025

GENERAL VIEW

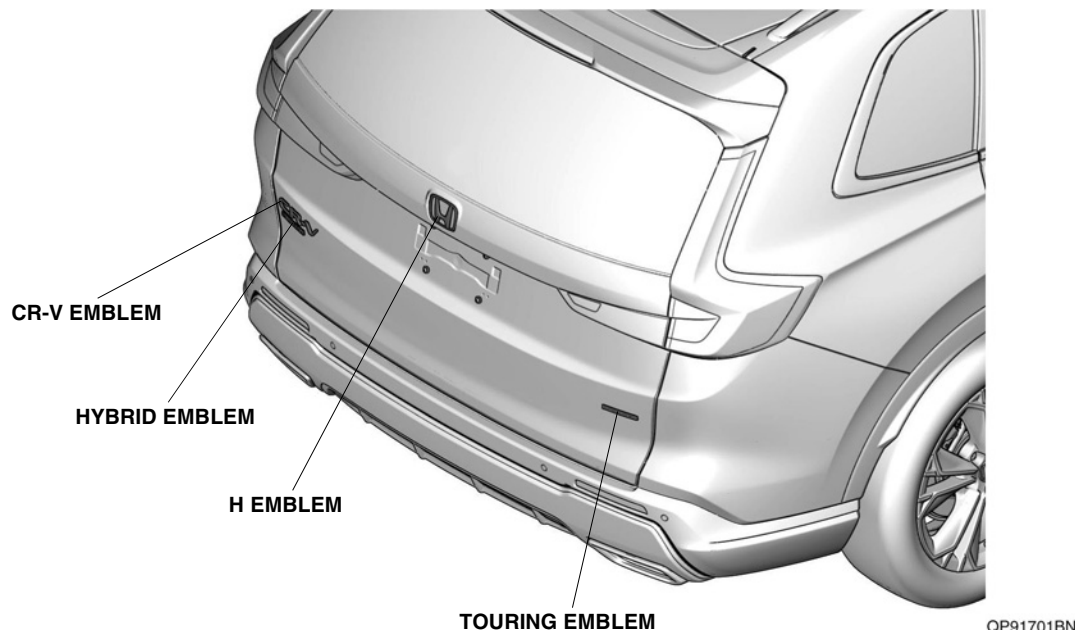

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

⚠ DANGER

You will be killed or seriously hurt if you do not follow the instructions.

⚠ WARNING

You can be killed or seriously hurt if you do not follow the instructions.

⚠ CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.




Indicates a prohibited action.


Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.

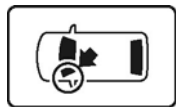

The location on the vehicle.

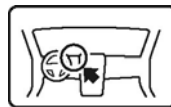

The location in the vehicle.
(Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.




Clean with isopropyl alcohol.




Return the original part to the customer.
(Do not reuse.)


Wire Harness Routing Precaution

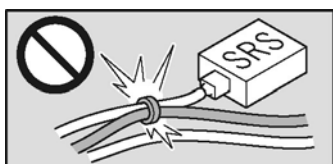


Do not secure the accessory harness to the SRS harness. (except for instruction cases.)

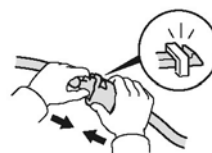


Push the connectors and terminals together until they lock.

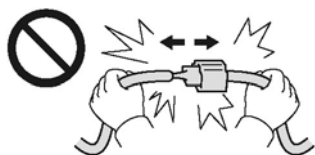

Do not pull the harness to unplug the connectors.



Install removed connectors in their original location.

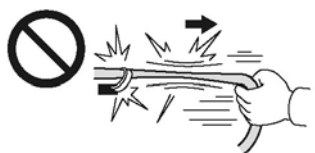


Do not pull the harness.



Secure the accessory harness as shown.



Do not pinch the harness.

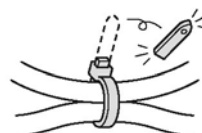

Cut off the excess wire tie.

Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Always use the parts and tools specified in the installation instructions.
- Be careful not to damage the vehicle or the parts. Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- The illustrations may differ slightly from the actual accessory.

Safety: Electric Parts






Always disconnect the negative cable from the battery before beginning work.

Safety: Accessory


- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

PARTS LIST


H Emblem Kit (P/N 08F20-3A0-100D)

H emblem	Clips (7)	Nuts (2)	Push nuts (2)
			
Alcohol wipe			
			


Emblems Kit (P/N 08F20-3A0-100)

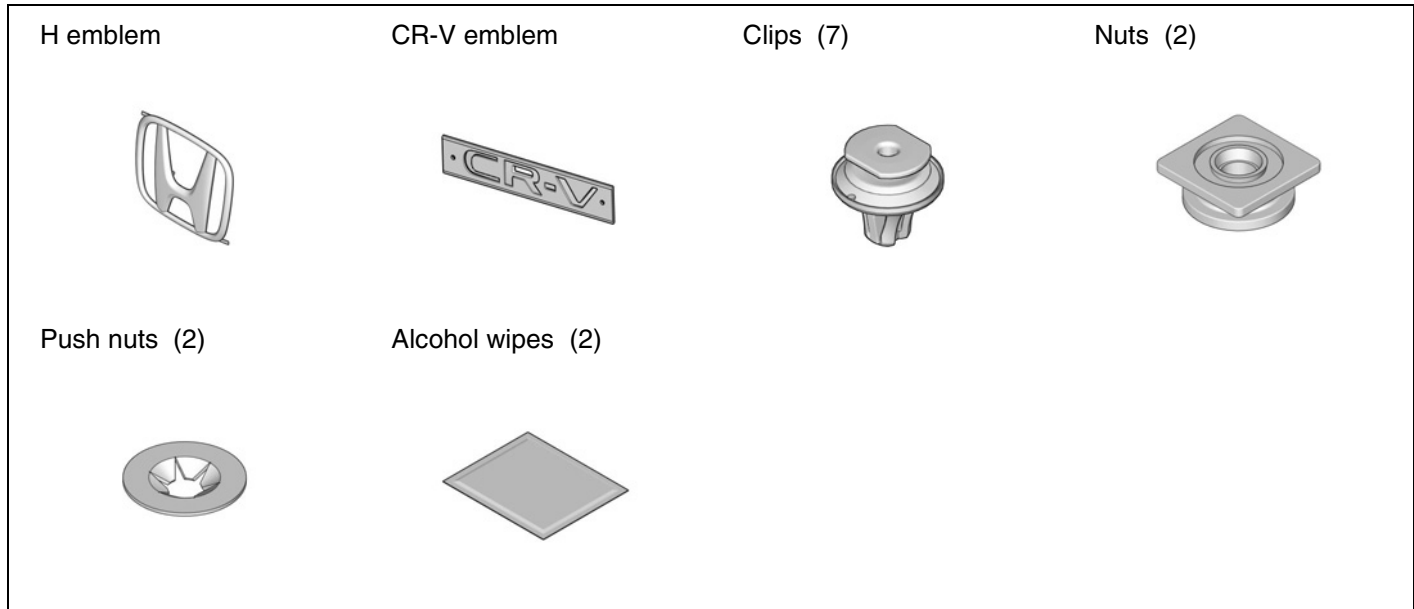

TOURING Emblem Kit (P/N 08F20-3A0-100C)

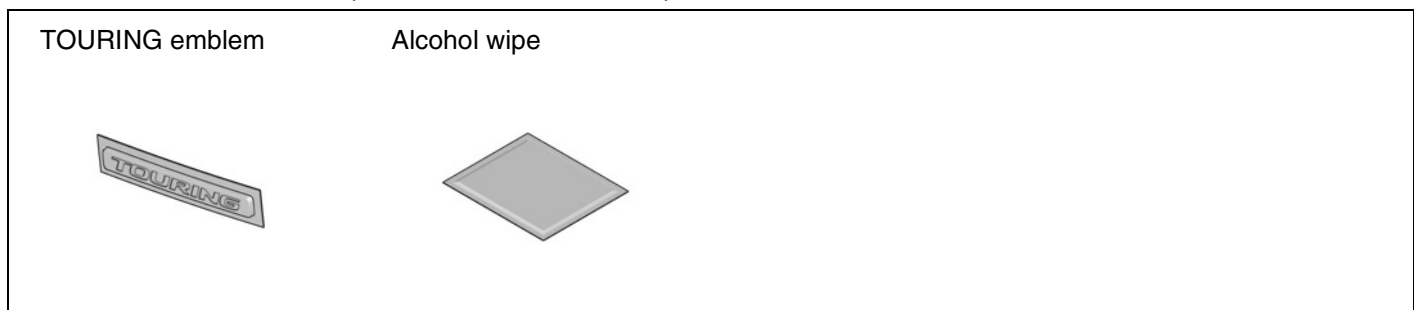

HYBRID Emblem Kit (P/N 08F20-T20-100B)

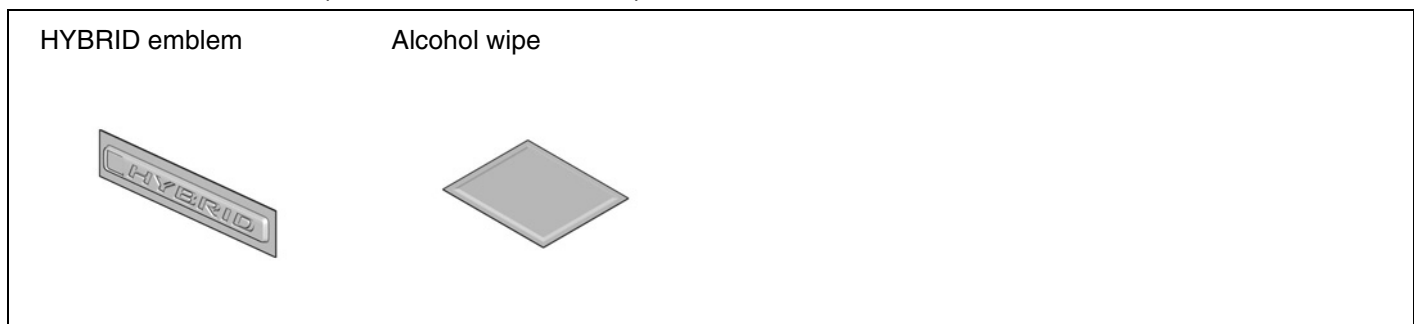

REQUIRED TOOLS AND SUPPLIES

- 10 mm Open end wrench
- Ratchet
- Phillips screwdriver
- 6 mm and 8 mm Sockets
- Diagonal cutters
- Masking tape
- Nylon string

The following tools are available through the Honda Tool and Equipment Program:





- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)
- Rubber Roller (T/N MHLE54D)
- Push Pin Pliers (T/N 07AAC-001A101)

INSTALLATION

1. Disconnect the negative cable from the battery.


NOTE

- Follow the "12 Volt Battery Terminal Disconnection and Reconnection" described in the service information since the work differs depending on the vehicle.
- Take countermeasures to prevent from locking the tailgate.

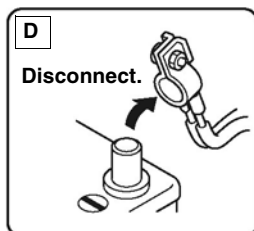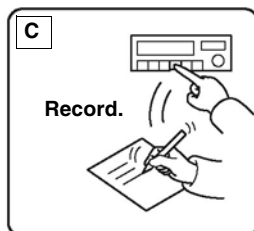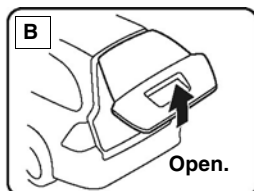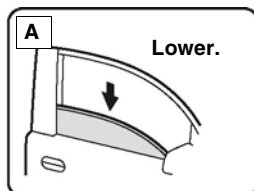


QCD0504BM

2. Remove the tailgate upper trim panel.



2 RETAINING TABS

4 CLIPS

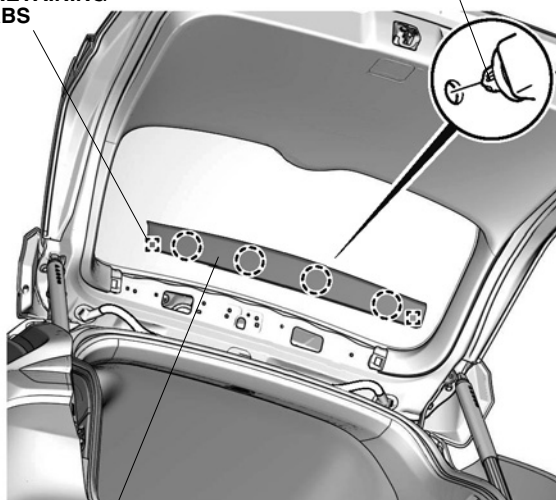

TAILGATE UPPER TRIM PANEL


QL01902AX

3. Remove the left and right tailgate side trim panels.

LEFT TAILGATE SIDE TRIM PANEL

2 RETAINING TABS

2 RETAINING TABS

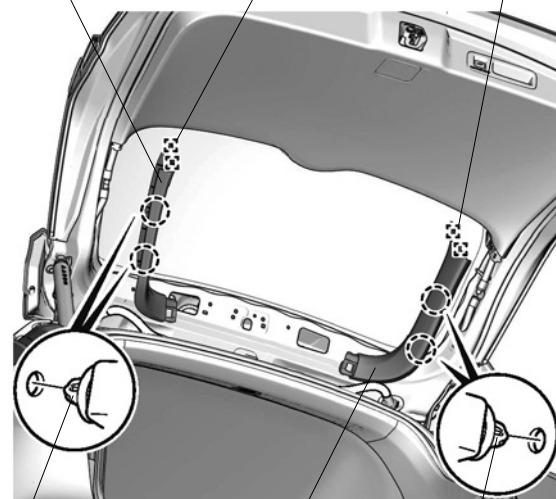

2 CLIPS

RIGHT TAILGATE SIDE TRIM PANEL


2 CLIPS

QL01903AX

4. Attach masking tape to protect the vehicle.


NOTE

To prevent damage, do not remove the masking tape until after the parts are installed.




MASKING TAPE

TAILGATE LOWER TRIM PANEL

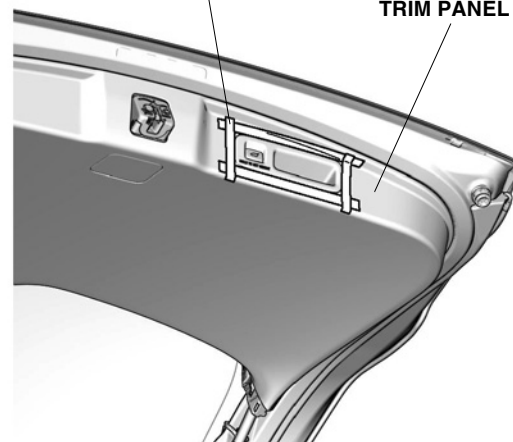


QL01904AX


5. Remove the tailgate pull pocket.

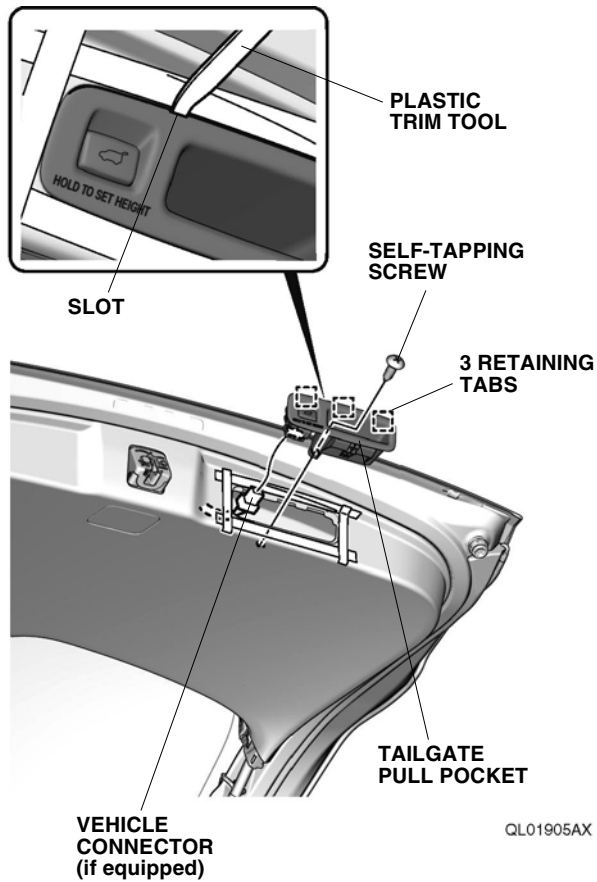

6. Remove the tailgate lower trim panel.

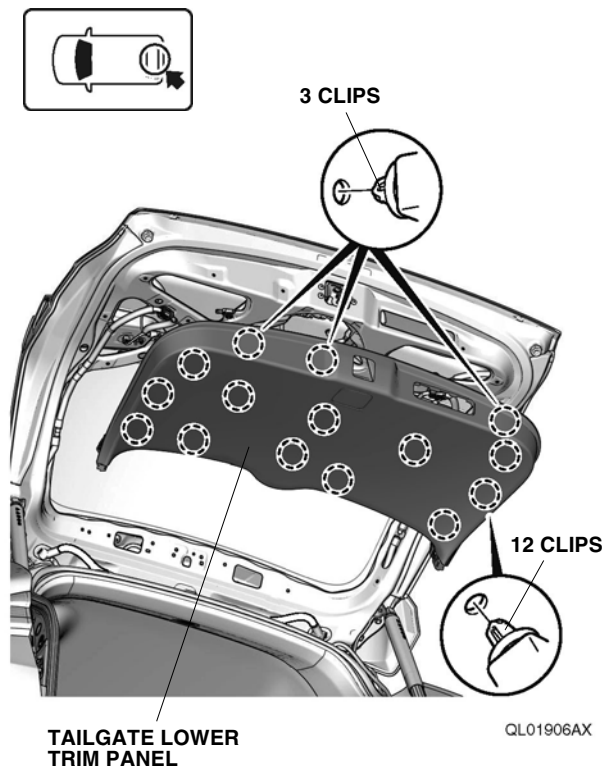



7. Remove the bolts.

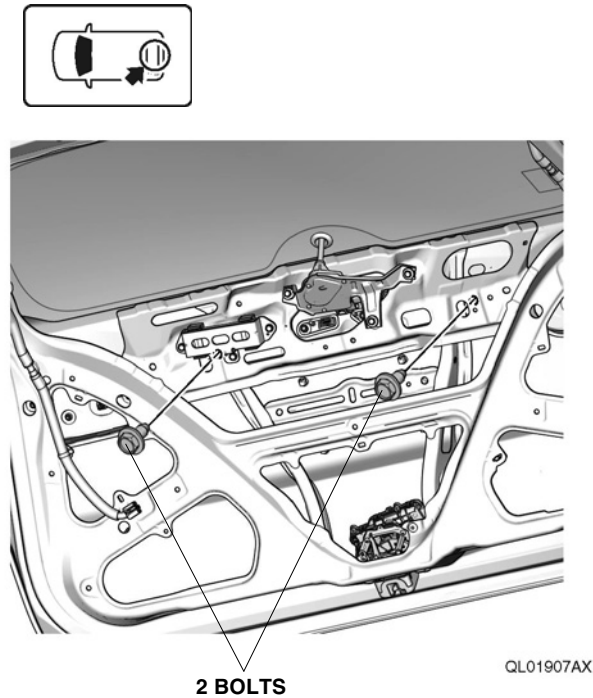


8. Attach masking tape to protect the vehicle.

NOTE


To prevent damage, do not remove the masking tape until after the parts are installed.

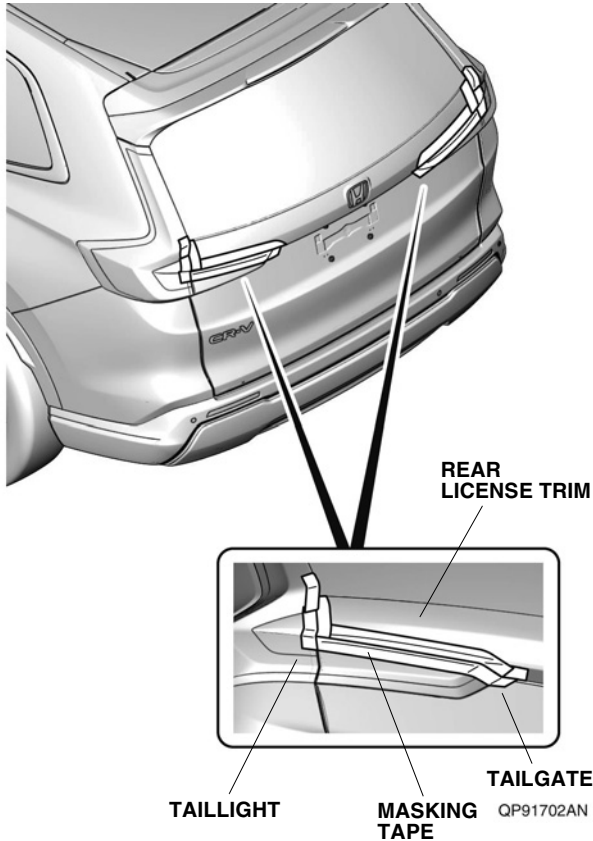

9. Remove the rear license trim.

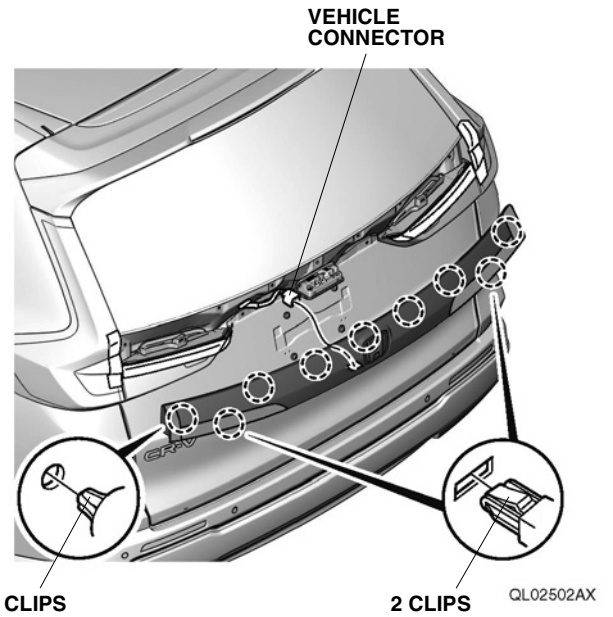


10. Cut the pins.

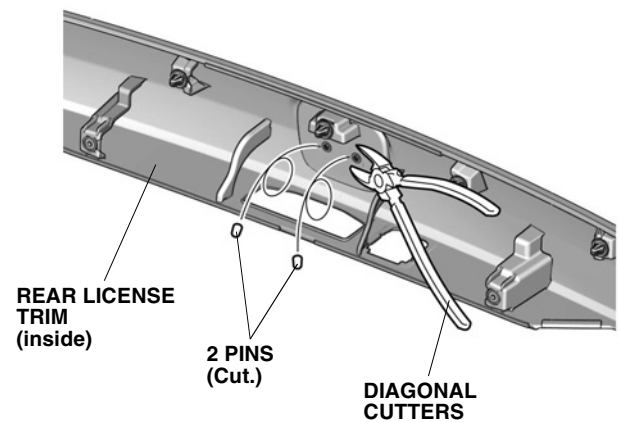

QQ30601AB


11. Remove the vehicle H emblem.

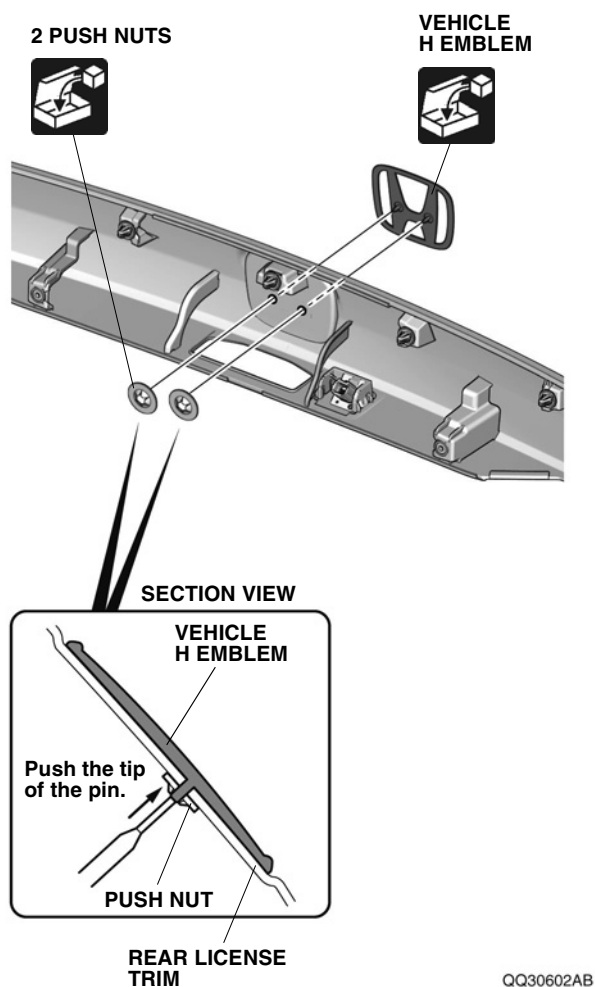

12. Clean the attaching area.

NOTE


Allow to dry thoroughly.

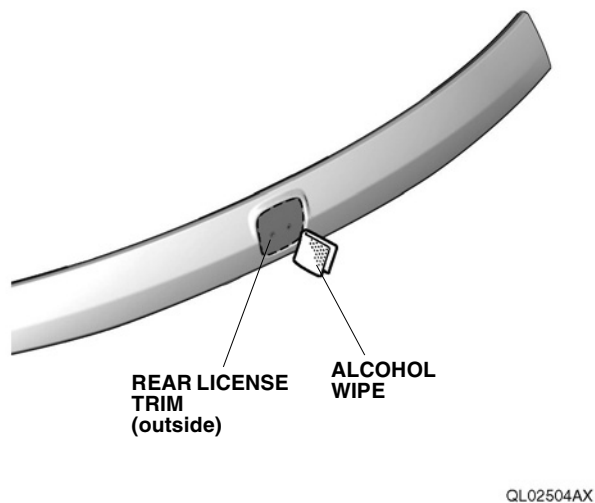


13. Install the new H emblem.

NOTE

- Make sure to install the push nuts in the correct orientation.
- Check the position of double-sided adhesive tapes and make sure to press firmly.

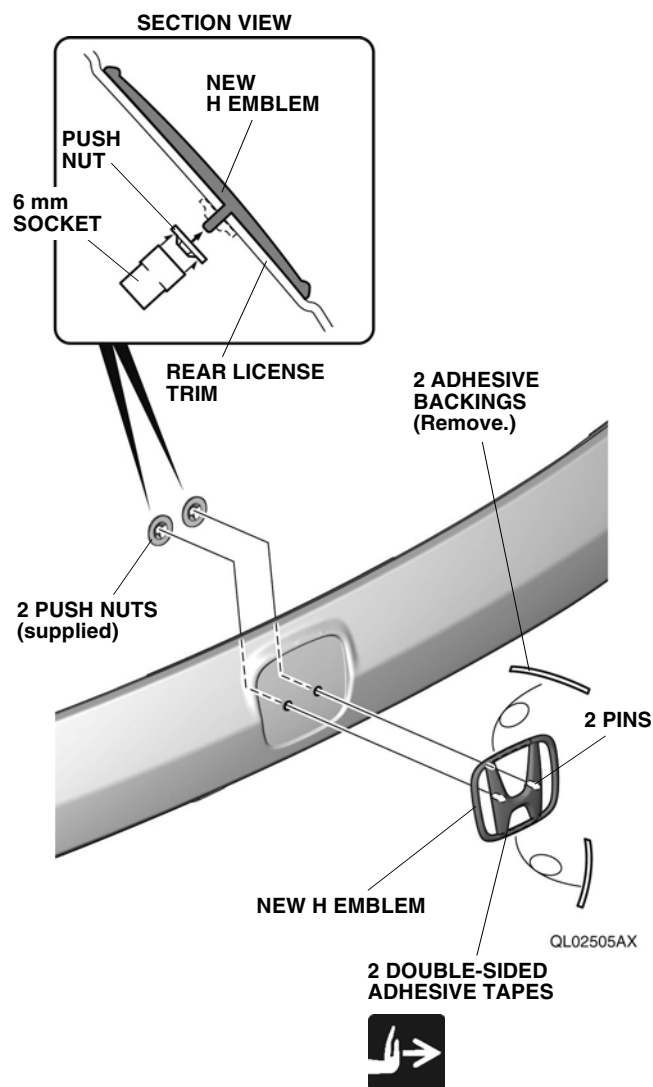


14. Secure the new H emblem.

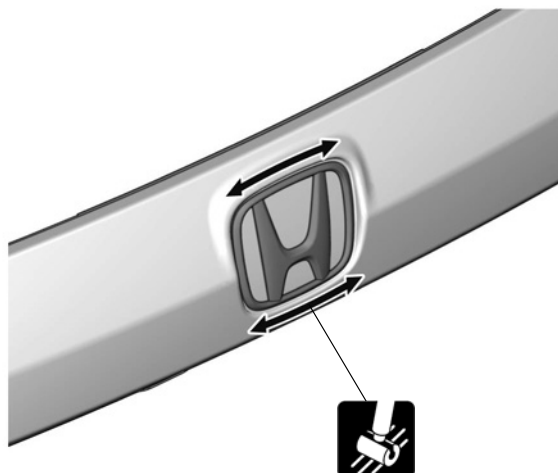

QL02506BX

15. Replace the clips and nuts.

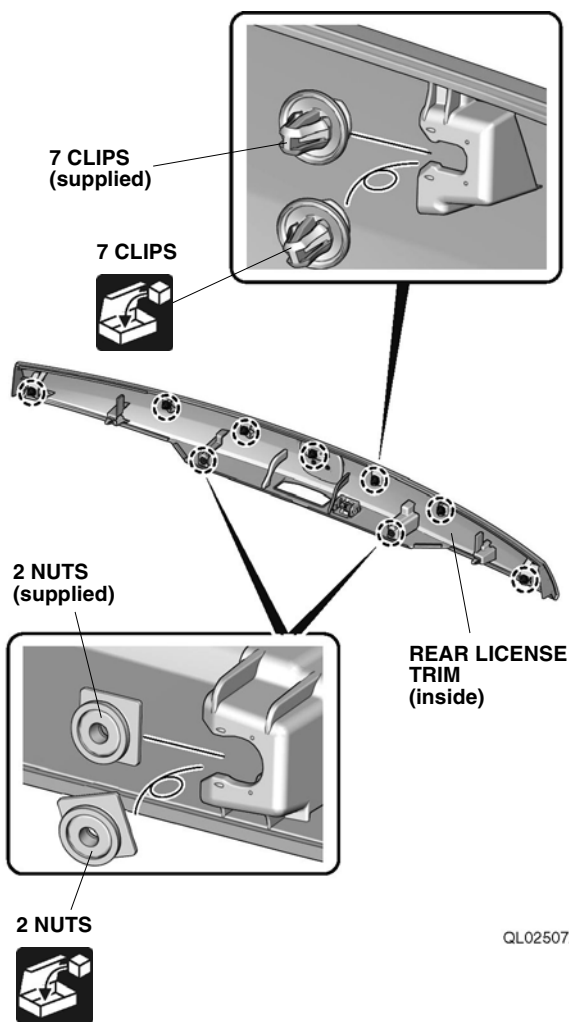

QL02507AX

16. Install the rear license trim.

17. Choose one of these options.


• Replace the CR-V emblem

Go to step 18

• Do not replace the CR-V emblem



Go to step 30

18. Remove the guide form.

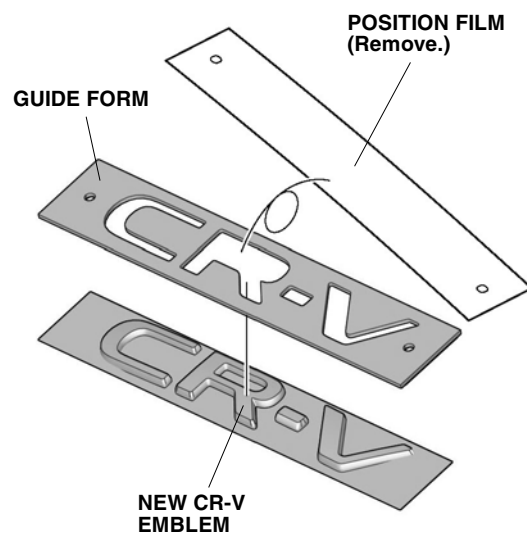

QL02508AX

19. Install the guide form.

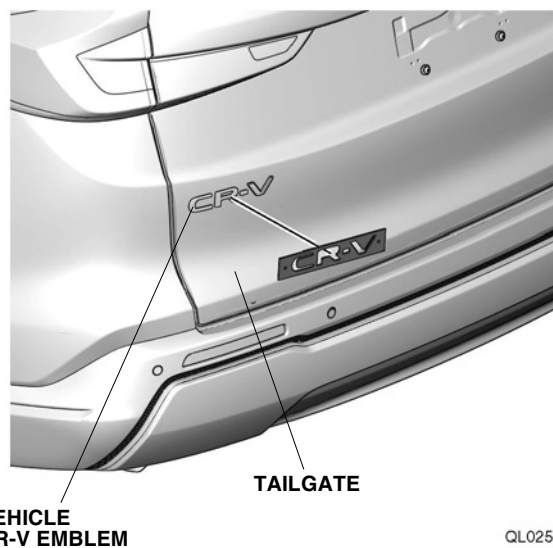

QL02509AX

20. Attach masking tape.



21. Remove the guide form.




22. Remove the vehicle CR-V emblem.

NOTE

- Do not damage the tailgate when removing the vehicle CR-V emblem with the nylon string.
- Make sure to thoroughly remove the adhesive tape from the tailgate.



23. Install the guide form.

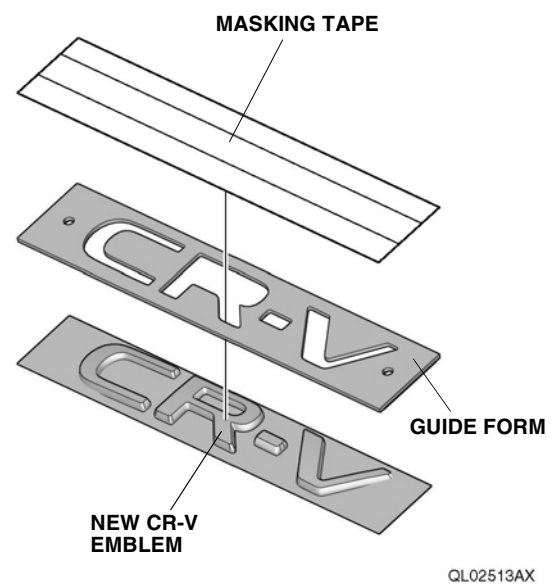


24. Attach masking tape.

25. Clean the attaching area.

NOTE

Allow to dry thoroughly.

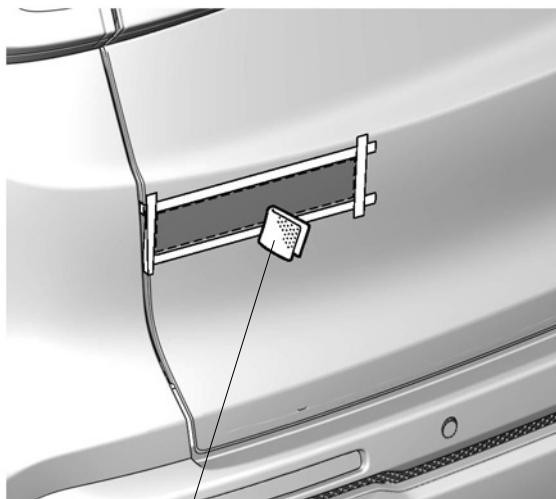


ALCOHOL WIPE

QL02514AX

26. Attach the new CR-V emblem.

NOTE

Check the position of double-sided adhesive tapes and make sure to press firmly.

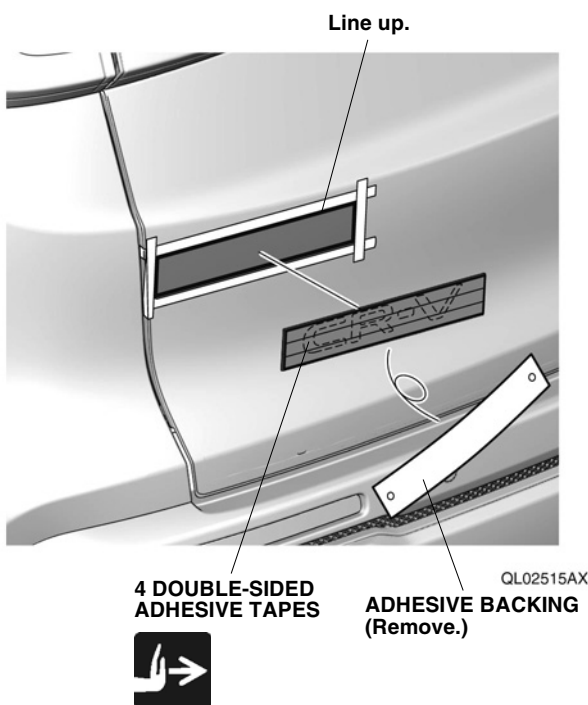

4 DOUBLE-SIDED
ADHESIVE TAPES

ADHESIVE BACKING
(Remove.)


QL02515AX

27. Secure the new CR-V emblem.



QL02516AX

28. Remove the guide form.

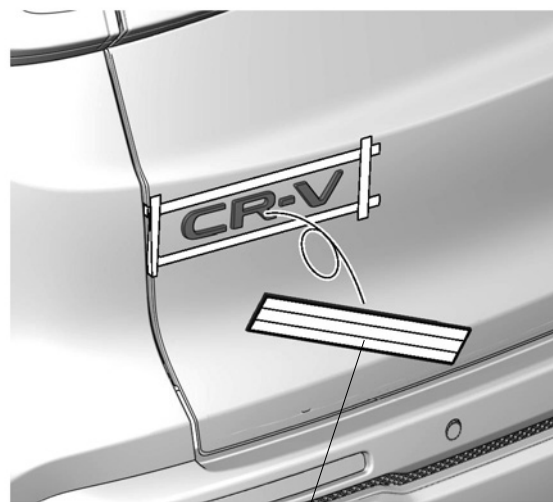

Remove.

QL02517AX

29. Remove the masking tape.

30. Choose one of these options.



- Replace the TOURING emblem

Go to step 31

- Do not replace the TOURING emblem

Go to step 38


31. Attach masking tape.

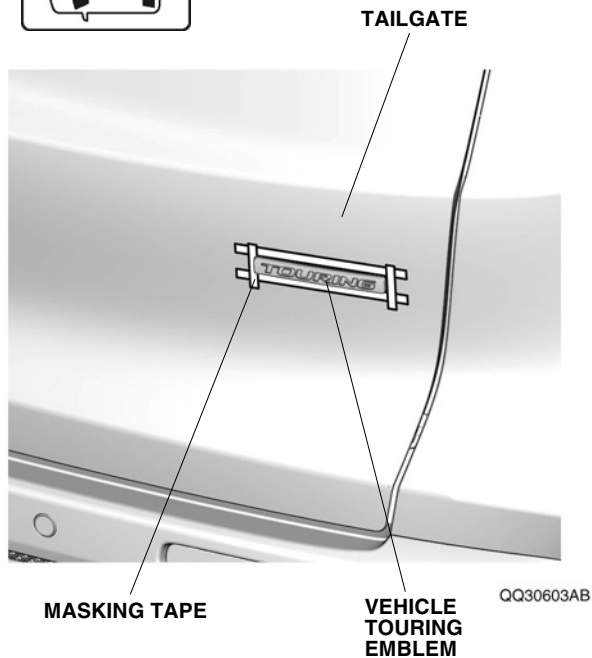

32. Remove the vehicle TOURING emblem.

NOTE


- Do not damage the tailgate when removing the vehicle TOURING emblem with the nylon string.
- Make sure to thoroughly remove the adhesive tape from the tailgate.

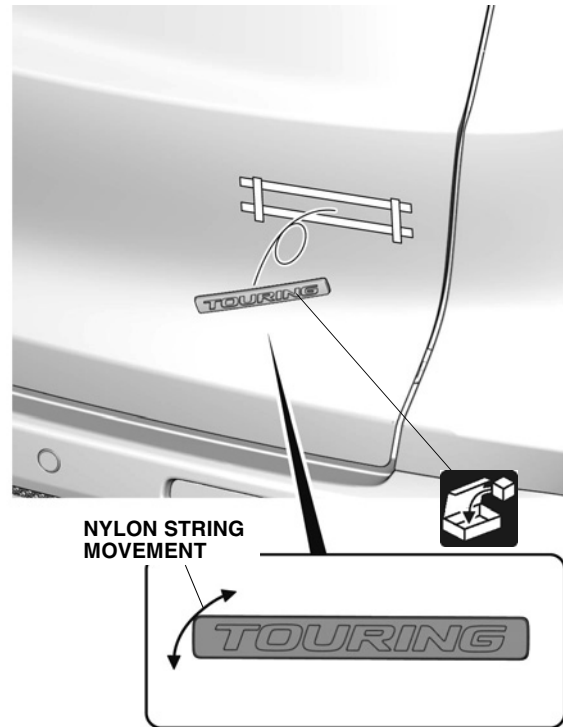

33. Clean the attaching area.

NOTE

Allow to dry thoroughly.

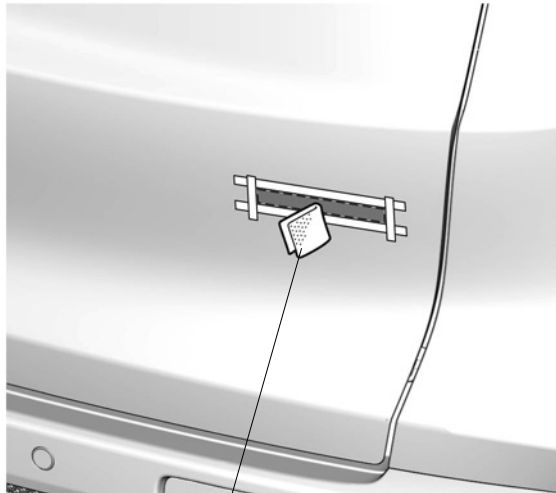


ALCOHOL WIPE

QQ30605AB

34. Attach the new TOURING emblem.

NOTE

Check the position of double-sided adhesive tape and make sure to press firmly.

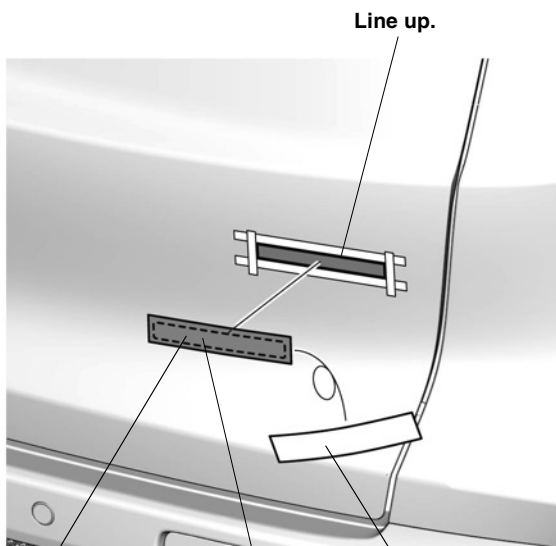

DOUBLE-SIDED
ADHESIVE TAPE




NEW TOURING
EMBLEM

ADHESIVE BACKING
(Remove.)


QP91703BN

35. Secure the new TOURING emblem.

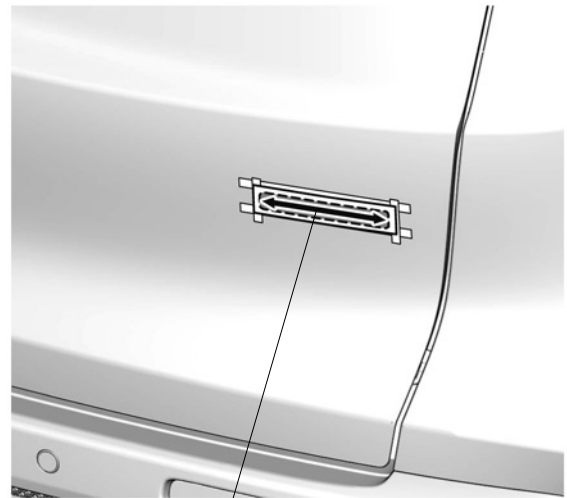

QP91704BN

36. Remove the protective film.

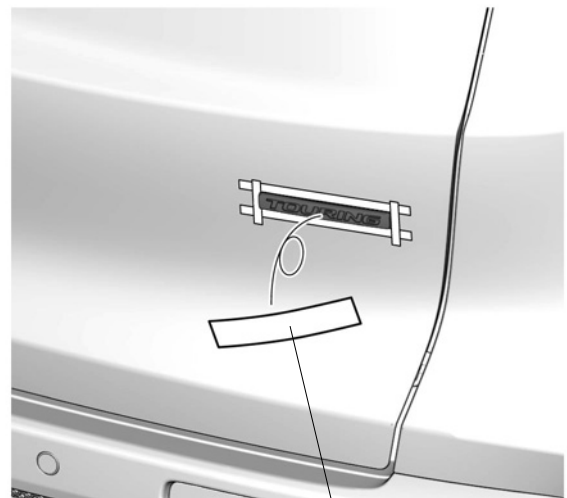

PROTECTIVE FILM
(Remove.)

QP91705BN

37. Remove the masking tape.

38. Choose one of these options.



- Replace the HYBRID emblem

Go to step 39

- Do not replace the HYBRID emblem

Go to step 46


39. Attach masking tape.

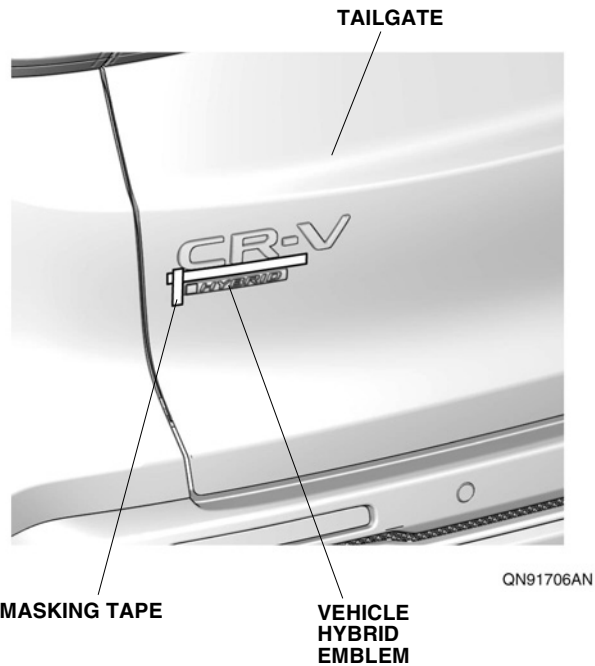

40. Remove the vehicle HYBRID emblem.

NOTE

- Do not damage the tailgate when removing the vehicle HYBRID emblem with the nylon string.
- Make sure to thoroughly remove the adhesive tape from the tailgate.

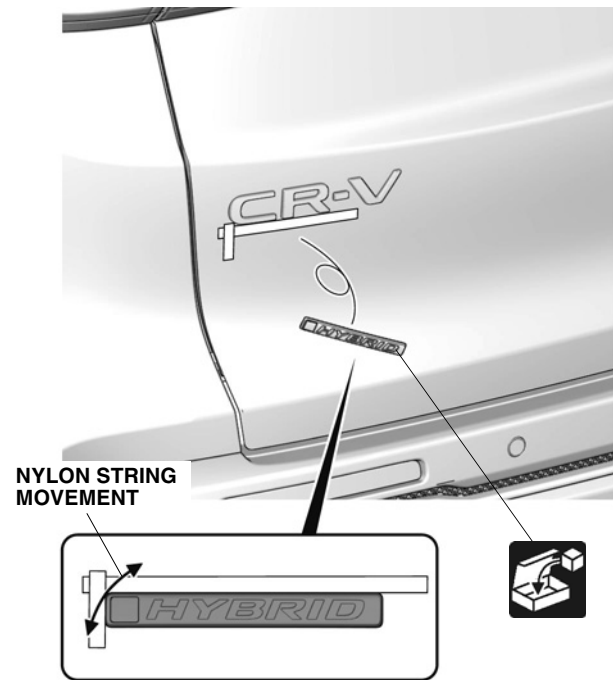

41. Clean the attaching area.

NOTE

Allow to dry thoroughly.



ALCOHOL WIPE


QN91708AN

42. Attach the new HYBRID emblem.

NOTE

Check the position of double-sided adhesive tape and make sure to press firmly.

Line up.

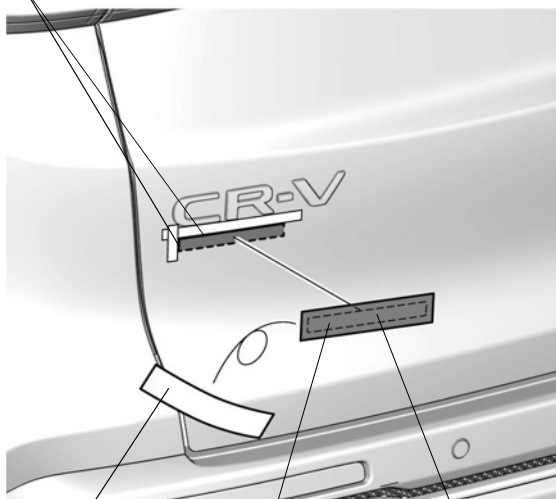

ADHESIVE BACKING
(Remove.)

NEW HYBRID
EMBLEM

DOUBLE-SIDED
ADHESIVE TAPE

QN91709AN



43. Secure the new HYBRID emblem.



QN91710AN

44. Remove the protective film.



QN91711AN

PROTECTIVE FILM
(Remove.)


45. Remove the masking tape.

46. Check that all parts are installed and properly routed.

NOTE
<ul style="list-style-type: none">• Check that all harnesses are not pulled or pinched.• Make sure all clips and wire ties are securely installed.

47. Install all removed parts.

48. Connect the negative cable to the battery.

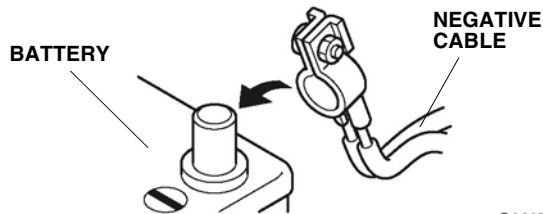

49. Make sure all accessories and systems operate properly.
50. If necessary, restore the systems back to normal operation as described in the service information.
51. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.