INSTALLATION INSTRUCTIONS

TAILGATE SPOILER P/N 08F02-SZT-101 2016 CR-Z

Publications No. VERSION 1


Issue Date
OCT 2015

PARTS LIST

Tailgate spoiler



Left support strut



Right support strut



Template



4 Clip grommets



4 Pins



4 Seals



TOOL AND SUPPLIES REQUIRED

Flat-tip screwdriver

Masking tape

Felt-tip pen

Center punch

Tape

Touch-up paint

Isopropyl alcohol

Shop towel

Drill


File

Utility knife

Eye protection (safety goggles, face shield, etc.)

The following tool is available through the Honda Tool and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search". Or, call 888-424-6857. Rotabroach Hole Cutting Kit (T/N BLR11201SO)

Illustration of the Tailgate Spoiler on the Vehicle

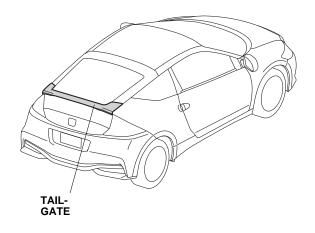

QE92302AB

INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


NOTE:

- Be careful not to damage the paint finish.
- This kit should be installed only if the ambient air temperature is 15°C (60°F) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Make sure your customer is aware of this.

Installing the Tailgate Spoiler


- 1. Open the tailgate.
- Using a flat-tip screwdriver wrapped with masking tape, release one upper ring and one lower ring to remove the vehicle left tailgate support strut as shown.

NOTE: Have an assistant help you when removing the vehicle tailgate open stay.

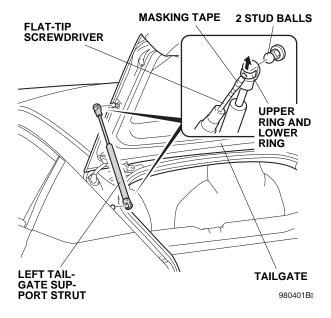


3. Install the left tailgate support strut to two stud balls on the tailgate.

NOTE: Have an assistant help you when installing the tailgate support strut.

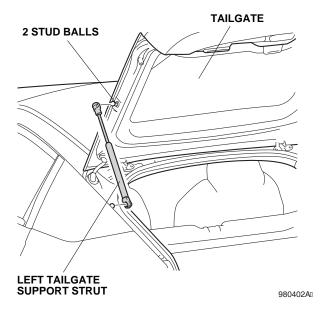


- 4. Repeat steps 2 and 3 on the right side of the vehicle.
- 5. Close the tailgate.
- 6. Align the template to the edge of the tailgate, and tape in place with masking tape.

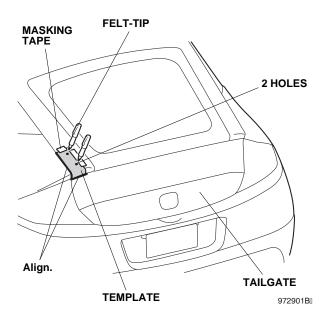


- 7. Using a felt-tip pen, mark two holes on the template as shown.
- 8. Remove the template. Turn the template over and repeat steps 6 and 7 on the right side of the vehicle.

9. Using a center punch, lightly punch the four marks made on the tailgate.

NOTE: Set the center punch to the minimum power setting.

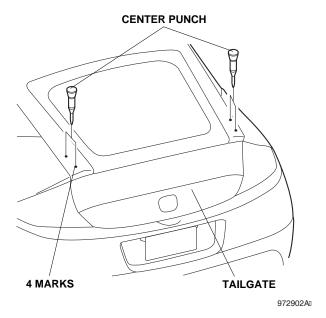


10. To prevent metal shavings from entering the seal area, attach masking tape to the tailgate as shown.

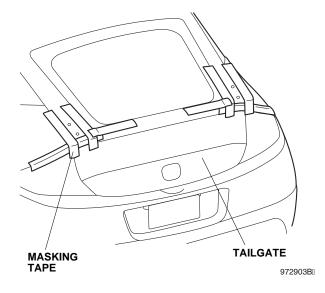


11. While wearing eye protection, drill the four centerpunched marks on the tailgate with an 8.5 mm hole cutter.

NOTE: Make sure to drill perpendicularly to the tailgate. Remove any burrs. Apply a touch-up paint to the holes made on the tailgate and allow them to dry thoroughly.

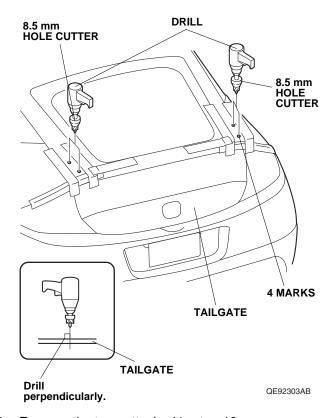


- 12. Remove the tape attached in step 10.
- 13. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the tailgate spoiler will attach.

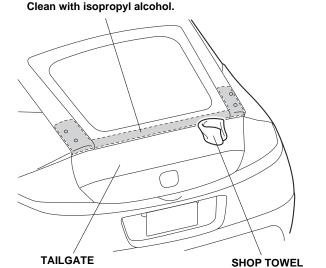

972905AI


14. Install the four seals on the four clip grommets.

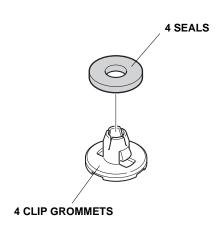

872756AH


15. Install the four clip grommets into the four holes on the tailgate.

NOTE: Apply pressure on each clip until you hear a click.

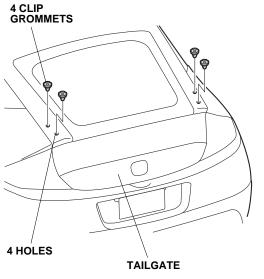


030208BB

16. Install the four pins onto the tailgate spoiler.

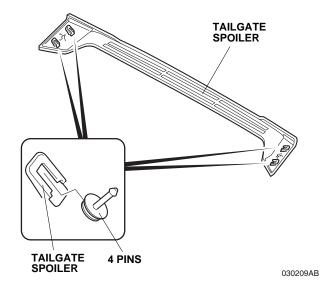


17. Using an utility knife, cut two slits in two adhesive backings on the tailgate spoiler.

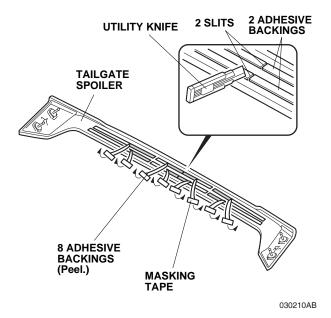


18. Attach a piece of masking tape to the end of the adhesive backings as shown. Peel back the adhesive backings partway and temporarily attach them to the front surface of the tailgate spoiler.

19. Align the four pins on the tailgate spoiler to the four clip grommets on the tailgate. NOTE: Apply pressure against the tailgate spoiler until you hear a click. Do not apply excessive

pressure against the tailgate spoiler.

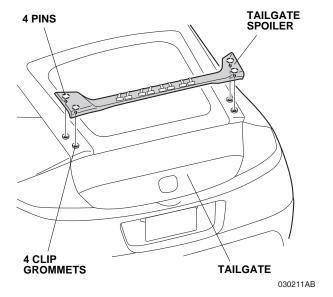

20. Adjust the position of the tailgate spoiler as shown.

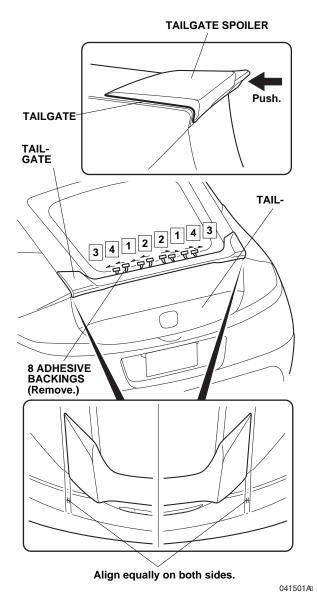

- 21. While applying light pressure against the tailgate spoiler, carefully remove the taped adhesive backings in the order shown.
 - NOTE: Push the tailgate spoiler against the tailgate as shown.
- 22. Using the palm of your hand, firmly press the tailgate spoiler to the tailgate for 30 seconds.