



**INSTALLATION
INSTRUCTIONS**

Accessory
USB ADAPTER


Application
**2009 FIT
(BASE MODEL)**

Publications No.
All 39879
Issue Date
SEP 2008


PARTS LIST

**USB Adapter Attachment Kit
P/N 08B28-TK6-100**


Right bracket

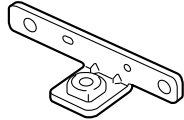


Left bracket

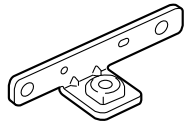


USB cord

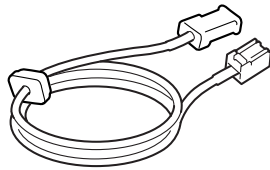


Bus cable

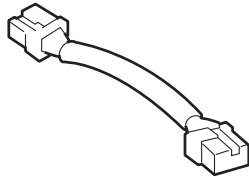


Cord holder

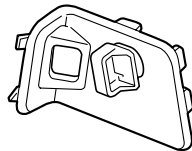


2 Flange bolts




4 Wire ties

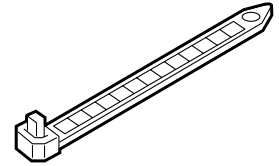

4 Washer-screws




Urethane tape



**USB Adapter Kit
P/N 08A28-0K1-100**


Control unit

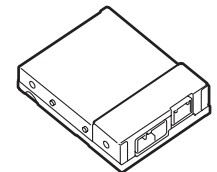

TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver
Flat-tip screwdriver
Ratchet
8 mm and 10 mm Sockets
10 mm Combination wrench
Diagonal cutters
Utility knife
Scissors
Masking tape
Plastic Trim Tool T/N SILTRIMTL10
KTC trim tool set SOJATP2014*
* Available through the Honda Tool and Equipment Program; call 888-424-6857.

Illustration of the USB Adapter installed on the Vehicle

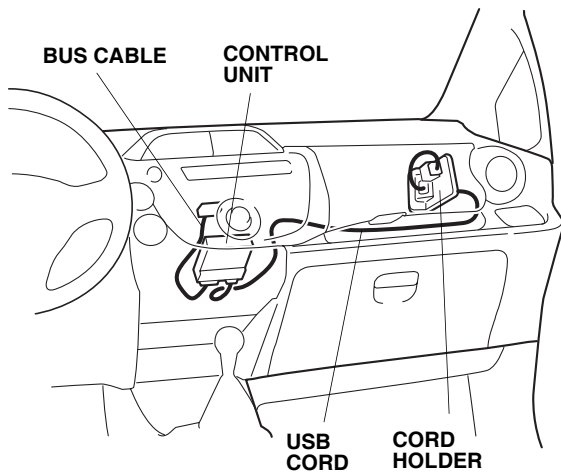


INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

1. Make sure you have the anti-theft code for the audio unit and navigation system (if equipped), then write down the audio presets.
2. Disconnect the negative cable from the battery.


3. Remove the passenger's under cover (three clips and two tabs).

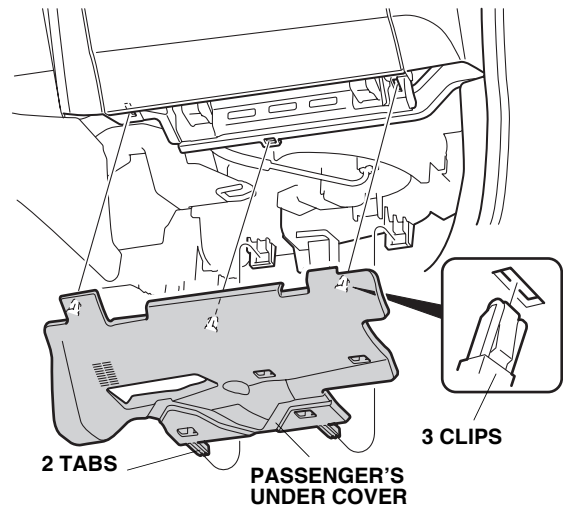


4. Remove the lower glove box (two screws, and release the two stoppers).

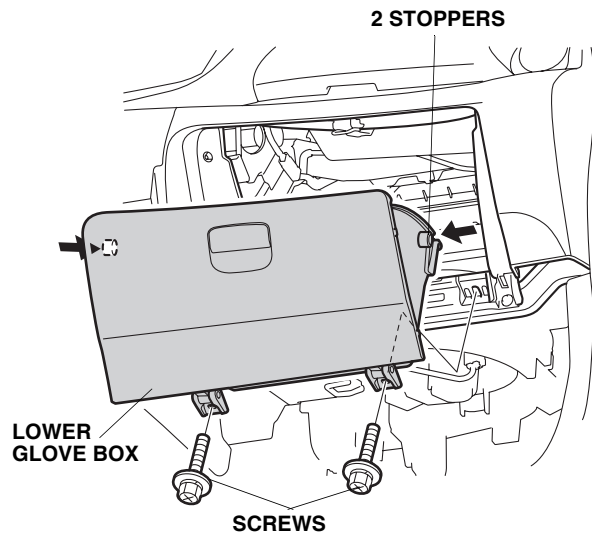


5. Inside the upper glove box, remove the side cover (four tabs).

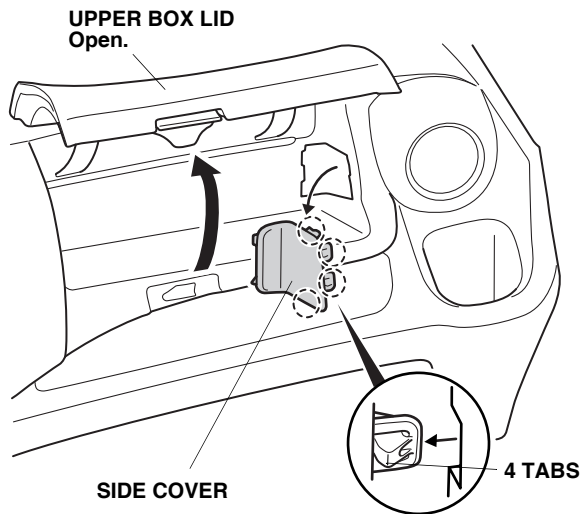


6. Remove the center lower cover (three clips).

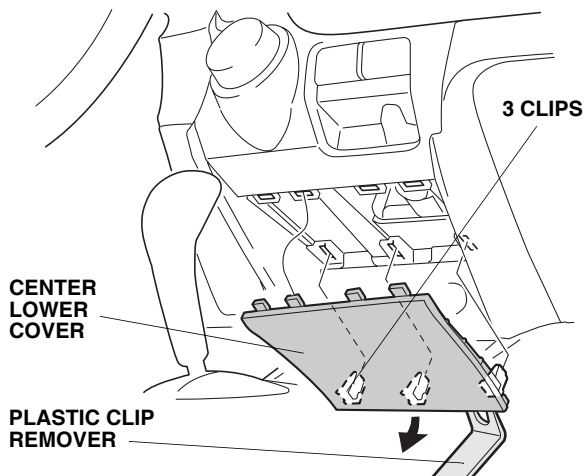

7. Slide the vent lever to the right. Remove the center panel screw. The screw can be located by looking through the glove box opening. The screw is near the right side of the center panel.

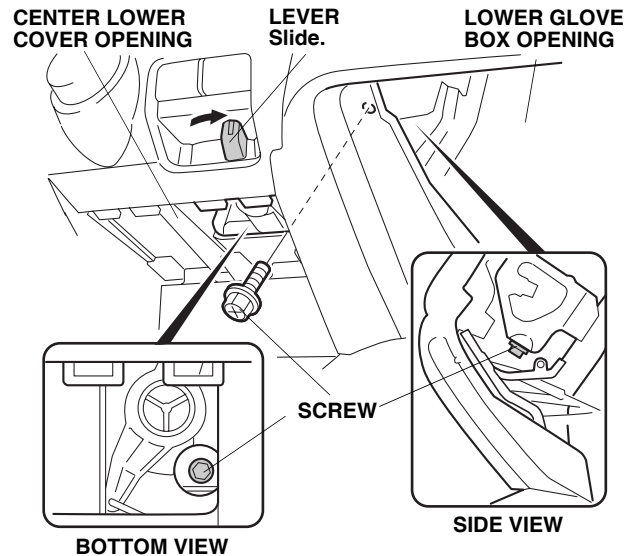


8. Attach masking tape to the instrument panel in the area shown.

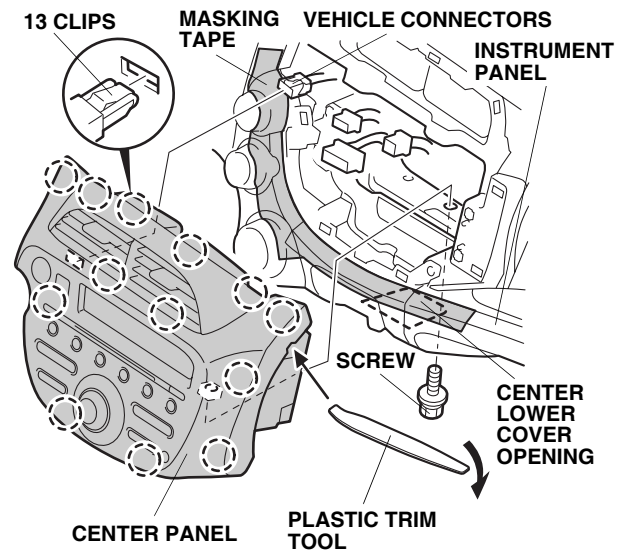


9. Remove the one screw. Using a plastic trim tool, pull the center panel out toward you to release the 13 clips. Unplug the vehicle connectors to remove the center panel.


10. Get the USB cord. Wrap one urethane tape around the USB cord in the area shown.

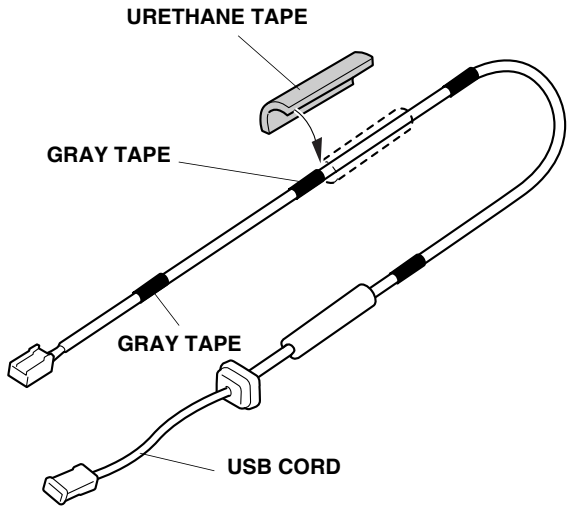


11. Install the left and right brackets to the control unit as shown using four washer-screws.

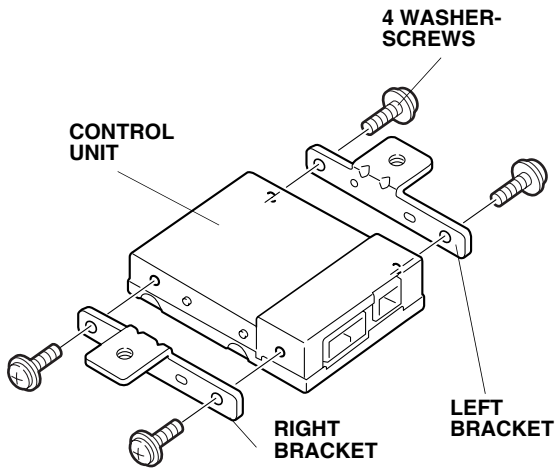


12. Install the control unit to the audio unit using two flange bolts.

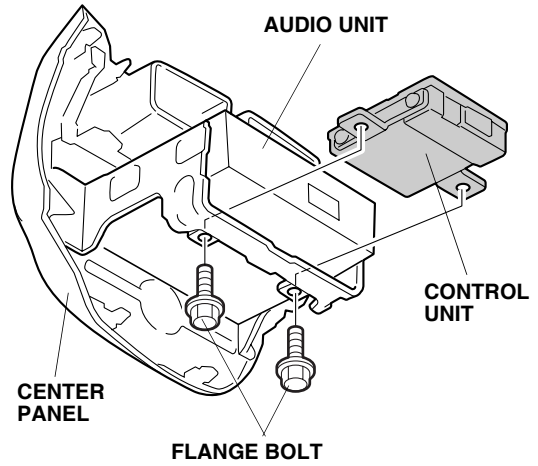


13. Plug the bus cable into the control unit and into the audio unit.

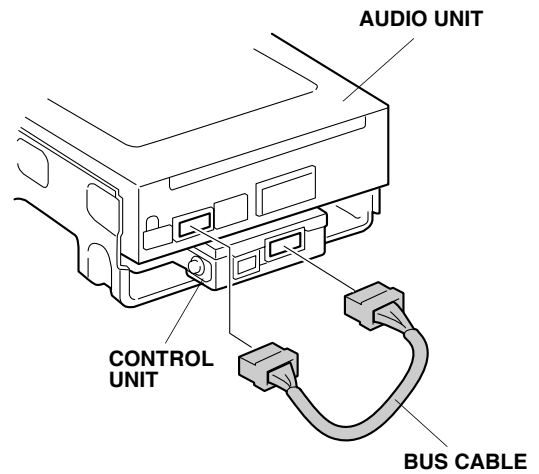

14. Route the USB cord through the center dashboard opening as shown.

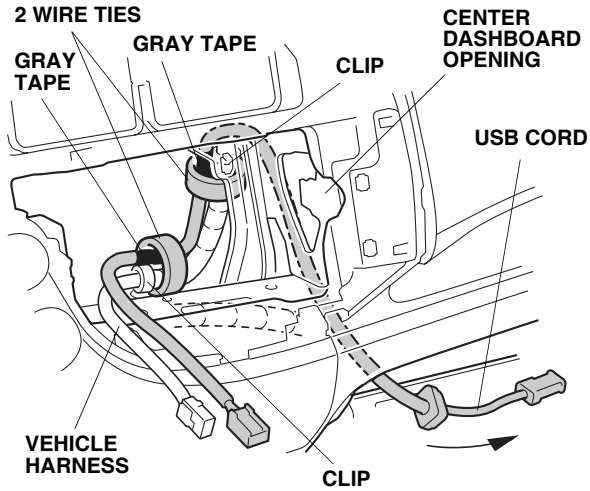


15. Using two wire ties, secure the USB cord to the vehicle harness in the areas shown.
 16. Route the USB cord through the lower glove box opening as shown.

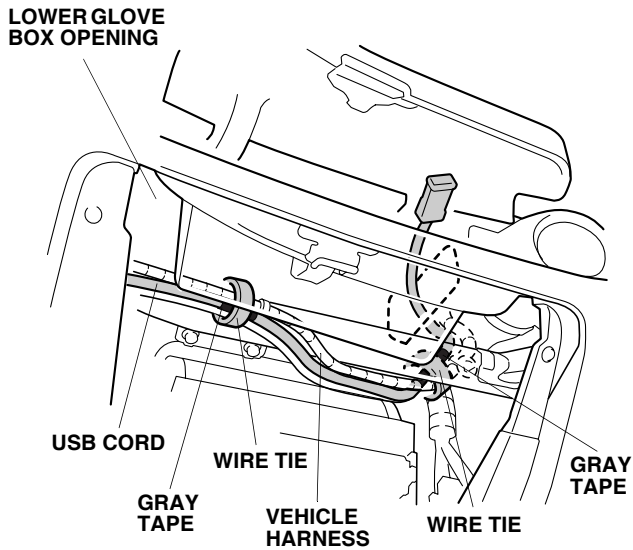


17. Using two wire ties, secure the USB cord to the vehicle harness in the areas shown.


18. Route the USB cord up into the upper glove box opening. Insert the USB cord through the cord holder as shown, and seat the grommet into the cord holder.

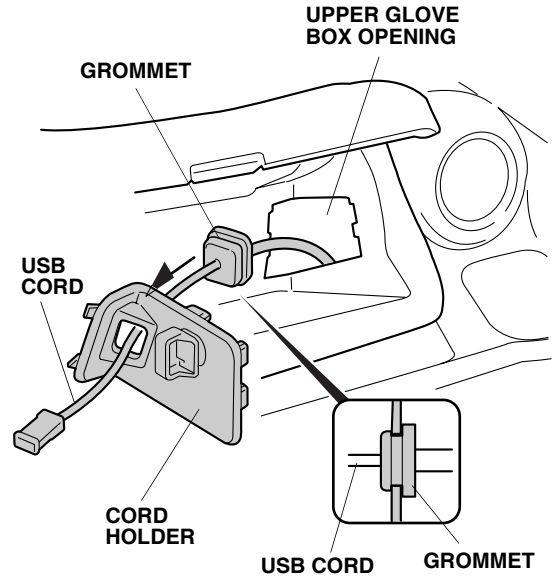

19. Install the cord holder into the upper glove box in place of the side cover and insert the end of the USB cord into the cord holder.

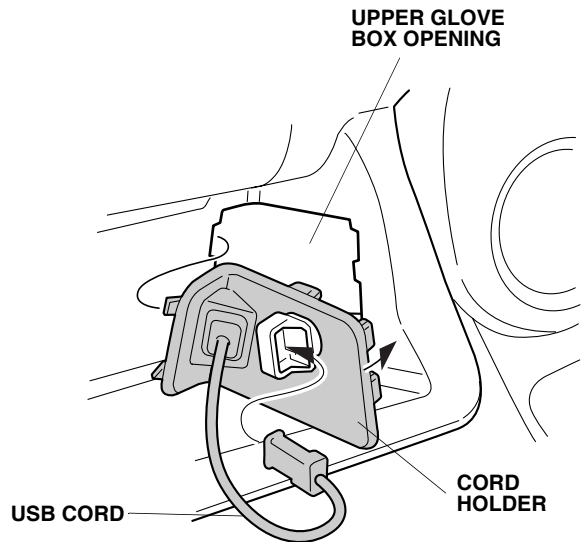

20. With the center panel near the dashboard, plug the USB cord connector into the control unit. Plug in all the vehicle connectors and reinstall the center panel.

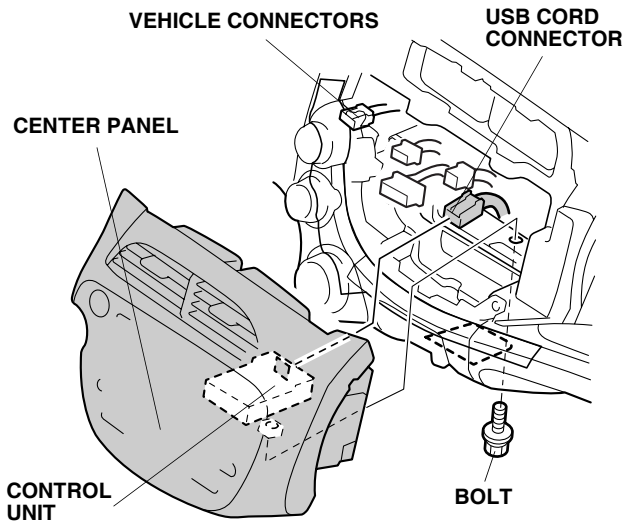

21. Check that all wire harnesses and cables are routed properly and that all connectors are plugged in.
22. Reinstall all removed parts.
23. Reconnect the negative cable to the battery.
24. Enter the anti-theft codes for the audio unit and navigation systems (if equipped), then enter the customer's radio presets.
25. Reset the clock.
26. Turn the audio unit on. Set the mode to USB by pressing AUX until "USB" is shown on the radio display. If "USB NO DATA" is displayed, the unit is working properly.