



INSTALLATION INSTRUCTIONS

Accessory
CONSOLE ILLUMINATION
 P/N 08E16-T5A-100

Application
2018 FIT


Publications No.
VERSION 1
 Issue Date
JUL 2017

PARTS LIST

Console trim



Console illumination harness

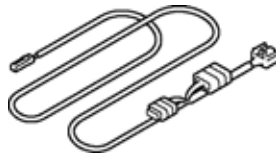

Aluminum tape



10 Wire ties



Fuse label



6 Self-tapping screws




TOOLS AND SUPPLIES REQUIRED

- Phillips screwdriver
- 10 mm Open end wrench
- Ratchet
- 10 mm Socket
- Diagonal cutters
- Isopropyl alcohol
- Shop towel
- Masking tape
- Ruler
- Torque wrench

The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)


Illustration of the Console Illumination Installed in the Vehicle

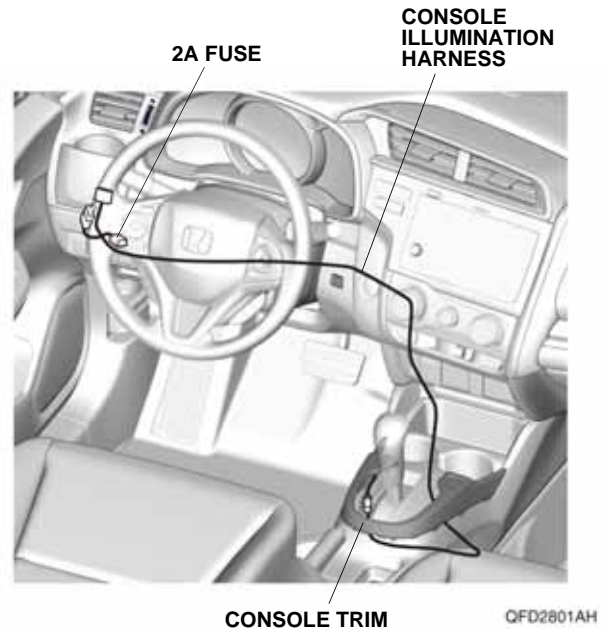


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”


1. Disconnect the negative cable from the battery.
2. Open the glove box, push inward on the stops, and remove the glove box.

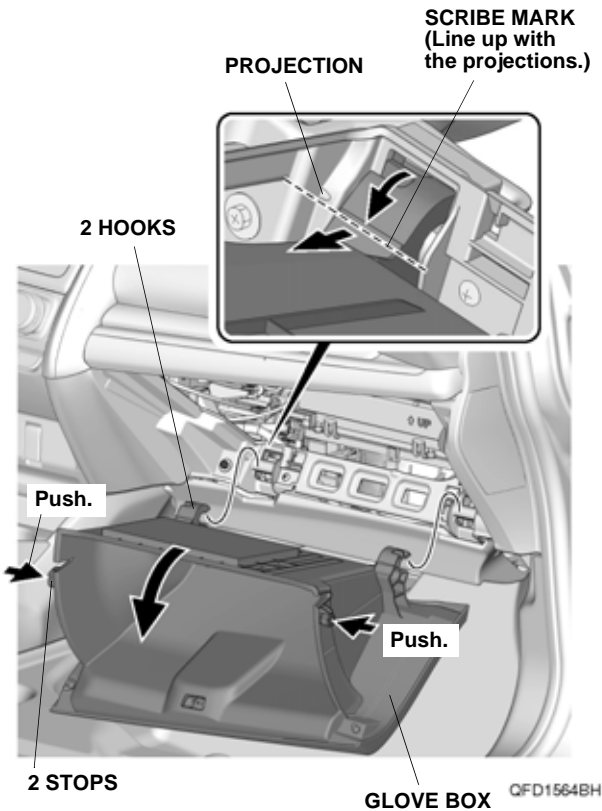


3. Pull away the door opening seal, and remove the driver's dashboard side lid.

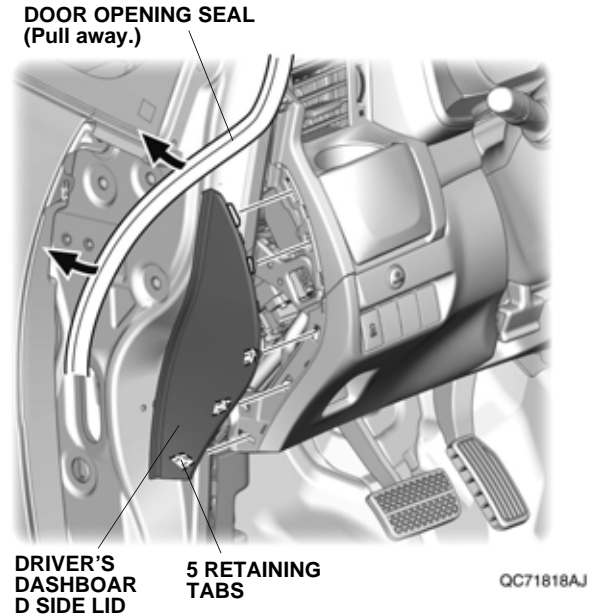


4. Remove the driver's dashboard lower cover, and unplug the vehicle connectors.

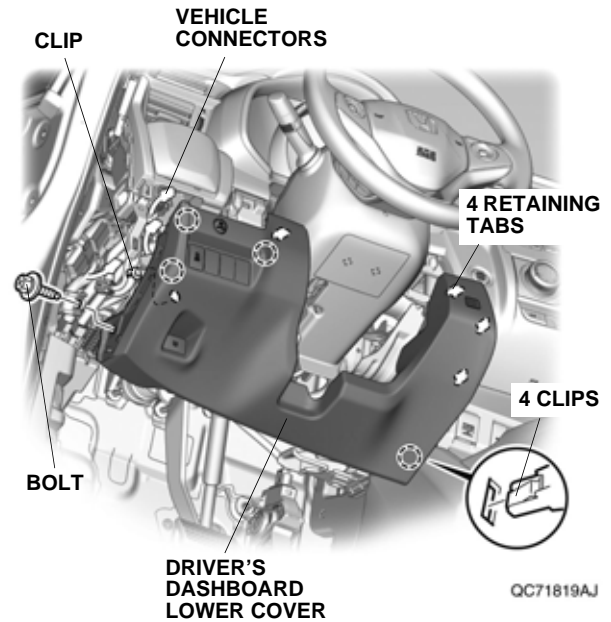


5. Apply masking tape as shown.

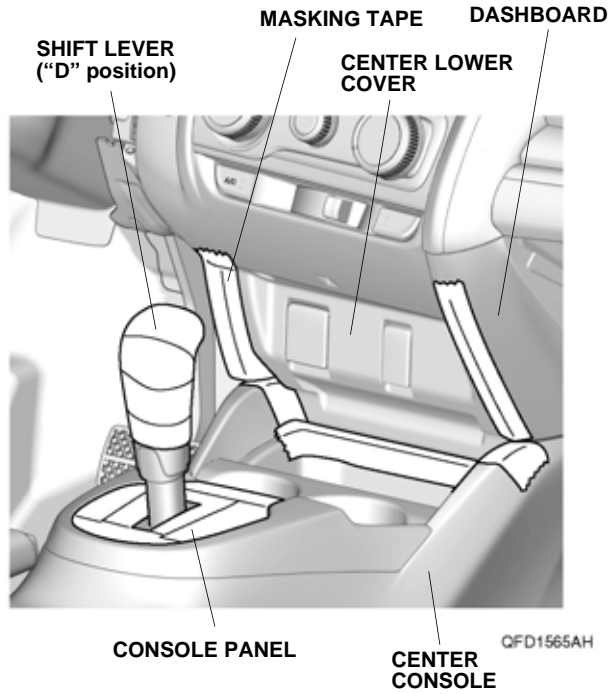


6. Remove the center lower cover, and unplug the vehicle connectors.

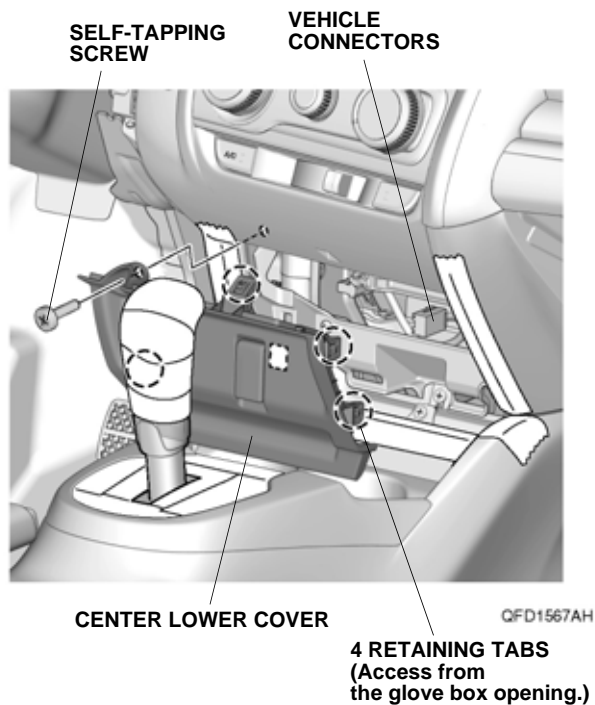


7. Remove the beverage holder.

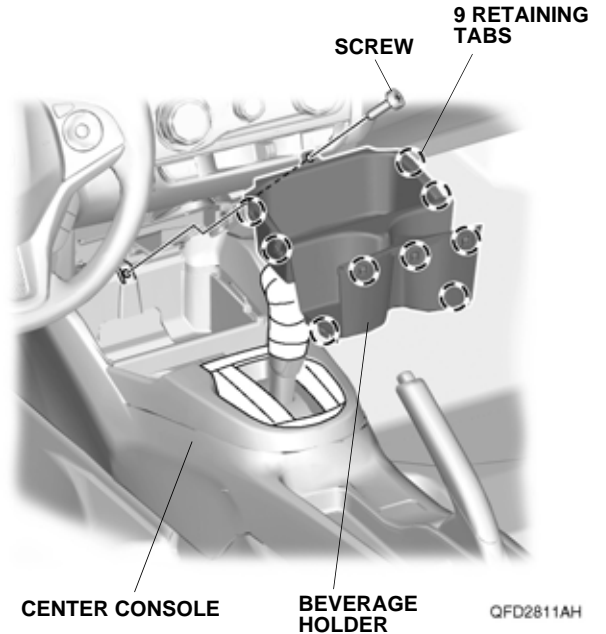


8. Remove the parking brake trim cover.

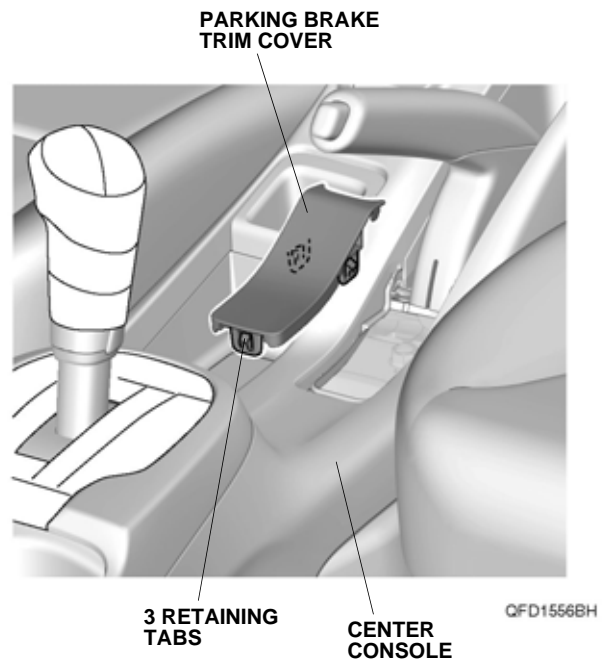


9. Remove the center console rear trim.

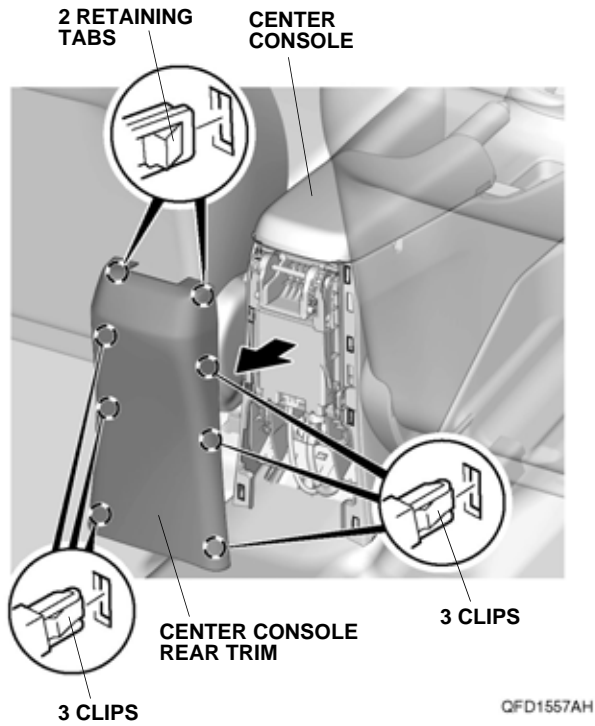

10. Remove the center console, and unplug the vehicle connectors.

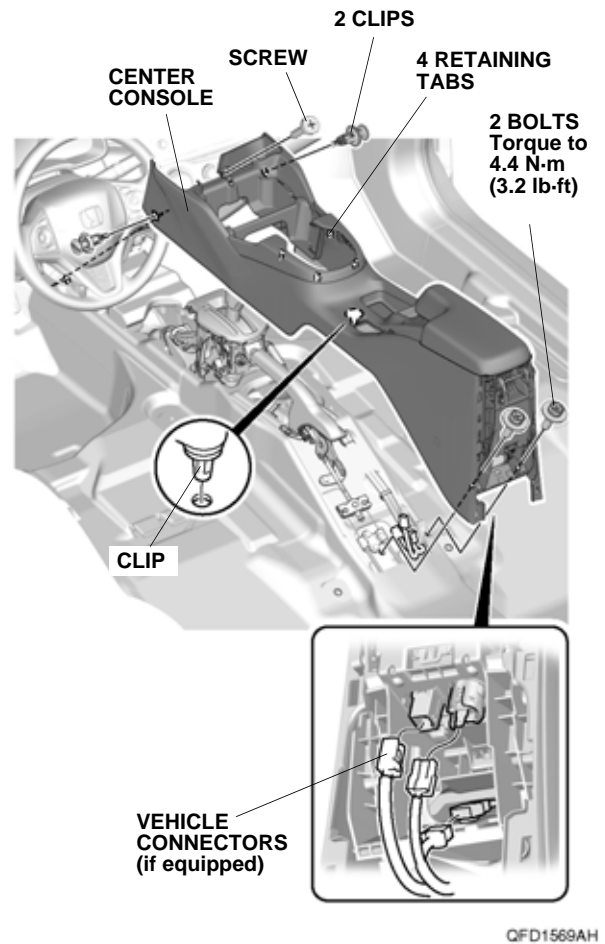


11. Remove the console panel.

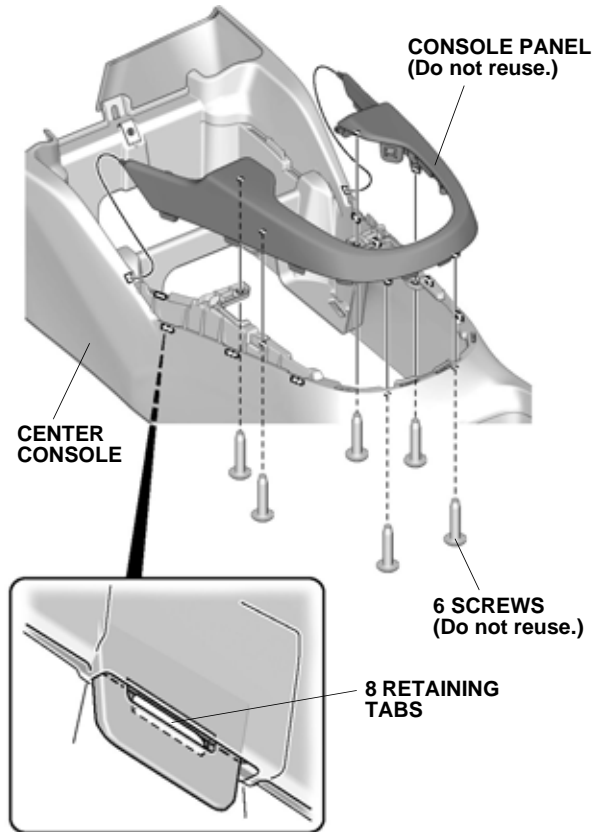


QFD0903AT

12. Install the new console trim to the center console with the supplied screws.

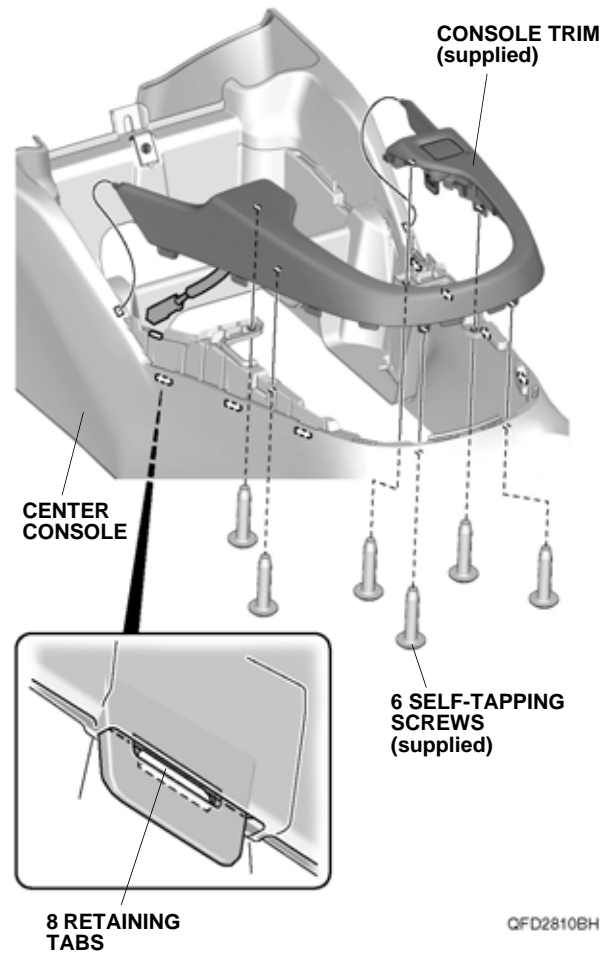


QFD2810BH

13. Secure the console trim 2-pin connector to the center console with one piece of aluminum tape.

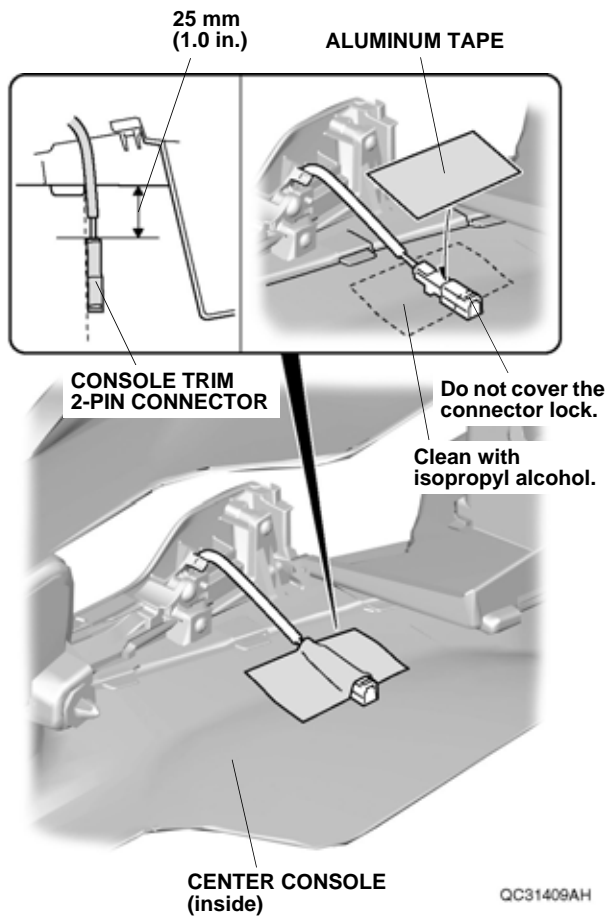

14. Using isopropyl alcohol on a shop towel, thoroughly clean where the fuse label will attach.

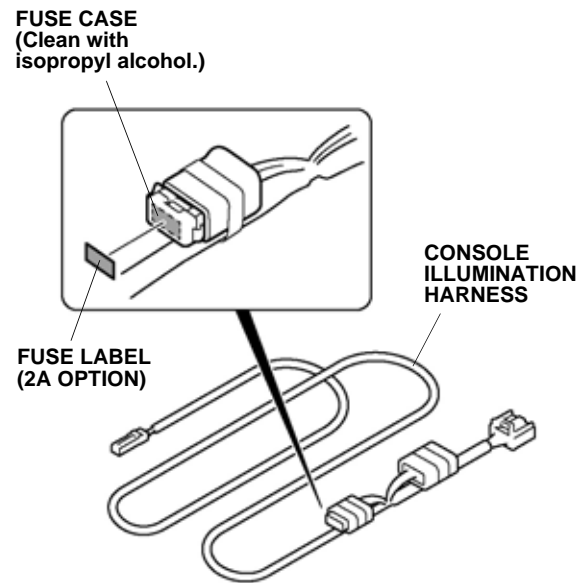


15. Attach the fuse label to the console illumination harness fuse case.

If the vehicle is without the other accessory harness 14-pin connector, continue with step 16; otherwise, go to step 17.


Without Other Accessory Harness 14-pin Connector

16. Unplug the vehicle 14-pin connector and plug it into the console illumination harness 14-pin connector. Plug the console illumination harness 14-pin connector into the vehicle 14-pin connector. Go to step 18.

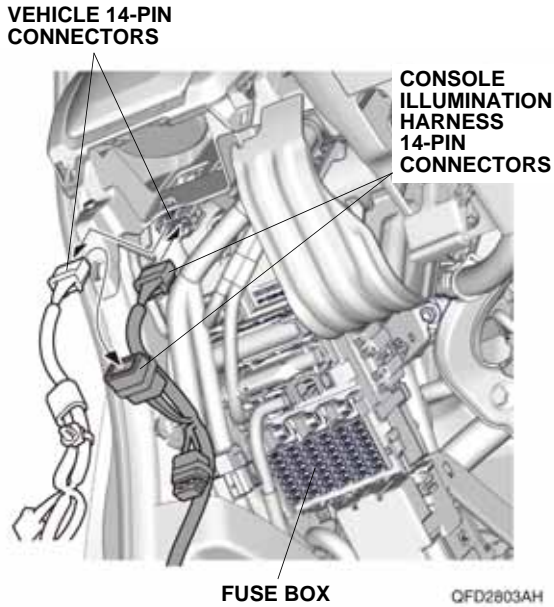


With Other Accessory Harness 14-pin Connector


17. If the other accessory harness 14-pin connector is plugged into the vehicle 14-pin connector, unplug the other accessory harness 14-pin connector and plug it into the console illumination harness 14-pin connector. Plug the console illumination harness 4-pin connector into the vehicle 14-pin connector.

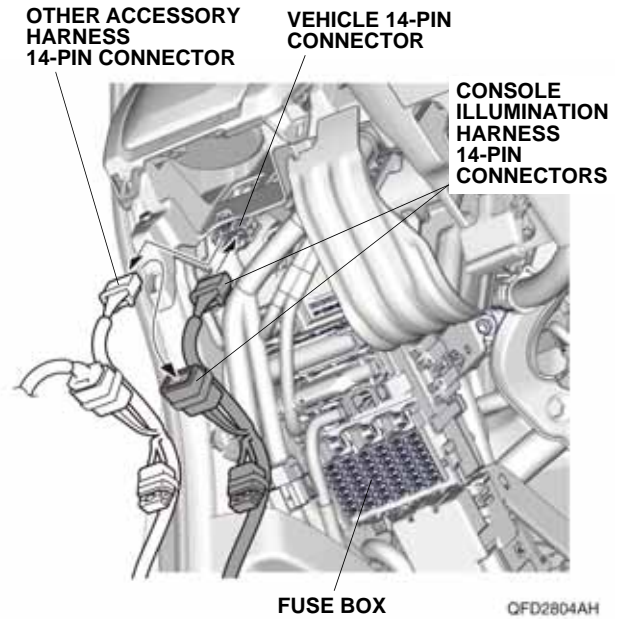


18. Line up the green tape on the console illumination harness with the vehicle clip, and secure the console illumination harness to the vehicle harness with one wire tie.

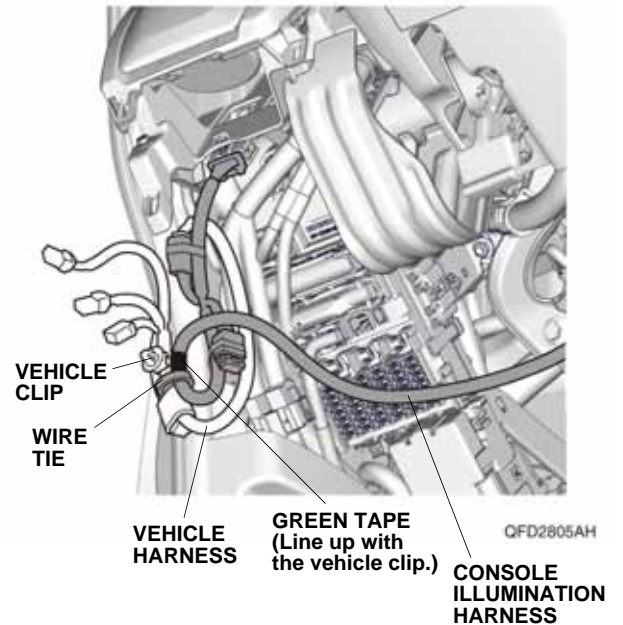


19. Route the console illumination harness as shown. Secure the console illumination harness to the vehicle harness with two wire ties. If the other accessory harness is already secured to the vehicle harness, secure the console illumination harness to the other accessory harness with two wire ties.

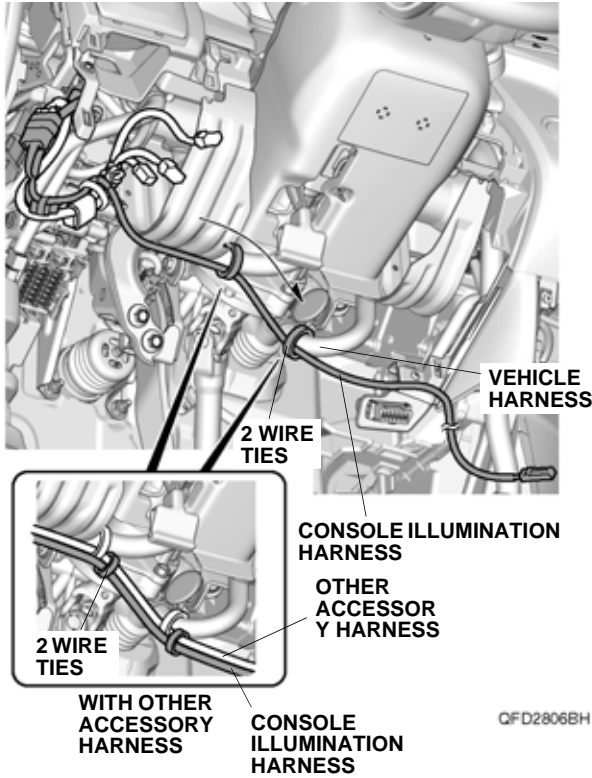


21. Route the console illumination harness as shown. Secure the console illumination harness to the vehicle harness with three wire ties.

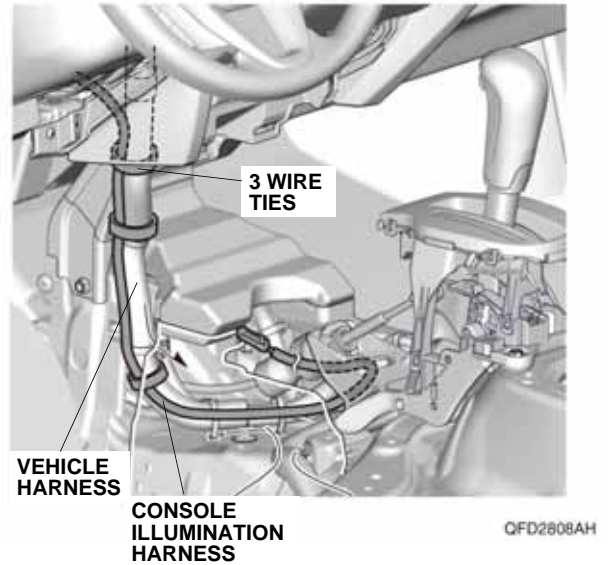


20. Route the console illumination harness as shown. Secure the console illumination harness to the vehicle harness with one wire tie.

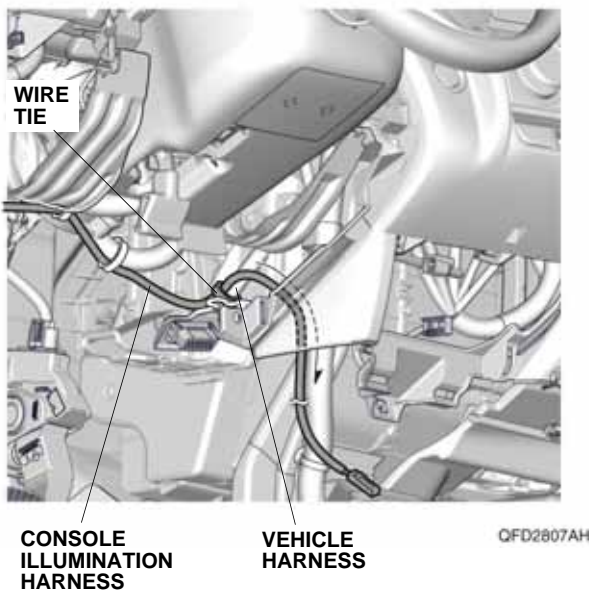

22. Route the console illumination harness as shown. Line up the green tape on the console illumination harness with the center of the square hole in the vehicle panel, and secure the console illumination harness to the vehicle harness with three wire ties.

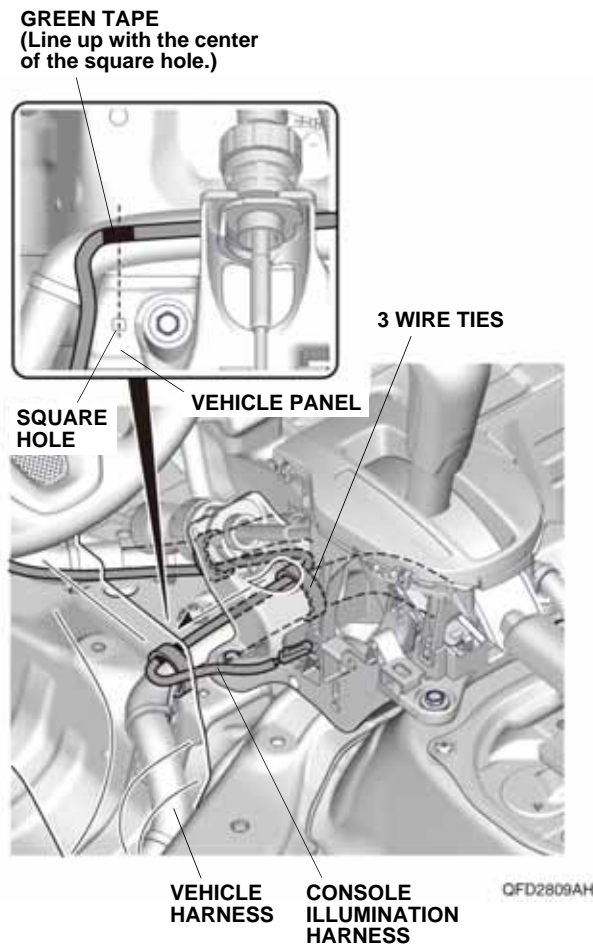

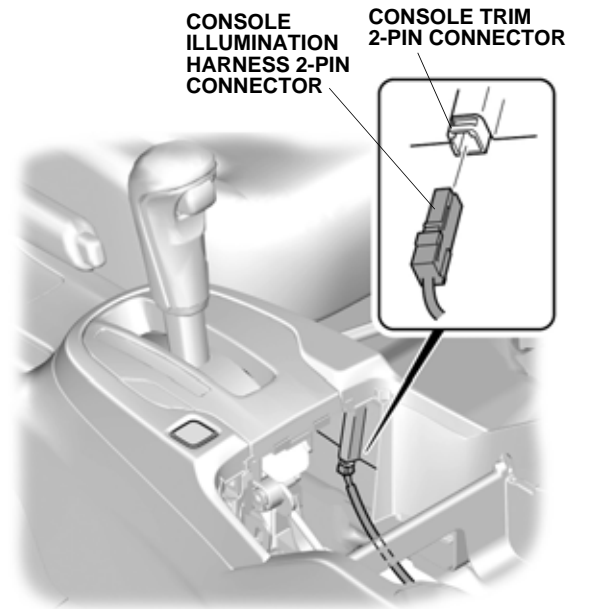


23. Install the center console.



24. Plug the console illumination harness 2-pin connector into the console trim 2-pin connector.
25. Check that all wire harnesses are routed properly and all connectors are plugged in.
26. Install all removed parts.
27. Connect the negative cable to the battery.
28. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
29. Set the clock.
30. If necessary, restore the systems back to normal operation as described in the service information.

HOW TO OPERATE

- With the light switch set to the “” or “” position, the console illumination is on.
- When the headlight switch is in the “AUTO” position, the console illumination is on with the parking lights or headlights.
- Check that the console illumination brightness varies along with the instrument panel brightness by turning the brightness control knob.
- If the console illumination does not come on, check the fuse and all the connectors.

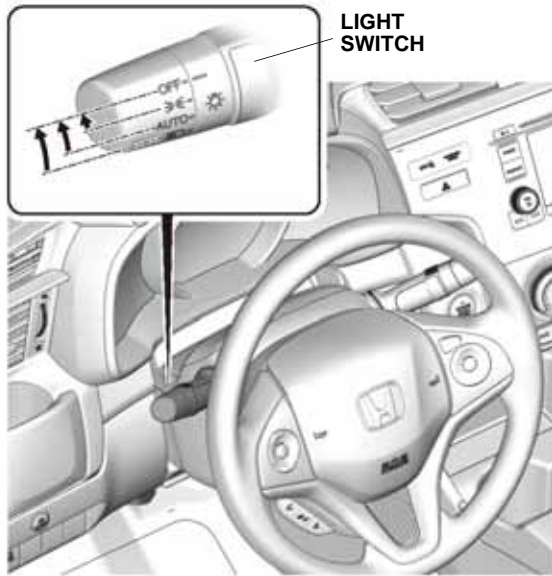

QC92501AJ