



## HONDA INSTALLATION INSTRUCTIONS

Accessory

ARMREST CONSOLE

Application

2019 FIT

Publications No.

VERSION 1

Issue Date

APR 2018

### PARTS LIST

**Armrest Console Kit**  
**P/N 08U89-T5A-110**

Armrest console



Bracket A



Bracket B



4 Caps A




3 Washers




7 Bolts



Left template A



Right template A

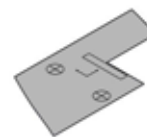

Template B



Accessory User's Information Manual



**Heated Seat Switch Kit**  
**P/N 08U89-T5A-110B**

Trim A




3 Self-tapping screws



Wire tie



Template C



**Center Console Kit**  
**P/N 08U89-T5A-110C**

Center console



3 Wire ties  
(Some may not be used)



Cap B  
(May not be used)



Holder  
(May not be used)



Trim B



4 Self-tapping screws



## TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Flat-tip screwdriver

Ratchet

10 mm and 12 mm Sockets

10 mm and 12 mm Open end wrenches

Torque wrench

Diagonal cutters

Utility knife

Hacksaw

20 mm Hole saw

Drill

3 mm, 5 mm, and 5.5 mm Drill bits

Pushpin

Masking tape

File

Ruler


Felt-tip pen

Eye protection (face shield, safety goggles, etc.)

*The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.*

- Plastic Trim Tool (T/N SILTRIMTL10)
- Trim Tool Set (T/N SOJATP2014)

## Illustration of the Armrest Console Installed in the Vehicle

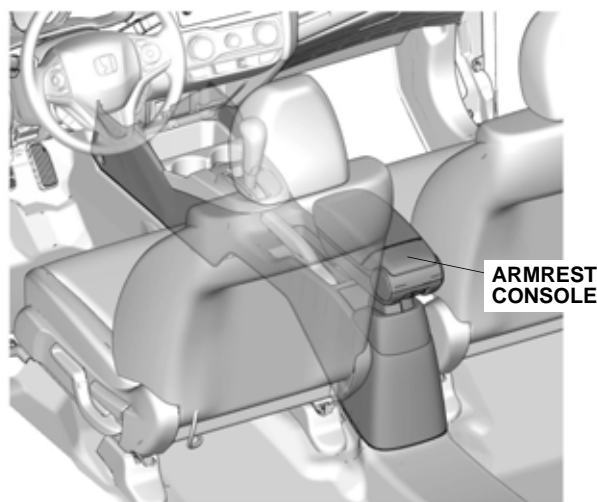


QFD0901AT

## INSTALLATION


**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

1. Disconnect the negative cable from the battery.


2. Open the glove box, push inward on the stops, and remove the glove box.

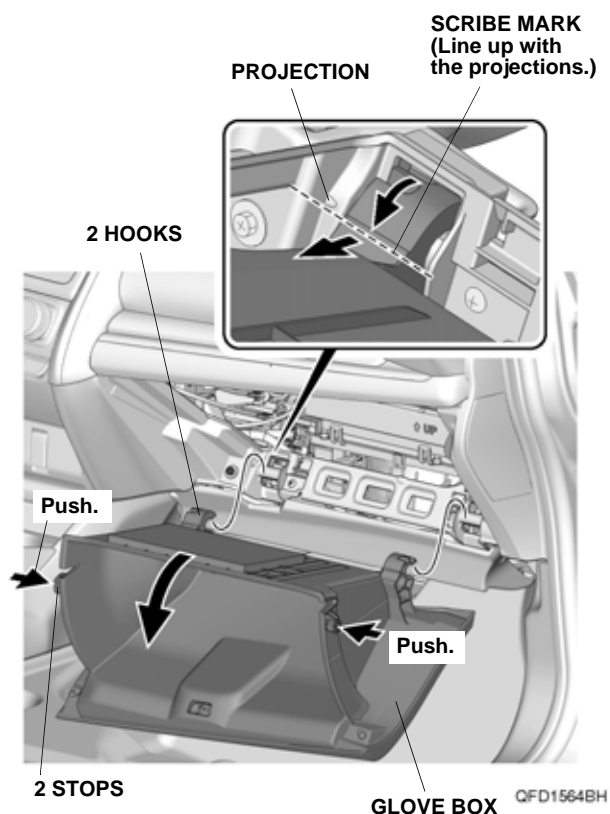

3. Apply masking tape as shown.

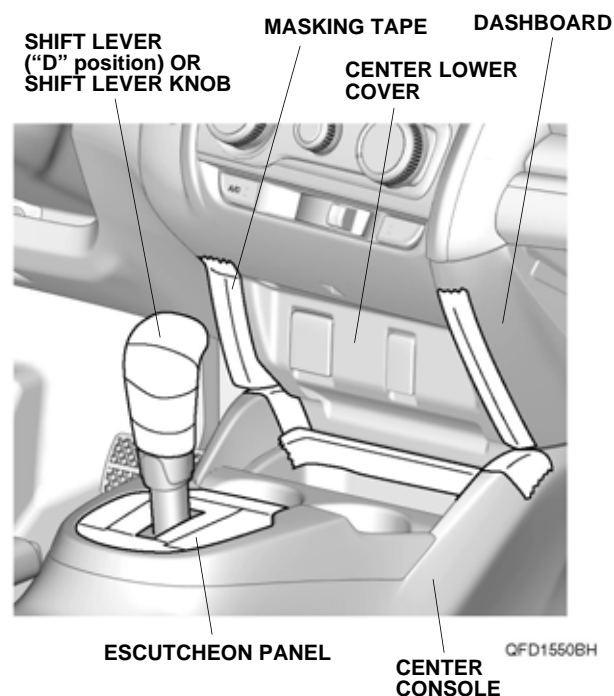

4. Remove the center lower cover, and unplug the vehicle connectors.

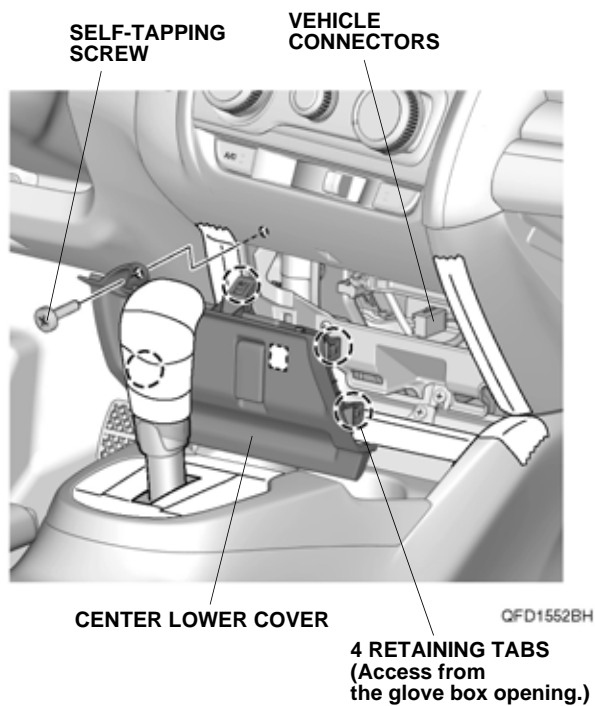


MT models, continue with step 5; otherwise, go to step 6.


## MT Models

5. Remove the shift lever knob.


### Sport Models

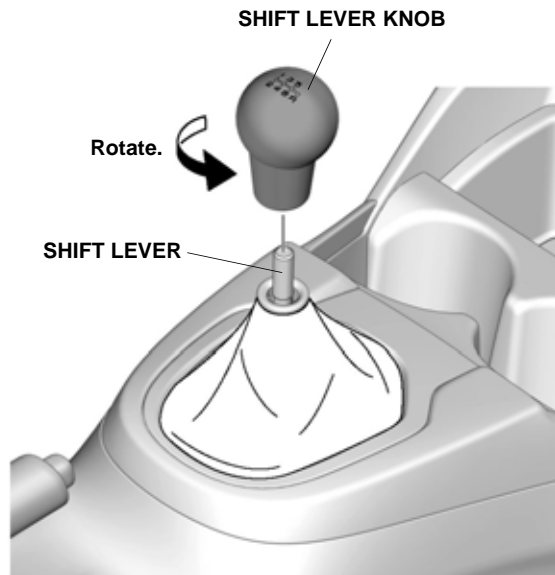

### Except Sport Models

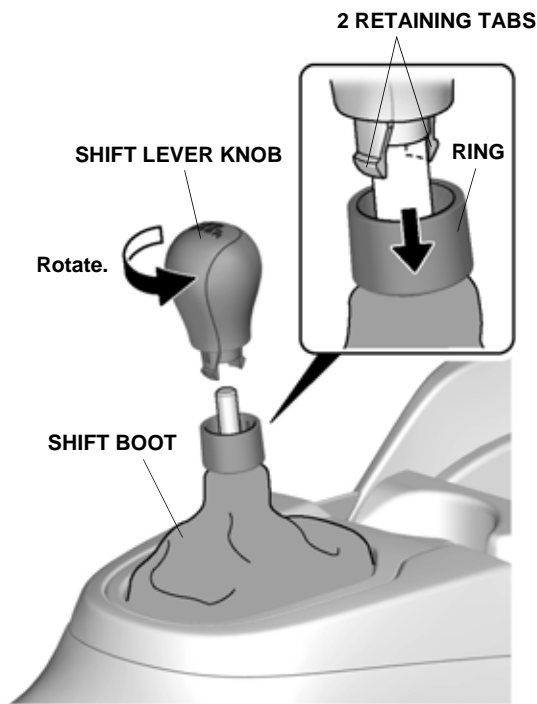


6. Remove the parking brake cover trim.

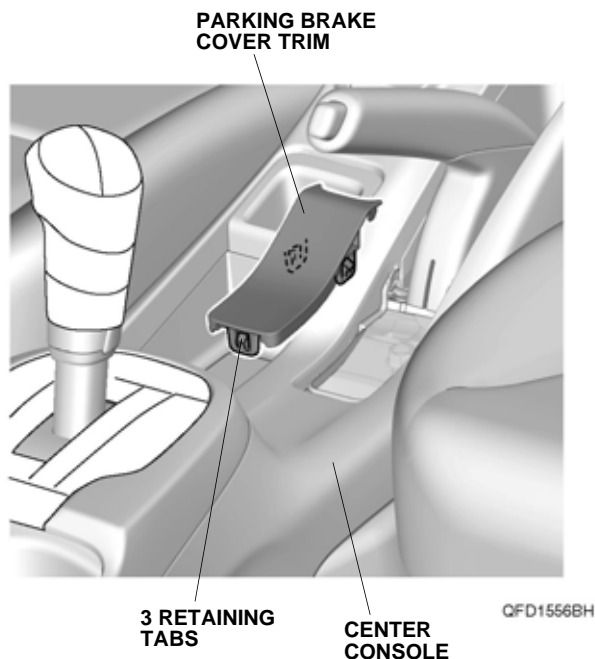


If the vehicle is equipped with an armrest, continue with step 7; otherwise, go to step 18.

## With Armrest


7. Remove the center console rear trim.

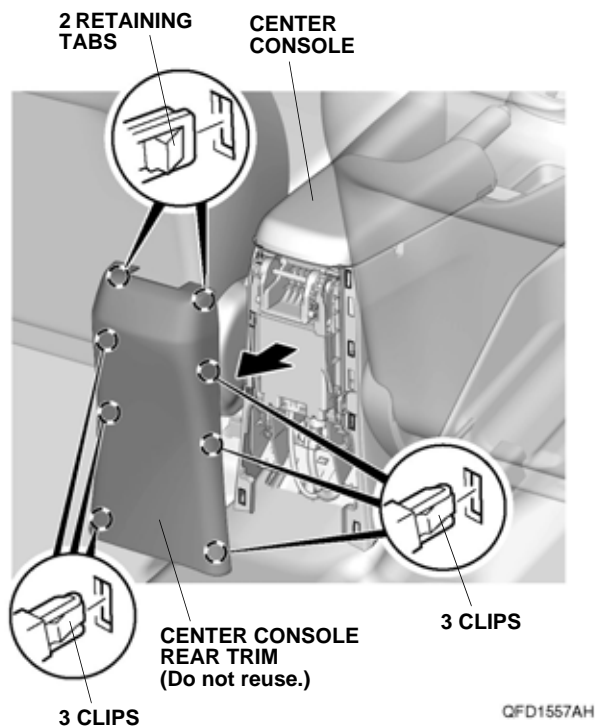

8. Remove the center console, and unplug the vehicle connectors.

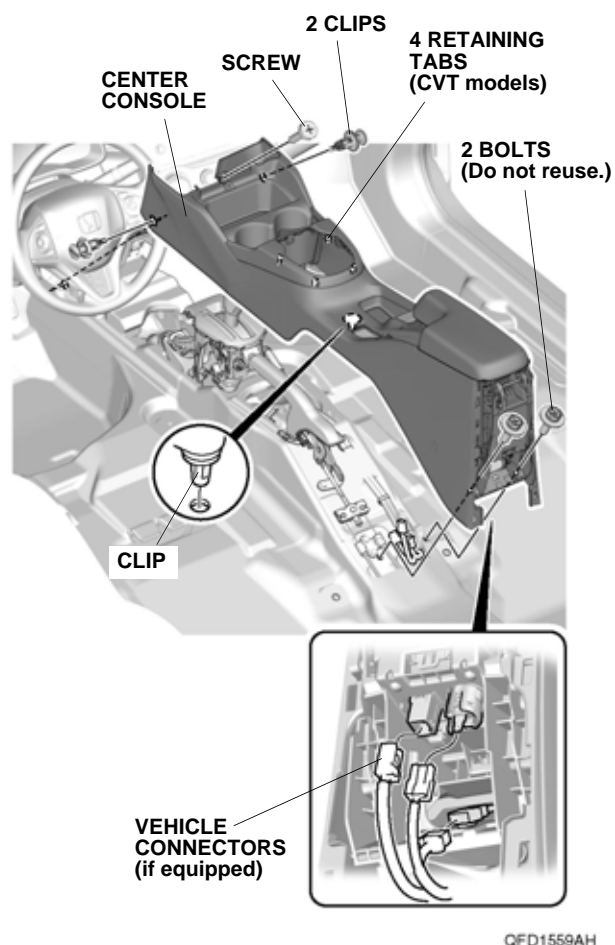


9. Remove the beverage holder.

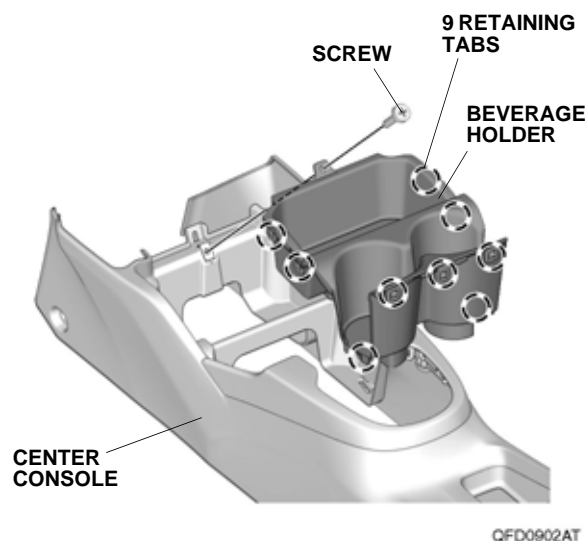

10. Remove the console panel:

## CVT models


- Remove the six screws, and release the eight retaining tabs.

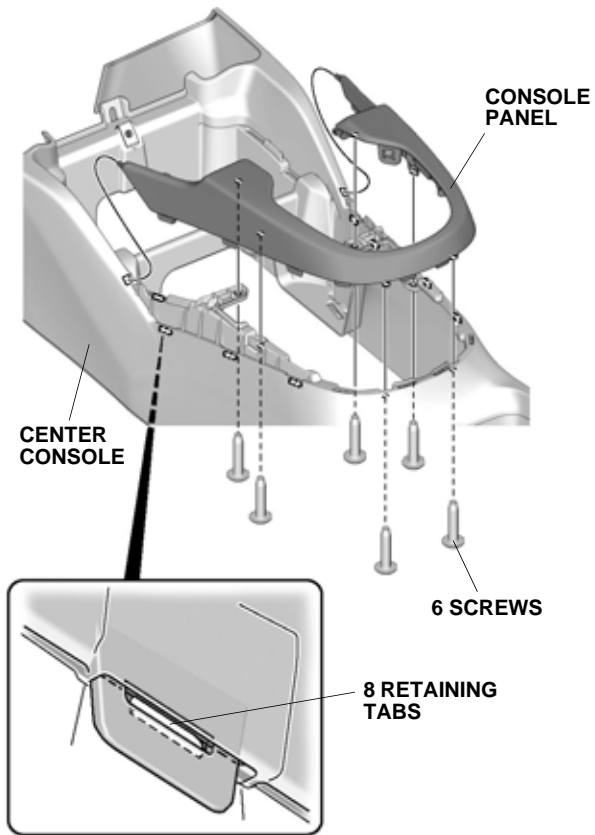

QFD0903AT

## MT models

- Remove the shift lever boot and the console panel.

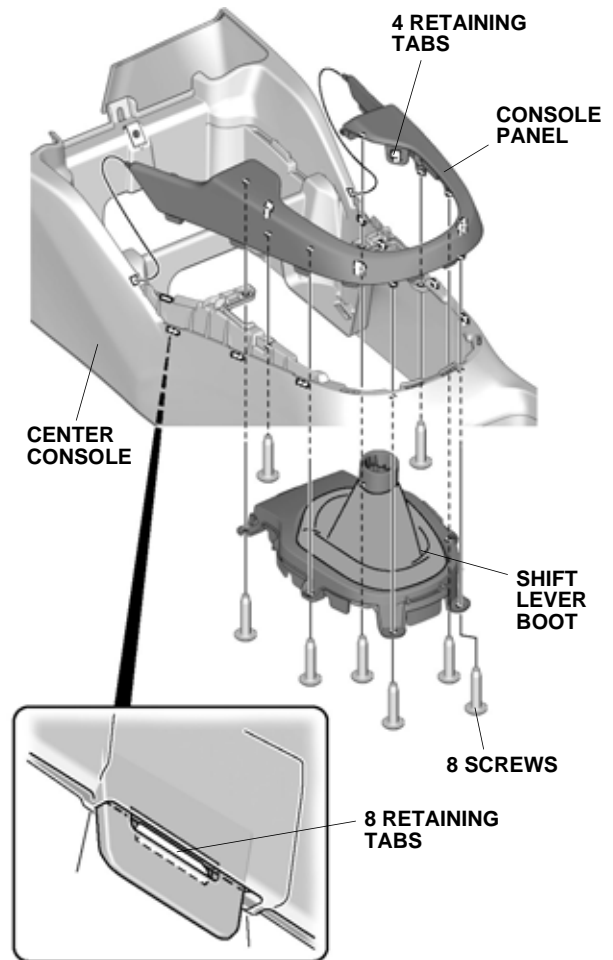


QFD0904AT


If the vehicle is equipped with seat heaters, continue with step 11; otherwise, go to step 13.

## With Seat Heaters


11. Remove the center console sub cord, and unplug the vehicle connectors.

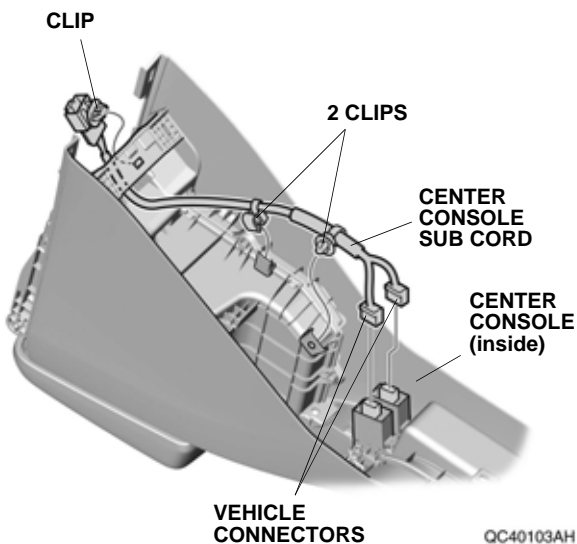


12. Remove the driver's and passenger's seat heater switches.

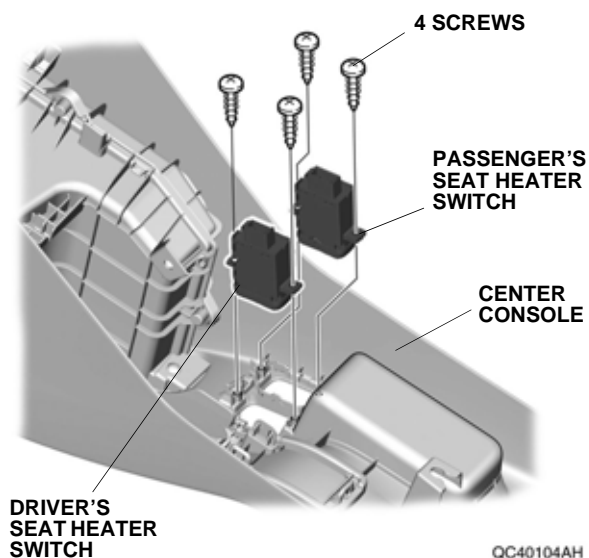

13. Remove the accessory power socket.

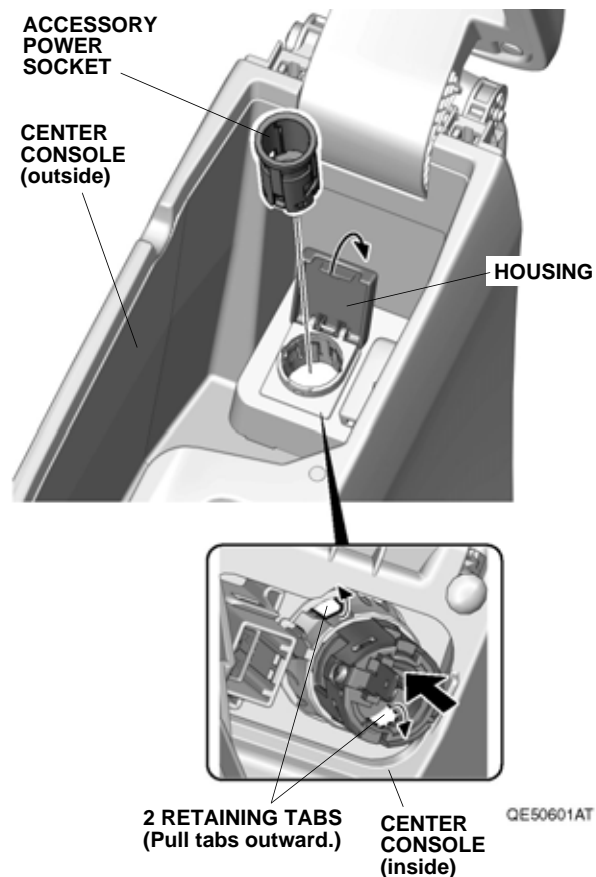


14. Remove the housing.

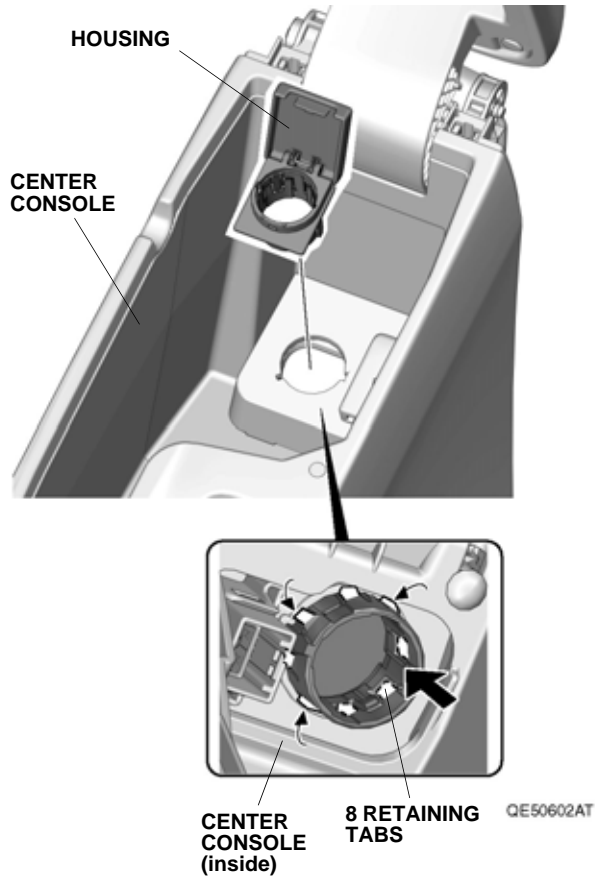


If the vehicle is equipped with a USB adapter, continue with step 15; otherwise, go to step 16.

## With USB Adapter

15. Remove the holder.

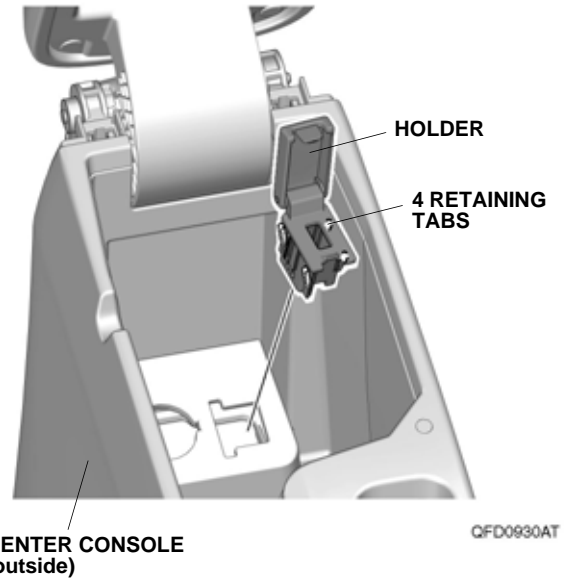


16. Remove the clip.

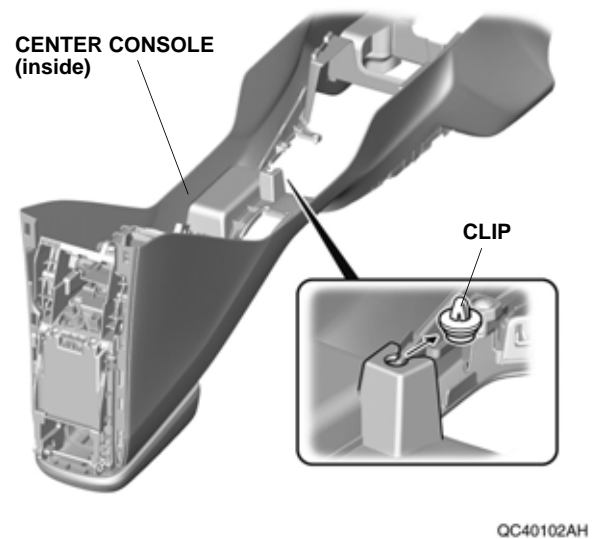




17. Remove the spring nut. Go to step 19.

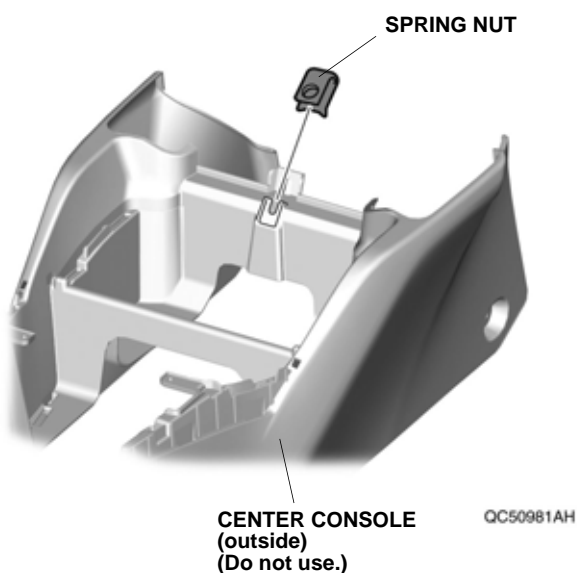


## Without Armrest


18. Remove the center console.

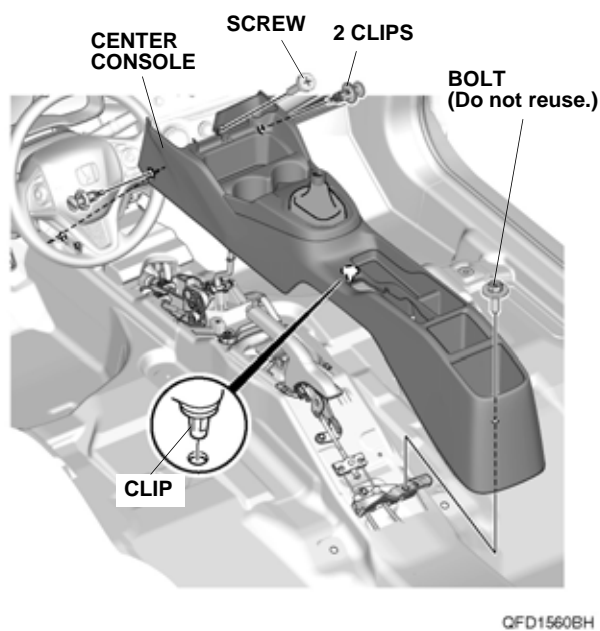

19. Move the front seats forward as far as possible. Move the shift lever to Park or 1st. Release the parking brake. Remove the wire guide base. Loosen the adjusting nut.

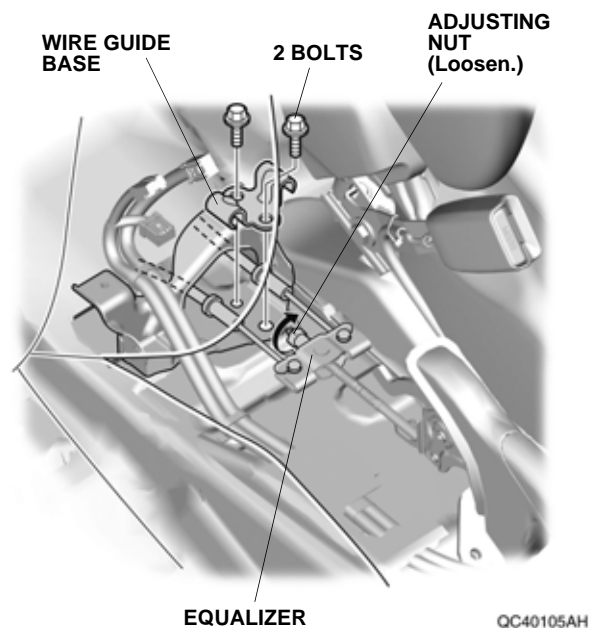


20. Disconnect the parking brake cables from the equalizer.  
NOTE: Be careful not to bend or distort the parking brake cables.

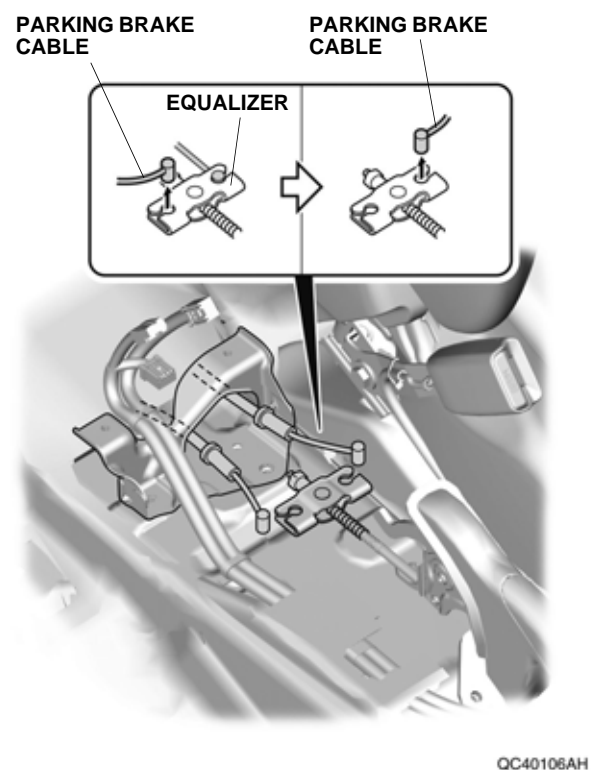


If the vehicle is equipped with an armrest, continue with step 21; otherwise, go to step 23.

## With Armrest

21. Remove the bracket, and release the clip.

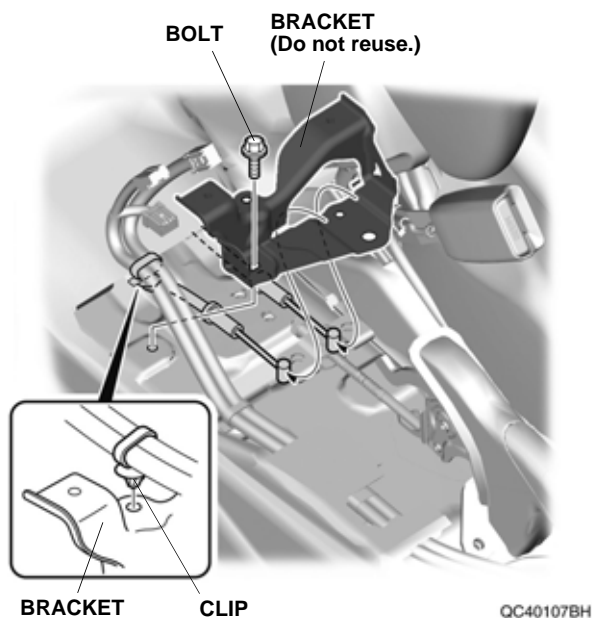


22. Cut off the clip from the vehicle wire tie. Go to step 24.

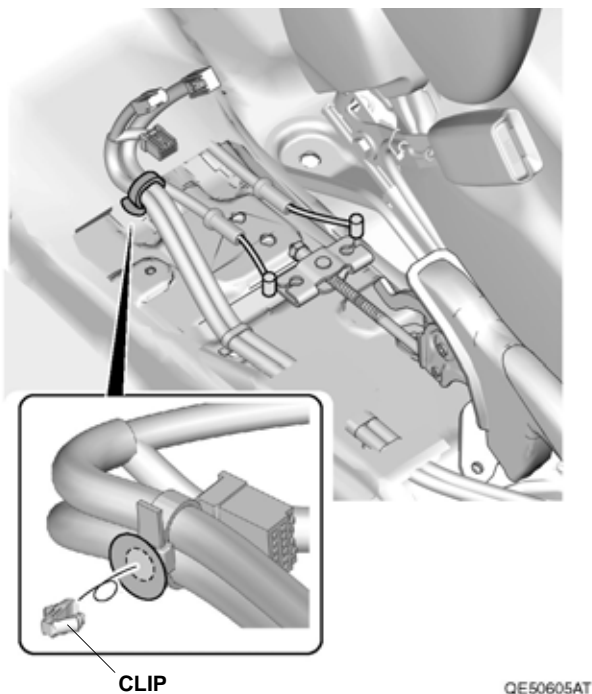


## Without Armrest


23. Remove the bracket.

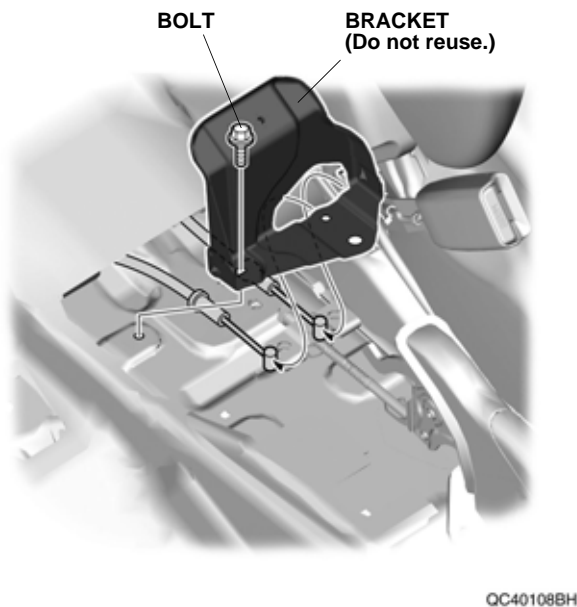

24. Install the parking brake cables.

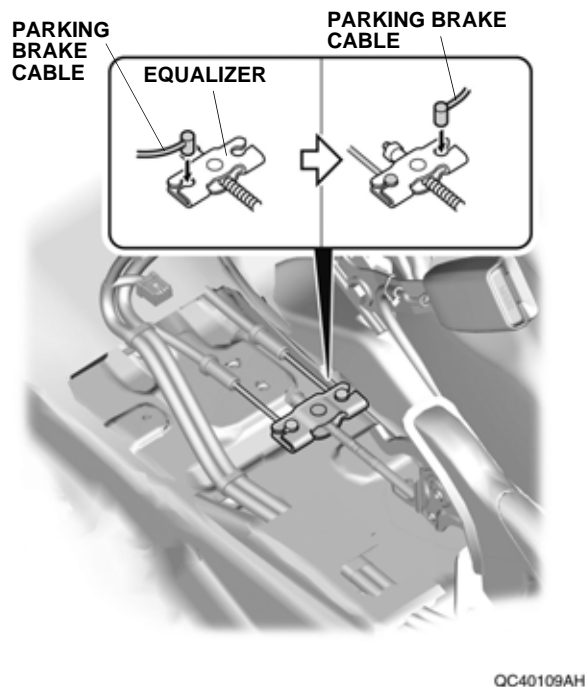


25. Install bracket A with three bolts. If the vehicle is equipped without an armrest, go to step 58.  
NOTE: Check and adjust the parking brake as described in the service information.

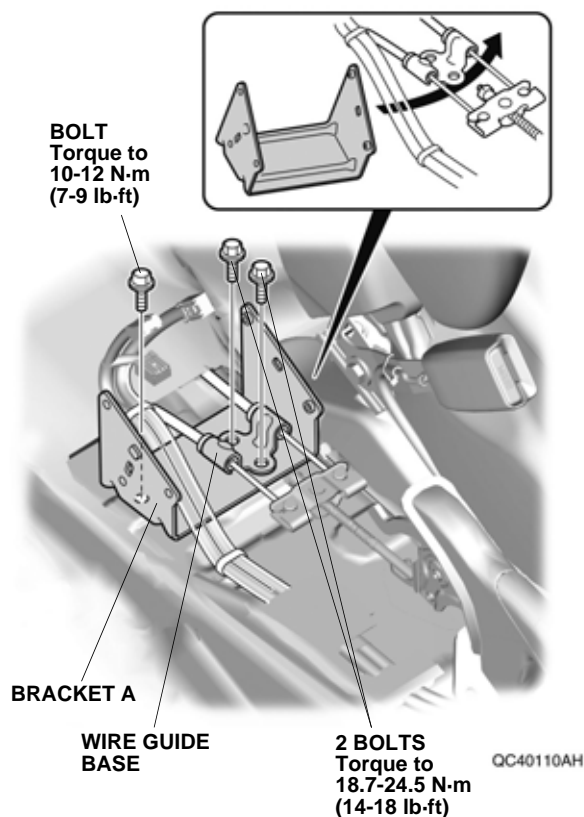


If the vehicle is equipped with seat heaters, continue with step 26; otherwise, go to step 41.

## With Seat Heaters


26. Remove the clip, and cut off the two clips from the center console sub cord.  
NOTE: Be careful not to damage the center console sub cord.

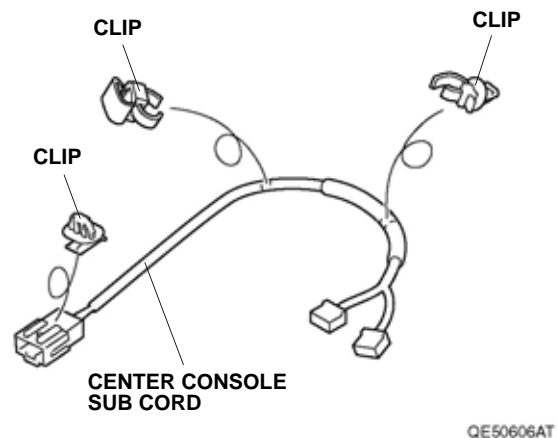

27. Secure the vehicle harness with one wire tie.

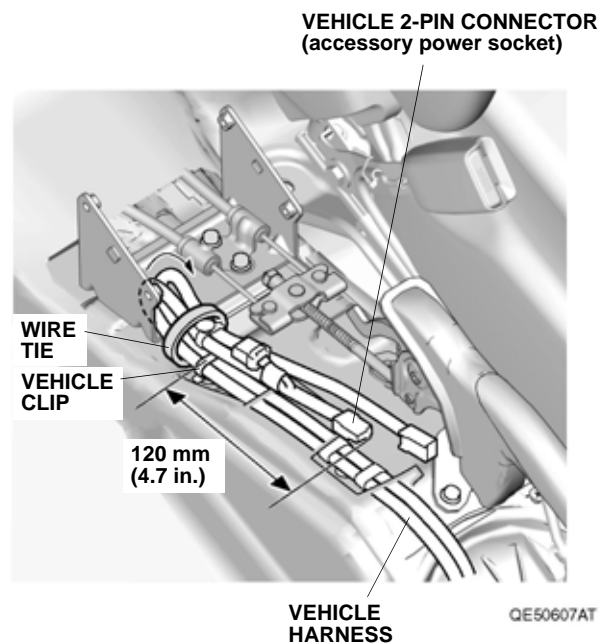


28. Plug the vehicle 12-pin connector into the center console sub cord 12-pin connector.

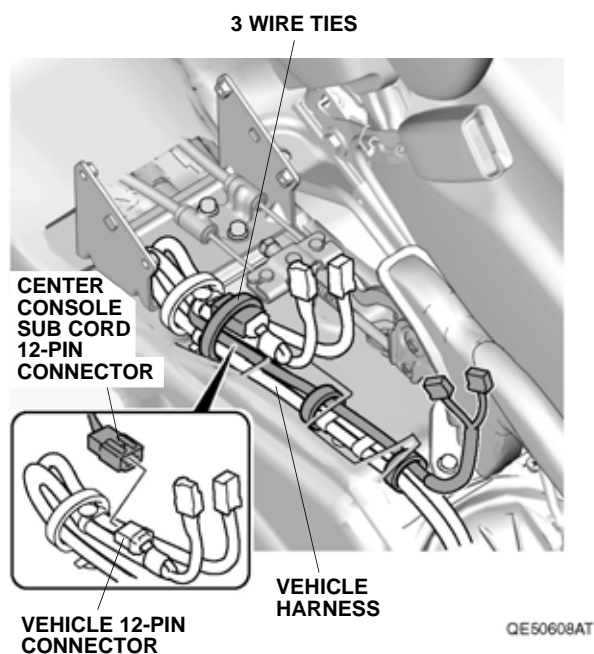


29. Secure the 12-pin connectors and the center console sub cord with three wire ties.


30. Secure template C to the center console with masking tape.

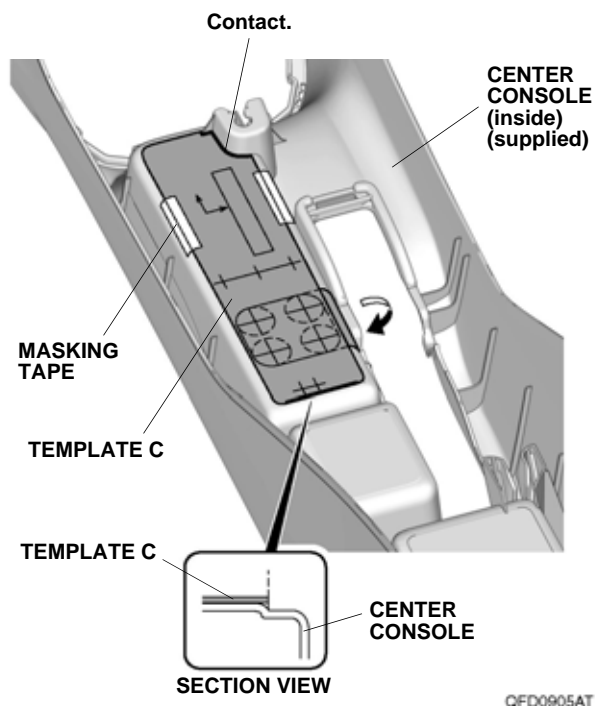

31. Using a pushpin, pierce the center of the nine marks on template C.

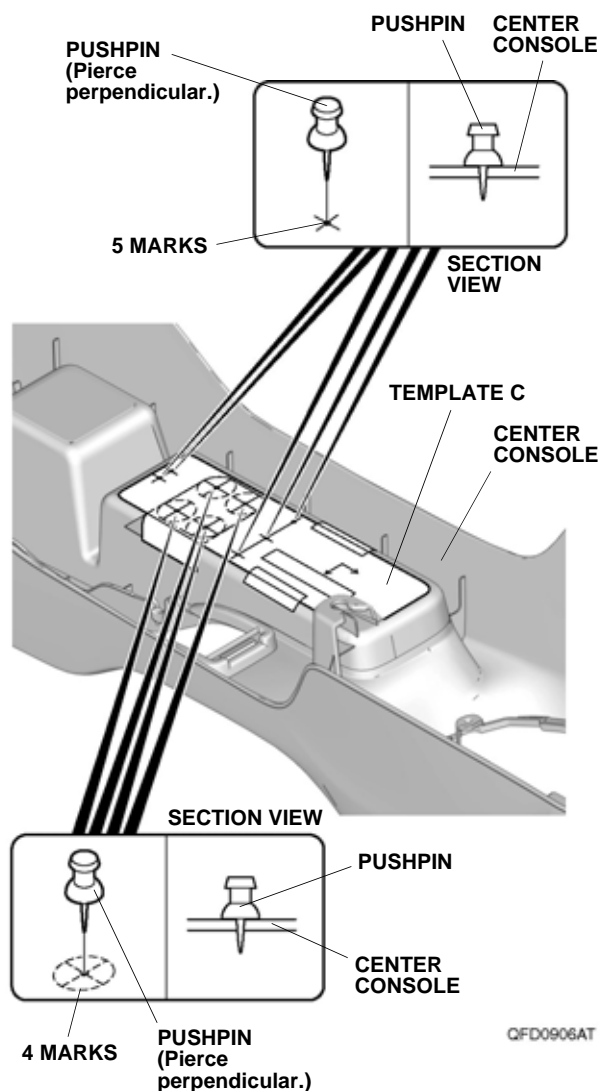


32. Using a utility knife and a felt-tip pen, mark the center console as shown.

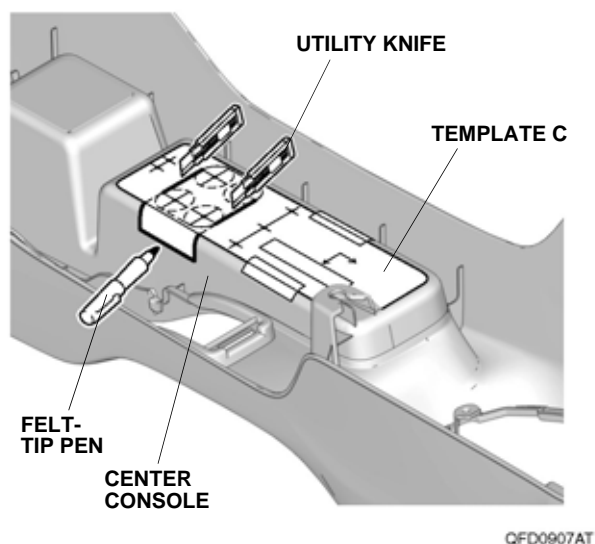


33. Remove template C.

34. While wearing eye protection, drill the nine pierced marks with a 3 mm drill bit.

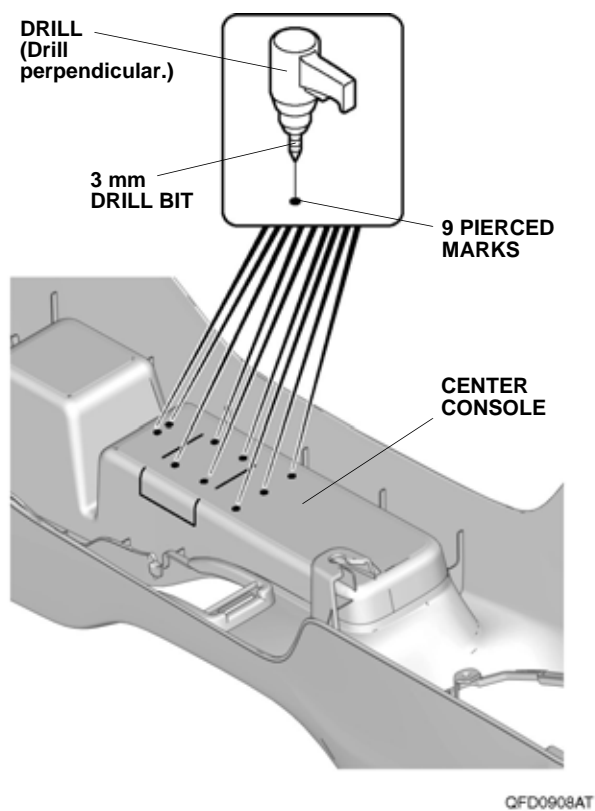


35. While wearing eye protection, enlarge the three holes to 5 mm.


NOTE: Make sure to drill the correct position.

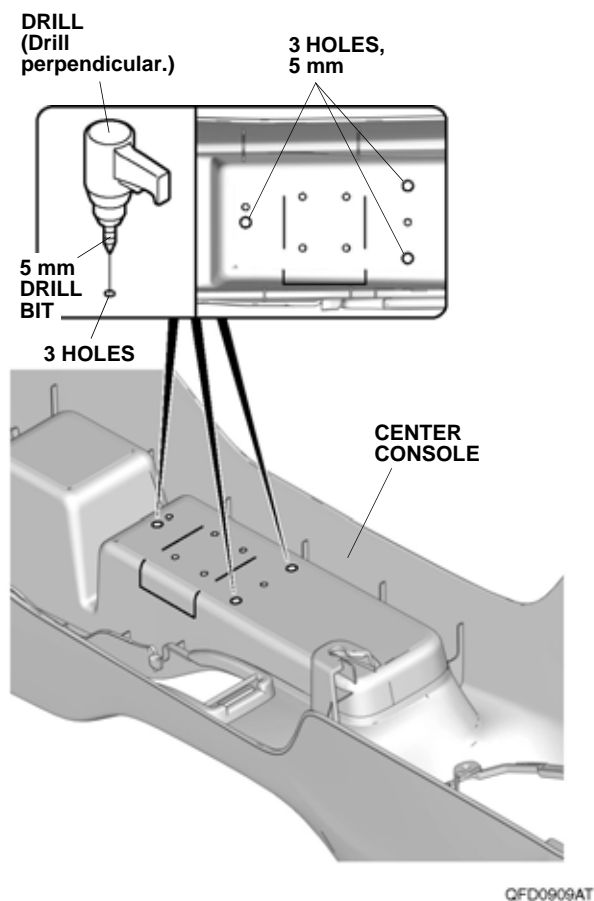


36. While wearing eye protection, enlarge the four holes to 20 mm.  
NOTE: Make sure to drill the correct position.

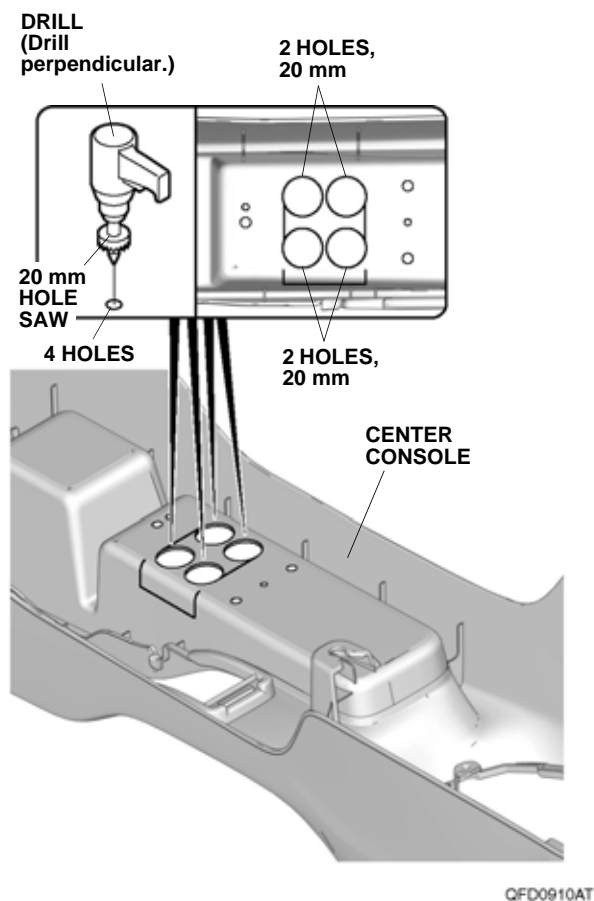


37. Using a utility knife, cut out the center console along the marks.

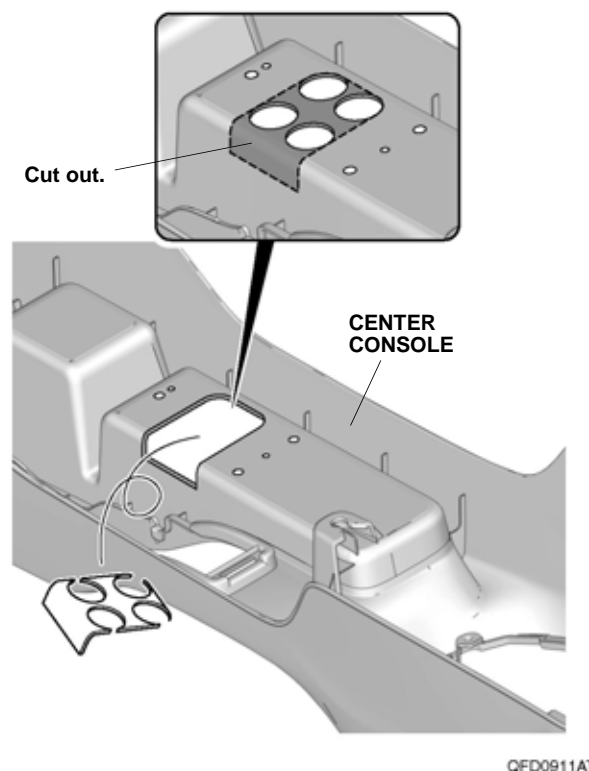

38. Using a file, remove any burrs from the holes.  
39. Install the driver's and passenger's seat heater switches to trim A with four screws.

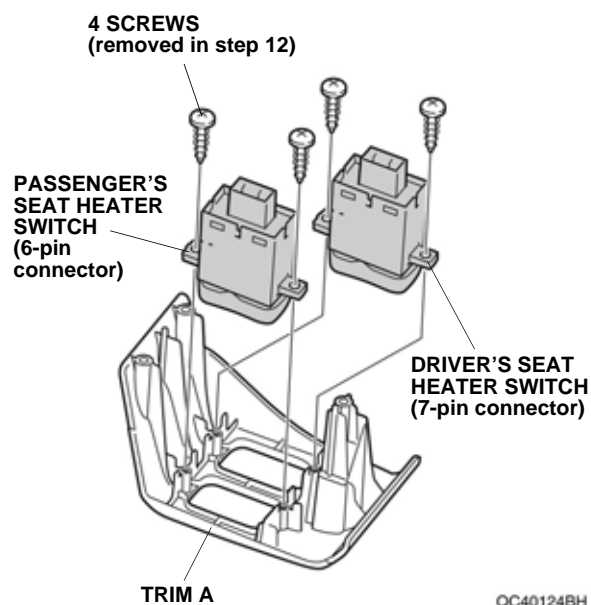


40. Install trim A on the center console with three self-tapping screws. Go to step 42.

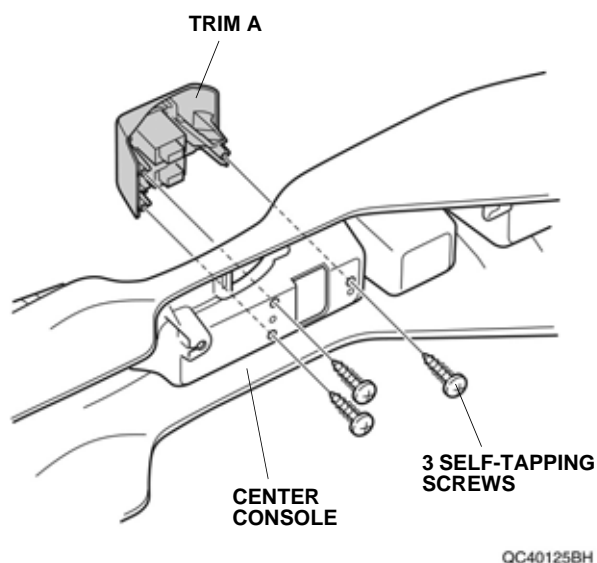


## Without Seat Heaters


41. Secure the vehicle harness with one wire tie.

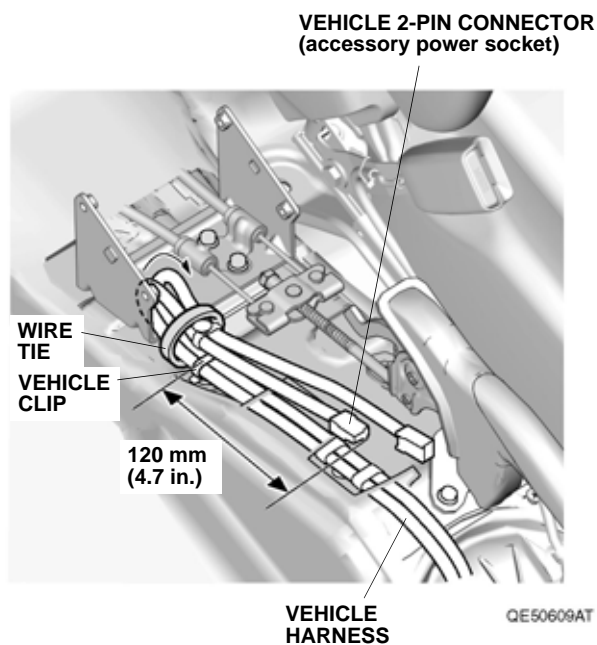


42. Using a felt-tip pen, mark the center console as shown.

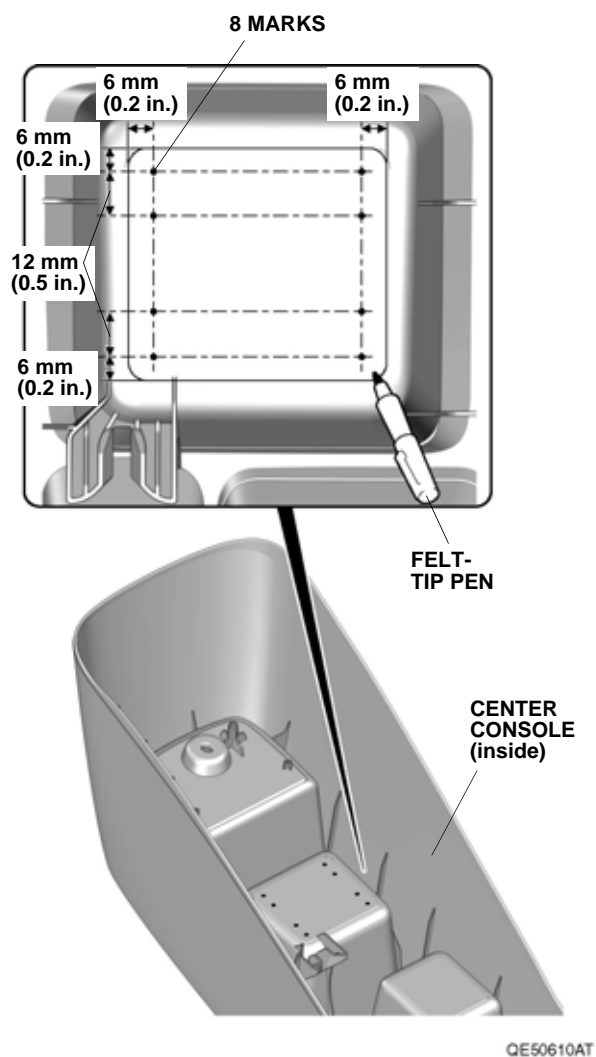


43. Using a pushpin, pierce the center console at the eight marks.

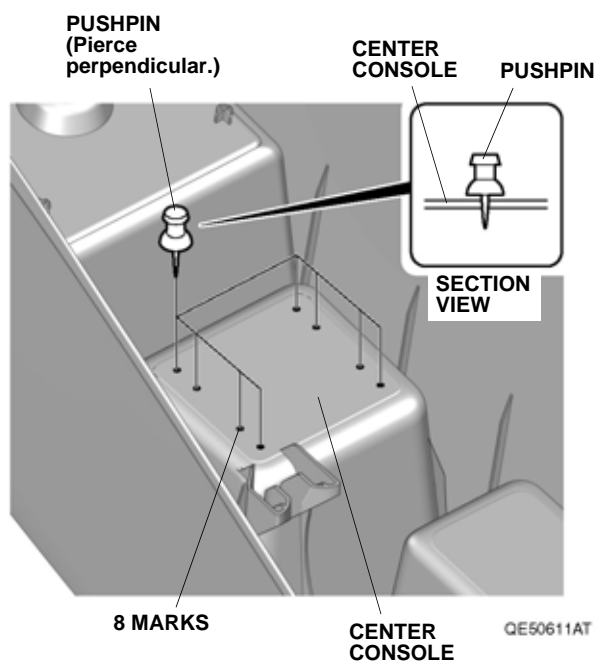


44. While wearing eye protection, drill the eight pierced marks with a 3 mm drill bit, then finish with a 5.5 mm drill bit.

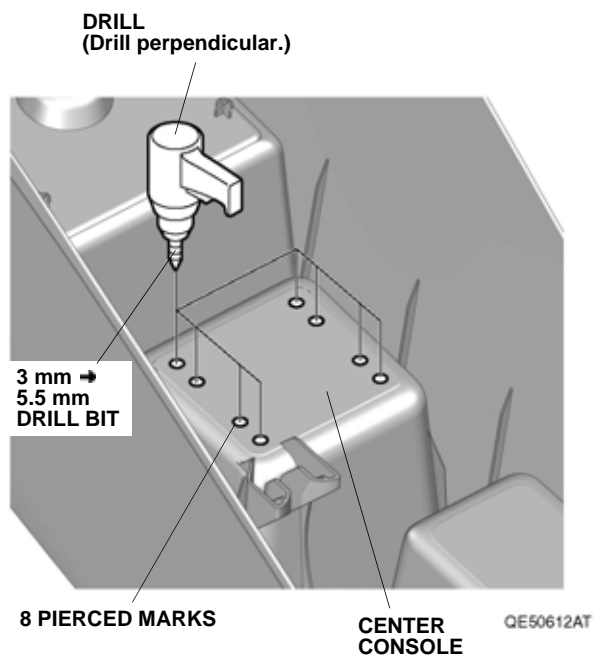

45. Using a felt-tip pen, mark the center console as shown.

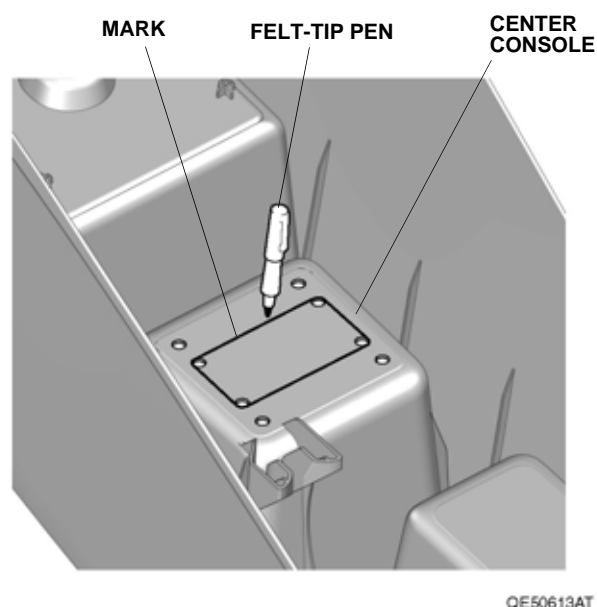

46. Using a utility knife, cut out the center console.

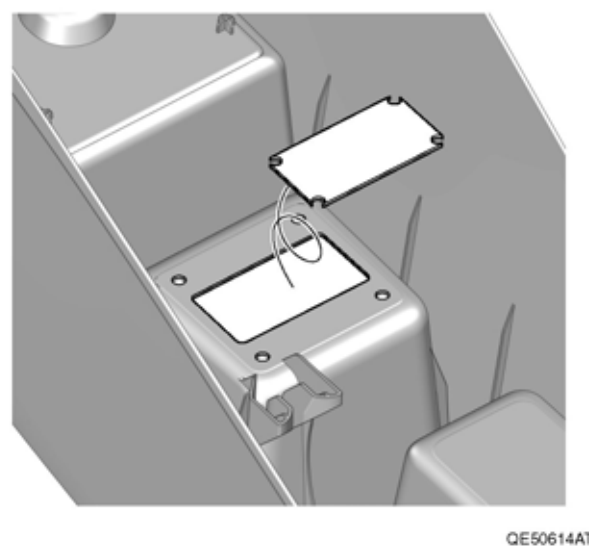


47. Using a file, remove any burrs from the holes.



If the vehicle is equipped with a USB adapter, continue with step 48; otherwise, go to step 49.


## With USB Adapter

48. Install the holder in trim B. Go to step 51.

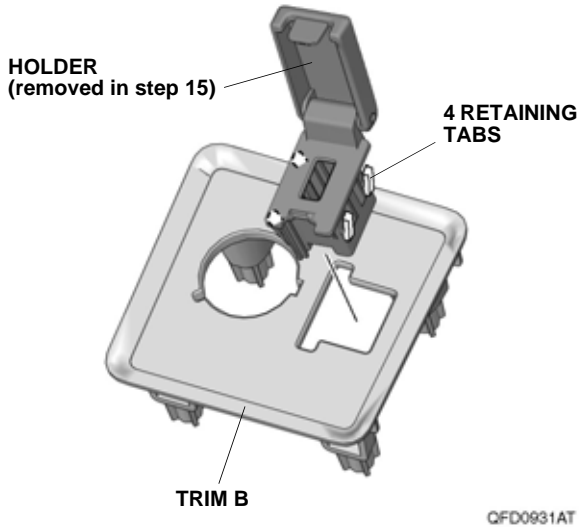


## Without USB Adapter


49. Install the holder in trim B.

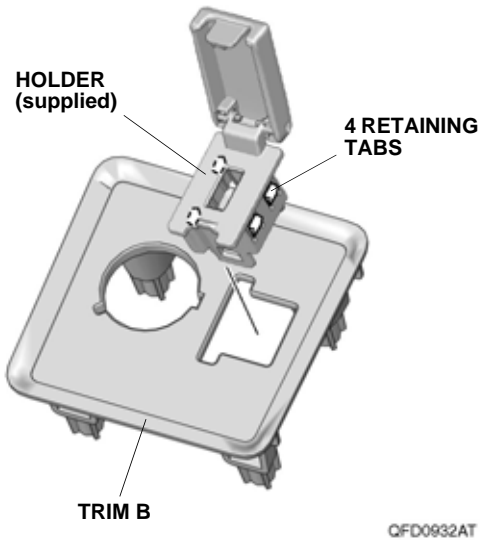


50. Install the cap B in the holder.

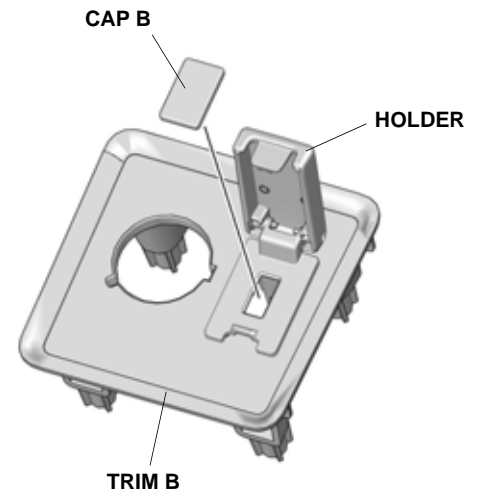


51. Install the housing in trim B.

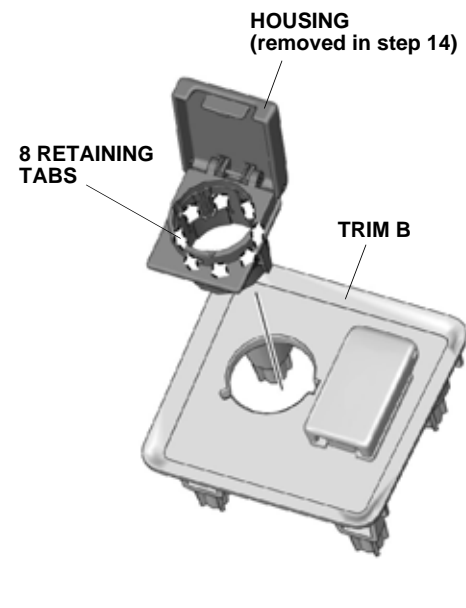


52. Install the accessory power socket in the housing.

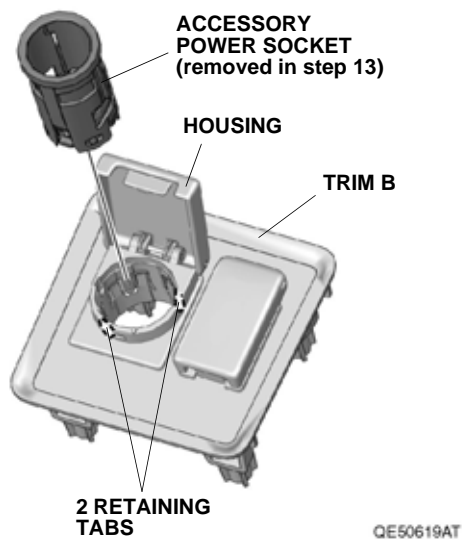


53. Secure trim B to the center console with four self-tapping screws.  
NOTE: Make sure to install trim B in the correct orientation.

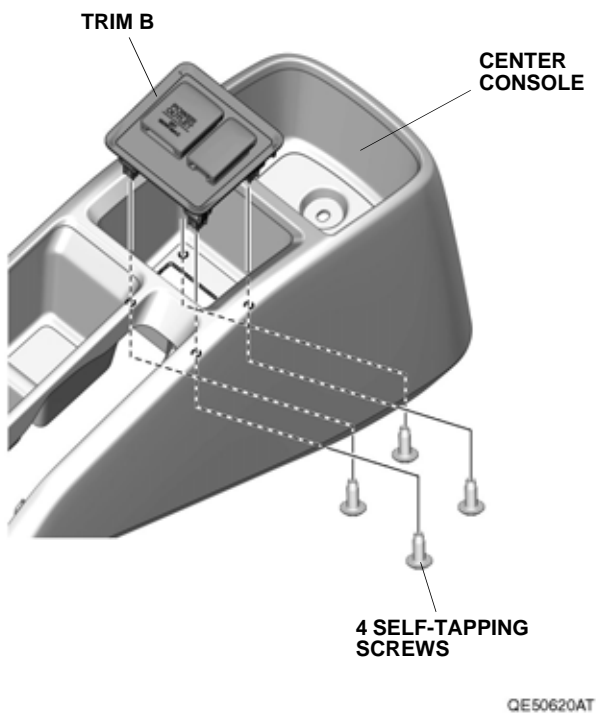

54. Install the spring nut on the center console.

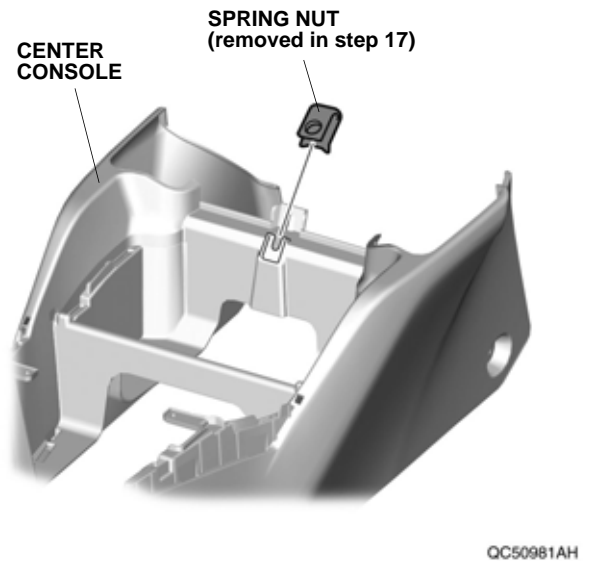


55. Install the clip into the center console.

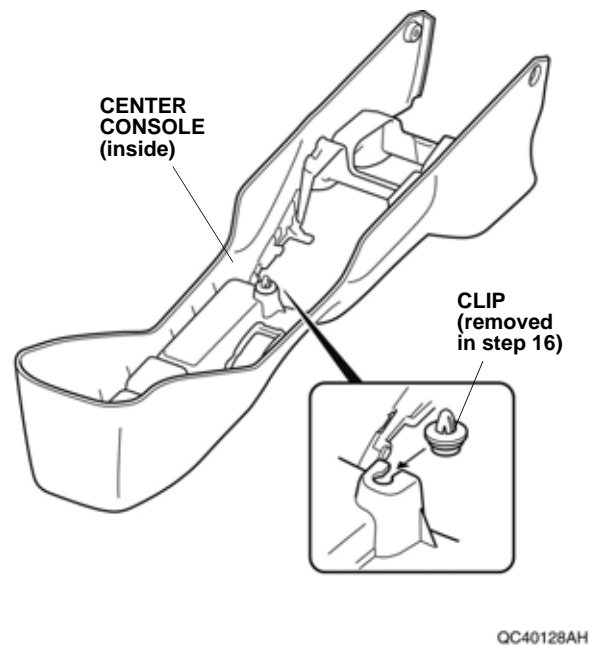

56. Install the console panel on the center console:

## CVT models


- Install the console panel with six screws.

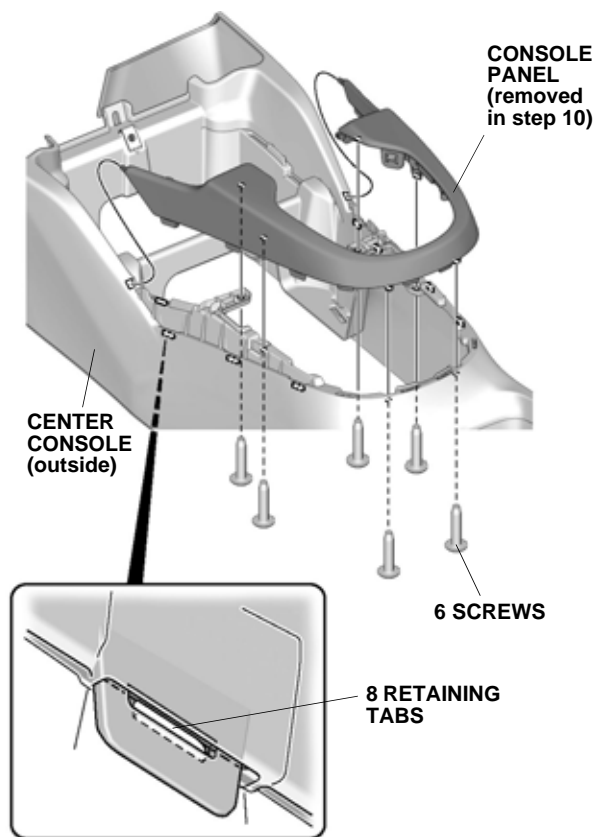

QFD0903AT


## MT models

- Install the console panel, and secure the console panel and the shift lever boot with eight screws.

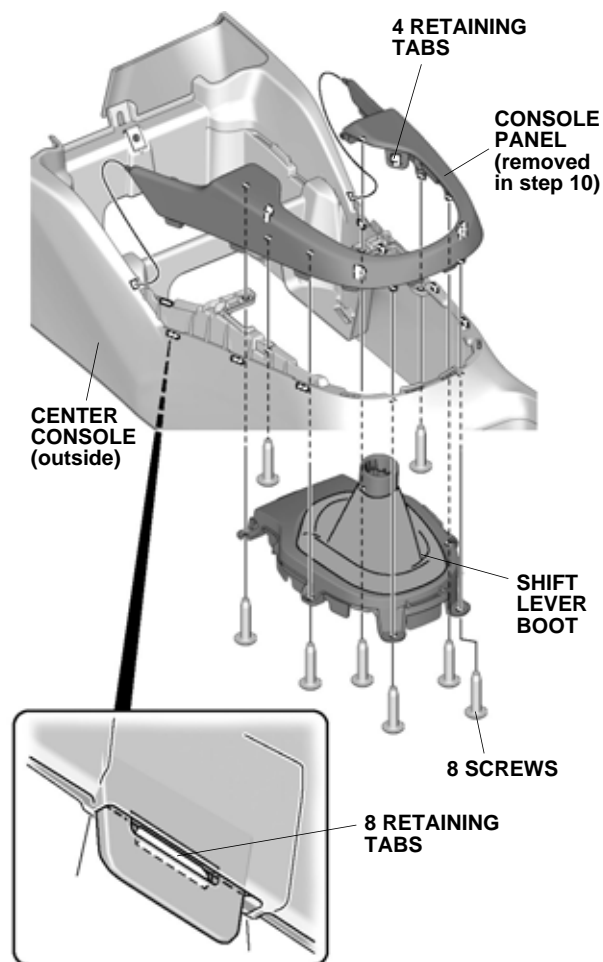


QFD0904AT


57. Install the beverage holder into the center console with one screw.

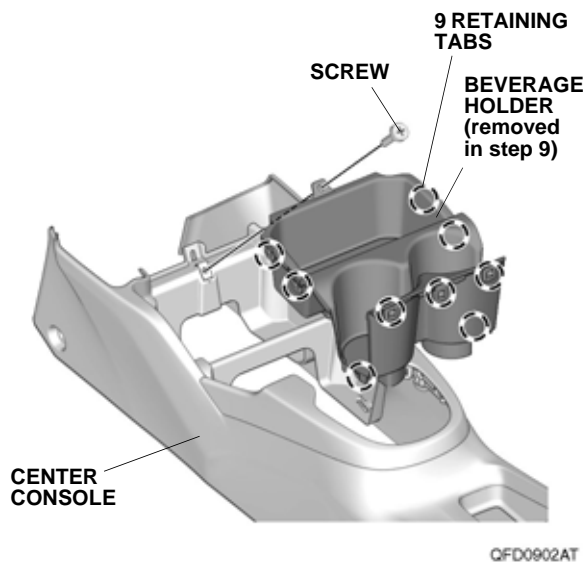

58. Secure left template A to the center console with masking tape.

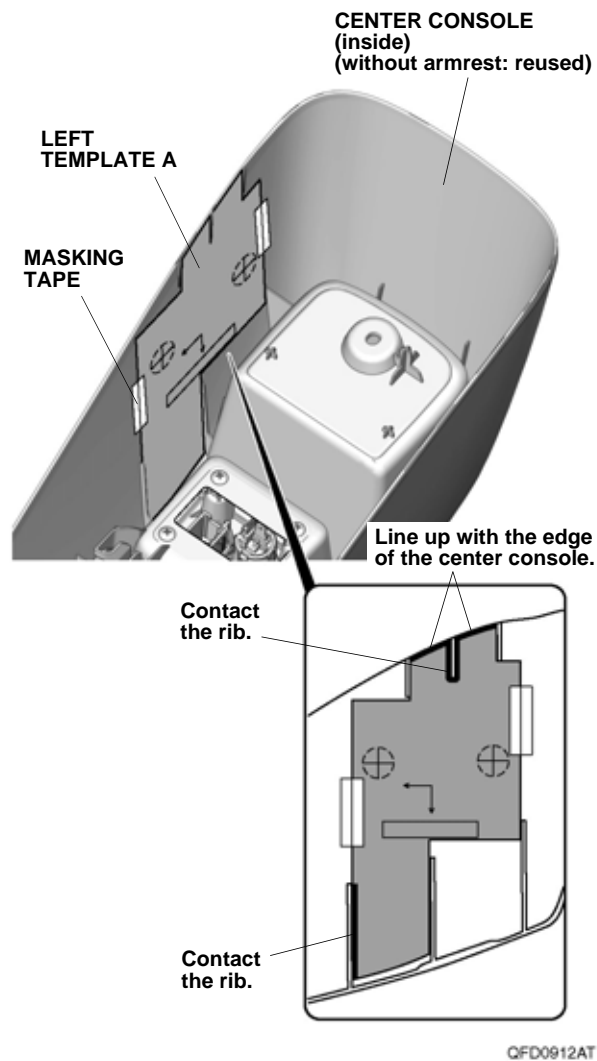


59. Using a pushpin, pierce the center of the two marks on left template A.

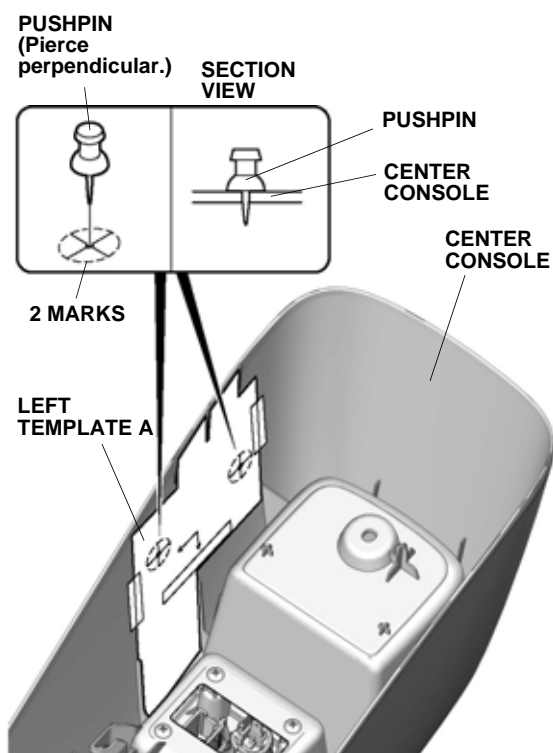

QFD0913AT


60. Remove left template A.

61. Secure right template A to the center console with masking tape.

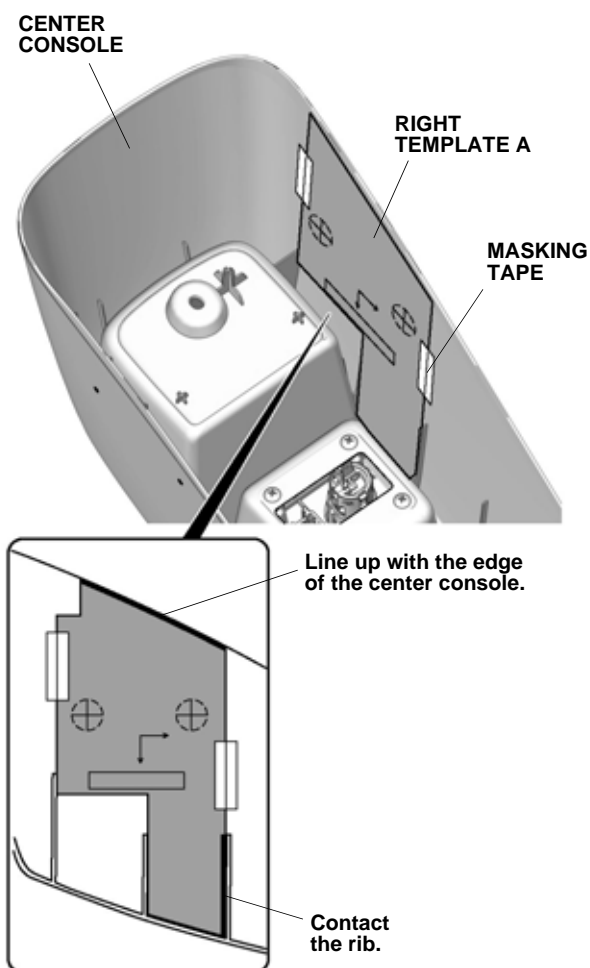


QFD0914AT

62. Using a pushpin, pierce the center of the two marks on right template A.

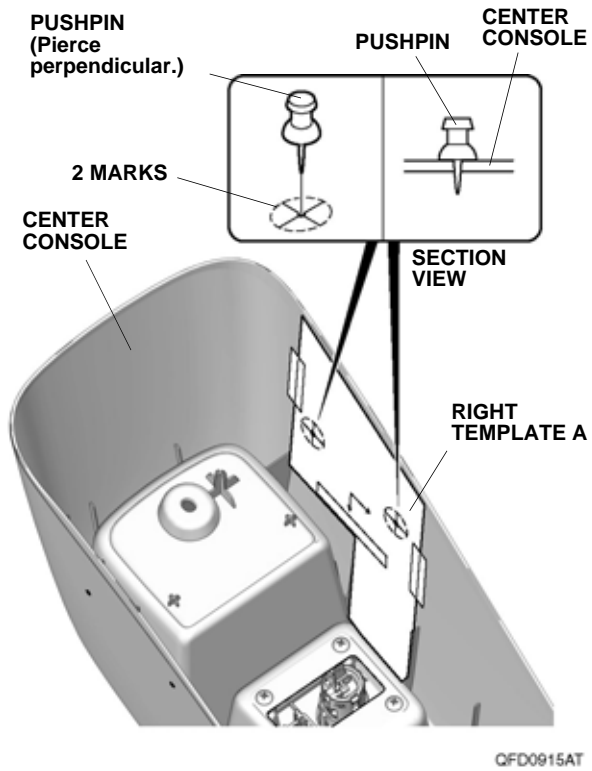


63. Remove right template A.

64. Secure template B to the center console with masking tape.

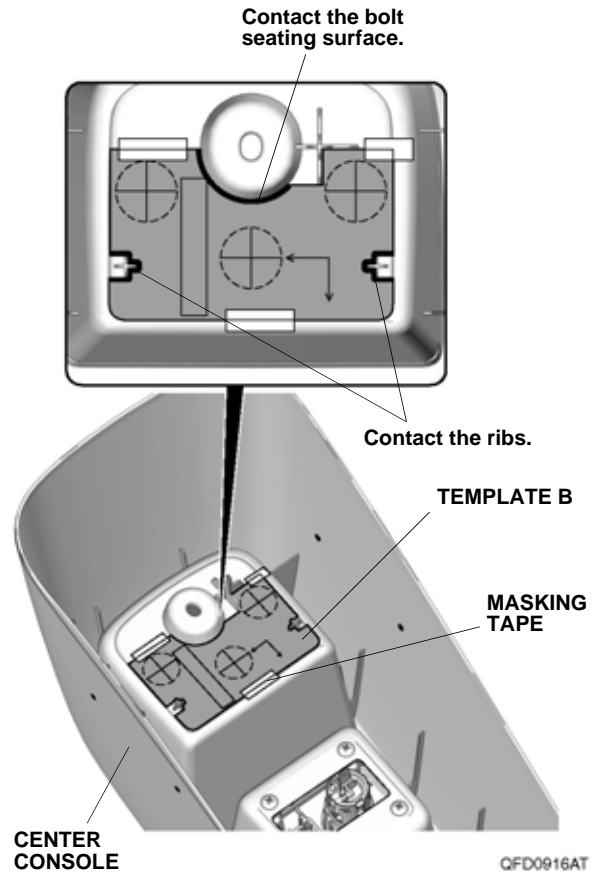


65. Using a pushpin, pierce the center of the three marks on template B.

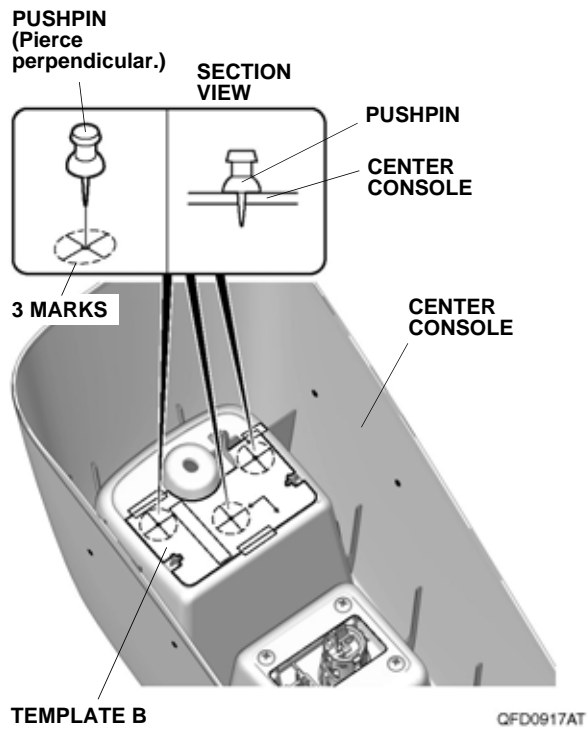


66. Remove template B.

67. While wearing eye protection, drill the seven pierced marks with a 3 mm drill bit, then finish with a 20 mm hole saw.

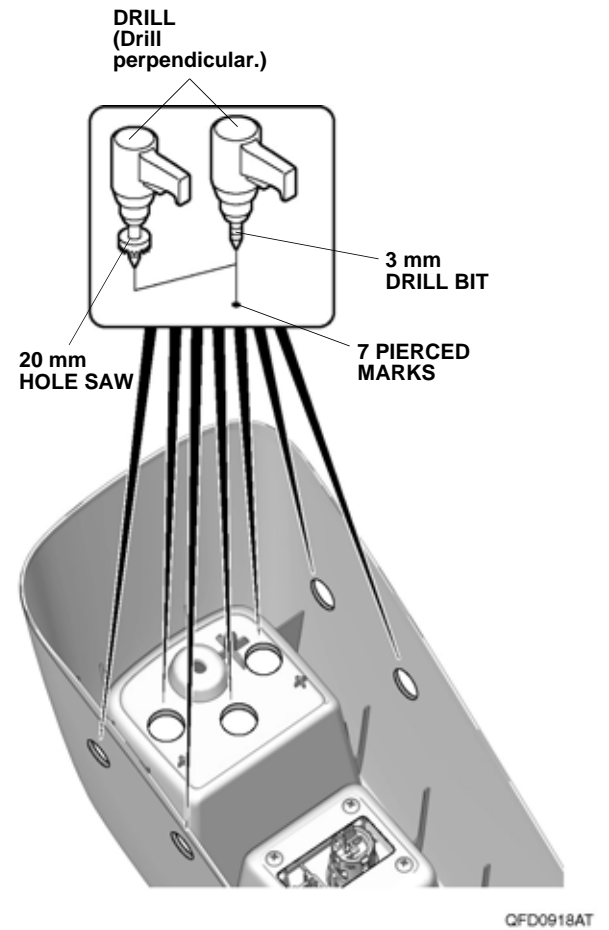


68. Using a file, remove any burrs from the holes.


69. Install the armrest console to the center console with three washers, bracket B, and three bolts.

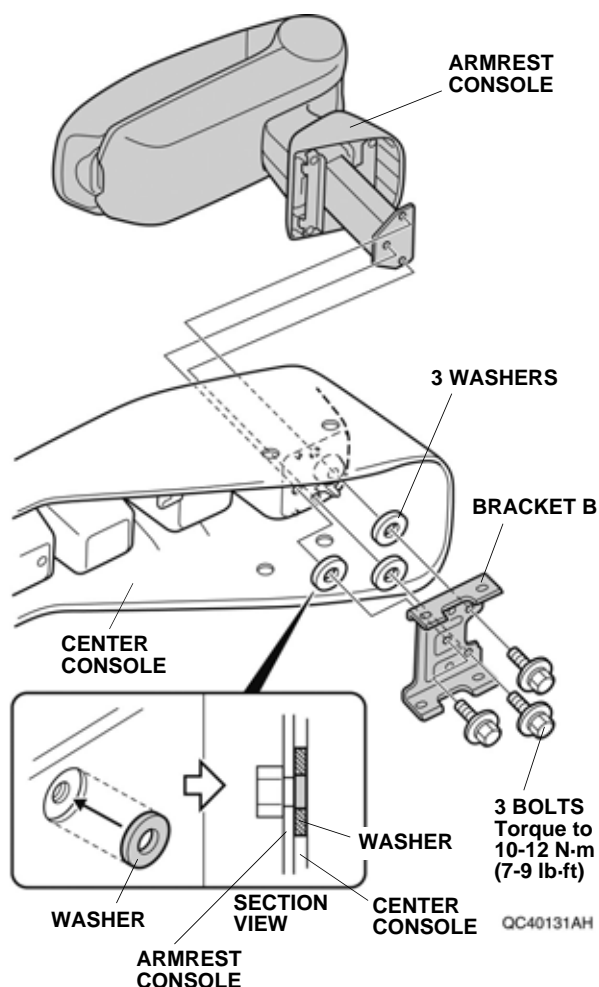

70. Plug in the vehicle connectors, and install the center console with one screw, four bolts, and three clips.

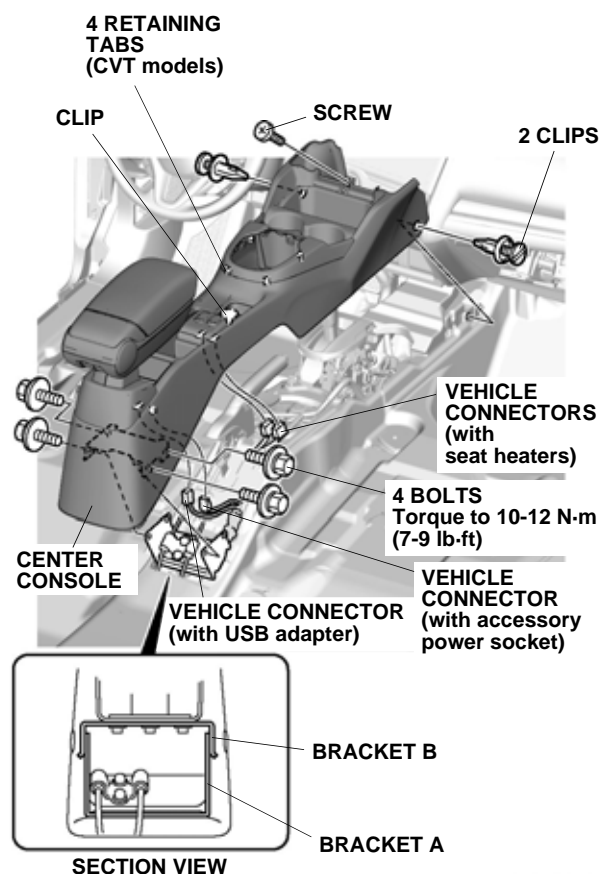

71. Install the four caps A into the center console.

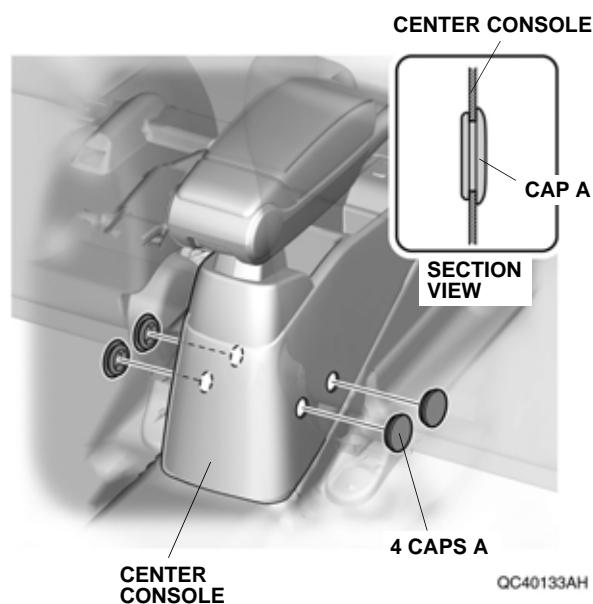



72. Check that all wire harnesses are routed properly and all connectors are plugged in.
73. Install all removed parts.
74. Connect the negative cable to the battery.
75. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
76. Set the clock.
77. If necessary, restore the systems back to normal operation as described in the service information.