



HONDA INSTALLATION INSTRUCTIONS

Accessory
AUTOMATIC DAY/NIGHT
MIRROR


Application
2019 FIT

Publications No.
VERSION 1
Issue Date
APR 2018

PARTS LIST

Attachment Kit
P/N 08V03-T5A-100

Automatic day/night mirror harness

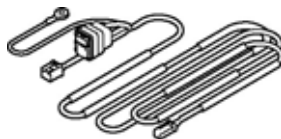

Harness cover



10 Wire ties



Urethane tape



Fuse label



2 Aluminum tapes



2A Fuse



Ground bolt



Clip



Accessory User's Information Manual



Service Parts

Automatic day/night mirror




TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver
Flat-tip screwdriver
Ratchet
10 mm Socket
Isopropyl alcohol
Shop towel
Diagonal cutters
T20 TORX bit
10 mm Open end wrench
Ruler
Masking tape
Scissors

The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

Illustration of the Automatic Day/Night Mirror Installed in the Vehicle

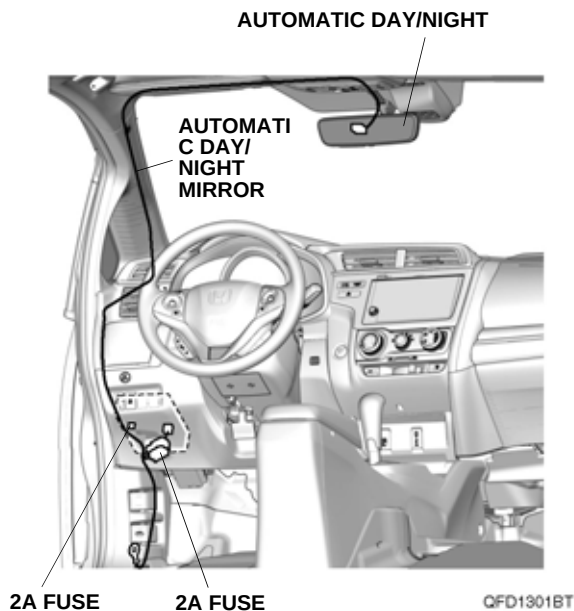


INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

1. Disconnect the negative cable from the battery.
2. Remove the roof console:
 - Using a plastic trim tool, pry out and remove the left and right lenses.
 - Remove the roof console, and unplug the vehicle connectors.


With Moonroof and Array Microphone

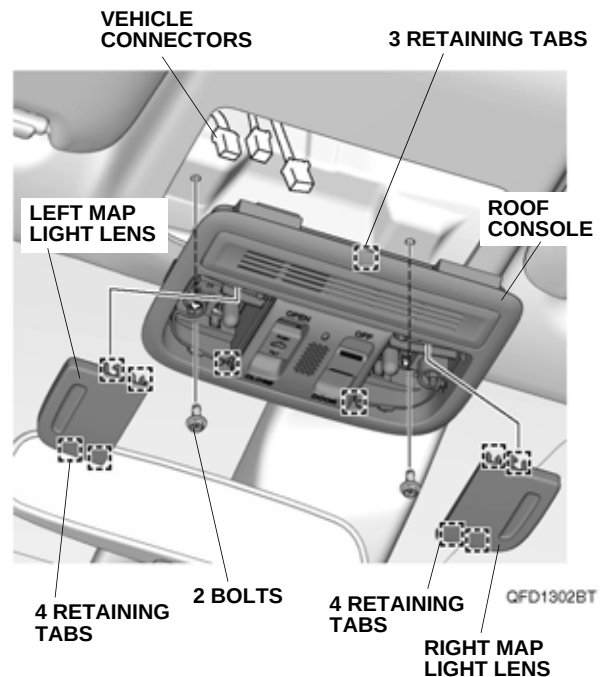


Without Moonroof and With Array Microphone

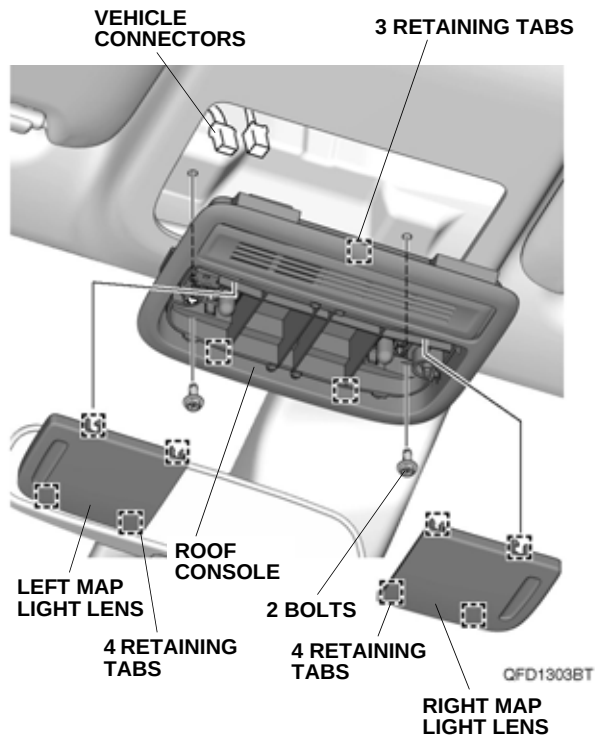


Without Moonroof and With Single Microphone

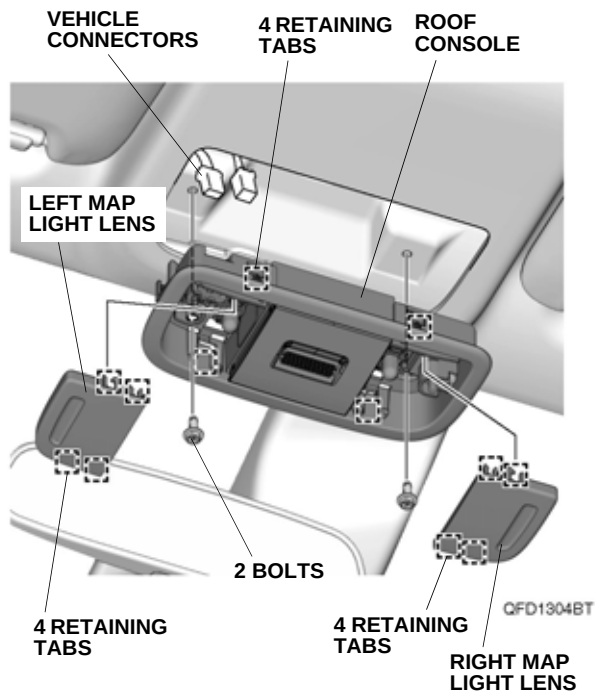


3. Release the two hooks, then pull the mirror base cover down. Pull the hook down to release it from the mirror mount, slide the mirror base rearward, then remove the rearview mirror.

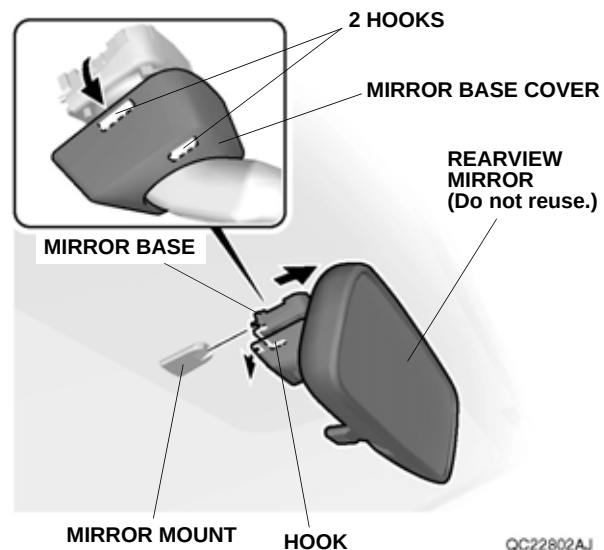

4. Release the passenger's sunvisor from the right sunvisor holder.

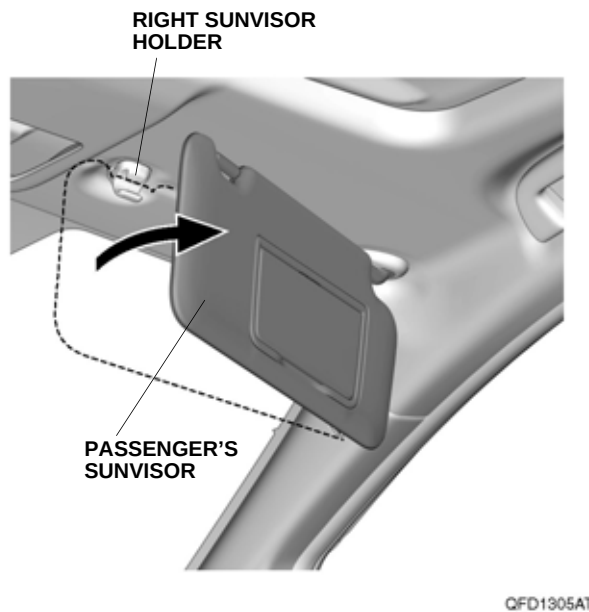


5. Remove the right sunvisor holder:
- Wrap masking tape around the tip of a flat-tip screwdriver.
 - Release the three retaining tabs on the right sunvisor holder.

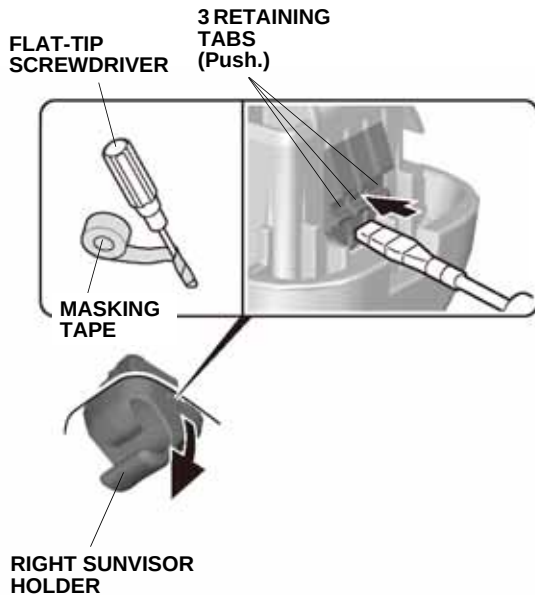

QC22003BJ


- While holding down the right sunvisor holder as shown, use a flat-tip screwdriver wrapped with masking tape to remove the right sunvisor holder.

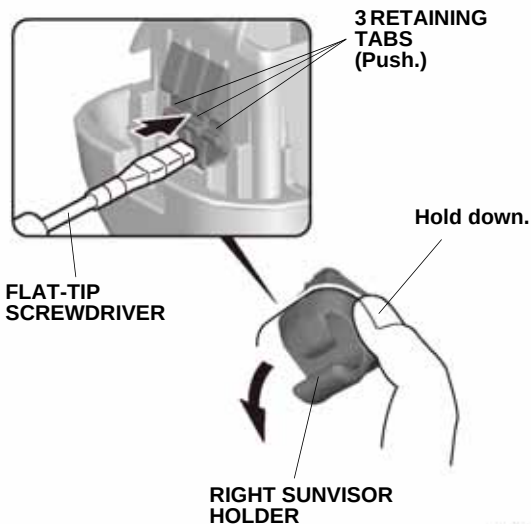

QC22004AJ


6. Remove the driver's sunvisor:
- Pivot the driver's sunvisor downward.
 - Wrap masking tape around the tip of a flat-tip screwdriver.
 - Locate the slot in the base cover, and insert the flat-tip screwdriver into the slot. Push in and hold the retaining tab.
 - While holding the retaining tab, push up on the sunvisor and rotate it toward the door.

NOTE: If the retaining tab did not stay pushed in, return the sunvisor to its original position and repeat this step.

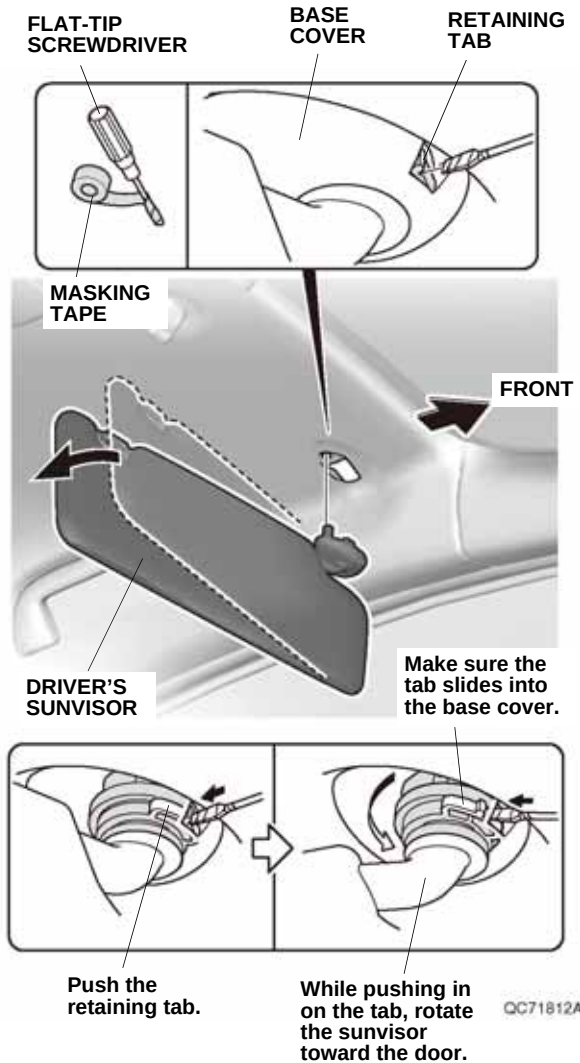


QC71812AJ

7. Remove the left sunvisor holder:
- Wrap masking tape around the tip of a flat-tip screwdriver.
 - Release the three retaining tabs on the left sunvisor holder.

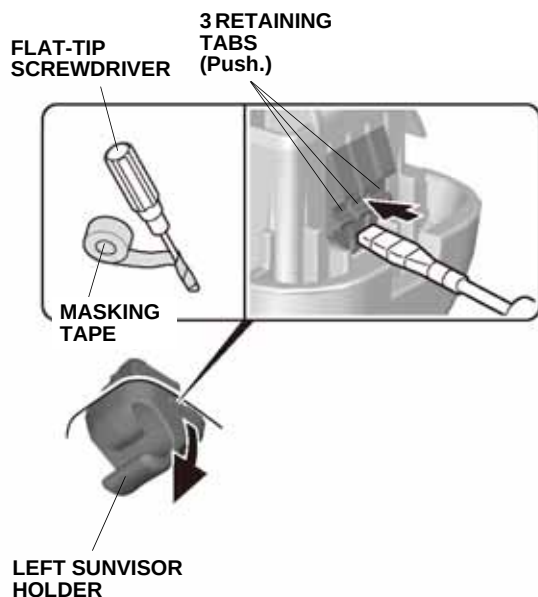


QC22003BJ

- While holding down the left sunvisor holder as shown, use a flat-tip screwdriver wrapped with masking tape to remove the left sunvisor holder.

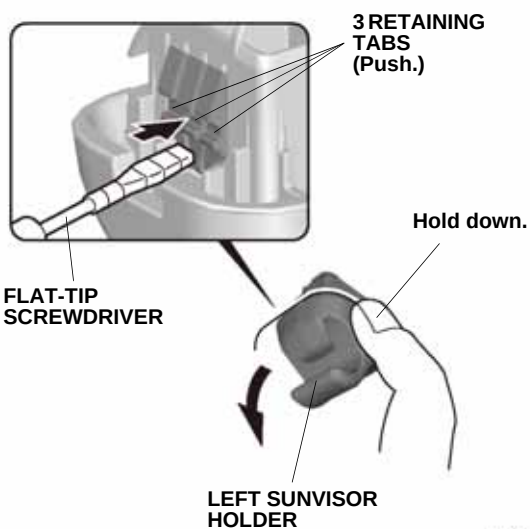


QC22004AJ

8. Remove the driver's A-pillar trim.
- Pull away the door opening seal from the driver's A-pillar trim.
 - Pull out on the driver's A-pillar trim to release the upper clip.

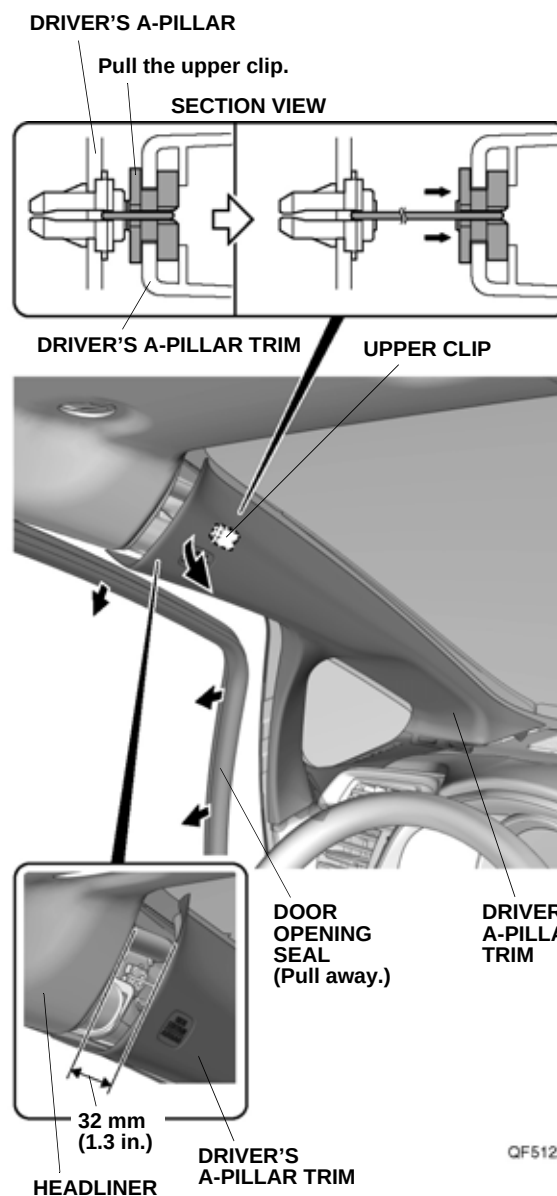


QF51225BH


- To prevent clips from falling into the body panel area, carefully insert a shop towel between the driver's A-pillar and the driver's A-pillar trim.

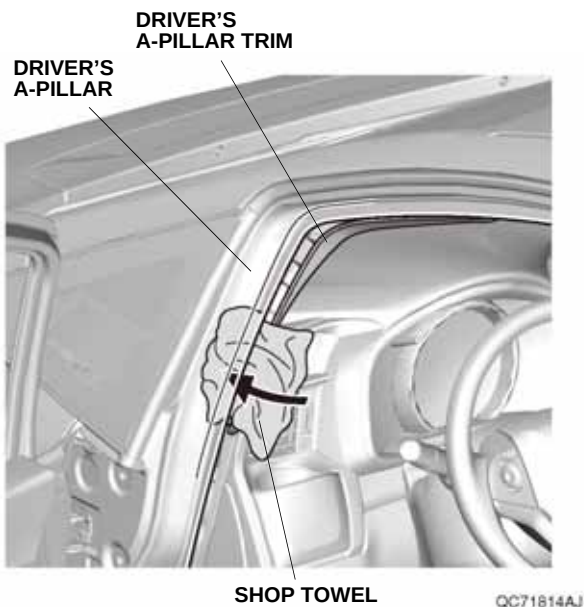


- Using scissors, cut the wires.

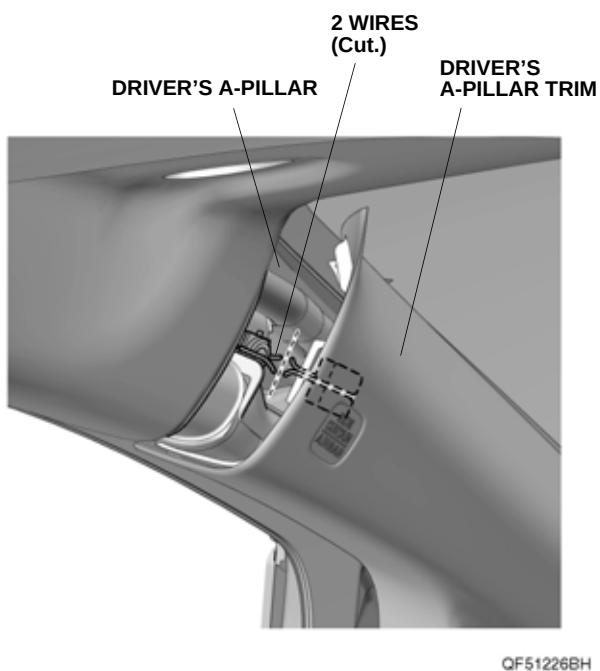


- Pull out on the driver's A-pillar trim to release two clips.
- Slide the driver's A-pillar trim upward, and remove the driver's A-pillar trim.
- Remove the shop towel and any clips.

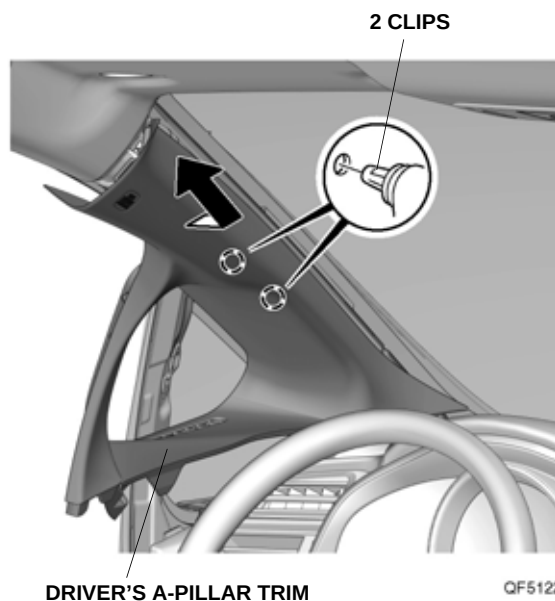

- Remove the remaining upper clip from the driver's A-pillar.

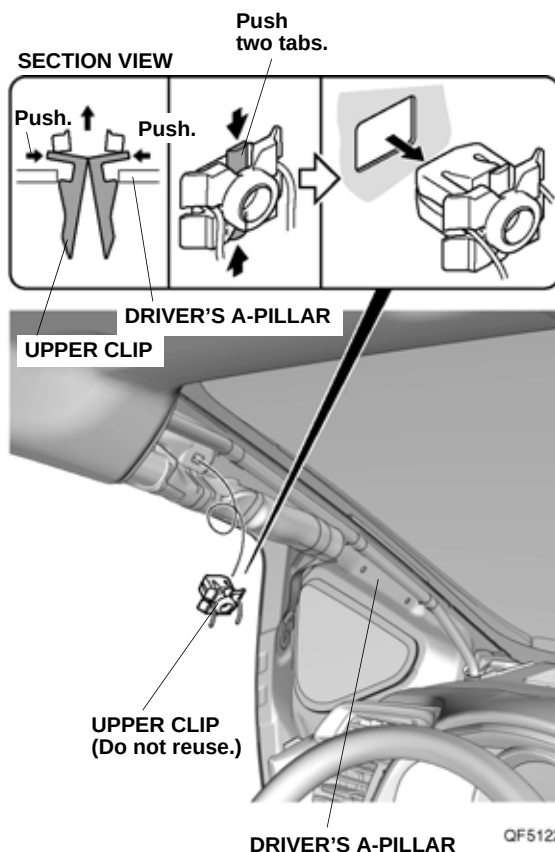


10. Remove the upper clip from the driver's A-pillar trim.

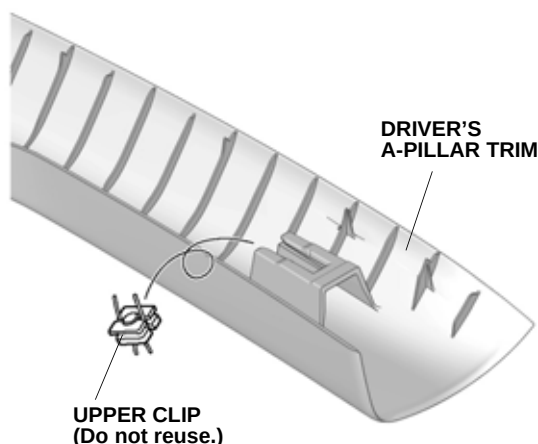


QF51229AH

11. Install the new clip (supplied) to the driver's A-pillar trim.

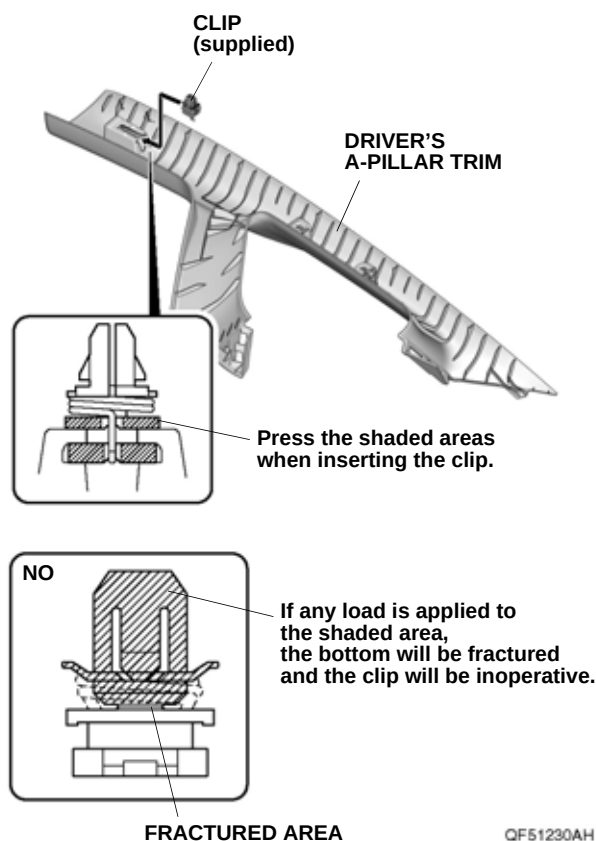


QF51230AH

12. Pull away the door opening seal, and remove the driver's dashboard side lid.

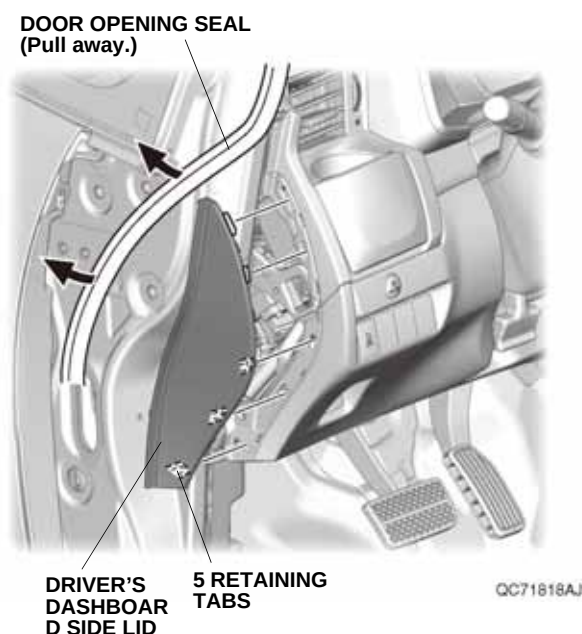


QC71818AJ

13. Remove the driver's dashboard lower cover, and unplug the vehicle connectors.

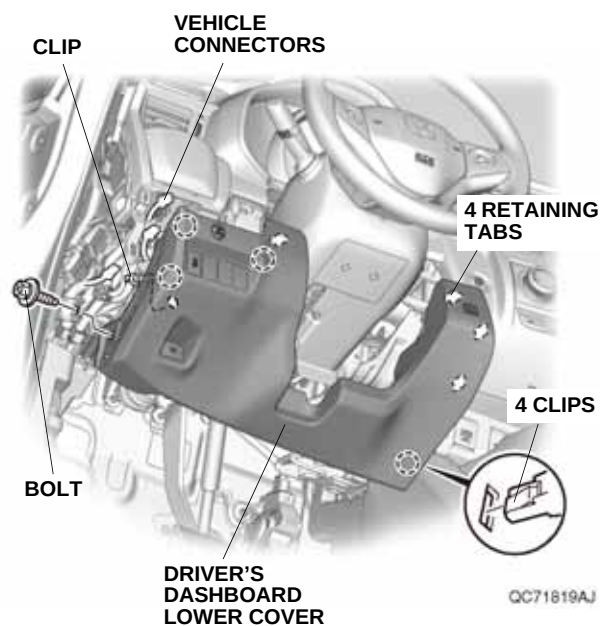


QC71819AJ


14. Pull away the door opening seal, and remove the driver's front door sill trim.

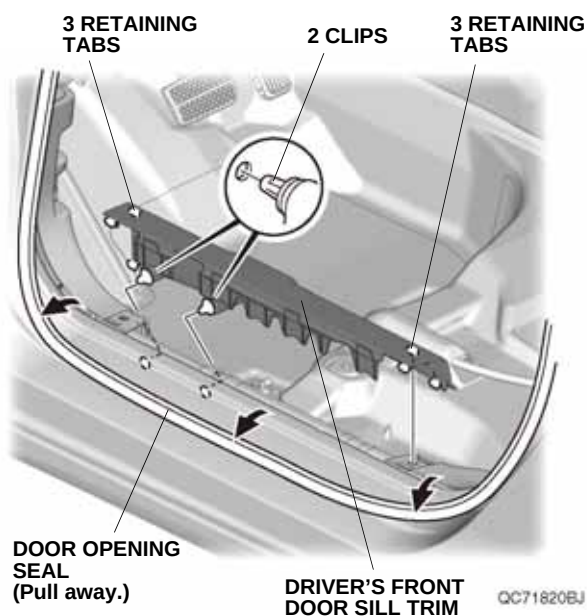

15. Pull away the door opening seal, and remove the driver's kick panel.

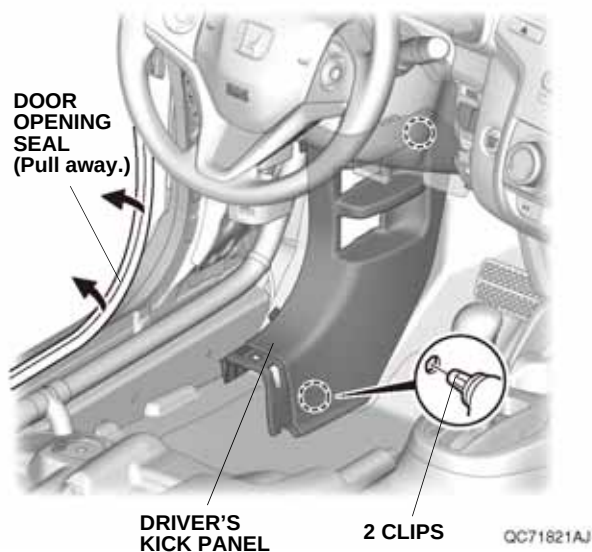


16. Using isopropyl alcohol on a shop towel, clean the vehicle panel where the urethane tape will attach.

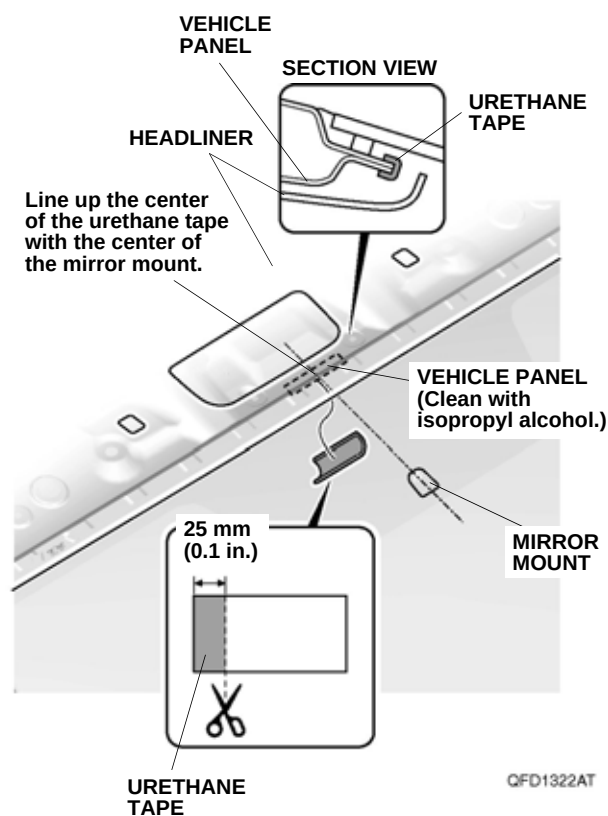


17. Using scissors, cut the urethane tape as shown, and attach one piece of urethane tape to the vehicle panel as shown. Be careful not to crease the headliner.

18. Install the automatic day/night mirror on the mirror mount as shown, and tighten the TORX screw.

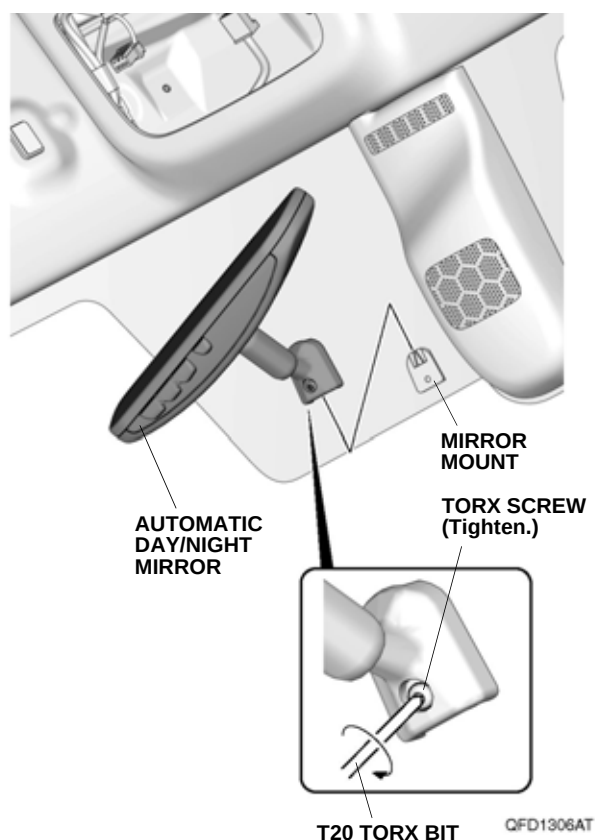


19. Using isopropyl alcohol on a shop towel, thoroughly clean the automatic day/night mirror harness fuse case where the fuse label will attach.

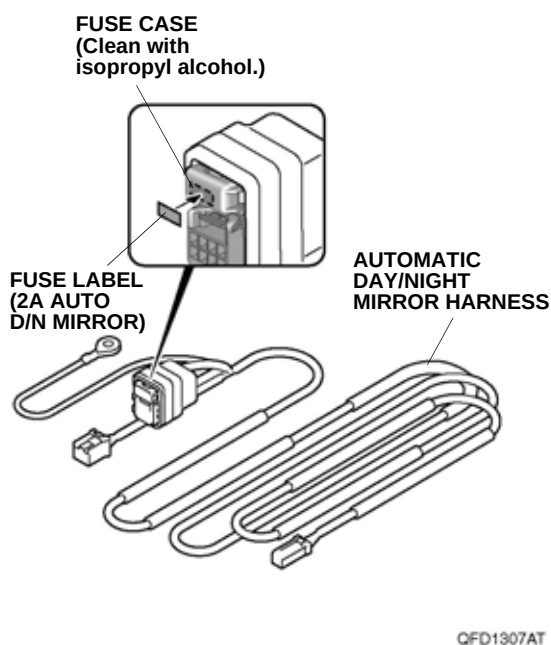


20. Apply the fuse label to the automatic day/night mirror harness fuse case.

21. Plug the automatic day/night mirror harness 7-pin connector into the automatic day/night mirror.

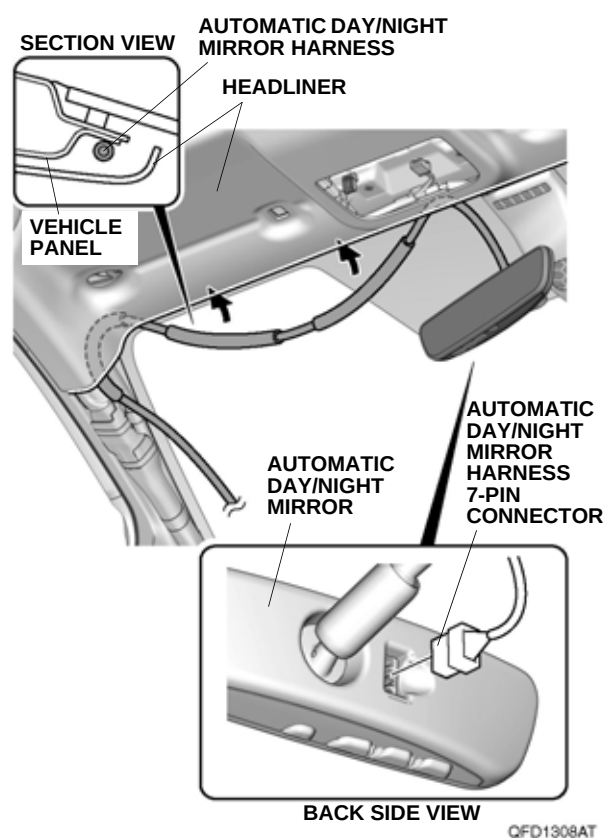


22. Gently pull back the headliner, and tuck the automatic day/night mirror harness behind the headliner. Be careful not to crease the headliner.


23. Route the automatic day/night mirror harness as shown. Line up the green tape on the automatic day/night mirror harness with the vehicle clip, and secure the automatic day/night mirror harness to the vehicle harness with one wire tie.

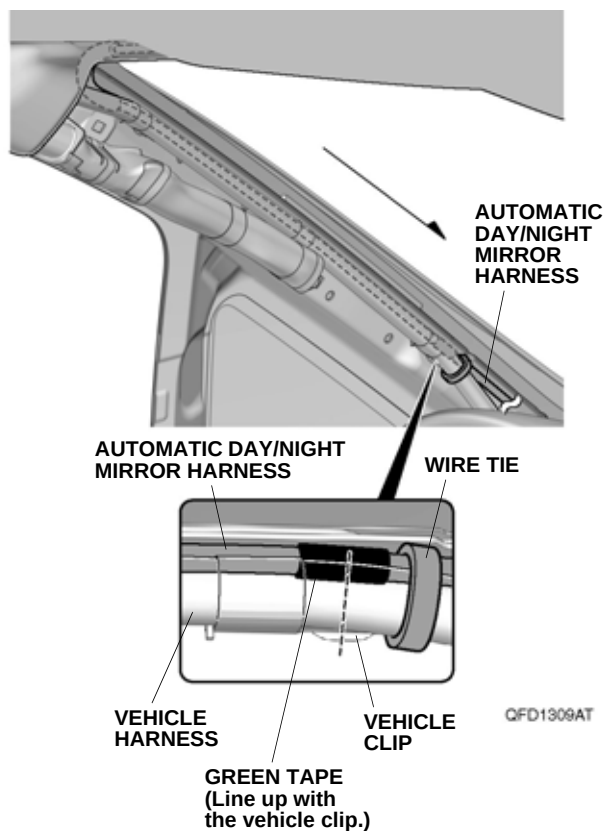


24. Secure the automatic day/night mirror harness to the vehicle harness with two wire ties.

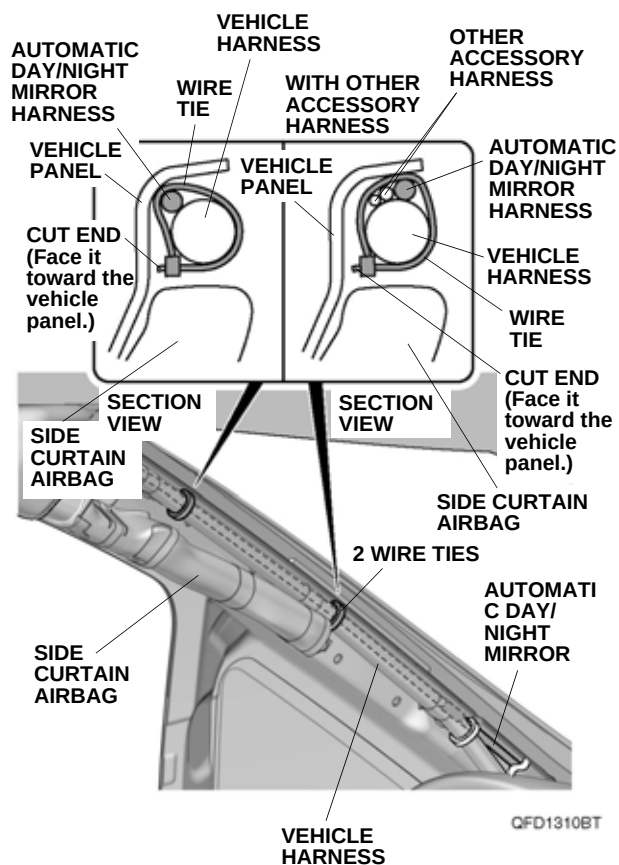


25. Route the automatic day/night mirror harness through the groove in the harness cover, and secure the harness cover to the mirror mount. Slide the harness cover behind the headliner.

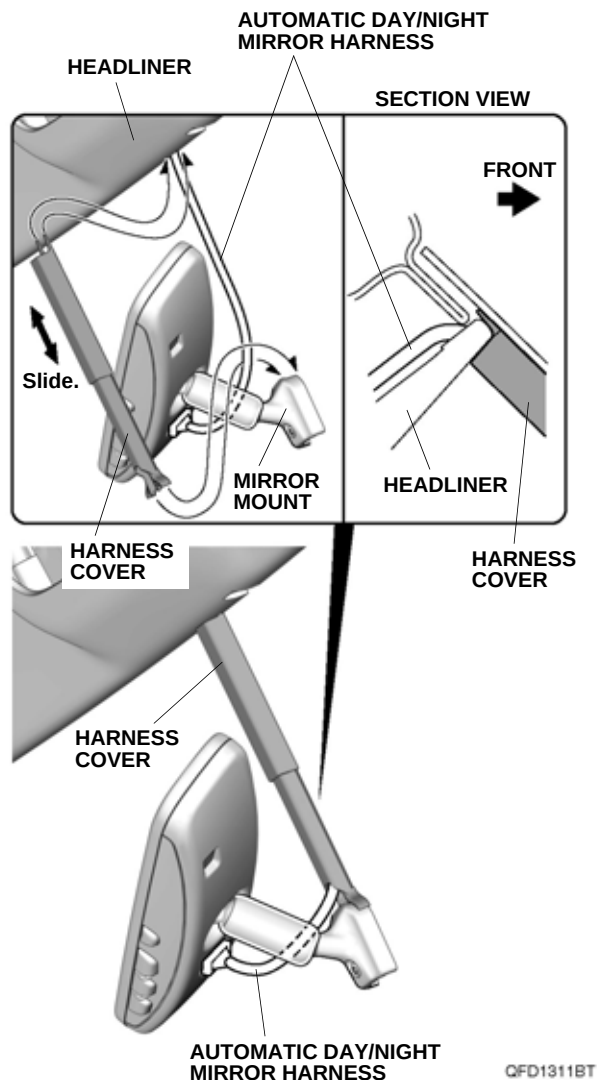


26. Route the automatic day/night mirror harness between the vehicle harness and the vehicle panel.

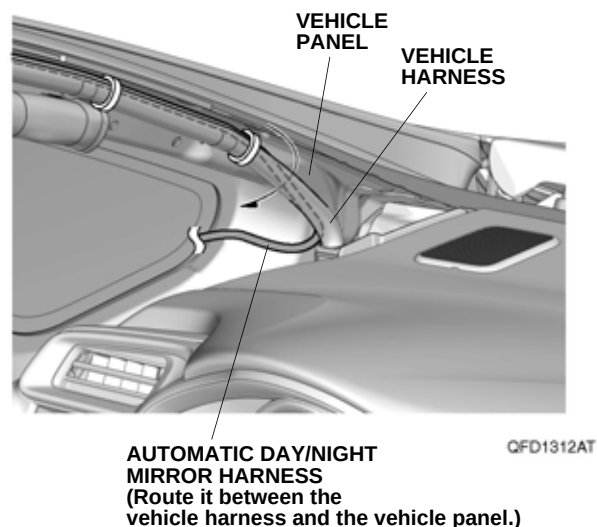


27. Pull away the door opening seal. Route the automatic day/night mirror harness, and tuck the automatic day/night mirror harness between the vehicle panel and the dashboard.

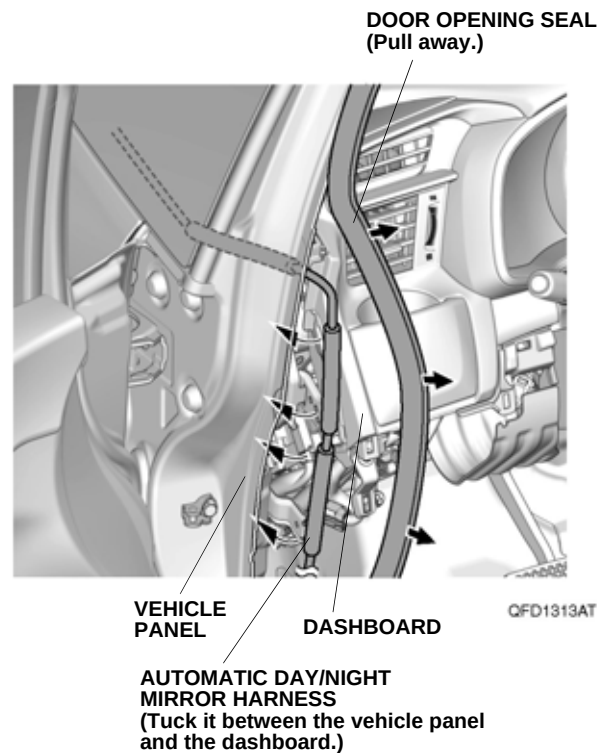

28. Secure the automatic day/night mirror harness to the vehicle panel with one wire tie. If the other accessory harness is already secured to the vehicle panel, secure the automatic day/night mirror harness to the other accessory harness with one wire tie.

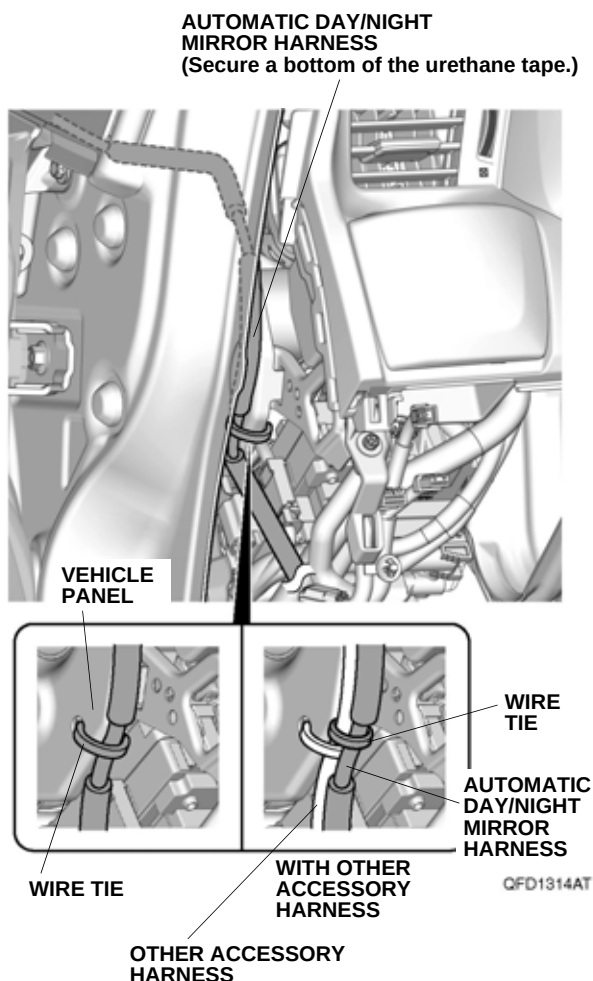

29. Secure the automatic day/night mirror harness to the vehicle harness with one wire tie.

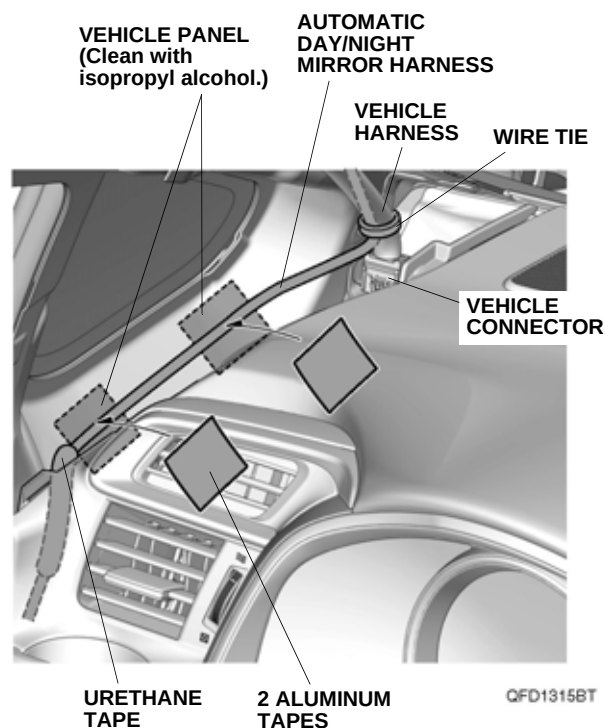


30. Using isopropyl alcohol on a shop towel, thoroughly clean the vehicle panel where the aluminum tapes will attach.
31. Secure the automatic day/night mirror harness to the vehicle panel with the two pieces of aluminum tape.

If the vehicle is without the other accessory harness 8-pin connector, continue with step 32; otherwise, go to step 33.


Without Other Accessory Harness 8-pin Connector

32. Plug the automatic day/night mirror harness 8-pin connector into the fuse box. Go to step 35.

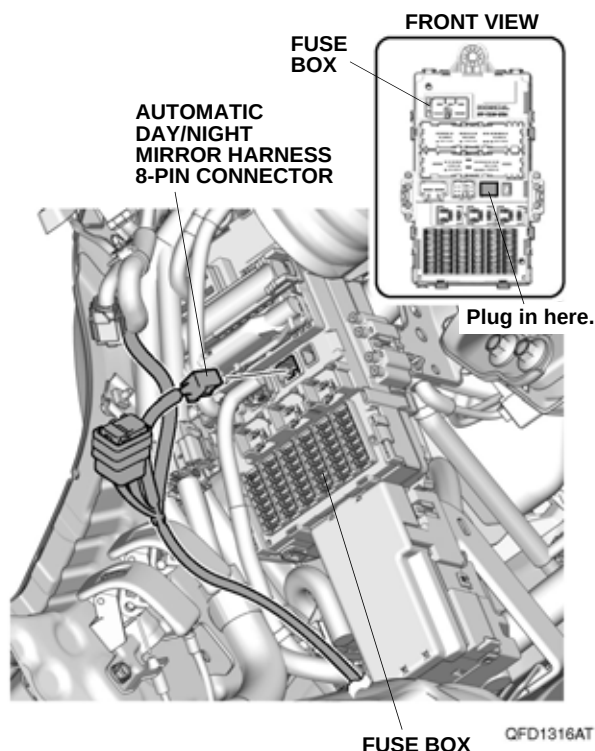


With Other Accessory Harness 8-pin Connector


33. If the other accessory harness 8-pin connector is plugged into the fuse box, unplug it from the fuse box. Remove the dummy connector from the automatic day/night mirror harness 8-pin connector, and plug the other accessory harness 8-pin connector into the automatic day/night mirror harness 8-pin connector.

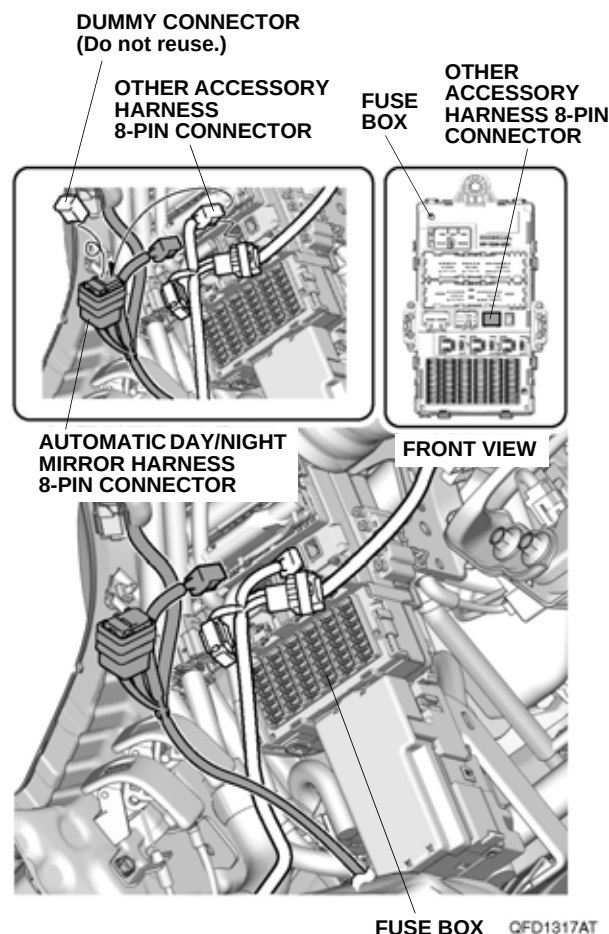


34. Plug the automatic day/night mirror harness 8-pin connector into the fuse box.

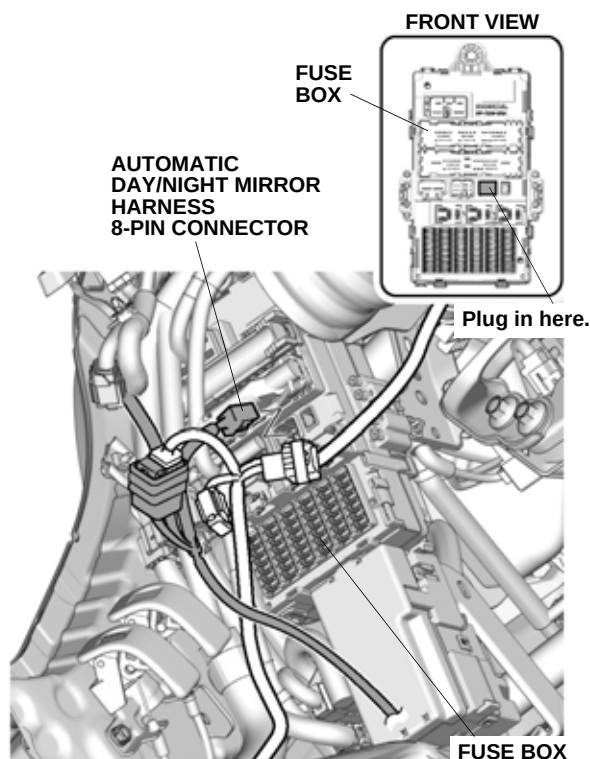


35. Secure the automatic day/night mirror harness to the vehicle harness with three wire ties.

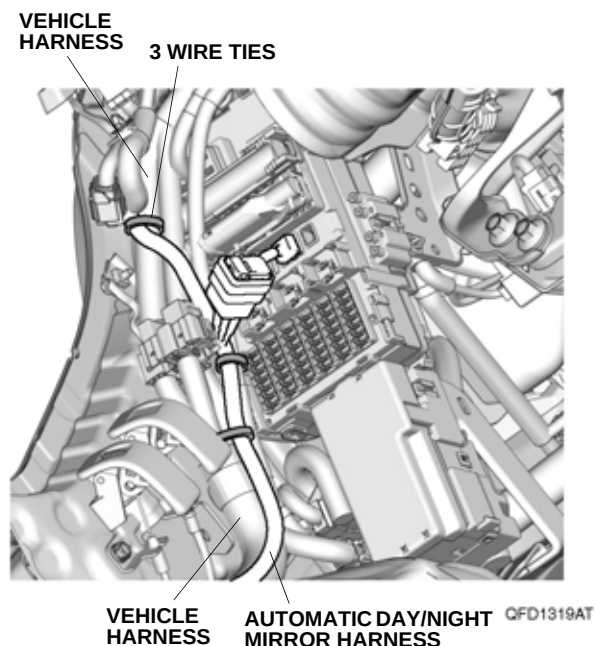


36. Route the automatic day/night mirror harness along the vehicle harness. Remove the bolt, and install the automatic day/night mirror harness ground terminal with one ground bolt.

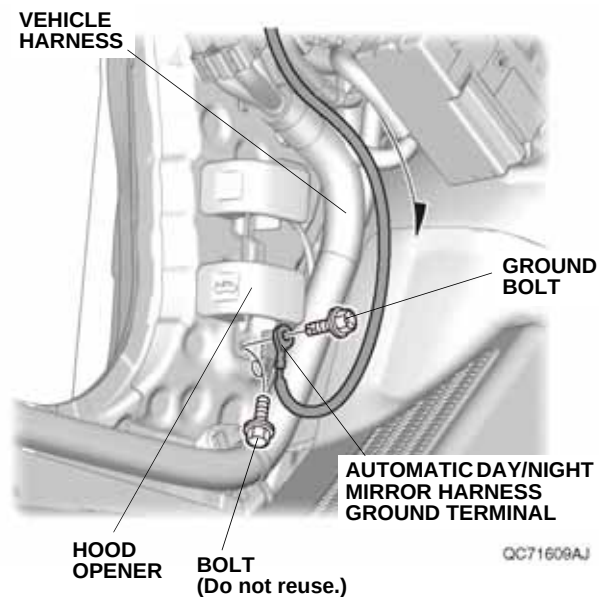


37. Secure the automatic day/night mirror harness to the vehicle harness with two wire ties.

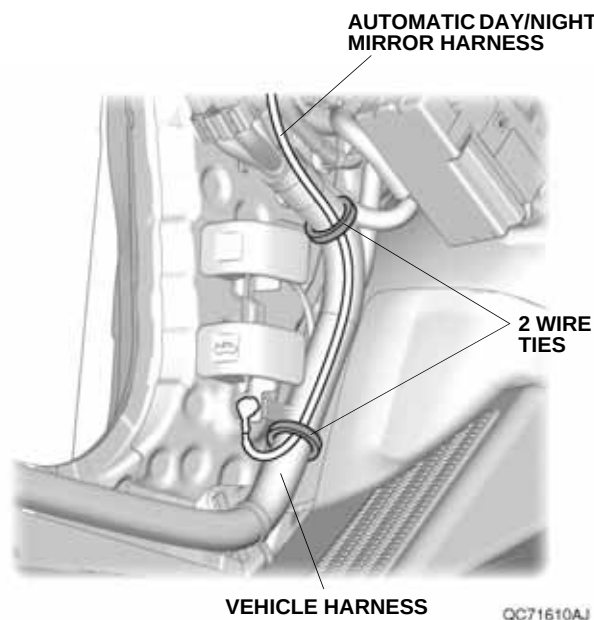

38. Plug the 2A fuse into the fuse box.

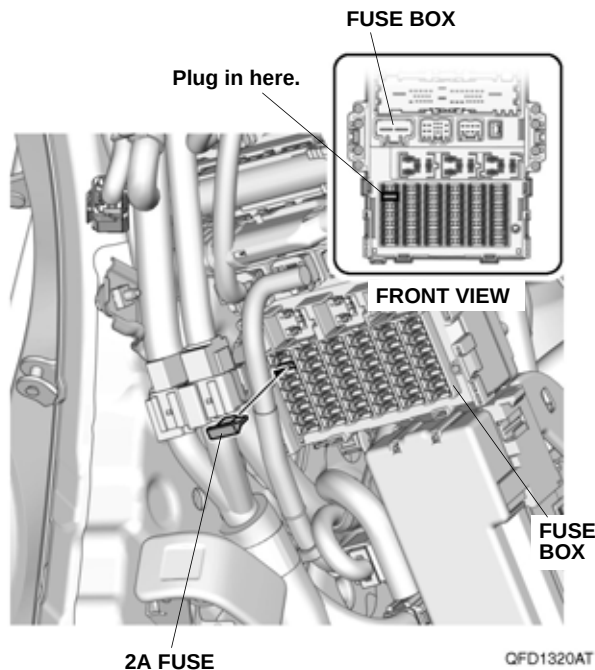

39. Using isopropyl alcohol on a shop towel, thoroughly clean the lower column cover where the fuse label will attach.

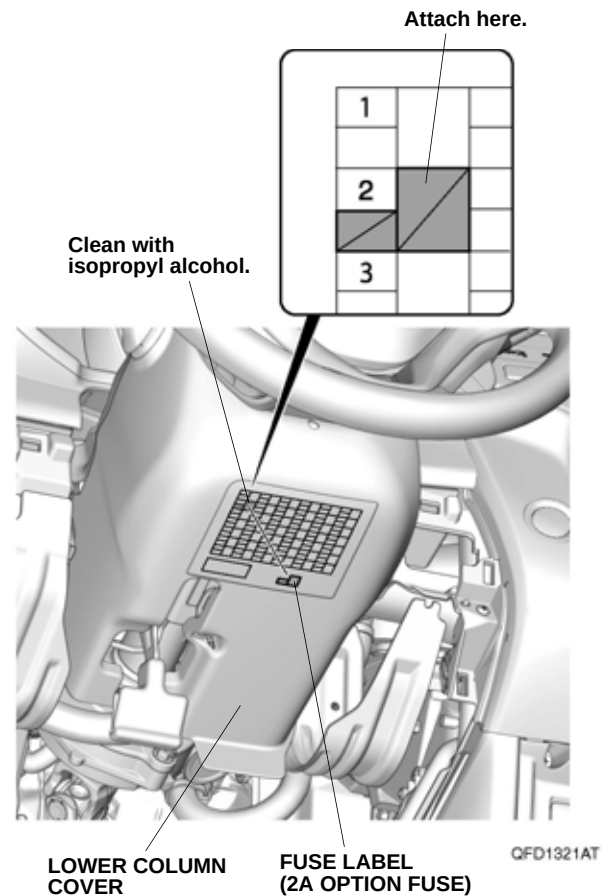

40. Attach the fuse label on the lower column cover.
41. Check that all wire harnesses are routed properly and all connectors are plugged in.
42. Check the overlap between the headliner and the driver's A-pillar trim. Refer to the service information. If necessary, to adjust the overlap.
43. Install all removed parts.
44. Connect the negative cable to the battery.
45. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
46. Set the clock.
47. If necessary, restore the systems back to normal operation as described in the service information.

NOTE: Check the operation of the automatic day/night mirror according to the accessory user's information manual.