



## HONDA INSTALLATION INSTRUCTIONS

Accessory  
**FRONT BUMPER TRIM**  
P/N 08F23-T7S-100

Application  
**2021 HR-V**

Publications No.  
**VERSION 1**  
Issue Date  
**SEP 2020**

### PARTS LIST


Right front bumper trim



Left front bumper trim




4 Spacers

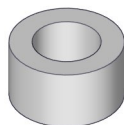

4 Self-tapping screws




4 Washers




2 Push nuts



### Template

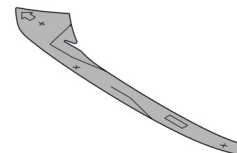

2 Alcohol wipes

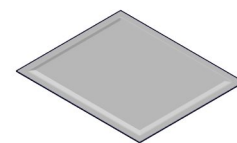

### TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

8 mm Socket

Blanket

Eye protection (face shield, safety goggles, etc.)

Ruler

Shop towel

Drill

3 mm, 4 mm, 6 mm, and 8 mm Drill bits

Masking tape

Pushpin


File

10 mm Open end wrench

*The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.*

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)
- Rubber Roller (T/N MHLE54D)

## Illustration of the Front Bumper Trim on the Vehicle

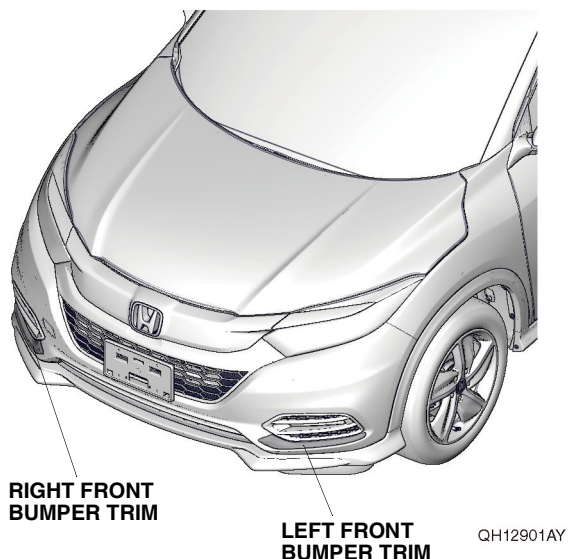


## INSTALLATION

**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

### NOTE:


- This kit should be installed only if the ambient air temperature is 60°F (15°C) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Make sure the customer is aware of this.

1. Disconnect the negative cable from the battery.
2. Remove the front bumper.
  - Wrap a shop towel around the lever.
  - Apply masking tape as shown.

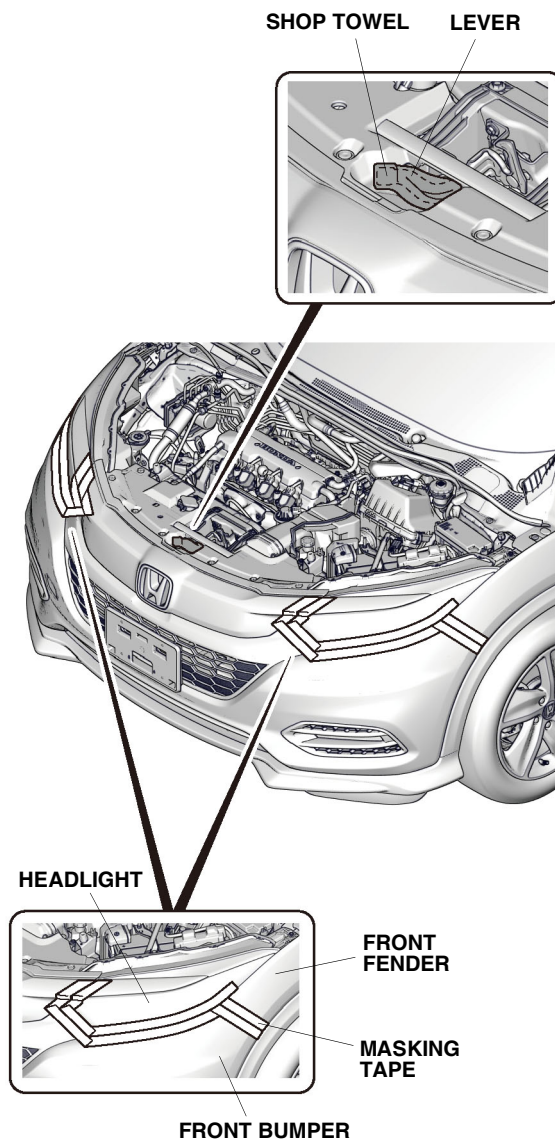


QH12903AC

- Remove the front grille cover.

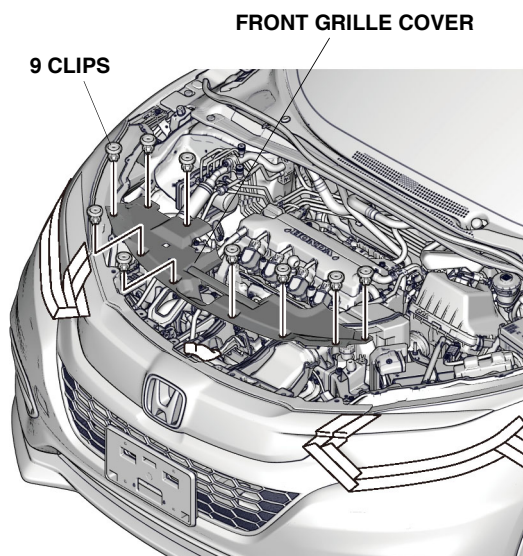


QH12904AC

- Remove the 12 clips.

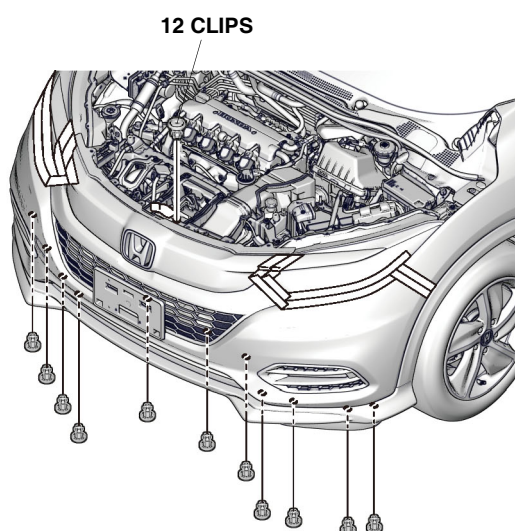


**BOTTOM VIEW**

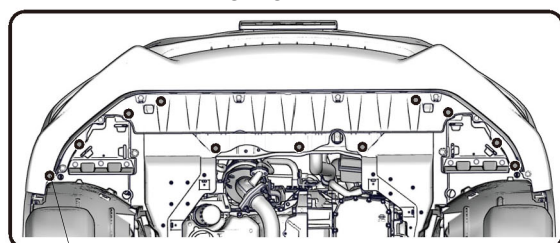

11 CLIPS


QH12905AC

- Remove the two self-tapping screws and four clips on each side.

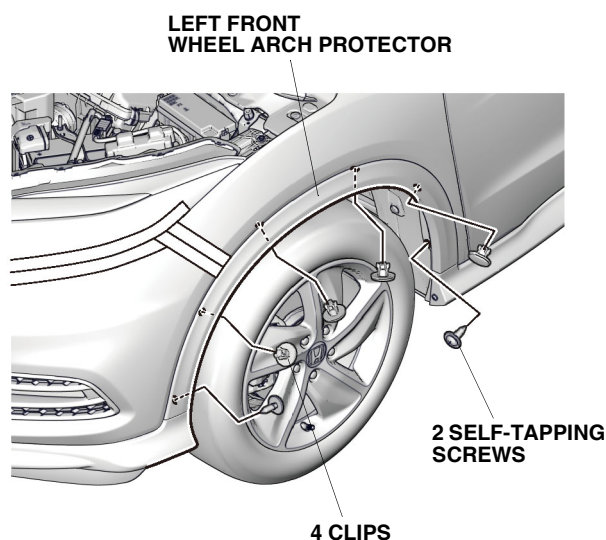


QH12906AC

- Remove the front wheel arch protector on each side.

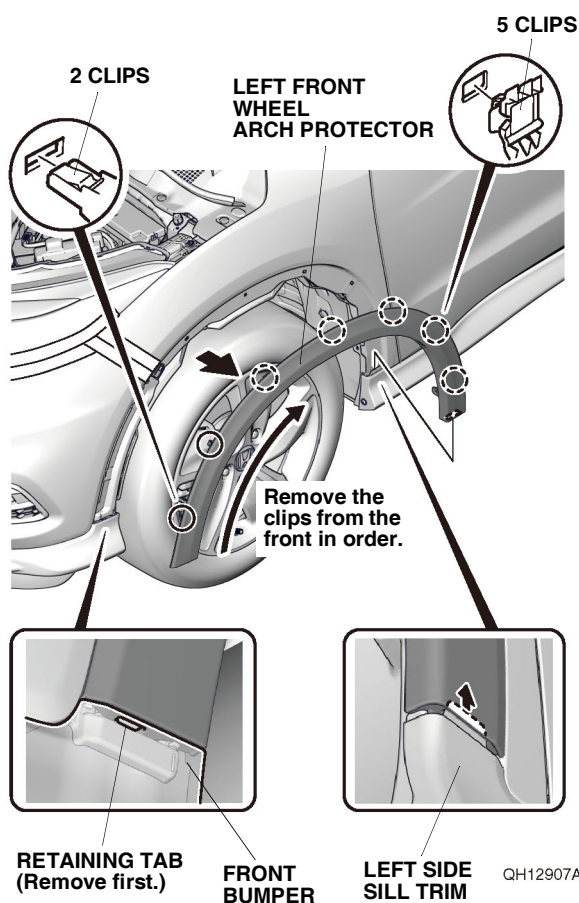


QH12907AC

- Remove the self-tapping screw on each side.

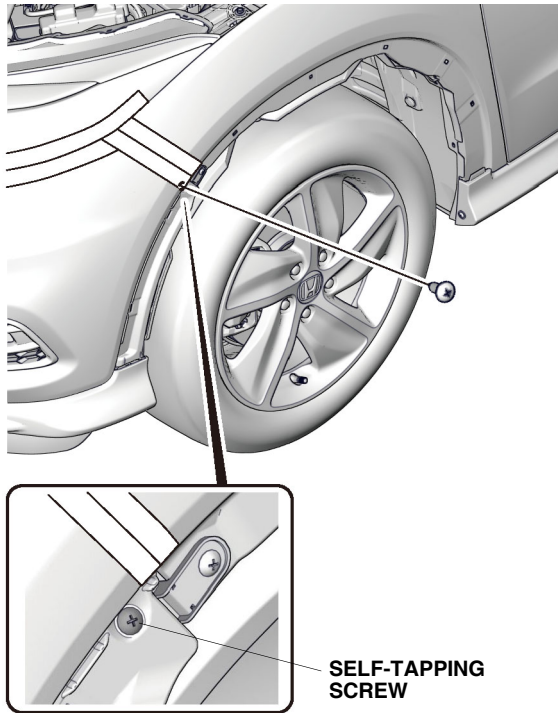

QH12908AC


- Release the five retaining tabs on each side.

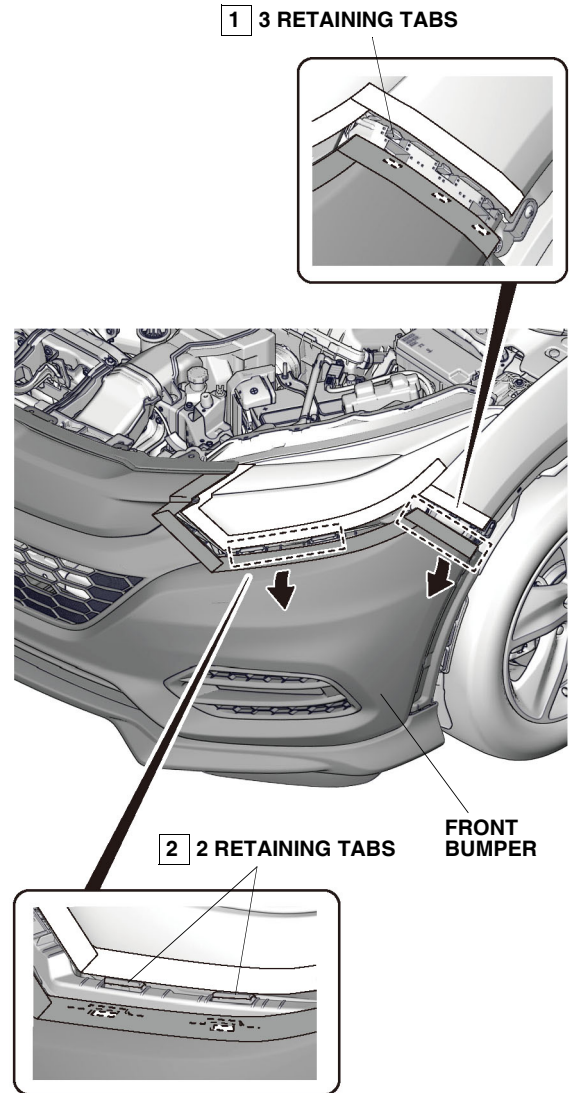


QH12909AC




- With the help of an assistant, remove the front bumper and unplug the vehicle connectors (if equipped).
- Place the front bumper on a blanket.

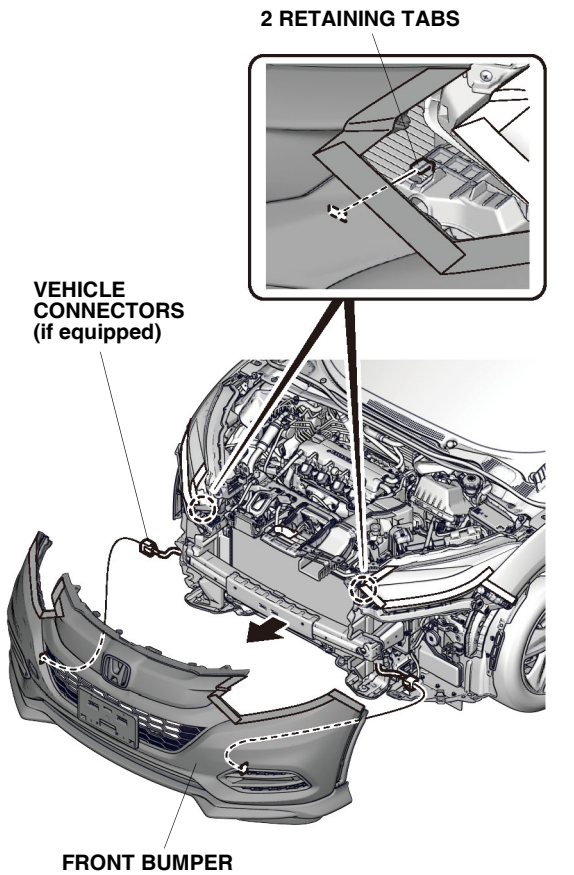

3. Line up the template with the left front fog light trim. Secure the template to the front bumper with masking tape.

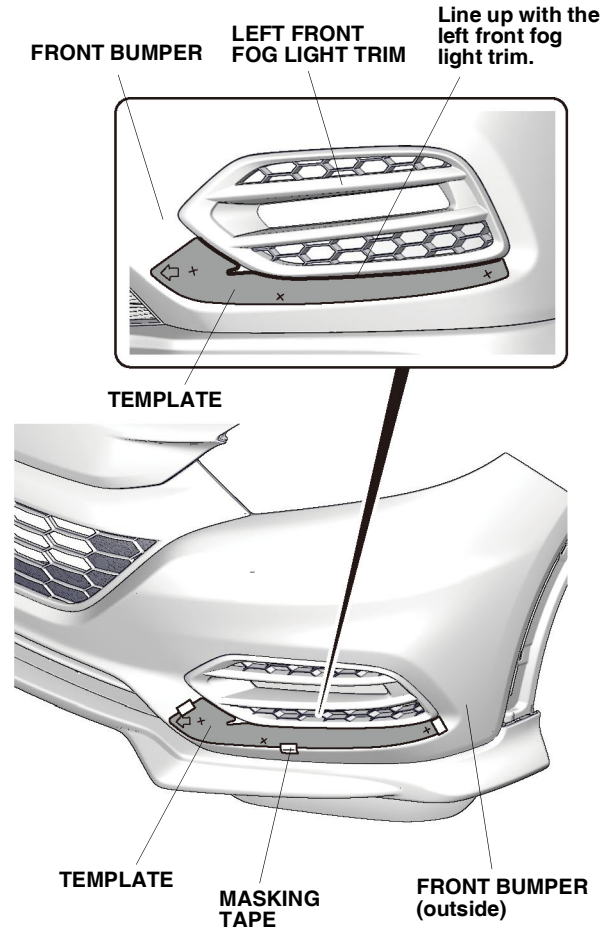


4. Using a pushpin, pierce the three marks in the template on the front bumper.
- NOTE: Make sure to pierce the marks perpendicular to the front bumper.

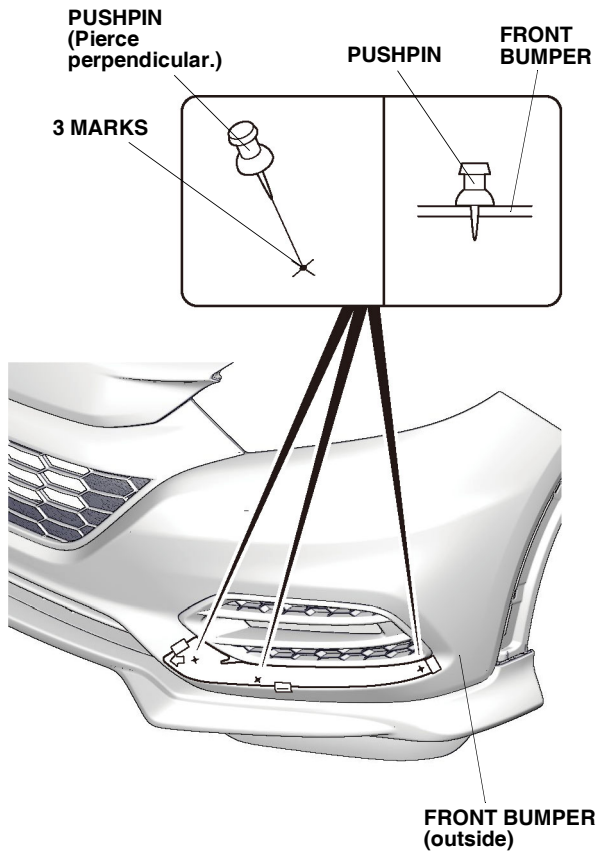


QH12903BY

5. While wearing eye protection, drill the front bumper:
- Drill the center pierced mark to 4 mm with a 4 mm drill bit.
  - Drill the left and right pierced marks to 8 mm. First, drill with a 3 mm drill bit, then follow with a 6 mm drill bit, and finish with an 8 mm drill bit. NOTE: Wrap masking tape around the drill bit 10 mm (0.39 in.) from the tip, or use a drill stop. Make sure to drill perpendicular to the front bumper. Remove any burrs.

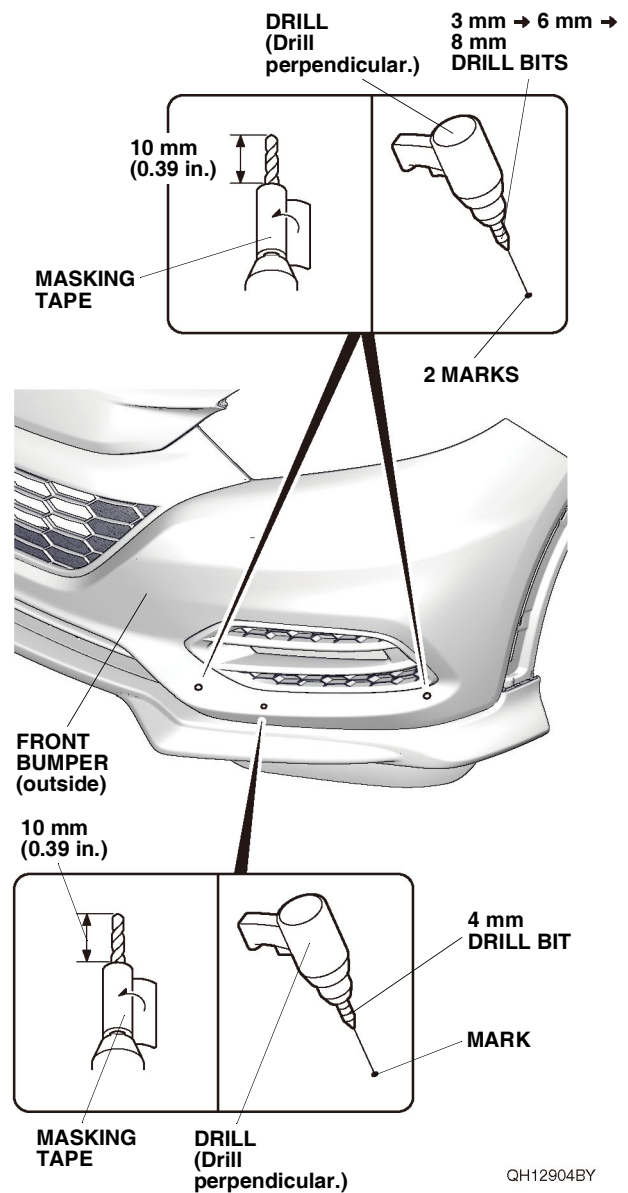


QH12904BY


6. Using an alcohol wipe, thoroughly clean the front bumper where the left front bumper trim will attach.  
NOTE: Any remaining oil or dirt on the front bumper surface will affect the adhesive tape effectiveness, which could cause gaps or lifting of the front bumper trim.

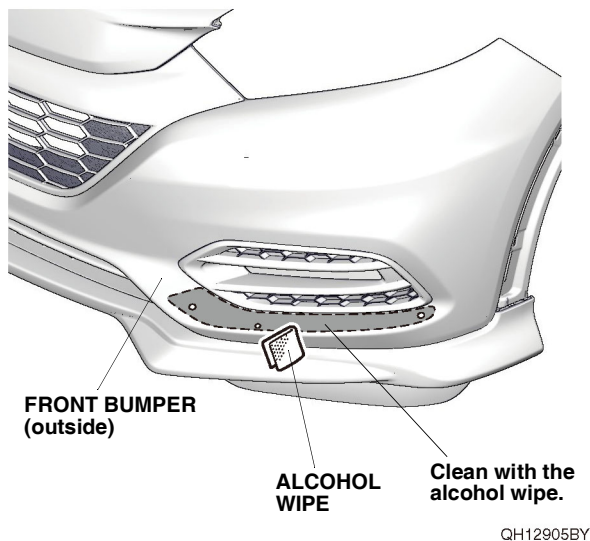


7. Peel back the adhesive backings, and tape them to the front surface of the left front bumper trim with masking tape. Remove the remaining adhesive backing.

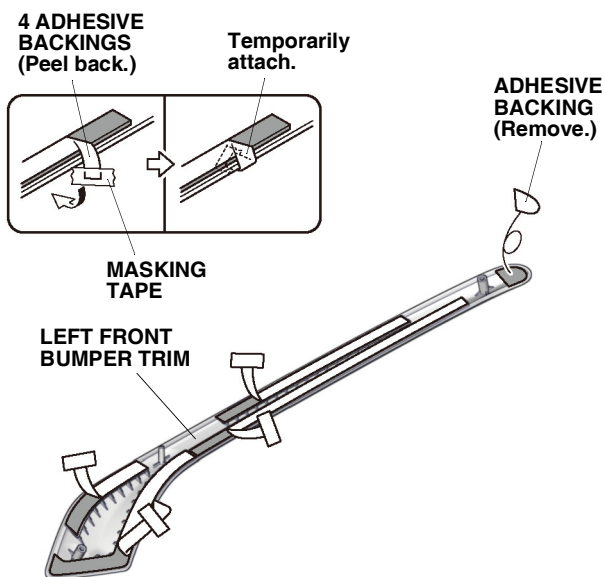

8. Loosely install the left front bumper trim to the front bumper with two spacers, two washers, and two self-tapping screws.

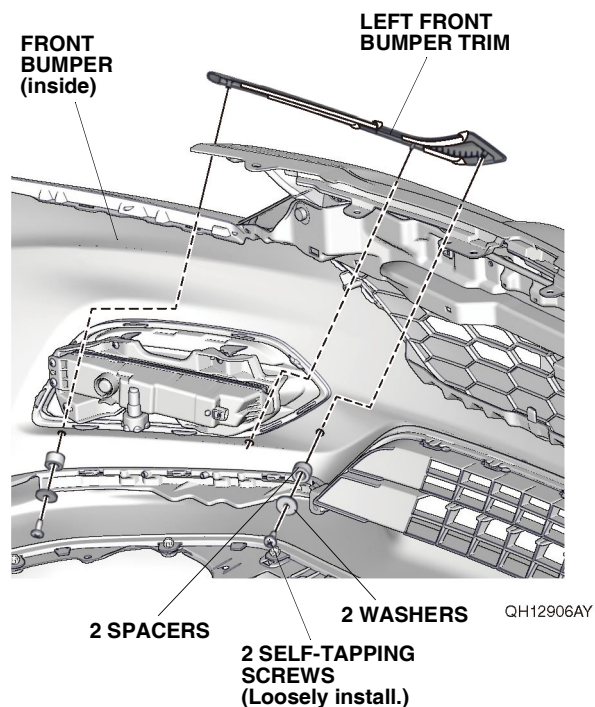


9. While applying light pressure against the left front bumper trim, carefully remove the adhesive backings.

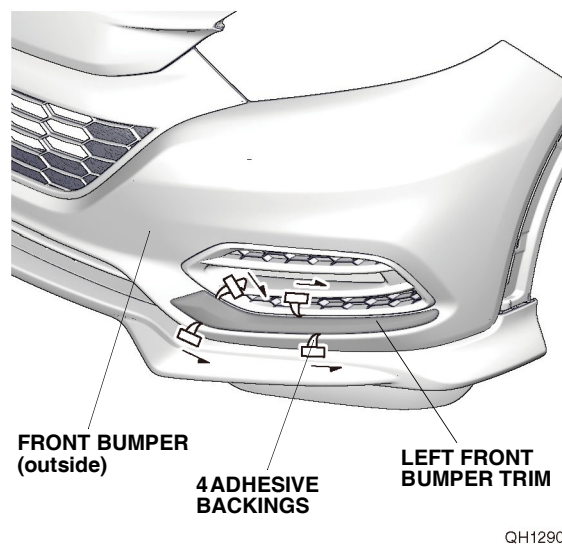


10. Using a rubber roller, apply firm pressure against the left front bumper trim and roll from one end to the other.

NOTE: Apply firm pressure, especially at the ends.

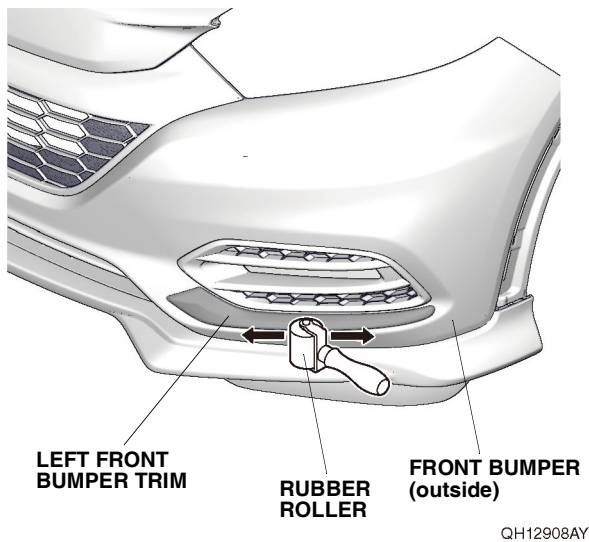

11. Tighten the two self-tapping screws loosely installed in step 8.

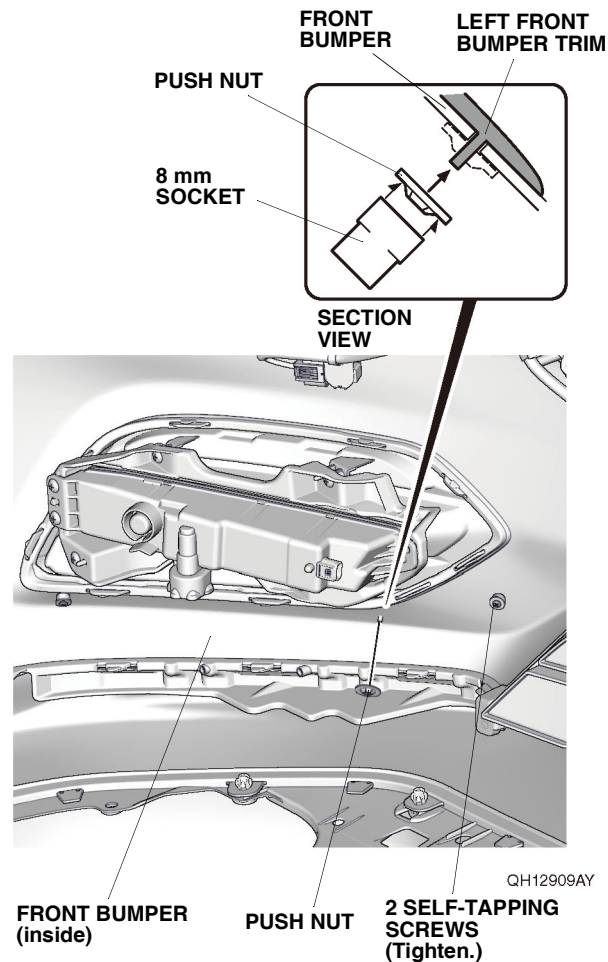

12. Secure the left front bumper trim to the front bumper with the push nut as shown.
13. Turn the template over, and repeat steps 3 through 12 on the right side of the vehicle.
14. Check that all wire harnesses are routed properly and all connectors are plugged in.
15. Install all removed parts.
16. Connect the negative cable to the battery.
17. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
18. Set the clock on vehicles without navigation.
19. If necessary, restore the systems back to normal operation as described in the service information.