<u>w.</u>collegehillshonda.com

INSTALLATION INSTRUCTIONS

REAR BUMPER TRIM P/N 08F24-T7S-100B

Application

2021 HR-V

Publications No. **VERSION 1**

> Issue Date **SEP 2020**

PARTS LIST

Left rear bumper trim (Identification mark: RR-L)



Right rear bumper trim (Identification mark: RR-R)



Spacers



Washers



Self-tapping screws



2 Push nuts



2 Alcohol wipes



TOOL AND SUPPLIES REQUIRED

Phillips screwdriver

Stubby Phillips screwdriver

Ratchet

8 mm Socket

5 mm Hex wrench

Blanket

Drill

3 mm, 4 mm, 6 mm, and 8 mm Drill bits

Pushpin

File

Eye protection (face shield, safety goggles, etc.)


Masking tape

Ruler

The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search". Or, call 888-424-6857.

- Plastic Trim Tool (T/N SILTRIMTL10)
- Rubber Roller (T/N MHLE54D)
- Trim Tool Set (T/N SOJATP2014)

Illustration of the Rear Bumper Trim on the Vehicle

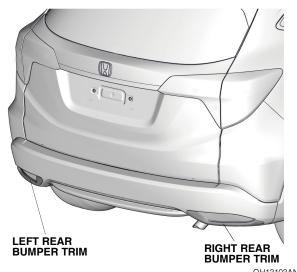


QH13103AN

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE:

- Be careful not to damage the body paint finish.
- This kit should be installed only if the ambient air temperature is 60°F (15°C) or above.
- Clean the areas to be covered.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Make sure the customer is aware of this.
- Remove the rear bumper.
 - Apply masking tape as shown.

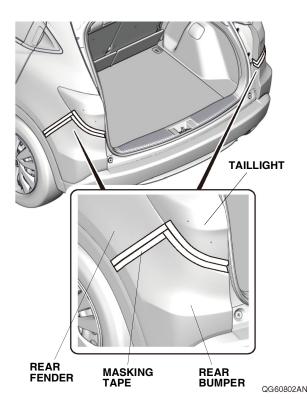


Remove the four self-tapping screws on each side.

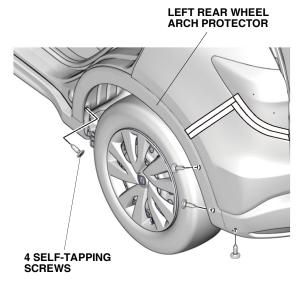


QG60803AN


Remove the rear wheel arch protector on each side.

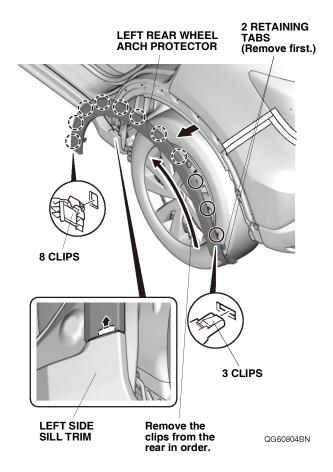


• Remove the four hex bolts, four self-tapping screws, and four clips.

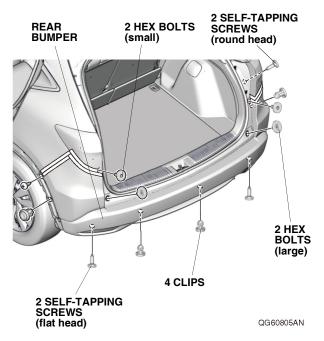

Release the 12 retaining tabs.

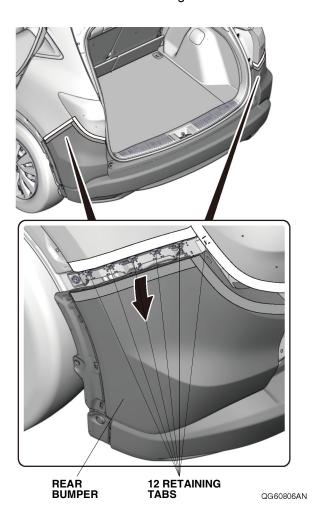


- With the help of an assistant, remove the rear bumper.
- Place the rear bumper on a blanket.

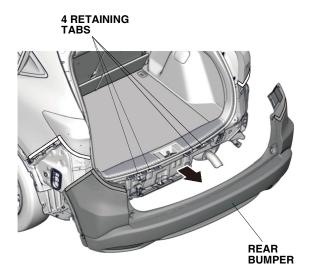

QG60807AN


- 2. Mark the inside of the rear bumper on each side:
 - Locate the three scribe marks on the inside of the rear bumper.
 - Using a pushpin, pierce the rear bumper at the three scribe marks.

NOTE: There are several scribe marks on the inside of the rear bumper. Before piercing the rear bumper, verify you have the correct locations. Make sure to pierce the scribe marks perpendicular to the rear bumper.

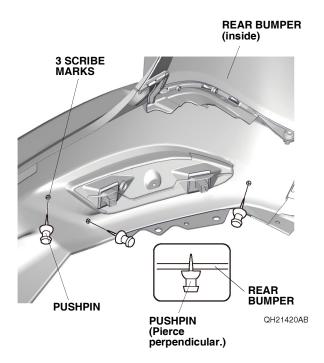


3. While wearing eye protection, drill this pierced marks to 4 mm. Remove all burrs. Repeat on the right side of the rear bumper.

NOTE: Make sure to drill perpendicular to the rear bumper.

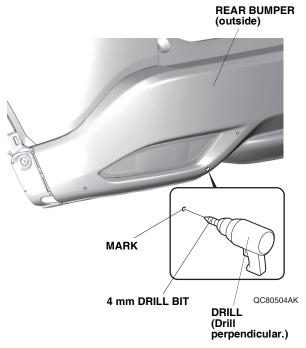


4. While wearing eye protection, drill these two marks to 8 mm. First drill with a 3 mm drill bit, then follow with a 6 mm drill bit, and finish with an 8 mm drill bit. Remove all burrs. Repeat on the right side of the rear bumper.

NOTE: Make sure to drill perpendicular to the rear bumper.

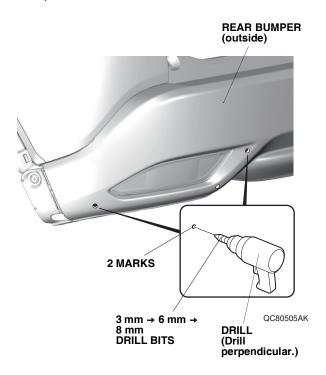


5. Using an alcohol wipe, thoroughly clean the rear bumper where the left rear bumper trim will attach. NOTE: Any remaining oil or dirt on the rear bumper surface will affect the adhesive tape effectiveness, which could cause gaps or lifting of the rear bumper trim.

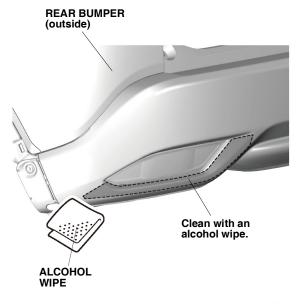

QH13104AN


6. Peel back the adhesive backings, and tape them to the front surface of the left rear bumper trim with masking tape. Remove the remaining adhesive backings.

NOTE: Check the identification mark of the left rear bumper trim.

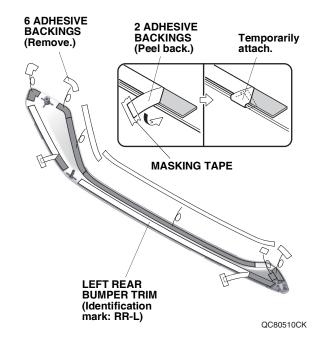


 Loosely install the left rear bumper trim to the rear bumper with two spacers, two washers, and two selftapping screws.

NOTE: Make sure there are no gaps between the left rear bumper trim and rear bumper.

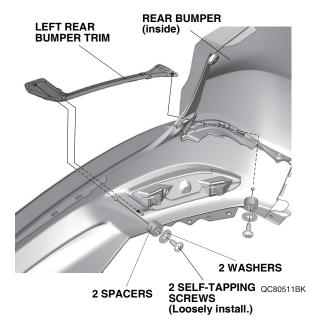


8. While applying light pressure against the left rear bumper trim, carefully remove the adhesive backings.

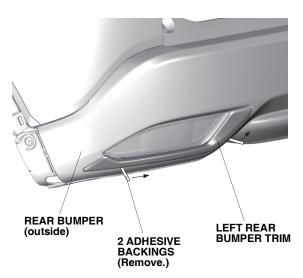

QC80512BK


9. Using a rubber roller, apply firm pressure against the left rear bumper trim and roll from one end to the other.

NOTE: Apply firm pressure, especially at the ends.

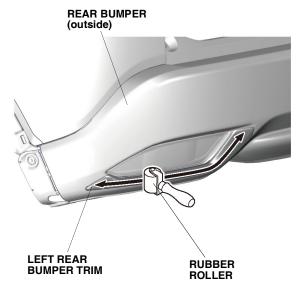

QH13105AN

 Tighten the two self-tapping screws loosely installed in step 7.

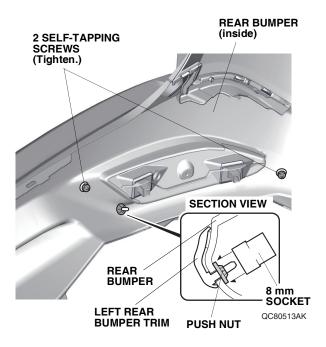

- 11. Secure the left rear bumper trim to the rear bumper with the push nut as shown.
- 12. Repeat steps 5 through 11 on the right side of the rear bumper.
- 13. Install all removed parts.