



HONDA INSTALLATION INSTRUCTIONS

Accessory

TAILGATE SPOILER
P/N 08F02-T7S-100

Application

2021 HR-V

Publications No.

VERSION 1

Issue Date

SEP 2020

PARTS LIST

Tailgate spoiler



9 Clips



TOOLS AND SUPPLIES REQUIRED

Ratchet

10 mm Socket

10 mm Open end wrench


Torque wrench

Needle nose pliers

Phillips screwdriver

Blanket

Illustration of the Tailgate Spoiler Installed on the Vehicle

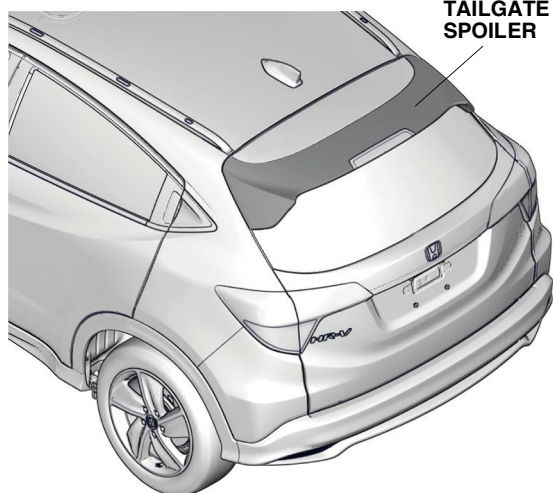


QH12601AG

INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

1. Disconnect the negative cable from the battery.
2. Remove the two bolts.


TAILGATE

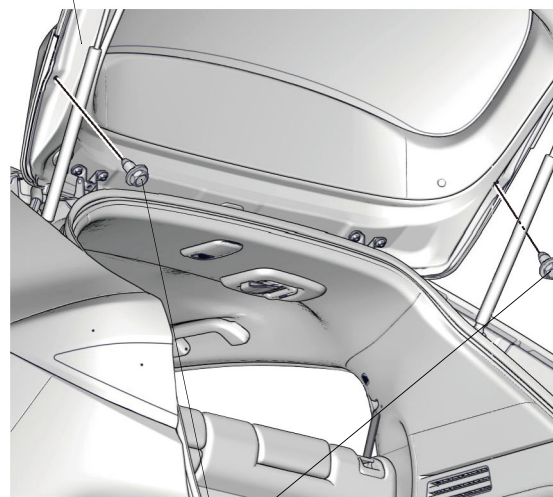


QH12602AG

3. With the help of an assistant, carefully pull on the tailgate spoiler to release the nine clip pins from the grommets. Release the high mount brake light harness.


NOTE: The grommets will stay in the tailgate.

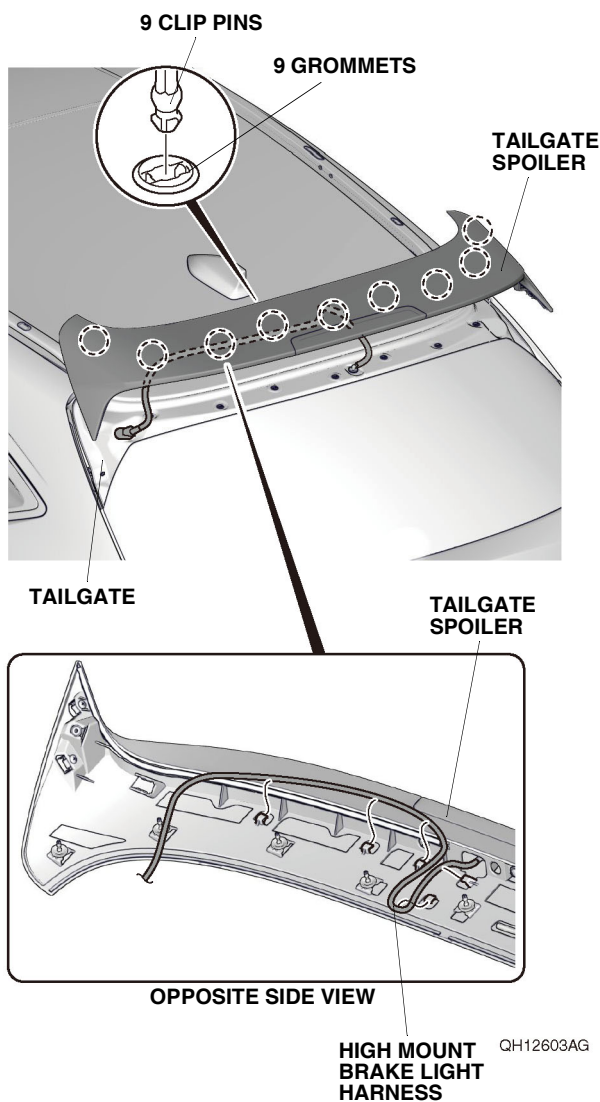

4. Disconnect the rear washer tube. Remove the grommet on the high mount brake light harness from the vehicle panel, and unplug the vehicle connector. Place the tailgate spoiler on a blanket.

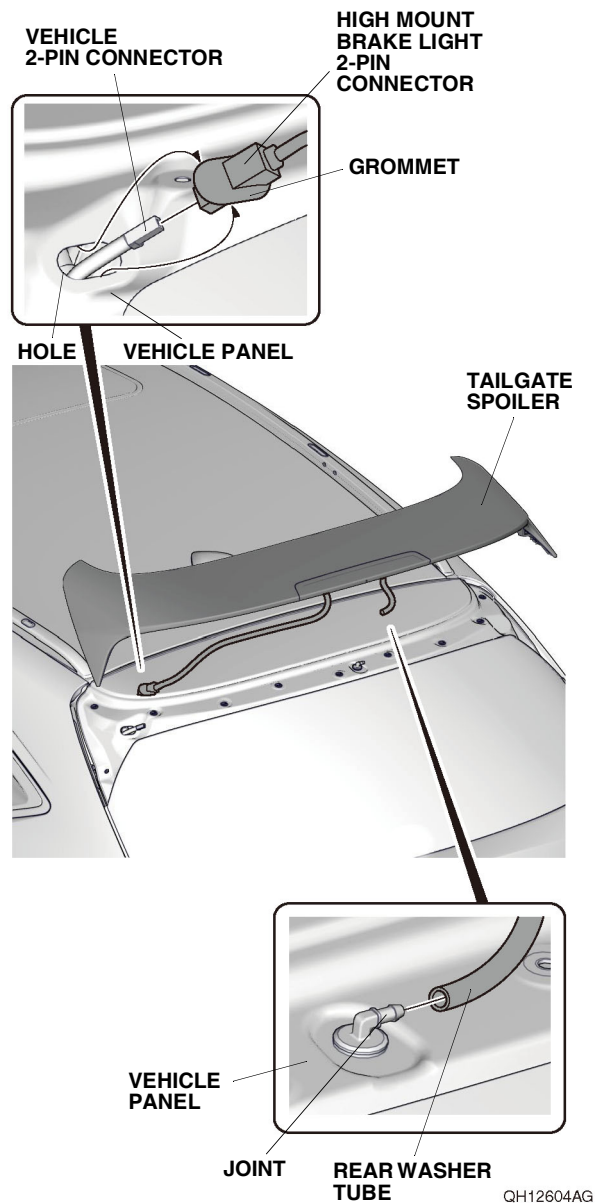


- Remove the nine grommets.

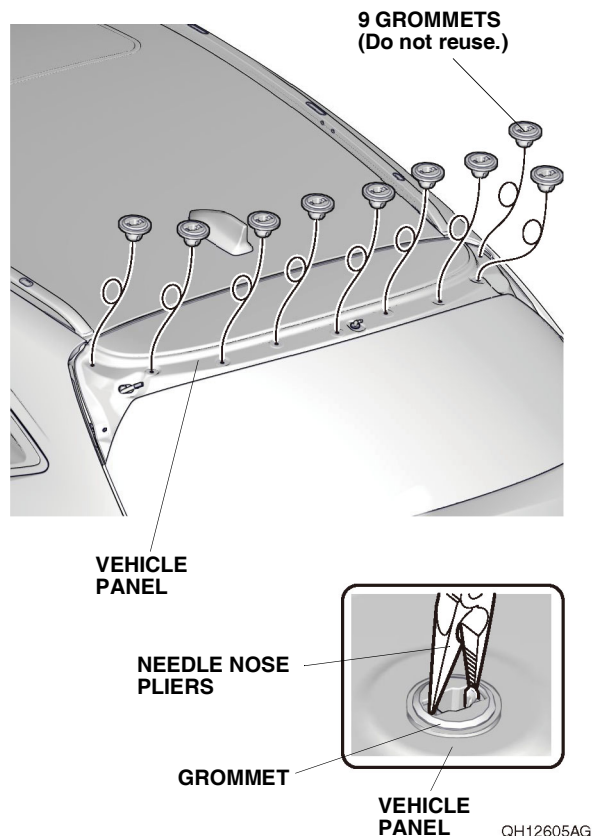


Installing the Spoiler

- Remove the high mount brake light from the tailgate spoiler.

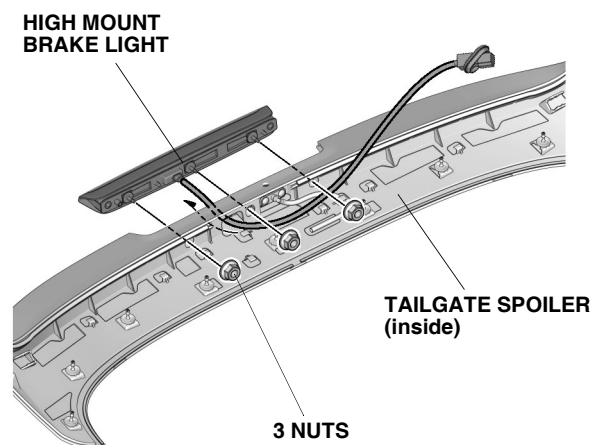


QE00705BJ

- Remove the rear washer tube from the tailgate spoiler.

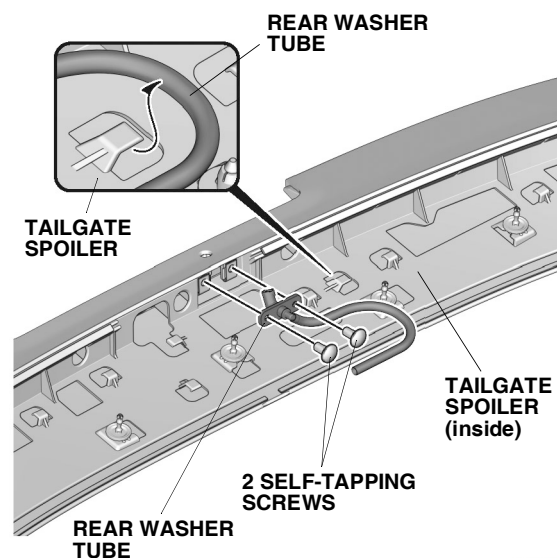


QE00706AJ


8. Remove the two nuts from the tailgate spoiler.

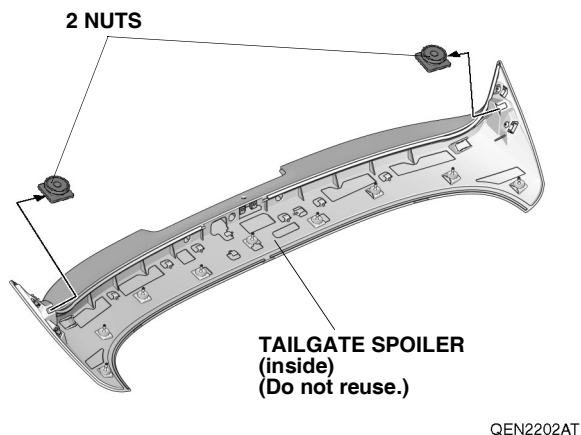


9. Install the rear washer tube to the new tailgate spoiler with two self-tapping screws.

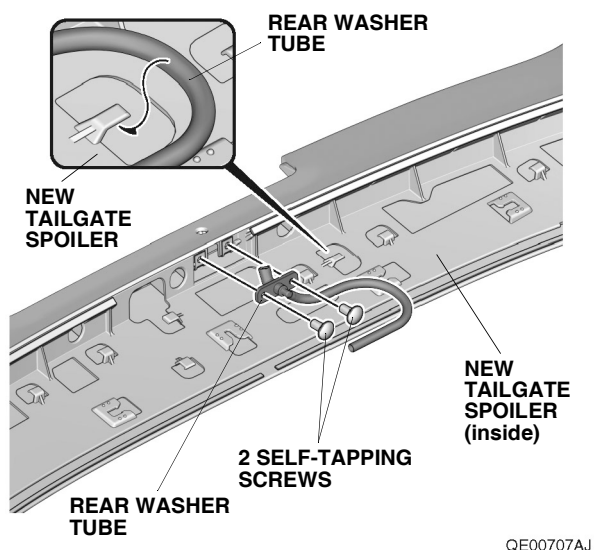


10. Route the high mount brake light harness through the new tailgate spoiler, and install the high mount brake light to the new tailgate spoiler with three nuts.

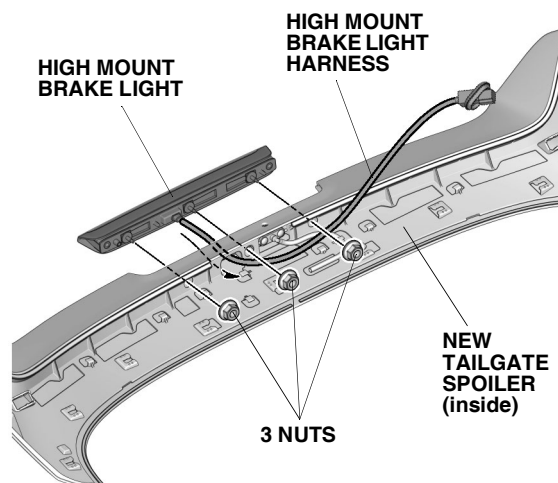


11. Install the nine clips to the new tailgate spoiler.

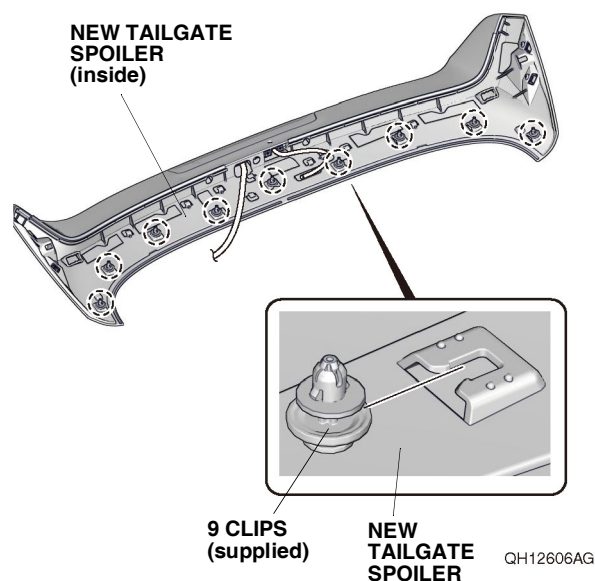


12. Install the two nuts to the new tailgate spoiler.

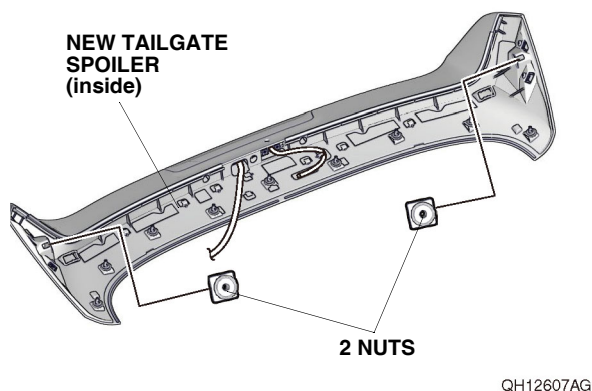

13. Secure the high mount brake light harness to the new tailgate spoiler.

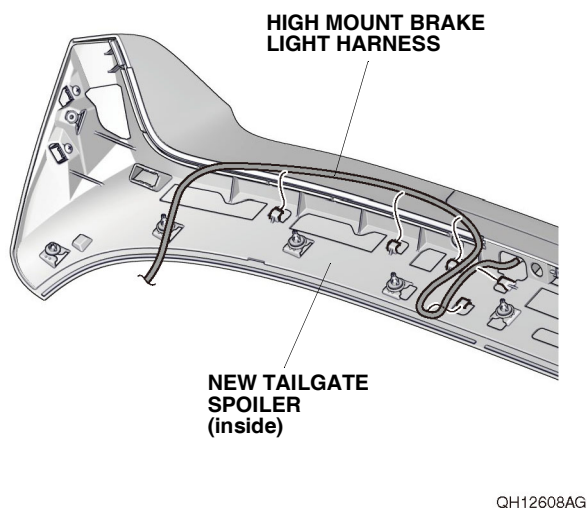


14. Plug the vehicle 2-pin connector into the high mount brake light harness 2-pin connector, and install the grommet on the high mount brake light harness to the vehicle panel hole.

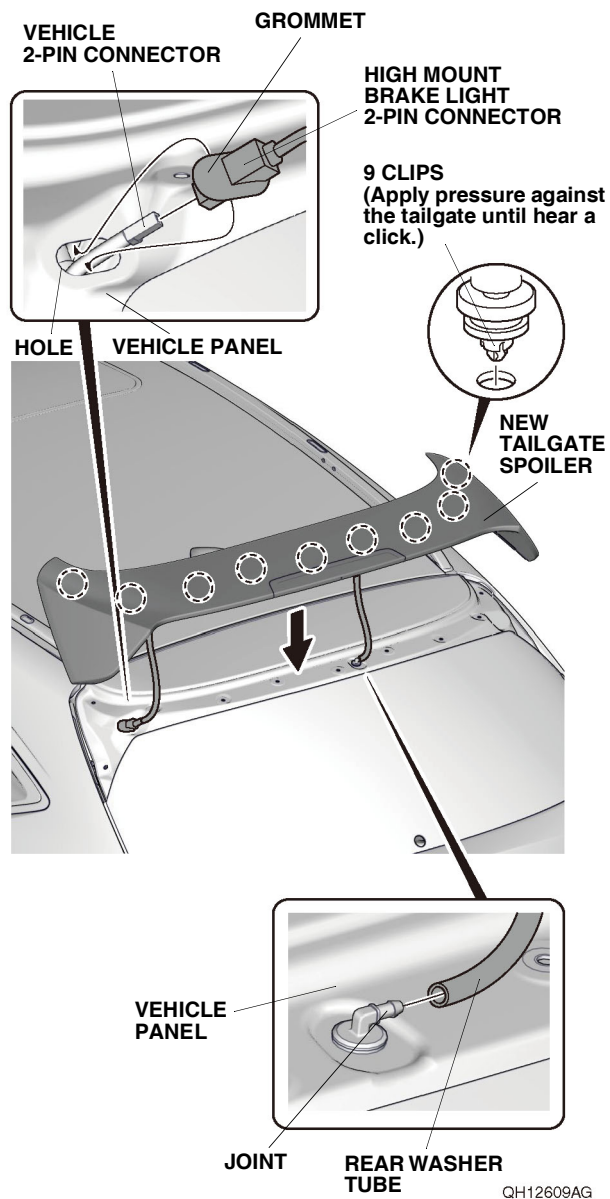

15. Connect the rear washer tube to the joint. Install the new tailgate spoiler to the tailgate with nine clips. NOTE: To confirm clip engagement, listen for a click sound during installation.

16. Secure the new tailgate spoiler to the tailgate with two bolts. Torque the two bolts to 3.6 lb-ft (4.9 N·m).

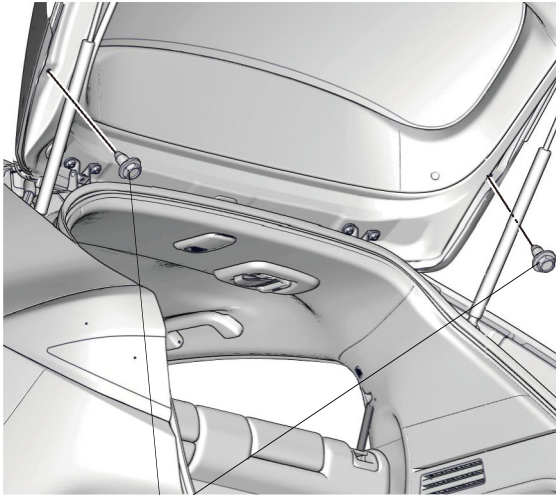

2 BOLTS
3.6 lb-ft
(4.9 N·m)

QH12610AG

17. Check that all wire harnesses are routed properly and all connectors are plugged in.
18. Connect the negative cable to the battery.
19. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
20. Set the clock on vehicles without navigation.
21. If necessary, restore the systems back to normal operation as described in the service information.