

# Germain Honda of College Hills



## INSTALLATION INSTRUCTIONS

Accessory

BLACK EMBLEMS

Application

2023 HR-V  
MODEL SERIES



Publications No.

VERSION 1

Issue Date

MAY 2022

## GENERAL VIEW

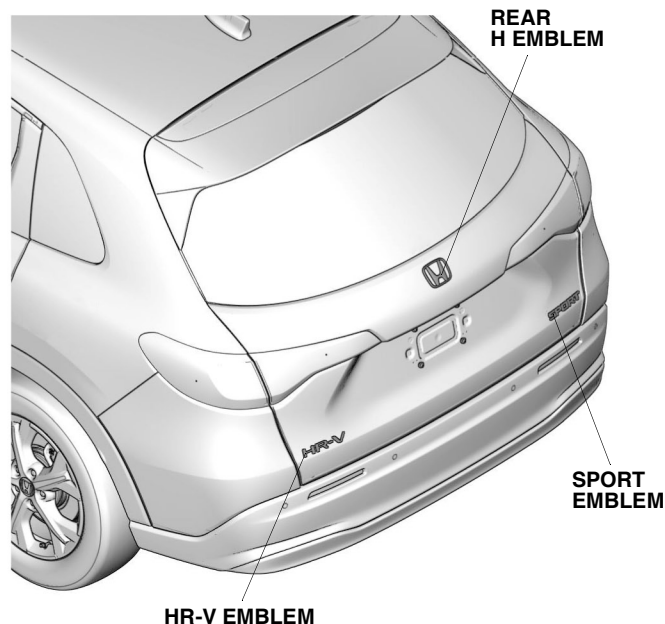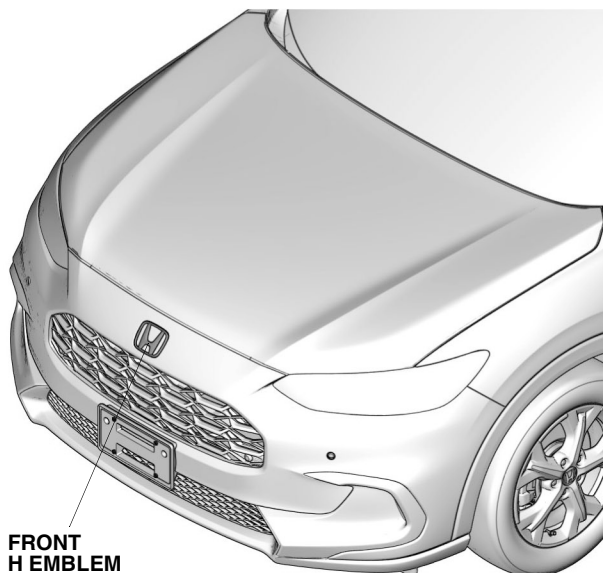

QL52401AB

## FOR YOUR SAFETY (Read carefully.)

### Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of following symbols:

\*All symbols are not used in all installation instructions.

 **DANGER**

You will be killed or seriously hurt if you do not follow the instructions.

 **WARNING**

You can be killed or seriously hurt if you do not follow the instructions.

 **CAUTION**

You can be hurt if you do not follow the instructions.

**NOTICE**

Gives advice to prevent damage to the product, vehicle, the environment or other property.

**NOTE**

Gives helpful information or instructions to be followed when installing this product.



Indicates a prohibited action.

# Germain Honda of College Hills

## Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

\*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle.  
(instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.




Clean with isopropyl alcohol.




Return the original part to the customer.  
(Do not reuse.)


## Wire Harness Routing Precaution

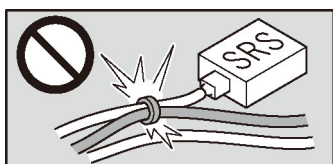


Do not secure the  
accessory harness to the  
SRS harness.  
(except for instruction  
cases.)

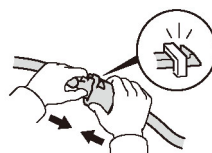


Push the connectors and  
terminals together until  
they lock.

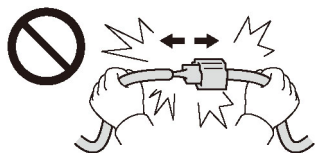

Do not pull the harness to  
unplug the connectors.

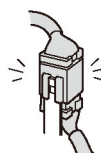

Install removed  
connectors in their original  
location.

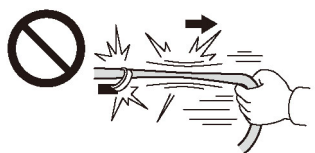


Do not pull the harness.



Secure the accessory  
harness as shown.



Do not pinch the harness.

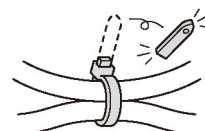

Cut off the excess wire tie.

# Germain Honda of College Hills

## Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Be careful not to damage the vehicle or the parts.
- Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- The illustrations may differ slightly from the actual accessory.

## Safety: Electric Parts








Always disconnect the negative cable from the battery before beginning work.

## Safety: Accessory

- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.


## PARTS LIST

Black Emblem Kit (P/N 08F20-3V0-100)

Front H emblem	Rear H emblem	HR-V Emblem	Clips (11)
			
Nuts (2)	Push nuts (4)	Alcohol wipes (2)	
			

# Germain Honda of College Hills

## Black SPORT Emblem Kit (P/N 08F20-3V0-100B)

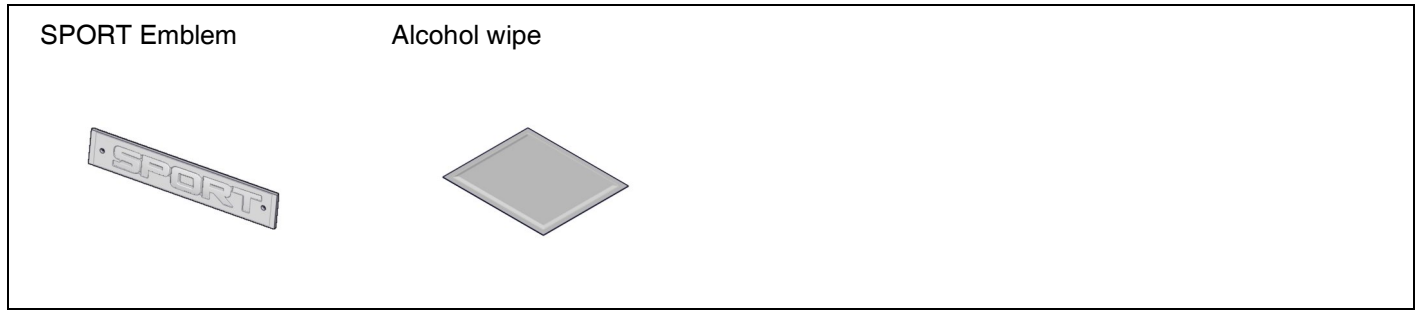

## REQUIRED TOOLS AND SUPPLIES

- 10 mm Open end wrench
- Torque wrench
- Ratchet
- Needle nose pliers
- Stubby Phillips screwdriver
- 6 mm and 8 mm Sockets
- Diagonal cutters
- Phillips screwdriver
- 8 mm Deep socket
- Shop towel
- Masking tape
- Blanket
- Nylon string

The following tools are available through the Honda Tool and Equipment Program:

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)
- Rubber Roller (T/N MHLE54D)
- Push Pin Pliers (T/N 07AAC-001A101)







# Germain Honda of College Hills

## INSTALLATION

1. Disconnect the negative cable from the battery.

### NOTE

Take countermeasures to prevent from locking the trunk lid.

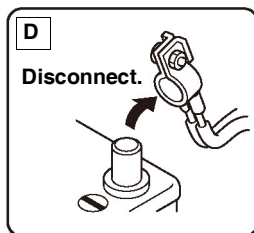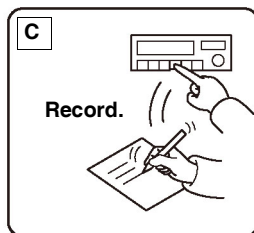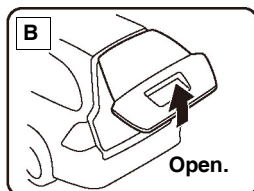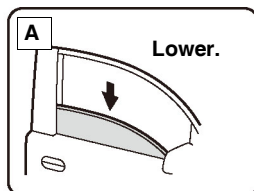


QCD0504BM


2. Wrap a shop towel.

### NOTE


Do not remove the shop towel until after the parts are installed.



HOOD LATCH  
LEVER

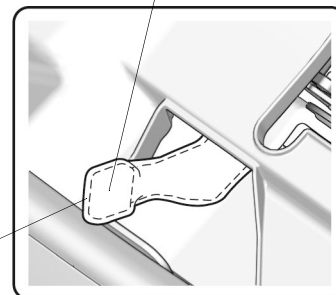


SHOP TOWEL

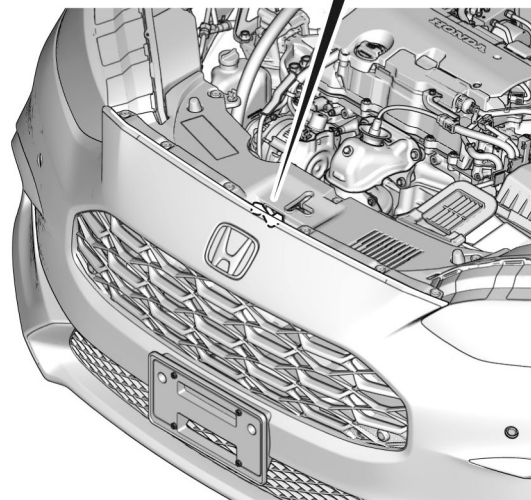



QL52402AB

# Germain Honda of College Hills


3. Remove the front bulkhead cover.

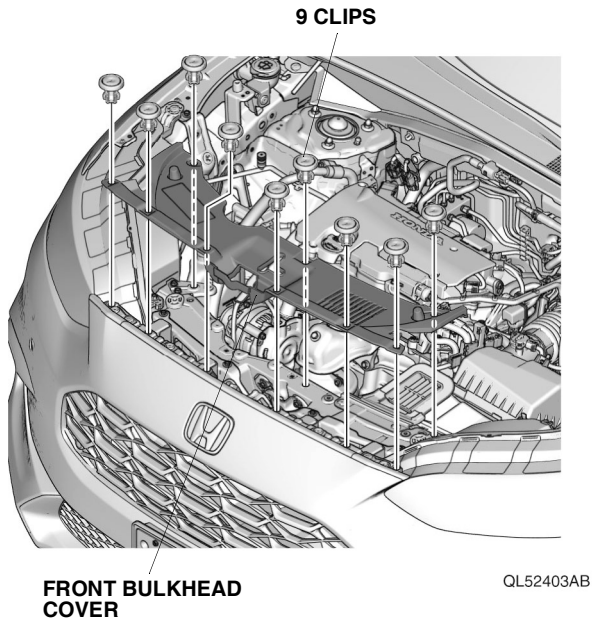


4. Remove the self-tapping screws and clips.

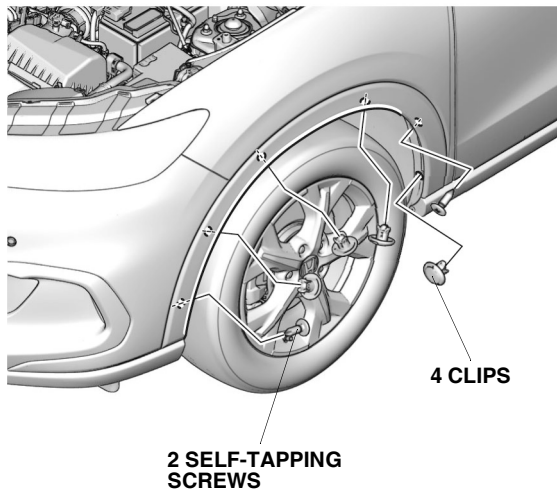

5. Remove the left front wheel arch protector.

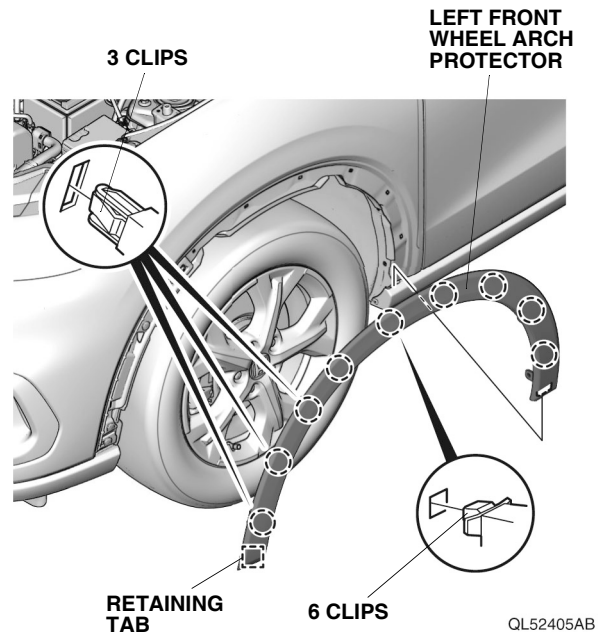

6. Repeat the same procedures on the other side.


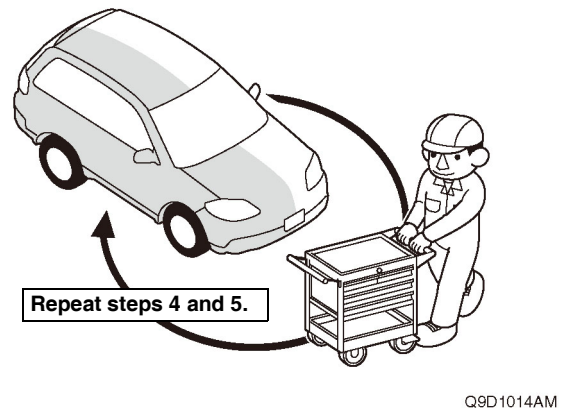


# Germain Honda of College Hills


7. Attach masking tape to protect the vehicle.

## NOTE

Do not remove the masking tape until after the parts are installed.

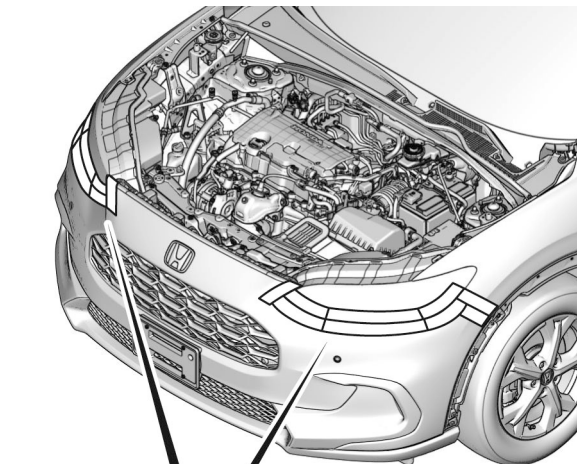

HEADLIGHT

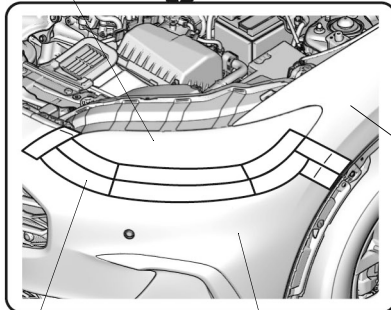

MASKING  
TAPE

FRONT  
BUMPER


FRONT  
FENDER

QL52406AB


8. Remove the self-tapping screws and clips.

2 SELF-TAPPING  
SCREWS

2 CLIPS  
(short)

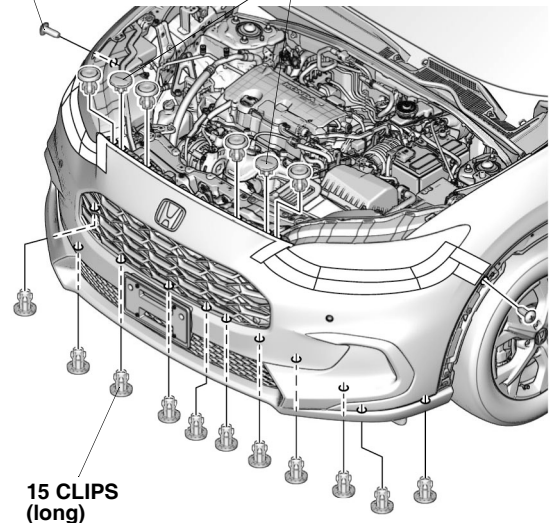

15 CLIPS  
(long)

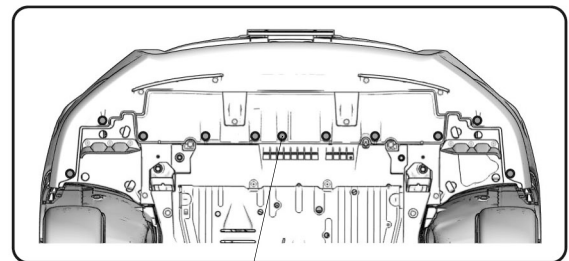

11 CLIPS  
(long)


QL52407AB

# Germain Honda of College Hills



9. Release the retaining tabs.

## NOTE


- Release the retaining tabs starting from outside working in.
- Make sure to release the retaining tabs in the correct orientation.



3 RETAINING  
TABS

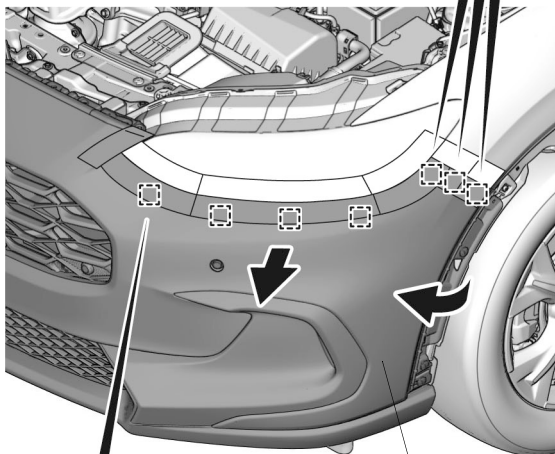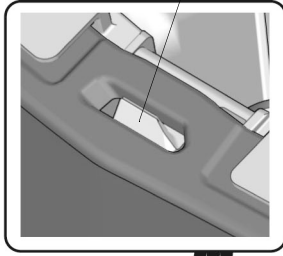

FRONT  
BUMPER

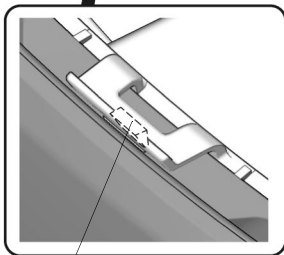


4 RETAINING  
TABS

QL52408AB

10. Repeat step 9 on the other side.

11. Remove the front bumper.

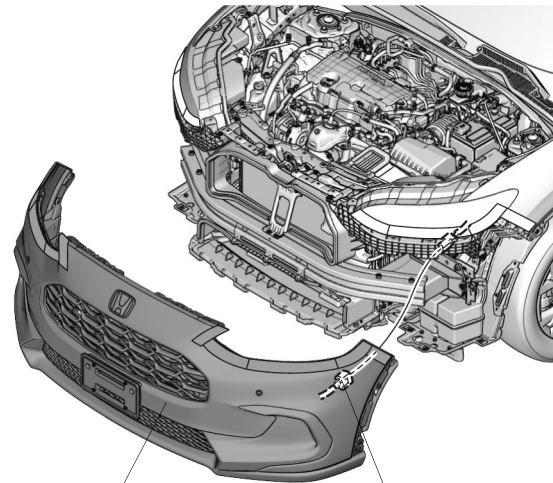


FRONT  
BUMPER

VEHICLE  
CONNECTOR


QL52409AB

12. Remove the tailgate upper trim panel.



6 RETAINING  
TABS

4 CLIPS

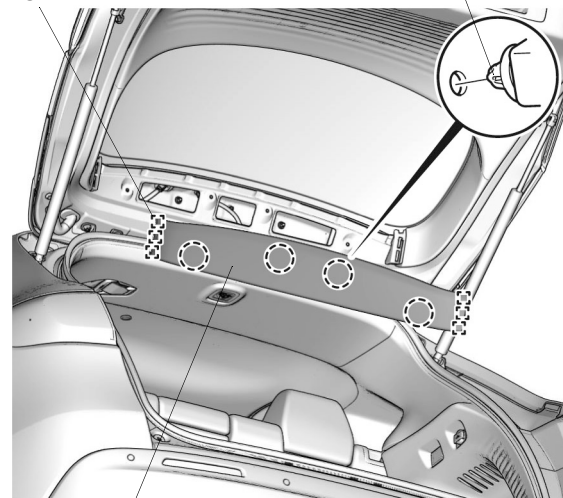


TAILGATE UPPER  
TRIM PANEL

QL52410AB



# Germain Honda of College Hills



13. Remove the left and right tailgate side trim panels.

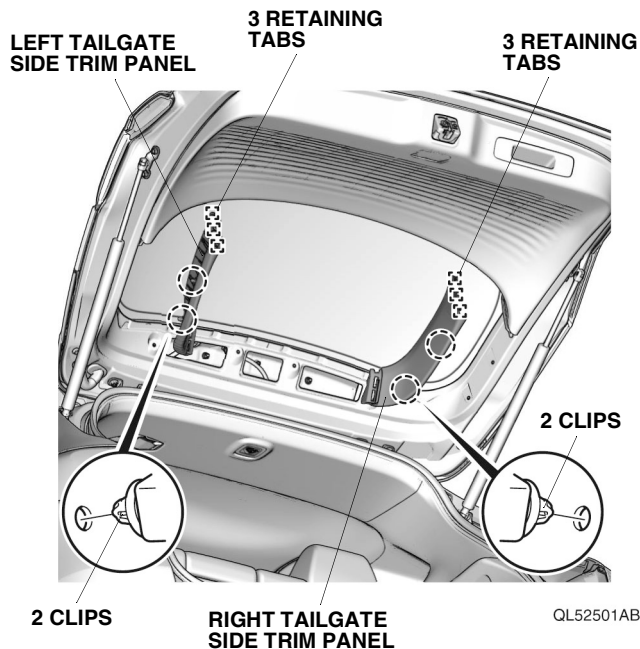


14. Attach masking tape to protect the vehicle.

## NOTE



Do not remove the masking tape until after the parts are installed.

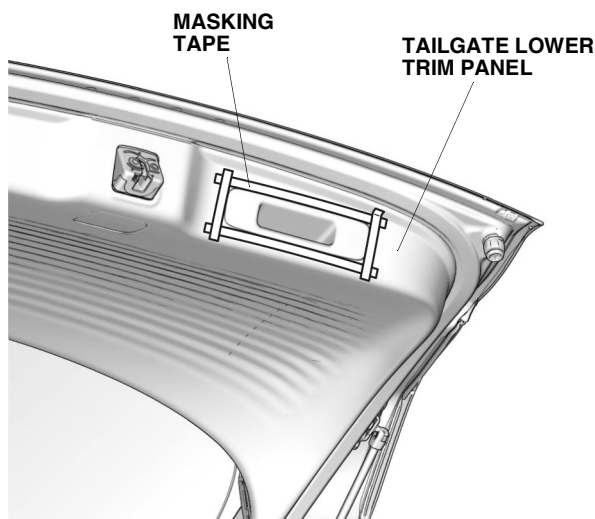

15. Remove the tailgate pull pocket.

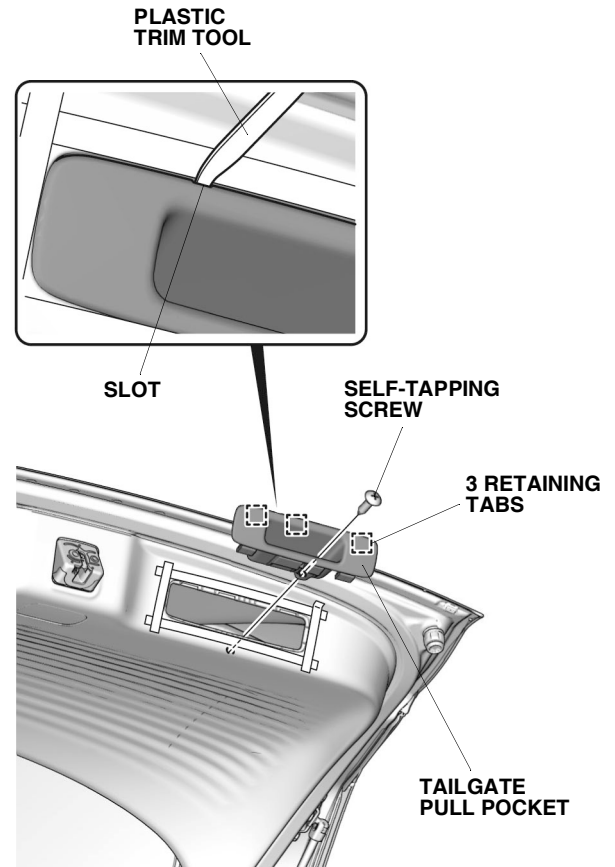


16. Remove the tailgate lower trim panel.

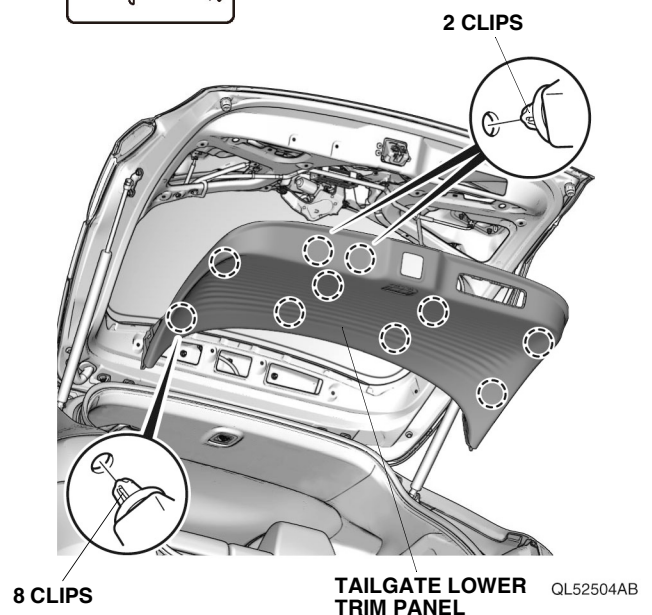



# Germain Honda of College Hills

17. Remove the bolts.



2 BOLTS

**1.5 lb-ft**  
**(2.0 N·m)**

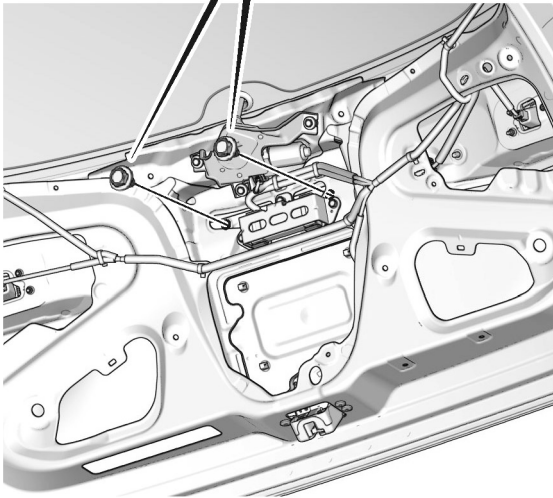
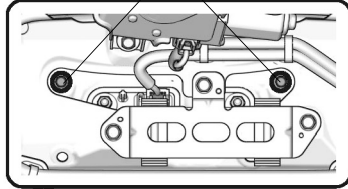


QL52505BB

18. Attach masking tape to protect the vehicle.


## NOTE

Do not remove the masking tape until after the parts are installed.

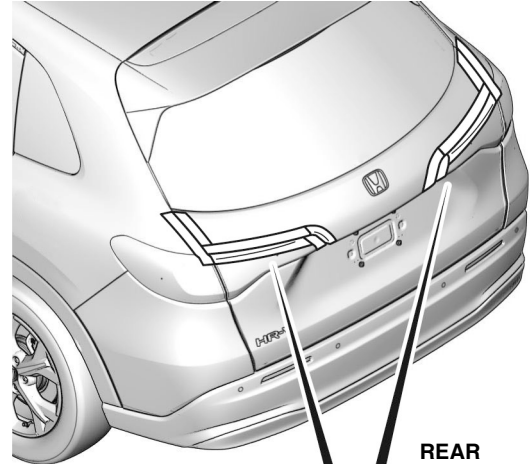

REAR  
LICENSE TRIM

REAR FENDER

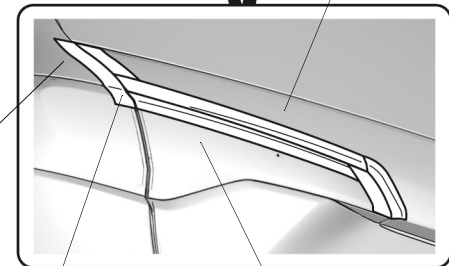


MASKING  
TAPE

TAILLIGHT

QL52506AB

# Germain Honda of College Hills


19. Remove the rear license trim.

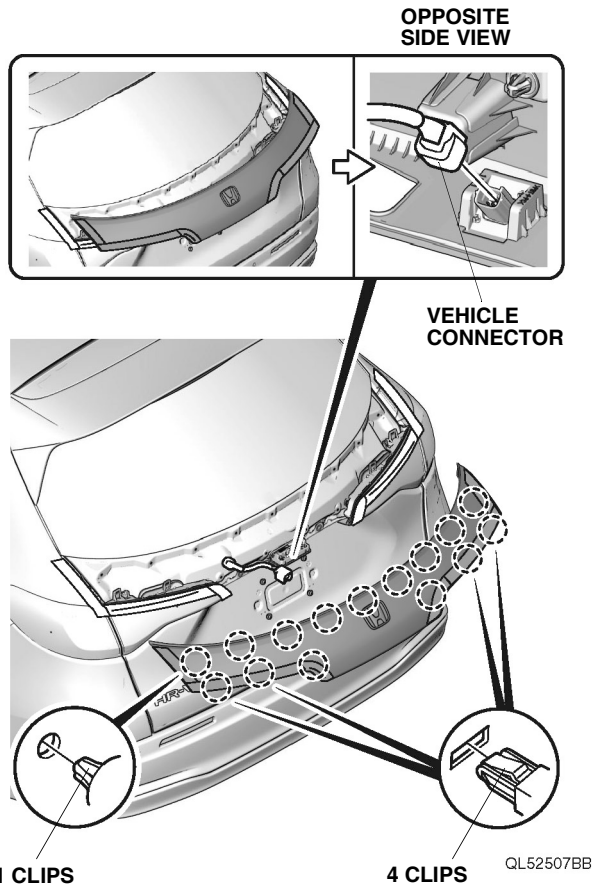


20. Remove the upper induction plate.

## NOTE

Follow the same procedure for the differently shaped upper induction plate.

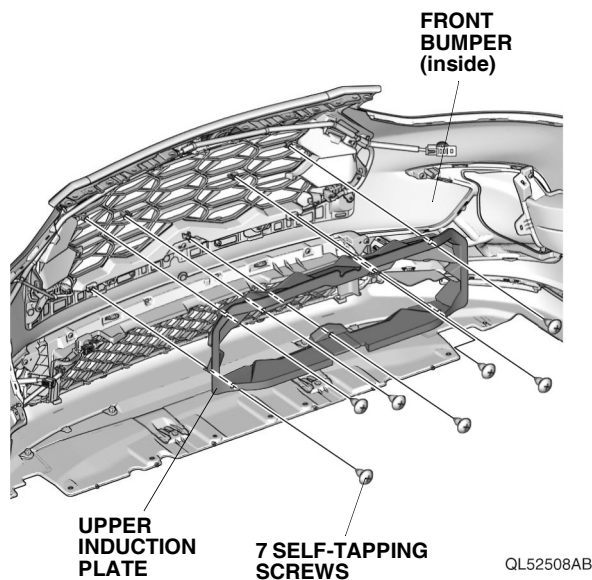

21. Cut off the pins.

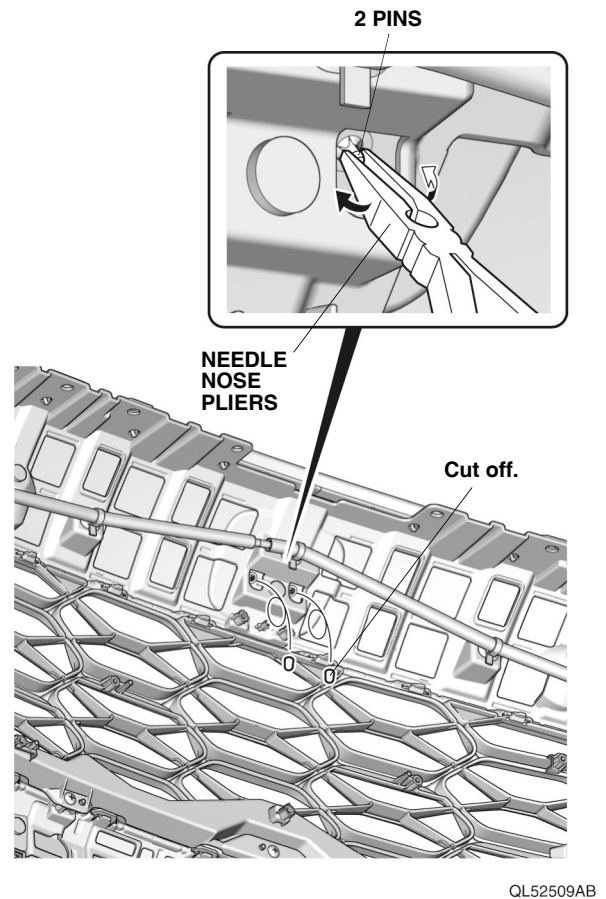




# Germain Honda of College Hills

22. Remove the vehicle front H emblem.

## NOTE


- Do not damage the front bumper when removing the vehicle H emblem with the nylon string.
- Make sure to thoroughly remove the adhesive tape from the front bumper.

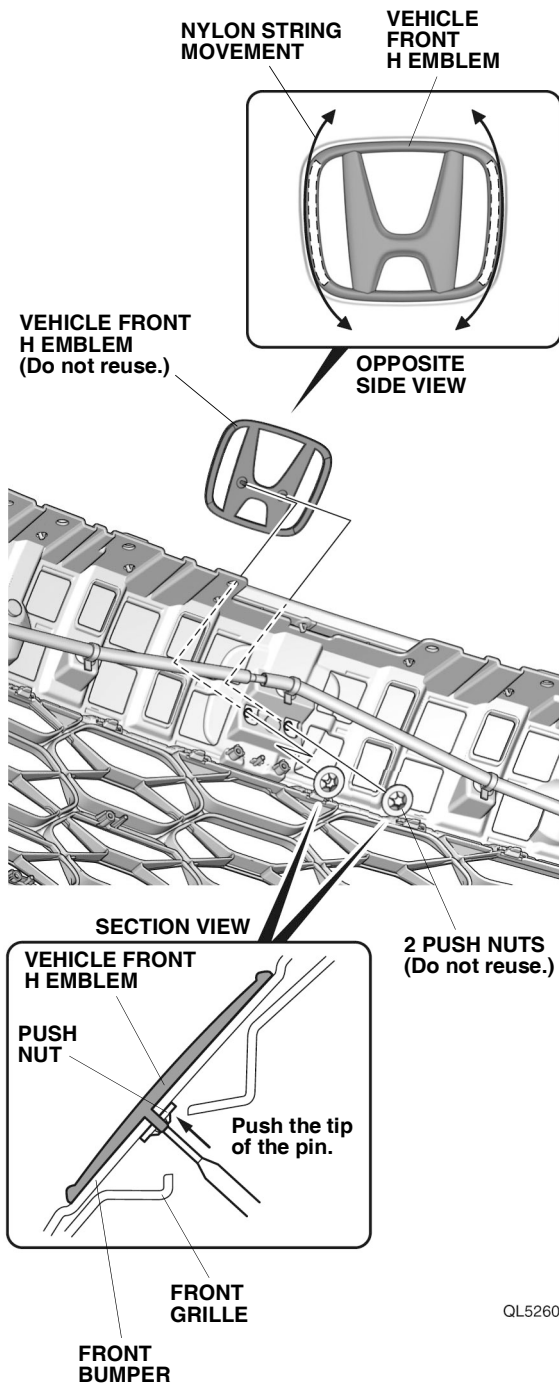

23. Clean the attaching area.

## NOTE

Allow to dry thoroughly.

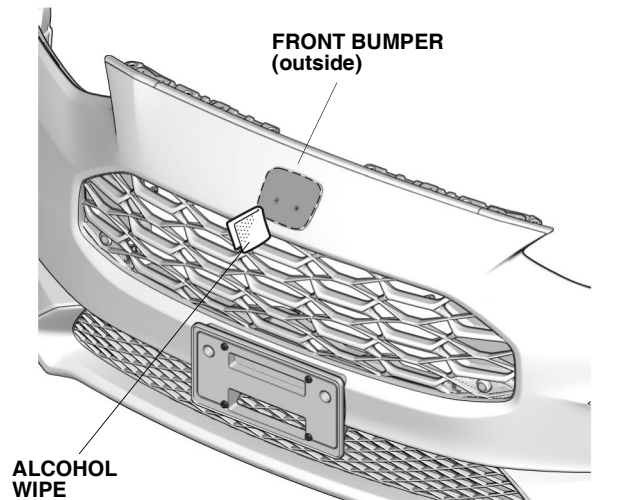


# Germain Honda of College Hills


24. Install the new front H emblem.

## NOTE

- Make sure to install the push nuts in the correct orientation.
- Check the position of the double-sided adhesive tapes and make sure to press firmly.

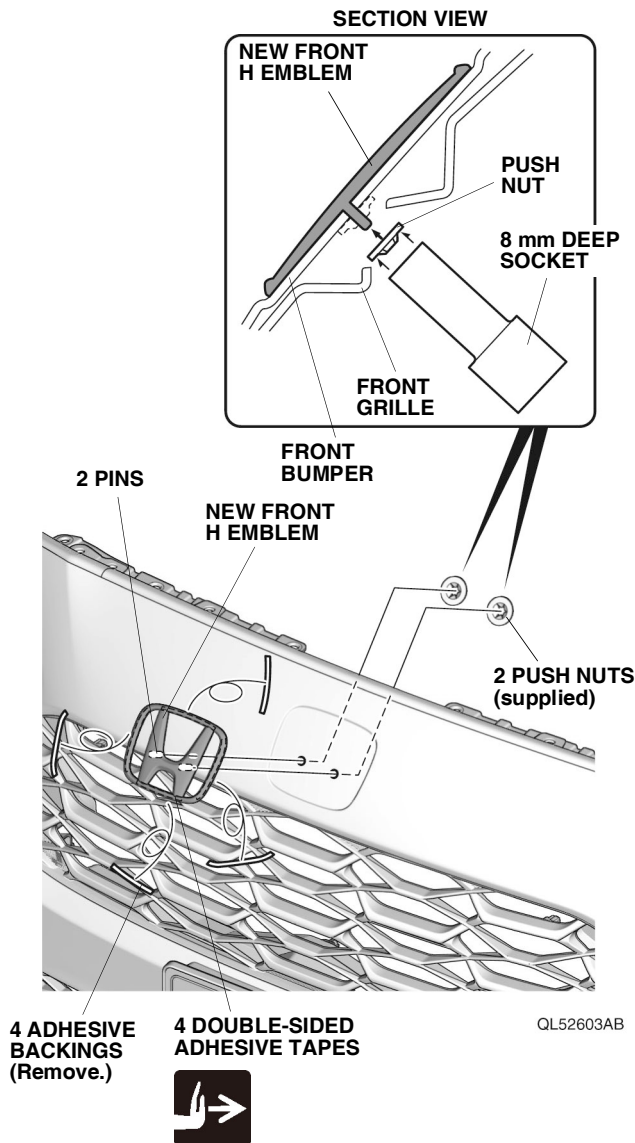

25. Secure the new front emblem.

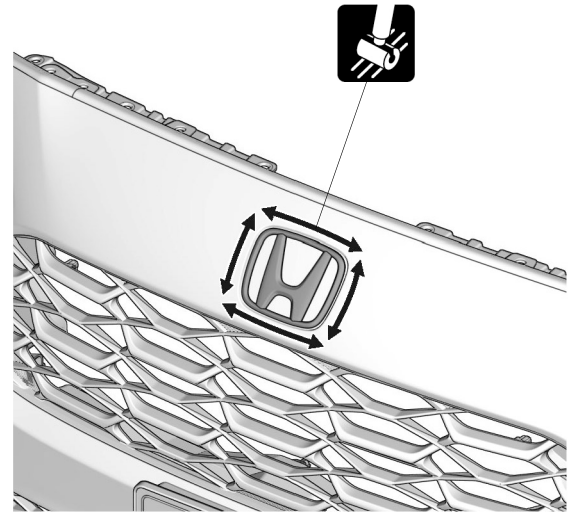


QLD0701AG

26. Install the upper induction plate.

27. Install the front bumper.

28. Remove the vehicle rear H emblem.

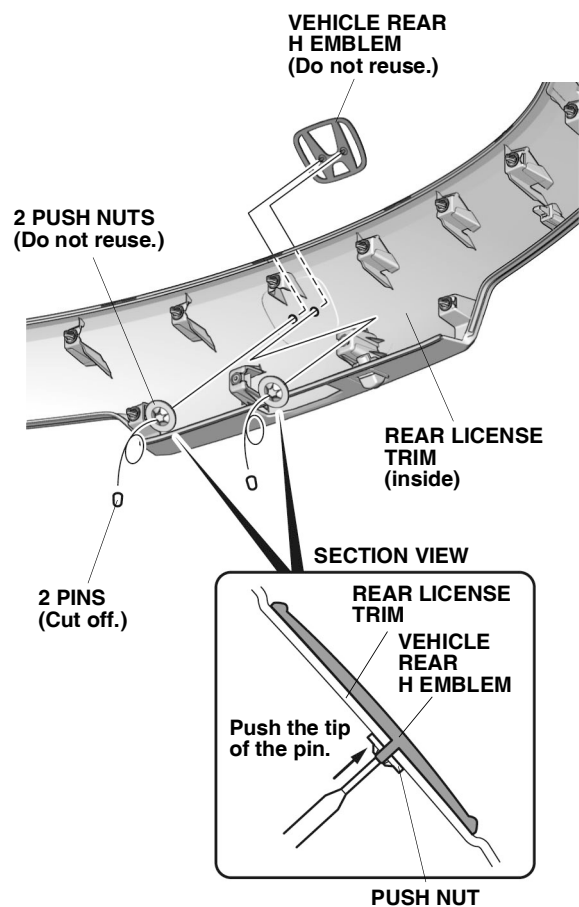


QL52604AB

# Germain Honda of College Hills

29. Clean the attaching area.

## NOTE

Allow to dry thoroughly.

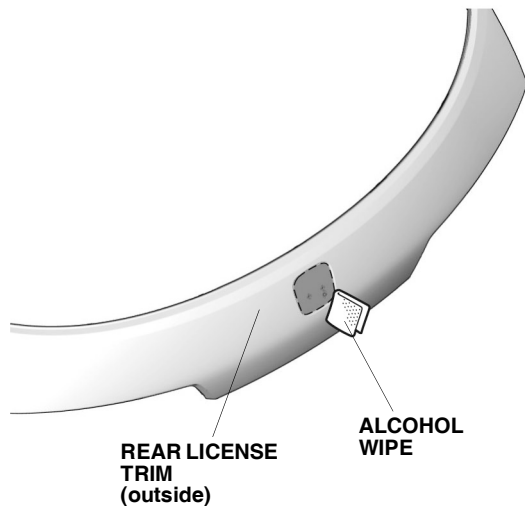


QL52605AB

30. Install the new rear H emblem.

## NOTE

- Make sure to install the push nuts in the correct orientation.
- Check the position of the double-sided adhesive tapes and make sure to press firmly.

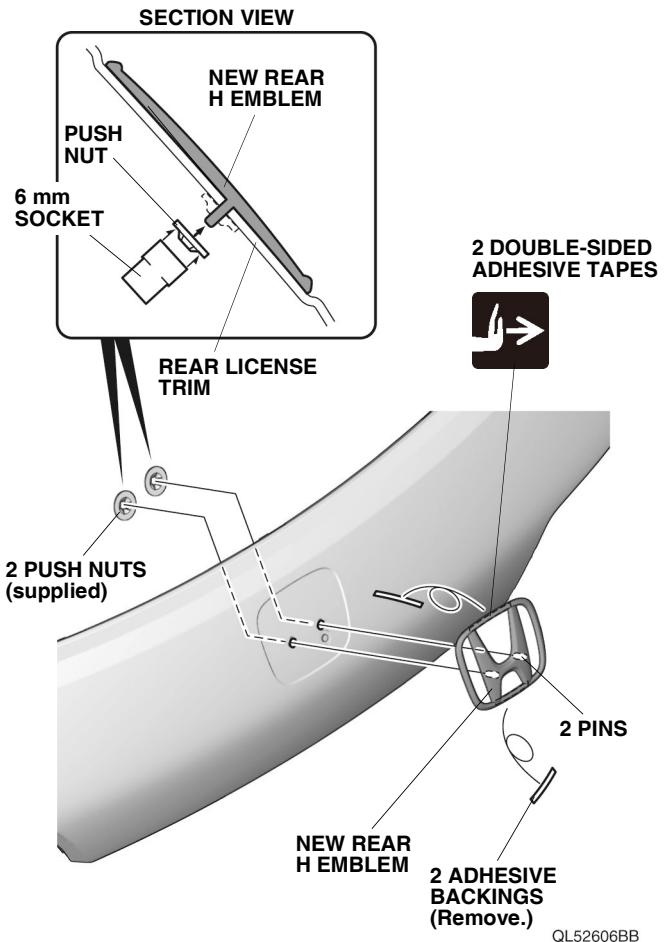

QL52606BB


# Germain Honda of College Hills

31. Secure the new rear H emblem.



QLD0702AG


32. Replace the clips and nuts.

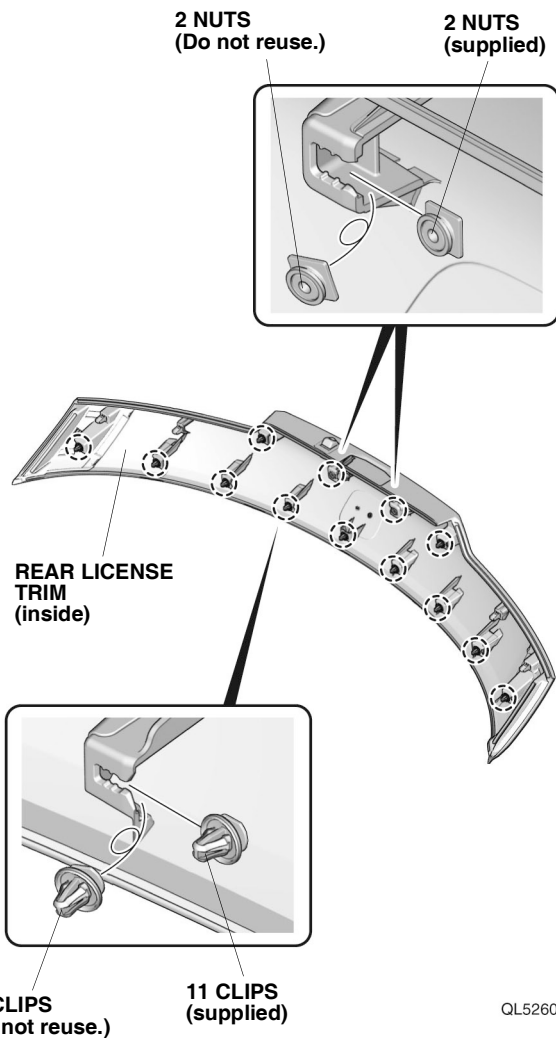

QL52607AB


33. Install the rear license trim.

34. Remove the guide form.

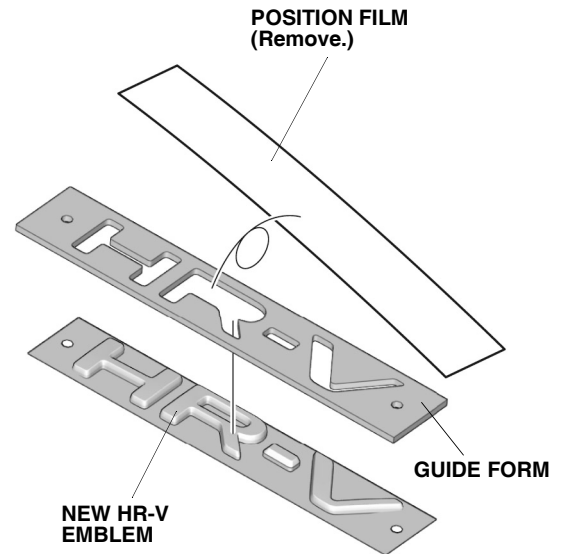

QL52608AB


35. Install the guide form.

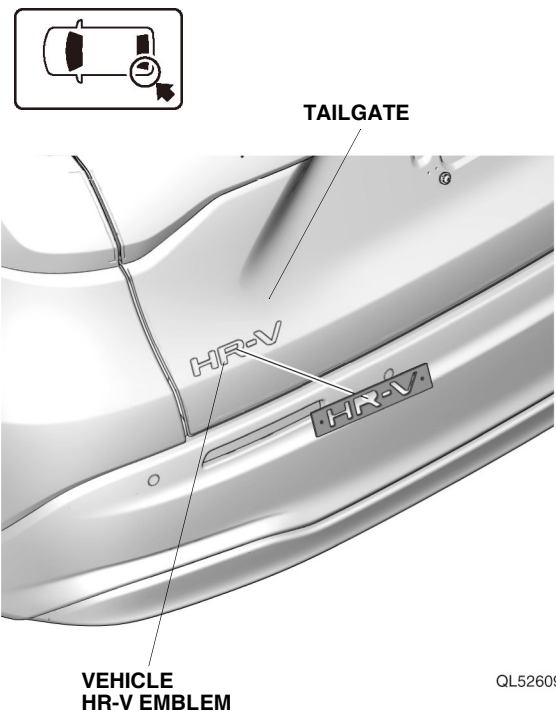

QL52609AB

# Germain Honda of College Hills


36. Attach masking tape.

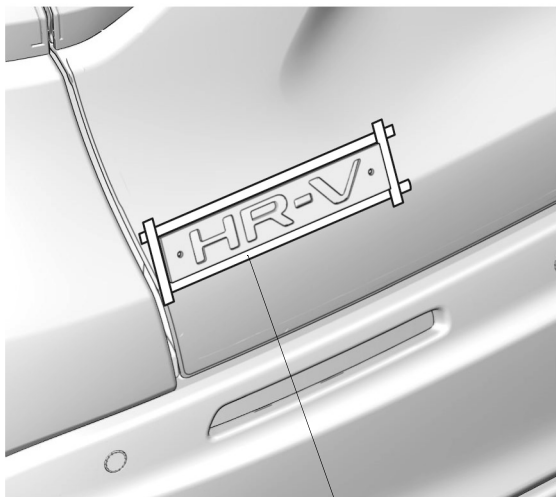

**MASKING TAPE**

QL52610AB

37. Remove the guide form.

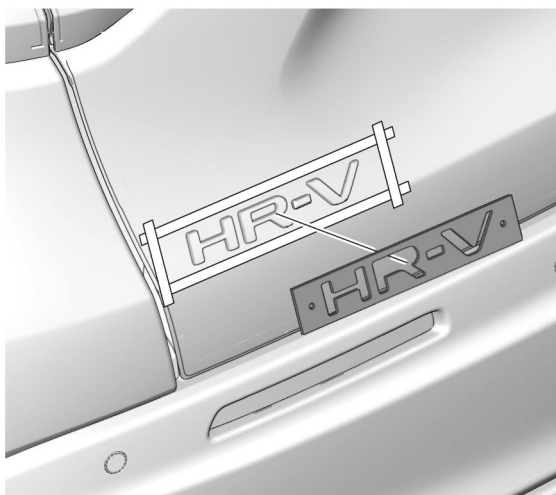


QL52701AB

38. Remove the vehicle HR-V emblem.

## NOTE

- Do not damage the tailgate when removing the vehicle HR-V emblem with the nylon string.
- Make sure to thoroughly remove the adhesive tape from the tailgate.

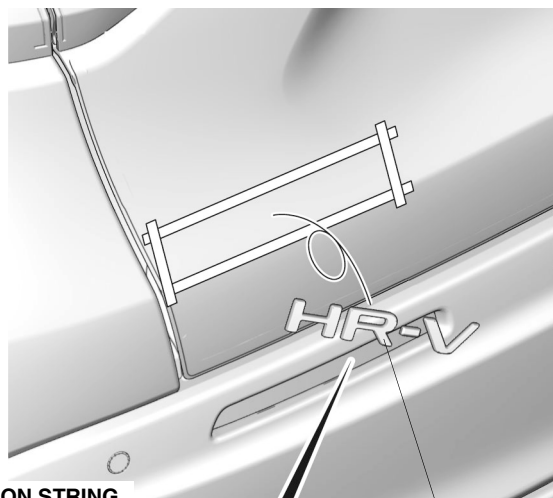


**NYLON STRING  
MOVEMENT**

**Do not reuse.**



QL52702AB

39. Install the guide form.

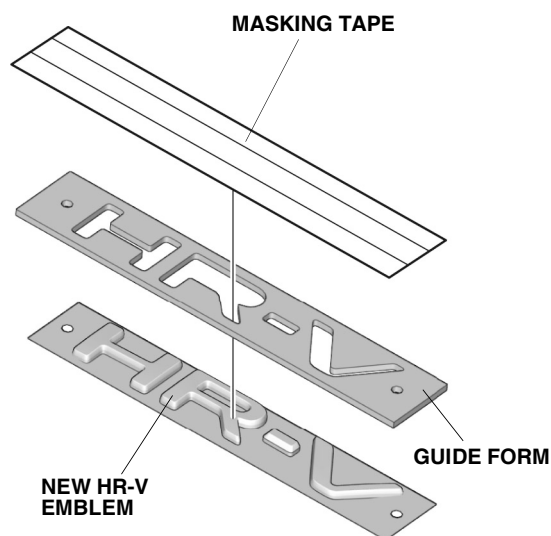

QL52703AB


40. Attach masking tape.

# Germain Honda of College Hills

41. Clean the attaching area.

## NOTE

Allow to dry thoroughly.

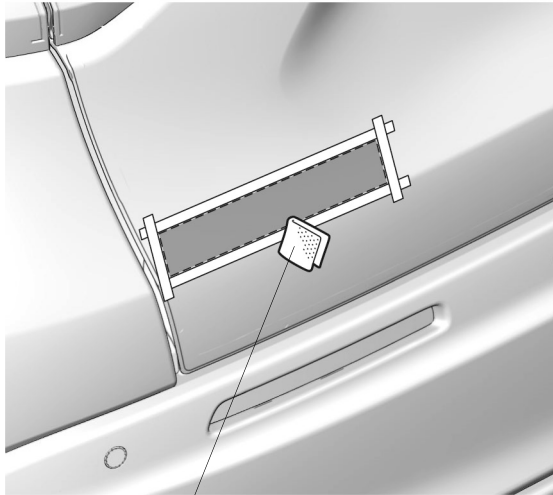


ALCOHOL WIPE

QL52704AB

42. Attach the new HR-V emblem.

## NOTE

Check the position of the double-sided adhesive tapes and make sure to press firmly.

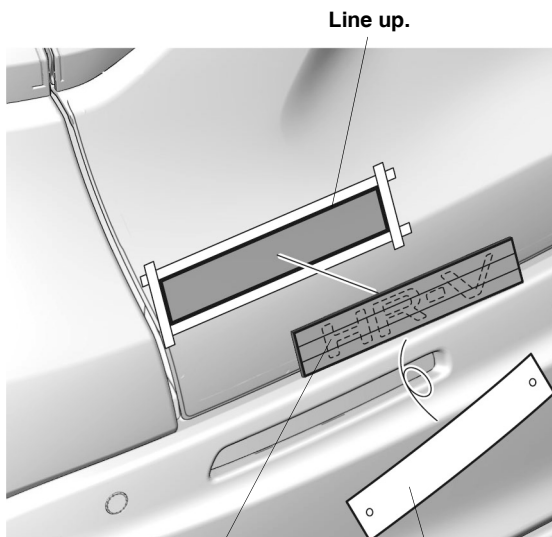


4 DOUBLE-SIDED  
ADHESIVE TAPES



ADHESIVE  
BACKING  
(Remove.)


QL52705BB

43. Secure the new HR-V emblem.

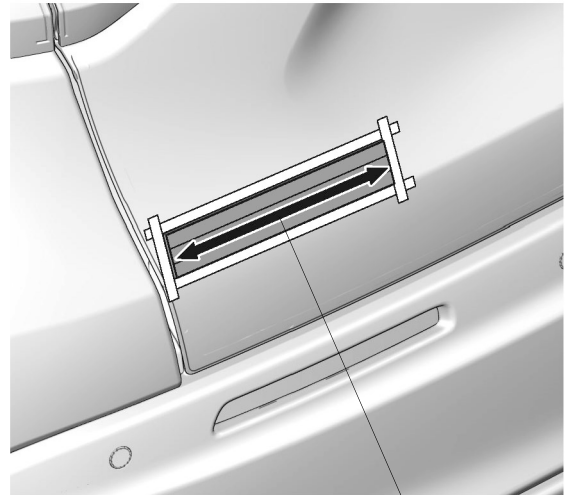

QLD0703AG

44. Remove the guide form.

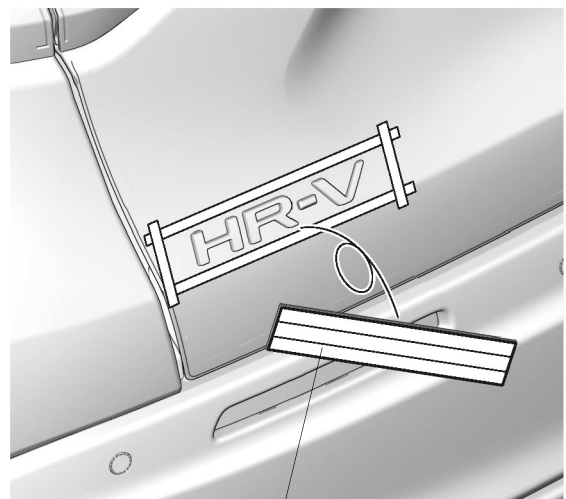

Remove.

QL52706BB

45. Remove the masking tape.



# Germain Honda of College Hills

46. Choose one of these options.


- Replace the SPORT emblem

Go to step 47

- Do not replace the SPORT emblem


Go to step 59

47. Remove the guide form.

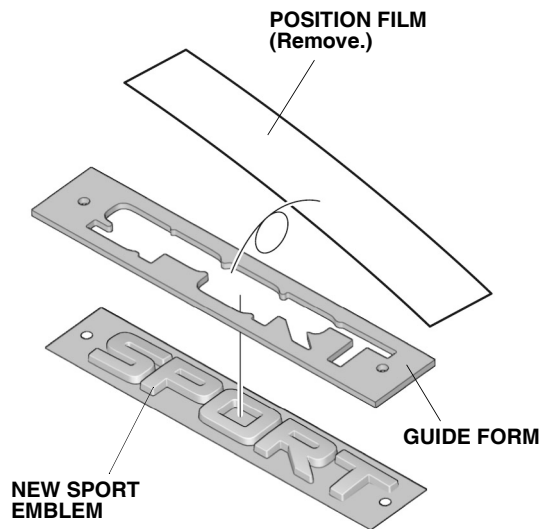

QL52707AB

48. Install the guide form.




TAILGATE

VEHICLE  
SPORT EMBLEM



QL52708AB


49. Attach masking tape.

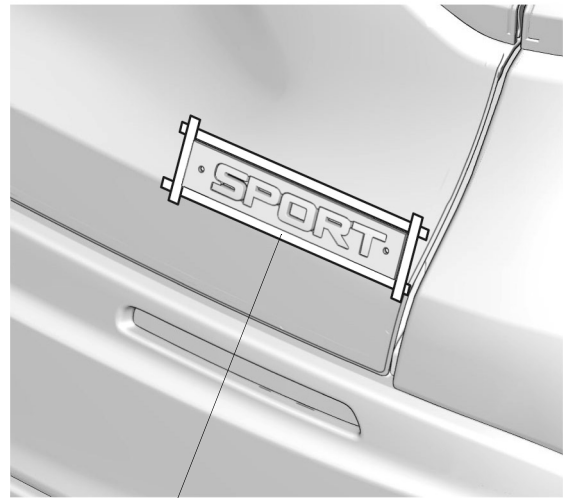

MASKING TAPE

QL52709AB

50. Remove the guide form.

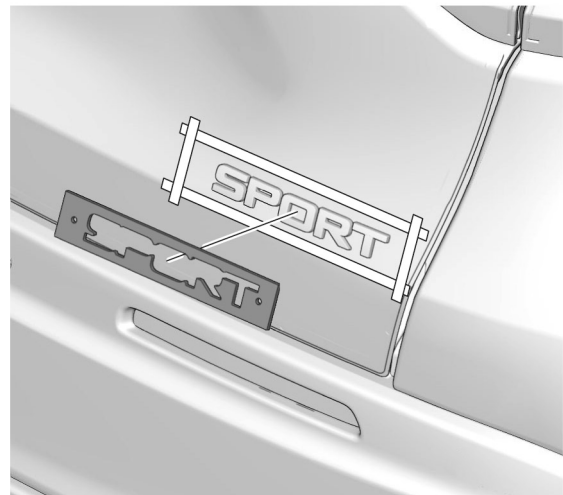

QL52710AB




# Germain Honda of College Hills

51. Remove the vehicle SPORT emblem.

## NOTE

- Do not damage the tailgate when removing the vehicle SPORT emblem with the nylon string.
- Make sure to thoroughly remove the adhesive tape from the tailgate.

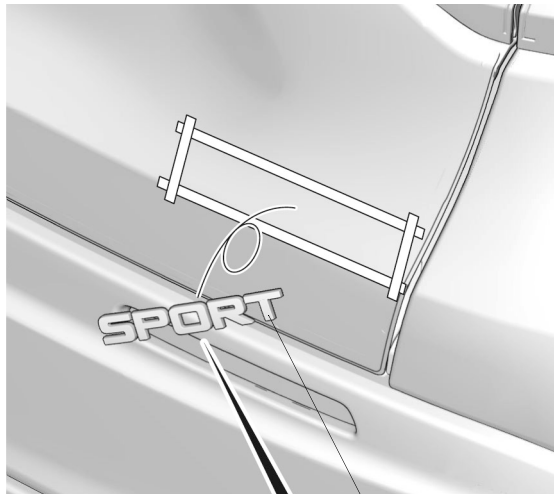


NYLON STRING  
MOVEMENT

Do not reuse.



QL52711AB

52. Install the guide form.

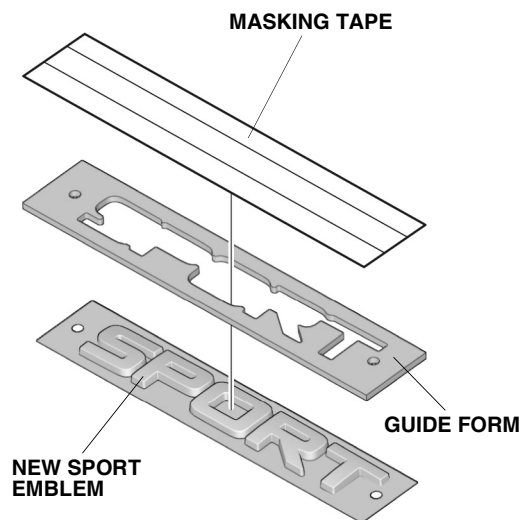

MASKING TAPE

GUIDE FORM

NEW SPORT  
EMBLEM


QL52712AB

53. Attach masking tape.

54. Clean the attaching area.

## NOTE

Allow to dry thoroughly.

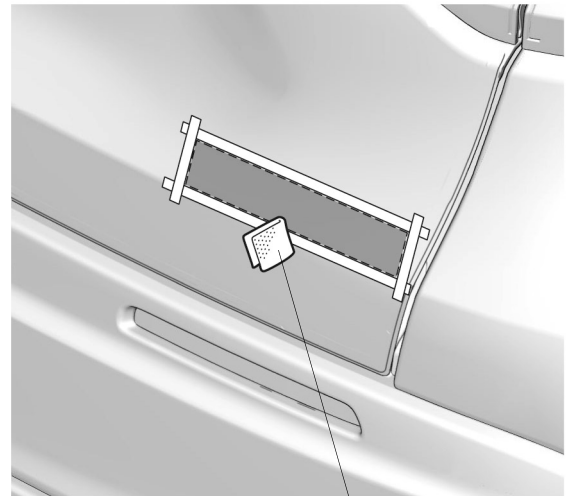


ALCOHOL WIPE

QL52713AB

55. Attach the new SPORT emblem.

## NOTE

Check the position of the double-sided adhesive tapes and make sure to press firmly.

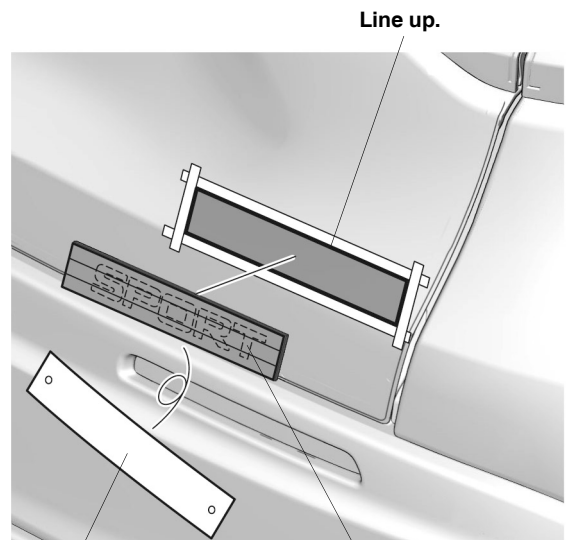

Line up.

ADHESIVE BACKING  
(Remove.)


5 DOUBLE-SIDED  
ADHESIVE TAPES

QL52714BB




# Germain Honda of College Hills

56. Secure the new rear SPORT emblem.

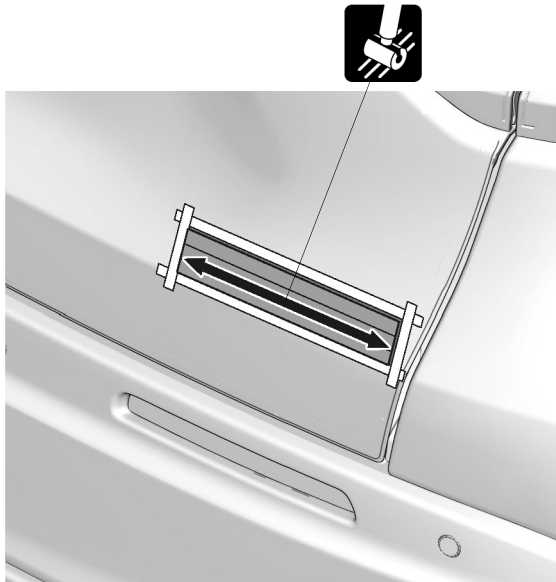

QLD0704AG

57. Remove the guide form.

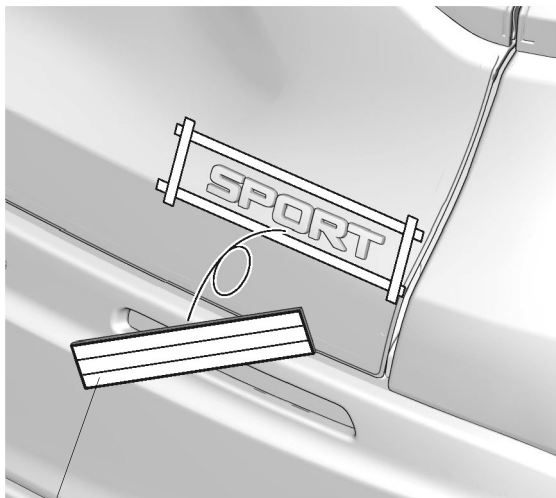

Remove.

QL52715BB

58. Remove the masking tape.


59. Check that all parts are installed and properly routed.

## NOTE

- Check that all harnesses are not pulled or pinched.
- Make sure all clips and wire ties are securely installed.

60. Install all removed parts.

61. Connect the negative cable to the battery.

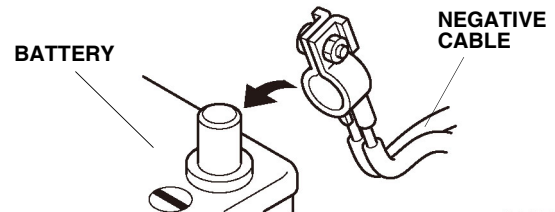

Q060702BM

62. Make sure all accessories and systems operate properly.

63. If necessary, restore the systems back to normal operation as described in the service information.

64. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.