

Germain Honda of College Hills



INSTALLATION INSTRUCTIONS

Accessory

CARGO COVER

Application

2023 HR-V
MODEL SERIES


Publications No.

VERSION 1

Issue Date

MAY 2022

GENERAL VIEW

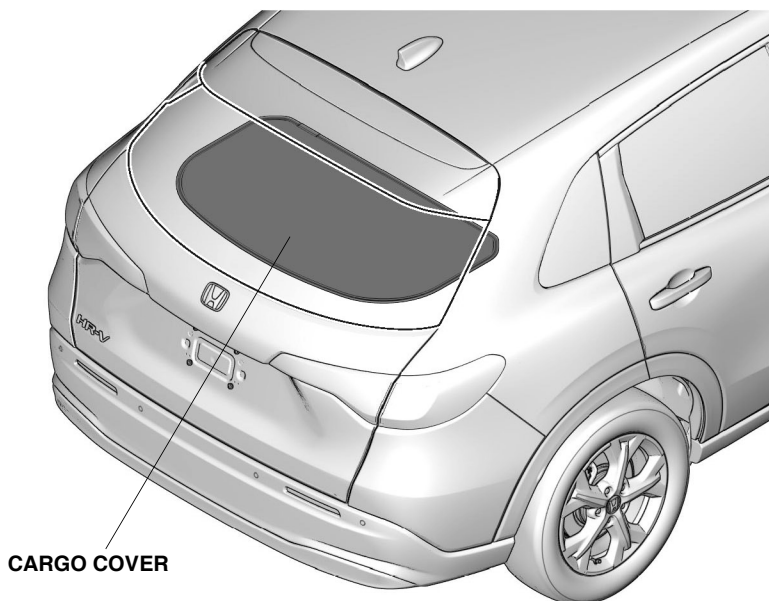

QL52101AG

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of following symbols:

*All symbols are not used in all installation instructions.



DANGER

You will be killed or seriously hurt if you do not follow the instructions.



WARNING

You can be killed or seriously hurt if you do not follow the instructions.



CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.

Germain Honda of College Hills




Indicates a prohibited action.


Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.

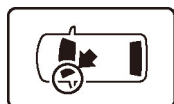

The location on the vehicle.

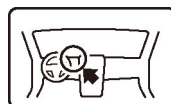

The location in the vehicle.
(instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the customer.
(Do not reuse.)

Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.

Safety: Accessory





- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.

Germain Honda of College Hills

- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle or moisten it for 24 hours to allow the adhesive to cure.

PARTS LIST

Cargo Cover Kit (P/N 08U35-3V0-100)

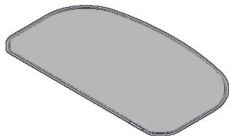Cargo cover	Left front base	Right front base	Left rear base
			


Germain Honda of College Hills

Right rear base

Alcohol wipes (2)



Accessory Honda
Tr

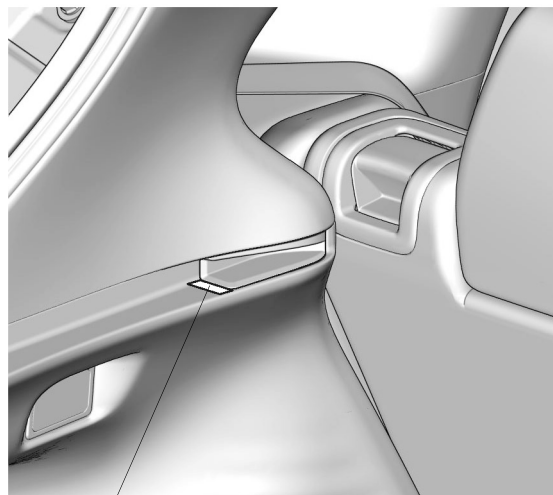

MASKING TAPE


QL52103AG

REQUIRED TOOLS AND SUPPLIES


- Masking tape
- Ruler

INSTALLATION

1. Line up the left front base.




LEFT REAR SIDE TRIM PANEL

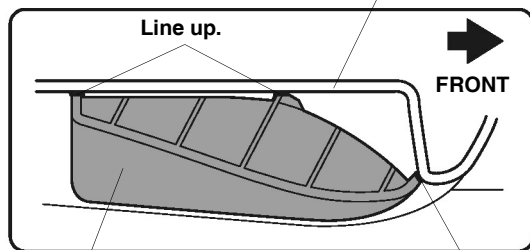

LEFT FRONT BASE

SECTION VIEW

Line up.

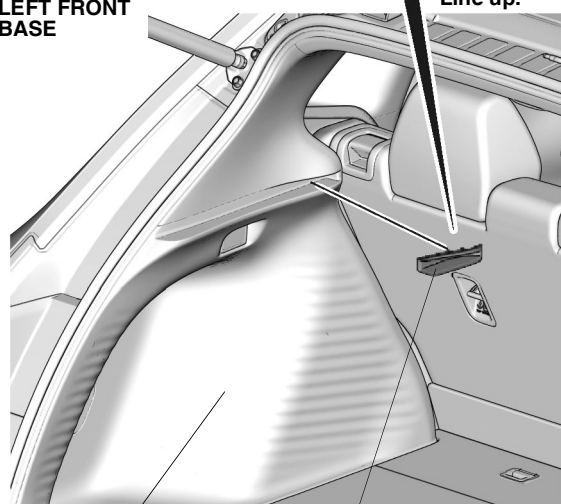


LEFT REAR SIDE TRIM PANEL

LEFT FRONT BASE


QL52102AG

2. Attach masking tape.

3. Remove the left front base.
4. Attach masking tape.

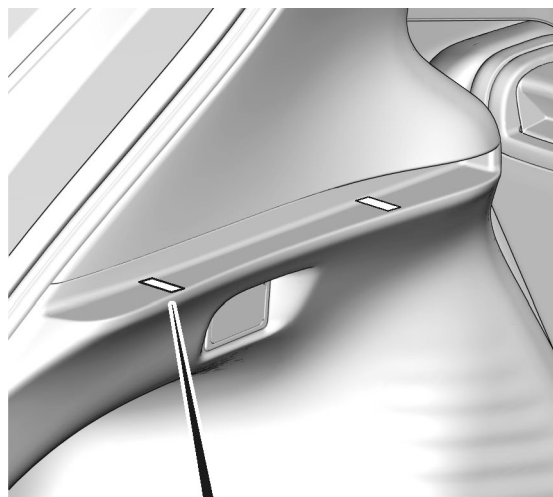

MASKING TAPE

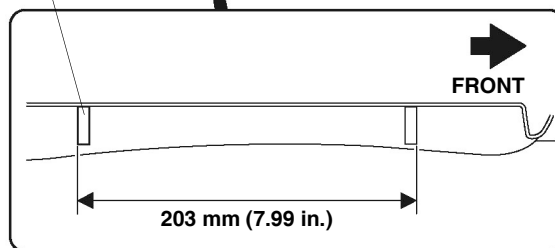


QL52106CG

5. Clean the attaching areas.

Germain Honda of College Hills

NOTE
Allow to dry thoroughly.

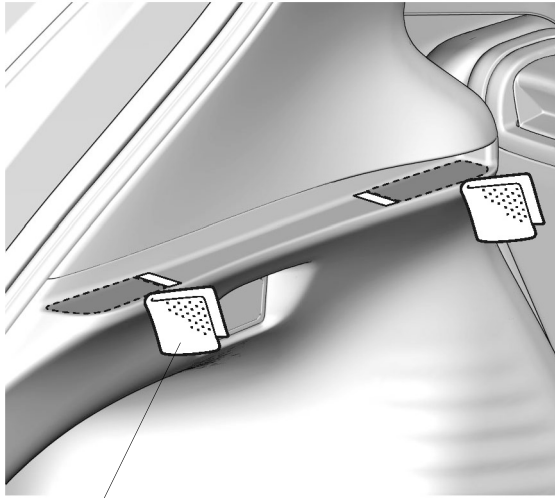


ALCOHOL WIPE

QL52104BG

6. Install the left front base.

NOTE
Check the position of the double-sided adhesive tapes and make sure to press firmly.


Germain Honda of College Hills

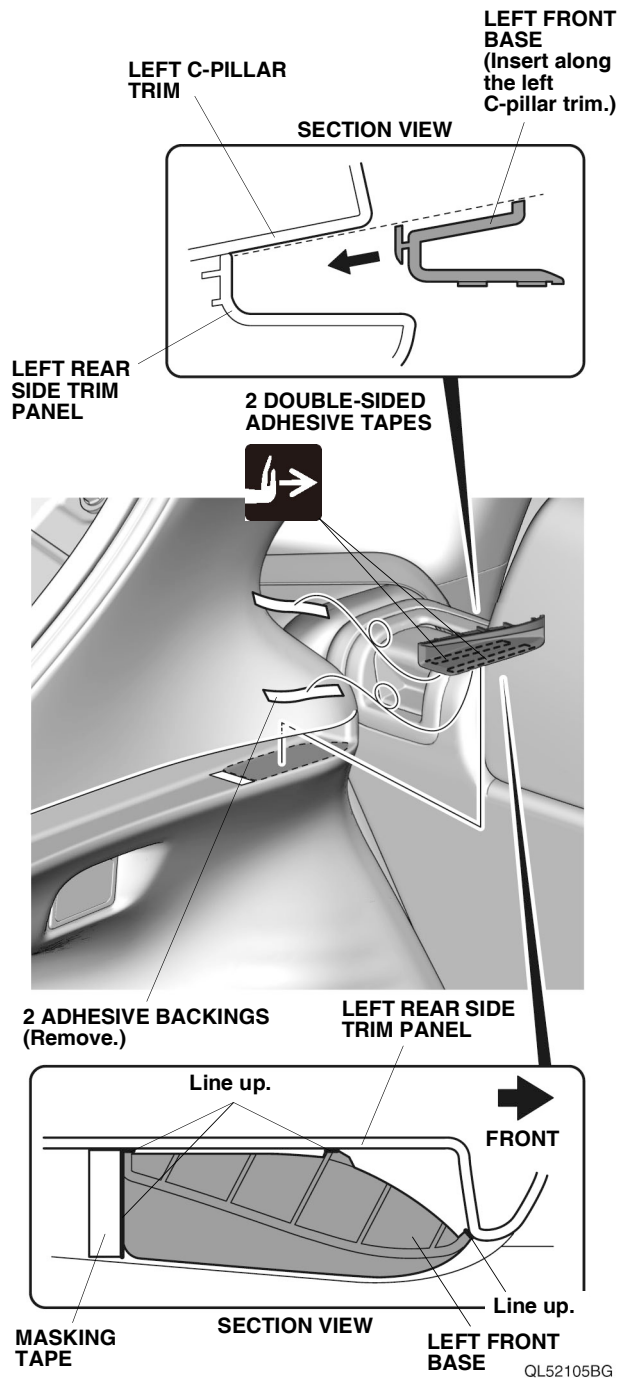


7. Remove the masking tape.
8. Install the left rear base.

NOTE

Check the position of the double-sided adhesive tape and make sure to press firmly.

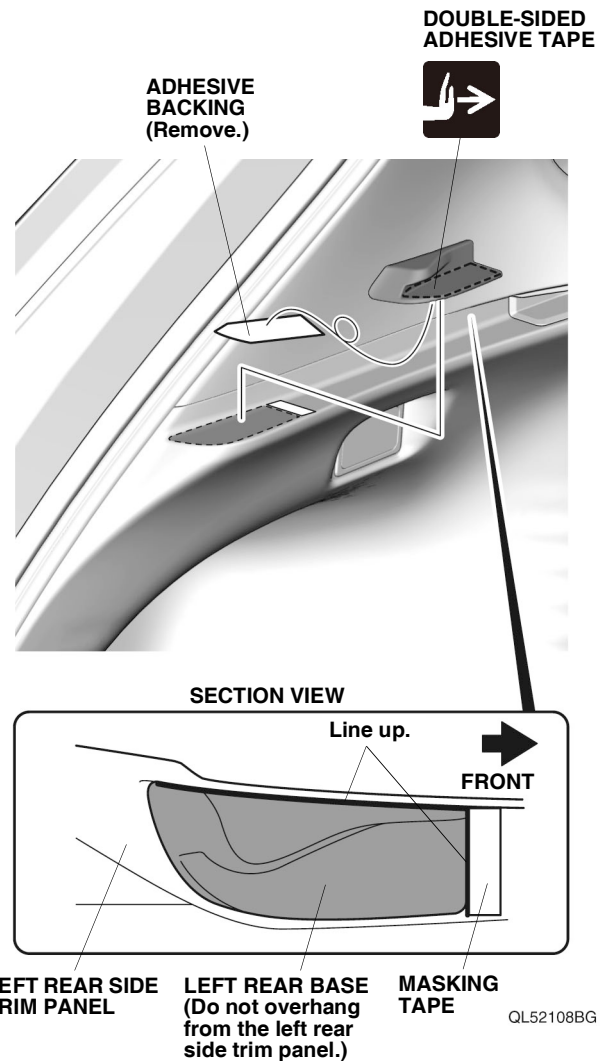

9. Remove the masking tape.
10. Repeat the same procedures on the other side.

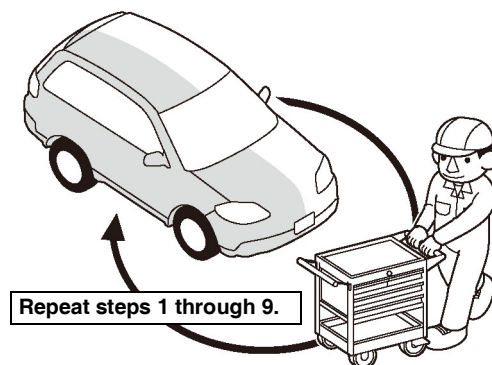


Q9D1014AM

11. Install the cargo cover.


Germain Honda of College Hills

NOTE

Make sure to install the cargo cover in the correct orientation.



LABEL
(back side)

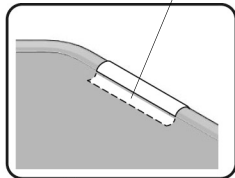


**LEFT FRONT
BASE**

**RIGHT FRONT
BASE**

**RIGHT REAR
BASE**

**LEFT
REAR
BASE**

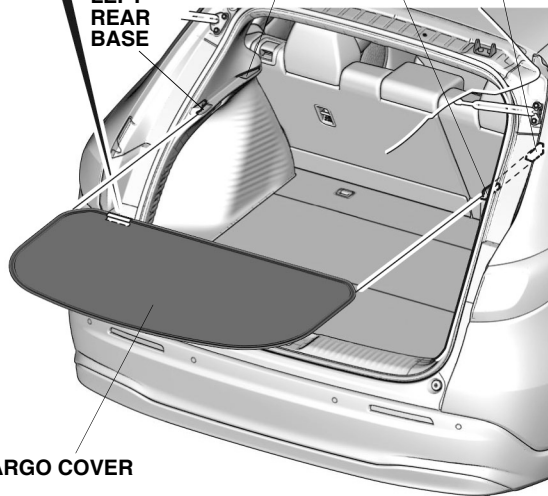

CARGO COVER

QL52109BG

12. Check that all parts are installed properly.
13. Give the Accessory User's Information Manual to the customer.