

Germain Honda of College Hills




INSTALLATION INSTRUCTIONS

Accessory
**DOOR SILL
PROTECTION FILMS**

Application
**2023 HR-V
MODEL SERIES**

Publications No.
VERSION 1
Issue Date
MAY 2022

GENERAL VIEW

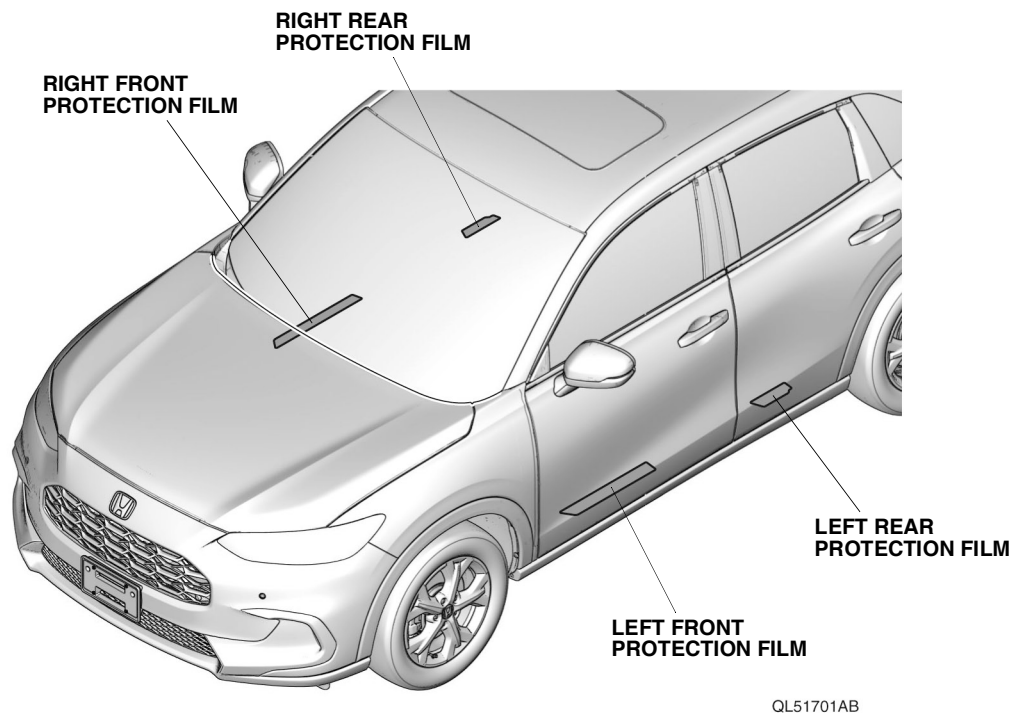

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of following symbols:

*All symbols are not used in all installation instructions.

DANGER

You will be killed or seriously hurt if you do not follow the instructions.

WARNING

You can be killed or seriously hurt if you do not follow the instructions.

CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.

Germain Honda of College Hills




Indicates a prohibited action.


Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.

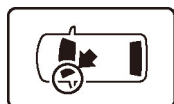

The location on the vehicle.

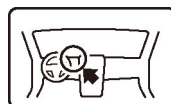

The location in the vehicle.
(instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the customer.
(Do not reuse.)

Safety: General

- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.

Safety: Accessory


- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.

Germain Honda of College Hills

- Cover nearby parts with a shop towel to prevent getting them wet.
- Always wear gloves when working with 3M protective tape application solution.
- Use 3M protective tape application solution with a spray bottle.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

PARTS LIST

Door Sill Protection Films Kit (P/N 08P04-3V0-100)

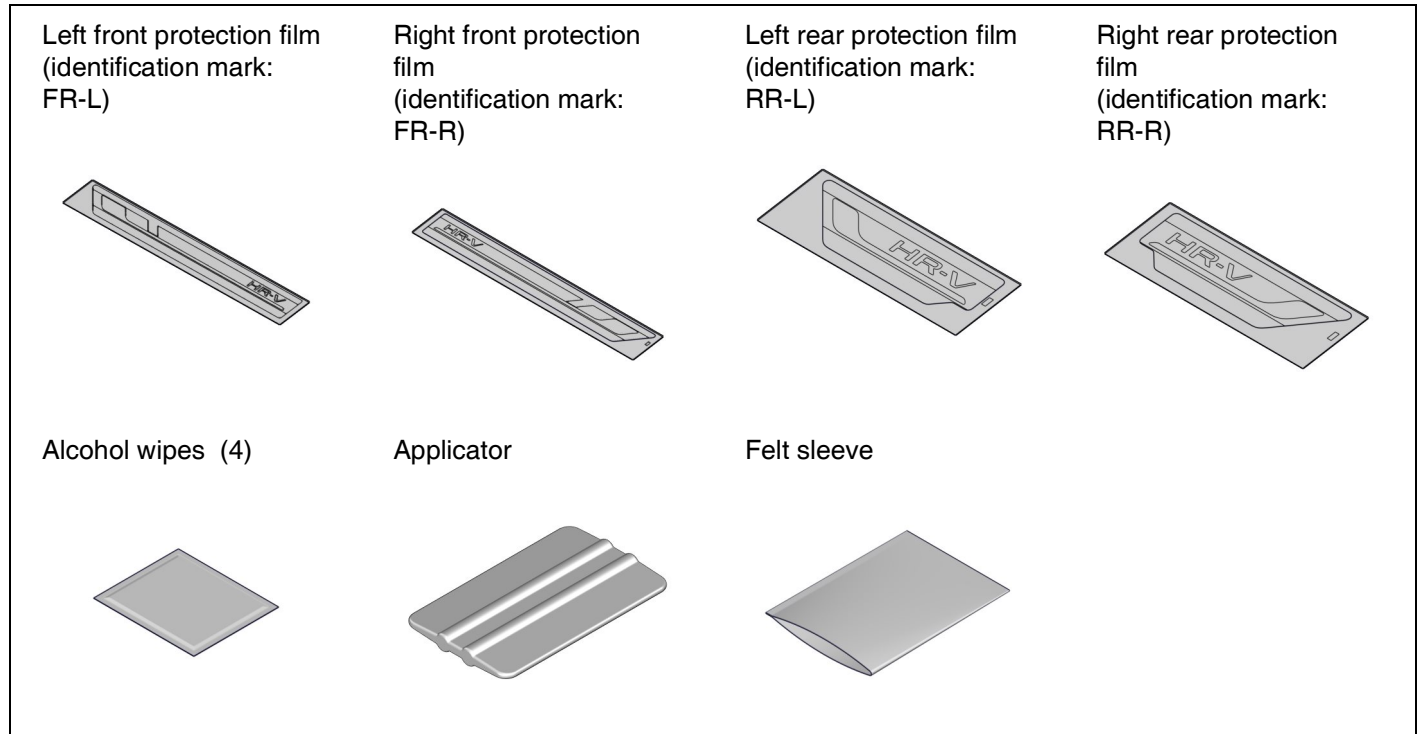


Germain Honda of College Hills

REQUIRED TOOLS AND SUPPLIES

- Shop towel
- Gloves
- Masking tape
- 3M Protective tape application solution

INSTALLATION

1. Open the left front door.

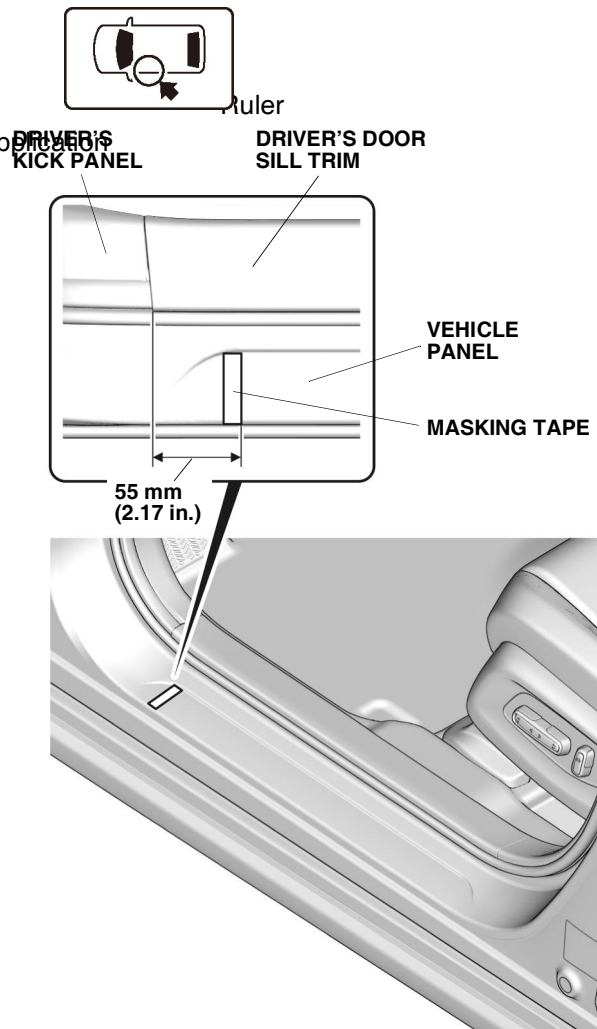


QL51702AB

2. Attach masking tape.
3. Clean the attaching area.

NOTE


Allow to dry thoroughly.

Germain Honda of College Hills

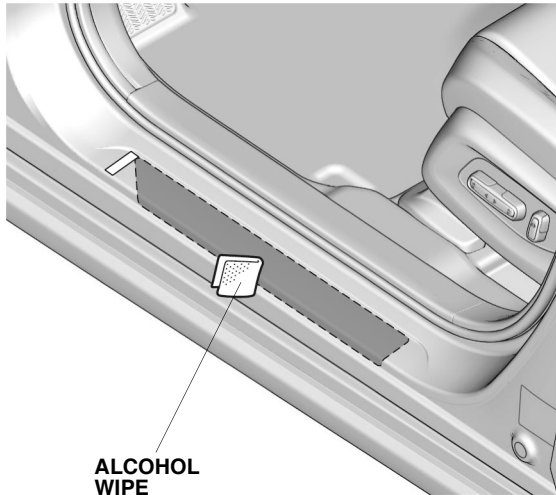

QL51703AB


4. Spray the vehicle panel.

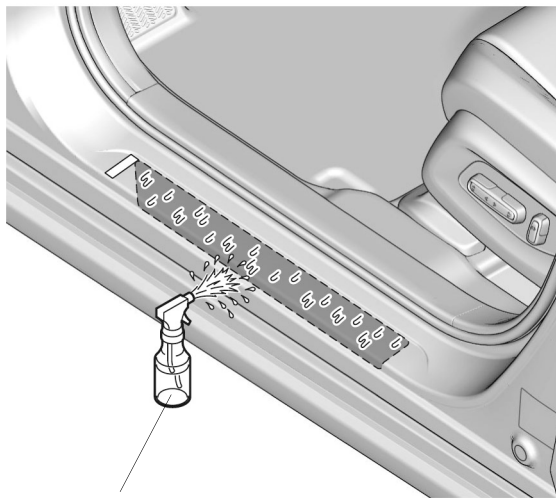

QL51704AB


5. Remove the adhesive backing.

NOTE
Make sure to check the identification mark before installation.

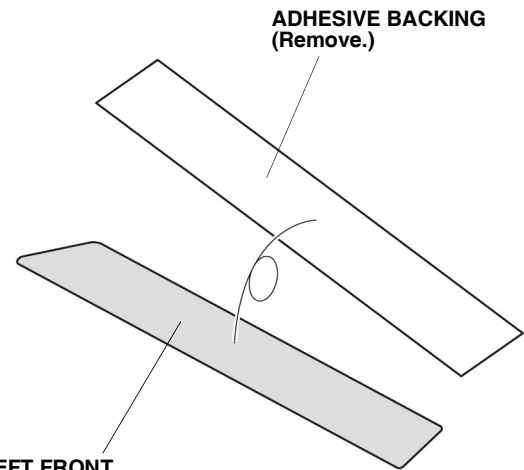

QL51705AB

6. Spray the left front protection film.

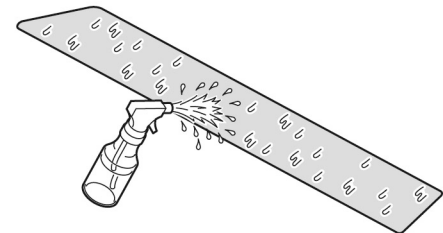


QL51706AB


Germain Honda of College Hills

7. Line up the left front protection film.

MASKING TAPE

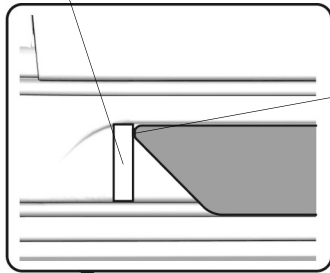

Line up.

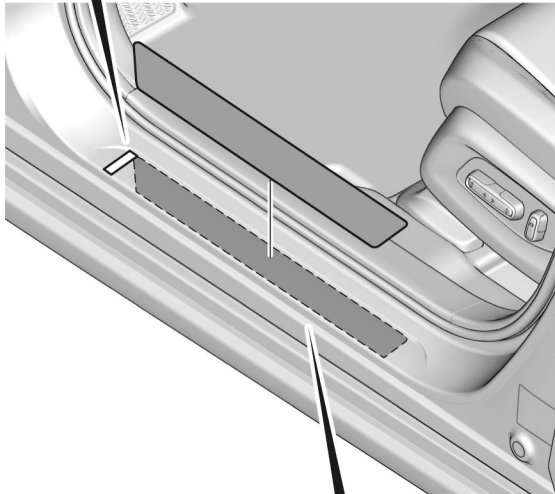

**LEFT FRONT
PROTECTION
FILM**

Line up with
the end of the
curved surface.

**VEHICLE
PANEL**

SECTION VIEW

QL51707AB

8. Secure the left front protection film.



NOTE

Move the felt sleeve in one direction only.


Germain Honda of College Hills

APPLICATOR

FELT SLEEVE

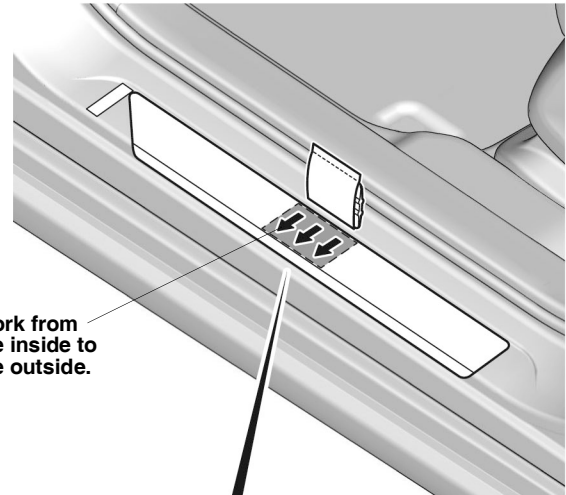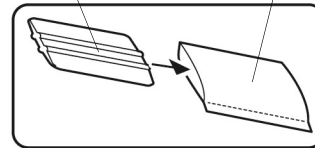


Work from the inside to the outside.

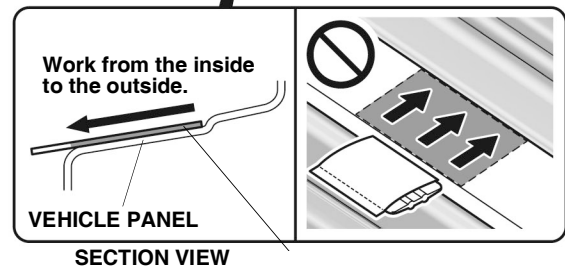

Germain Honda of College Hills

9. Secure the left front protection film.

NOTE
Move the felt sleeve in one direction only.

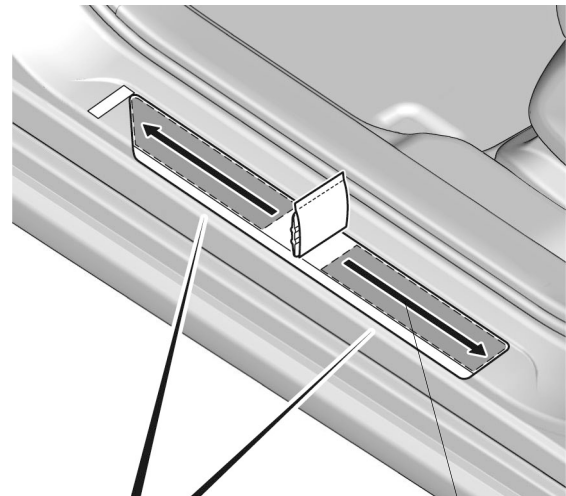


Work from the center
to the outside.

QL51709AB

10. Secure the left front protection film.


NOTE
Move the felt sleeve in one direction only.

Germain Honda of College Hills

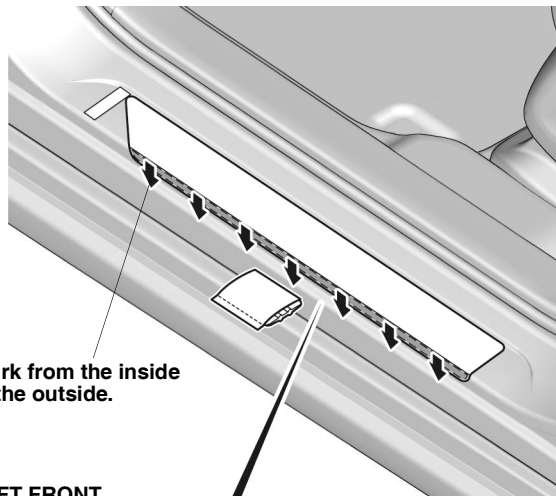

Work from the inside to the outside.

LEFT FRONT PROTECTION FILM

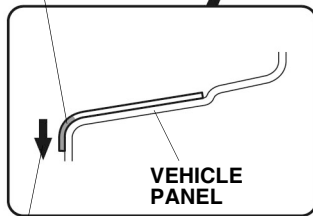

SECTION VIEW


Work from the inside to the outside.

QL51710AB

11. Secure the left front protection film.


NOTE

Move the felt sleeve in one direction only.

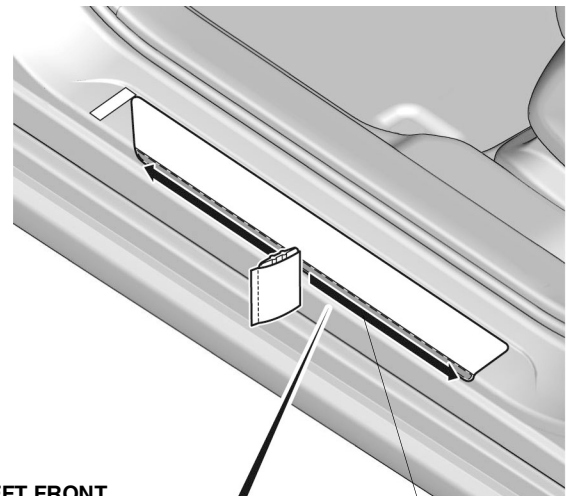

LEFT FRONT PROTECTION FILM

Work from the center to the outside.

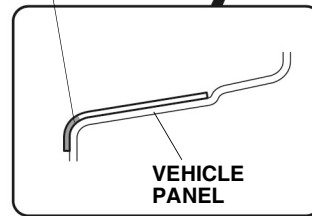

SECTION VIEW


QL51801AB

12. Wipe off the 3M protective tape application solution.

NOTE

Allow to dry thoroughly.



Germain Honda of College Hills

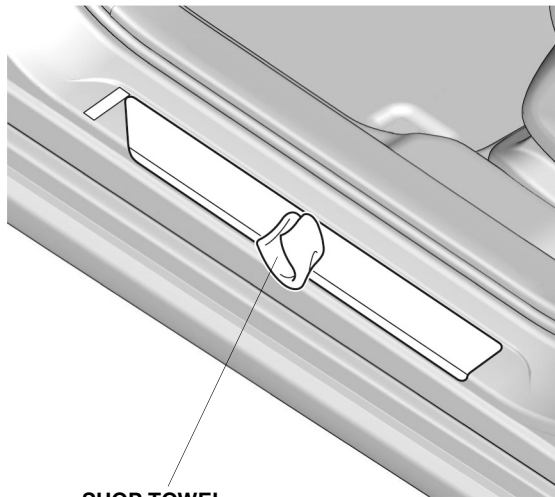

SHOP TOWEL

QL51802AB

13. Remove the masking tape.
14. Open the left rear door.

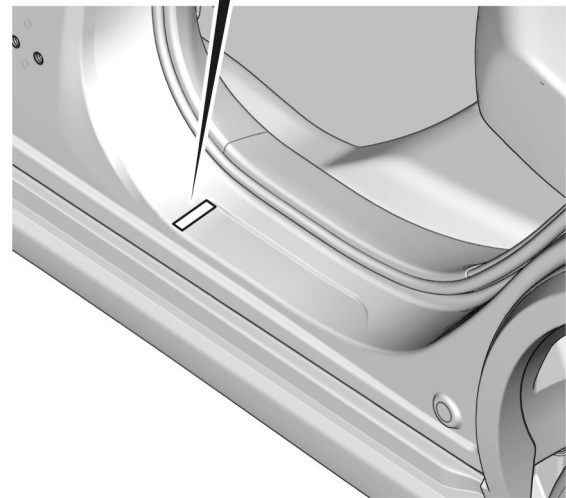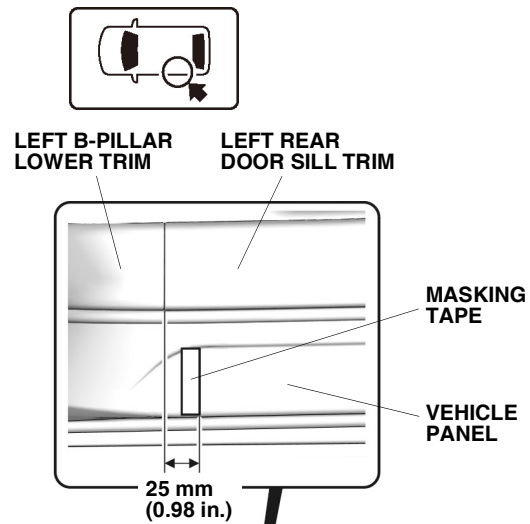


QL51803AB

Germain Honda of College Hills

15. Attach masking tape.
16. Clean the attaching area.


NOTE

Allow to dry thoroughly.

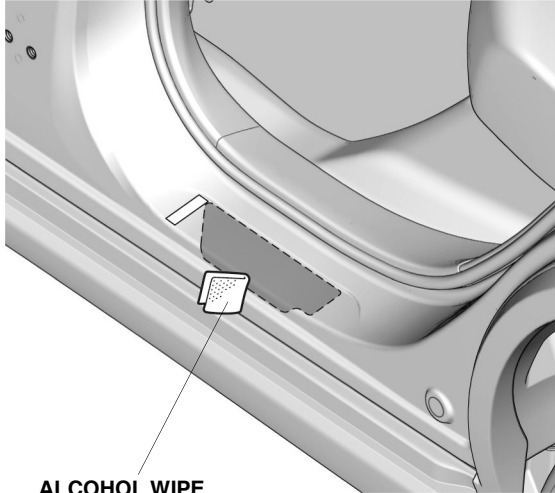

QL51804AB

17. Spray the vehicle panel.

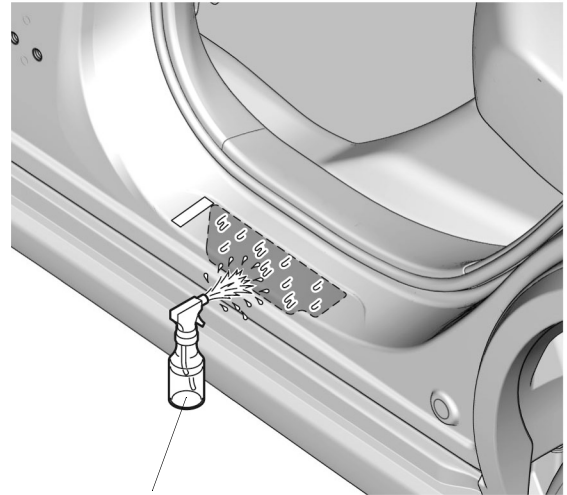

**3M PROTECTIVE TAPE
APPLICATION SOLUTION**


QL51805AB

18. Remove the adhesive backing.

NOTE

Make sure to check the identification mark before installation.

Germain Honda of College Hills

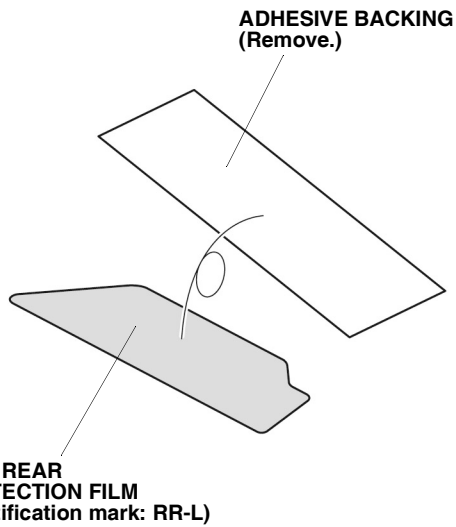

QL51806AB

19. Spray the left rear protection film.




QL51807AB


20. Line up the left rear protection film.

Germain Honda of College Hills

MASKING TAPE

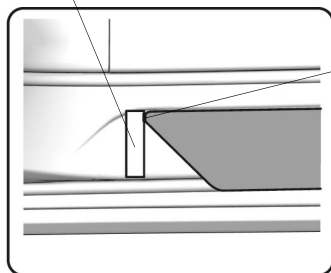

Line up.

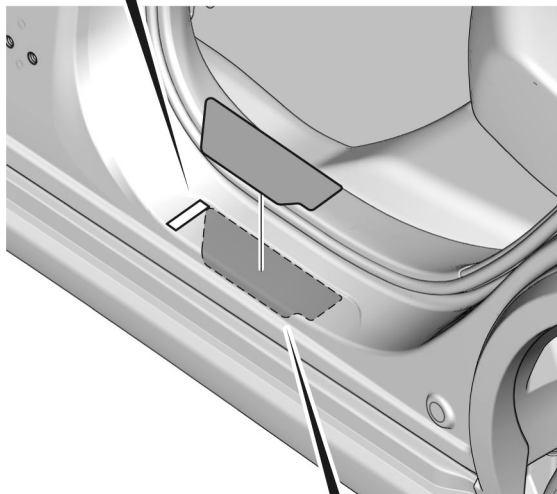

Line up with
the end of the
curved surface.

LEFT REAR
PROTECTION
FILM

VEHICLE
PANEL

SECTION VIEW


QL51808AB

21. Secure the left rear protection film.


NOTE

Move the felt sleeve in one direction only.

FELT SLEEVE

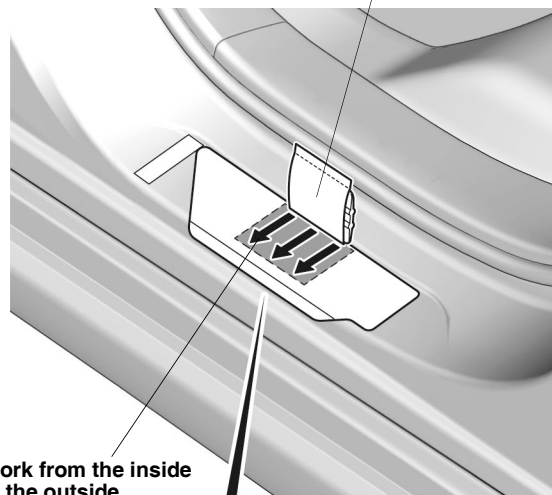

Work from the inside
to the outside.

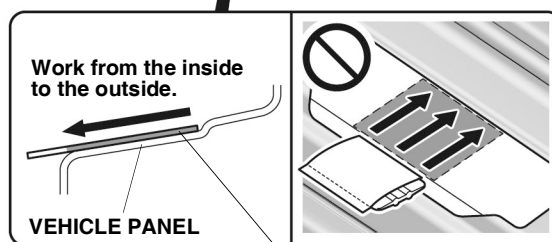

Work from the inside
to the outside.

VEHICLE PANEL

SECTION VIEW

LEFT REAR
PROTECTION FILM


QL51809AB

22. Secure the left rear protection film.


NOTE

Move the felt sleeve in one direction only.

Germain Honda of College Hills

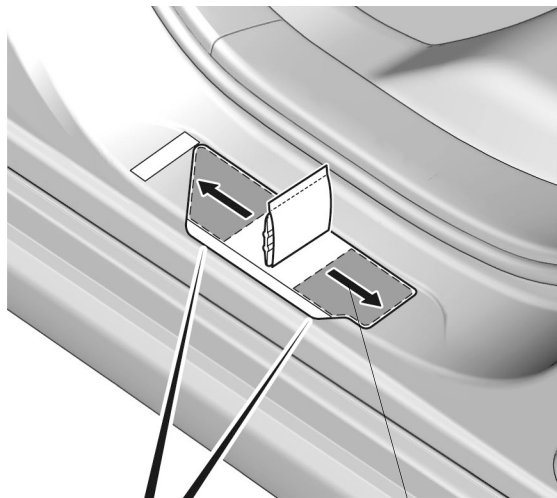

Work from the center
to the outside.

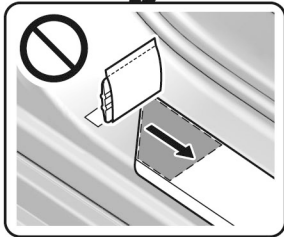


QL51810AB

23. Secure the left rear protection film.


NOTE

Move the felt sleeve in one direction only.

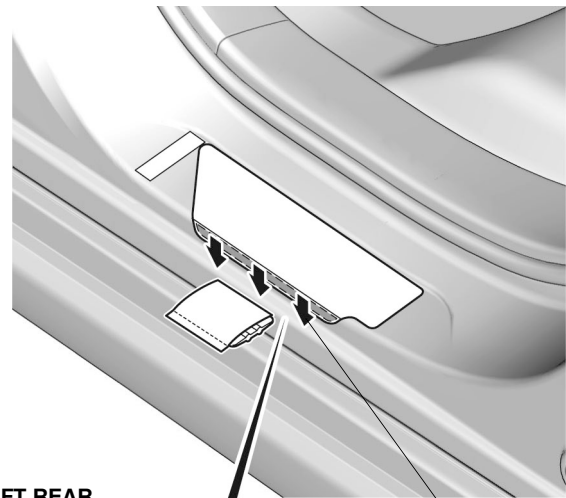

LEFT REAR
PROTECTION FILM

Work from the inside
to the outside.

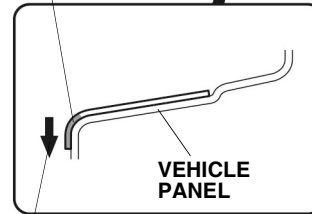

SECTION VIEW

Work from the inside
to the outside.

VEHICLE
PANEL


QL51811AB

24. Secure the left rear protection film.


NOTE

Move the felt sleeve in one direction only.

Germain Honda of College Hills

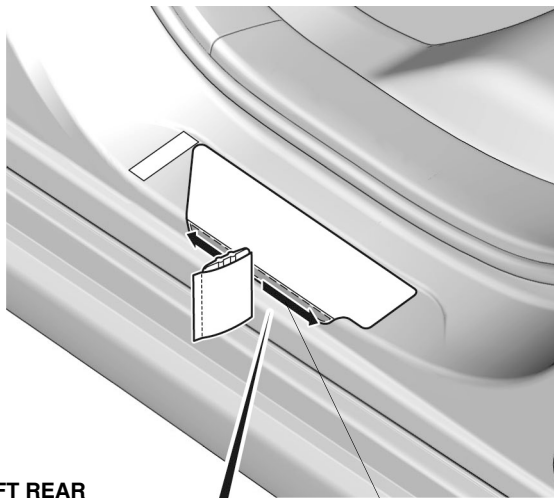

LEFT REAR
PROTECTION FILM

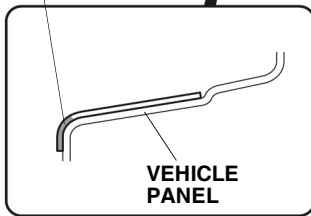

VEHICLE
PANEL


SECTION VIEW

Work from
the center to
the outside.

QL51812AB

25. Wipe off the 3M protective tape application solution.


NOTE
Allow to dry thoroughly.

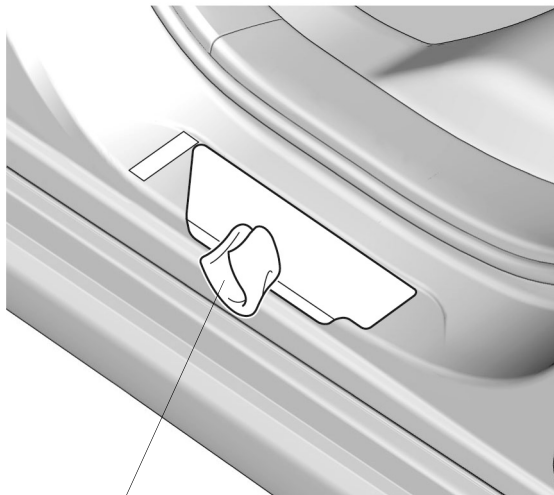

SHOP TOWEL

QL51813AB

26. Remove the masking tape.
27. Repeat the same procedures on the other side.

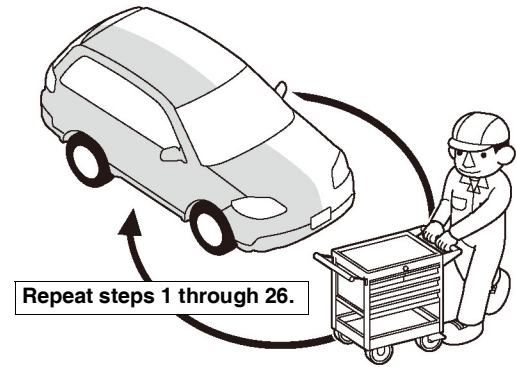

Q9D1014AM

28. Check that all parts are installed properly.