INSTALLATION INSTRUCTIONS


FRONT BUMPER TRIM

Application

2023 HR-V **MODEL SERIES** Publications No. **VERSION 1**

> Issue Date **MAY 2022**

GENERAL VIEW

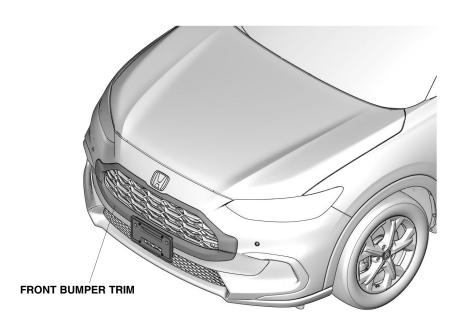

QL60101AG

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of following symbols:

^{*}All symbols are not used in all installation instructions.

A DANGER	You will be killed or seriously hurt if you do not follow the instructions.
A WARNING	You can be killed or seriously hurt if you do not follow the instructions.
A CAUTION	You can be hurt if you do not follow the instructions.
NOTICE	Gives advice to prevent damage to the product, vehicle, the environment or other property.
NOTE	Gives helpful information or instructions to be followed when installing this product.



Indicates a prohibited action.

Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle. (instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the customer. (Do not reuse.)


Wire Harness Routing Precaution



Do not secure the accessory harness to the SRS harness. (except for instruction cases.)



Push the connectors and terminals together until they lock.



Do not pull the harness to unplug the connectors.



Install removed connectors in their original location.



Do not pull the harness.




Secure the accessory harness as shown.





Do not pinch the harness.



Cut off the excess wire tie.

Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and the safety of others.
- Be careful not to damage the vehicle or the parts.
- Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- · The illustrations may differ slightly from the actual accessory.

Safety: Electric Parts


Always disconnect the negative cable from the battery before beginning work.

Safety: Accessory

- Always use the parts and tools specified in the installation instructions.
- · Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

PARTS LIST

Front Bumper Trim Kit (P/N 08F23-3V0-100A)

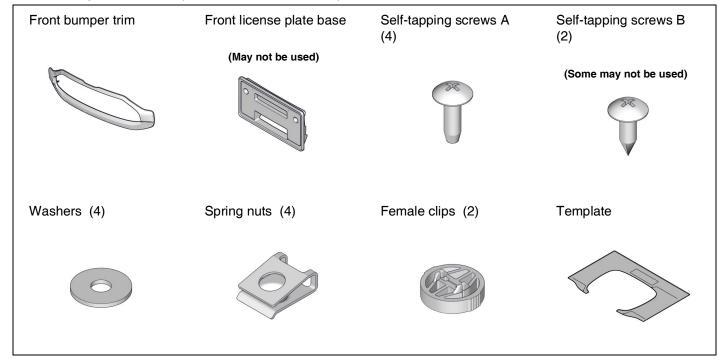

Alcohol wipes (2)

REQUIRED TOOLS AND SUPPLIES


- Phillips screwdriver
- · Shop towel
- File
- 3 mm and 7 mm Drill bits
- Stubby Phillips screwdriver
- · Masking tape
- Pushpin
- 12 mm and 30 mm Hole saws
- 10 mm Open end wrench
- Blanket
- Drill
- Eye protection (face shield, safety goggles, etc.)


The following tools are available through the Honda Tool and Equipment Program:


- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10) Rubber Roller (T/N MHLE54D)

INSTALLATION

1. Disconnect the negative cable from the battery.








QCD0502BM


2. Wrap a shop towel.

NOTE

Do not remove the shop towel until after the parts are installed.

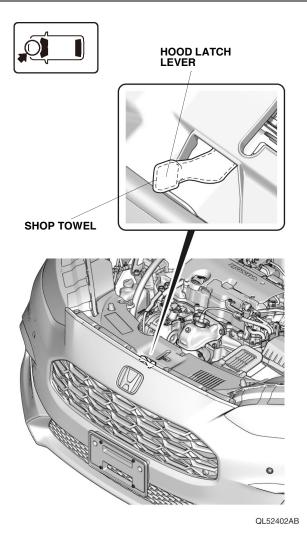


3. Remove the front bulkhead cover.

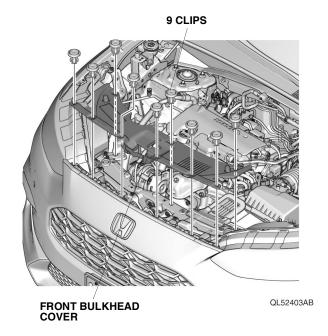


4. Remove the self-tapping screws and clips.



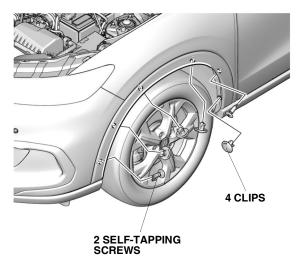


QL52404AB

5. Remove the left front wheel arch protector.

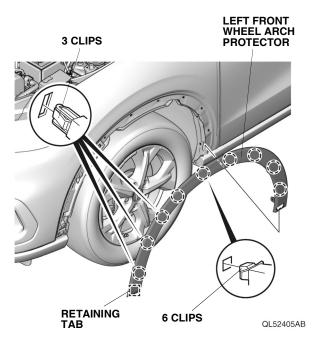


6. Repeat the same procedures on the other side.

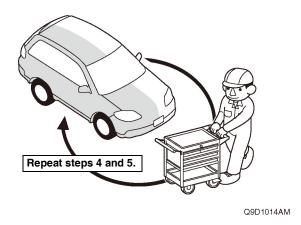


7. Attach masking tape to protect the vehicle.


NOTE

Do not remove the masking tape until after the parts are installed.

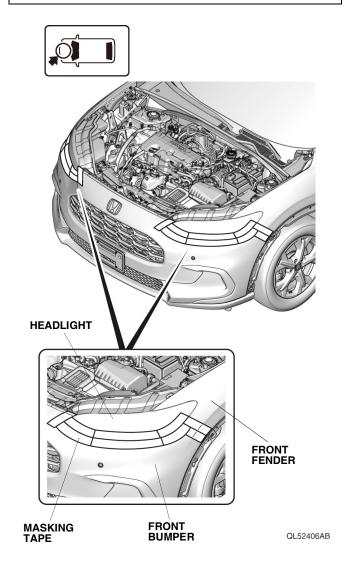

8. Remove the self-tapping screws and clips.

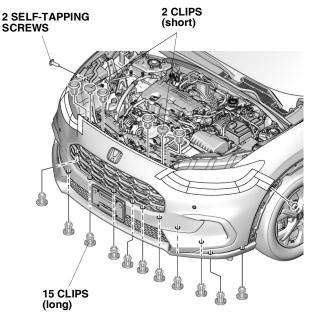


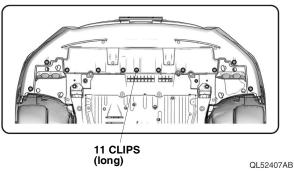

Release the retaining tabs.

NOTE

- Release the retaining tabs starting from outside working in.
- Make sure to release the retaining tabs in the correct orientation.

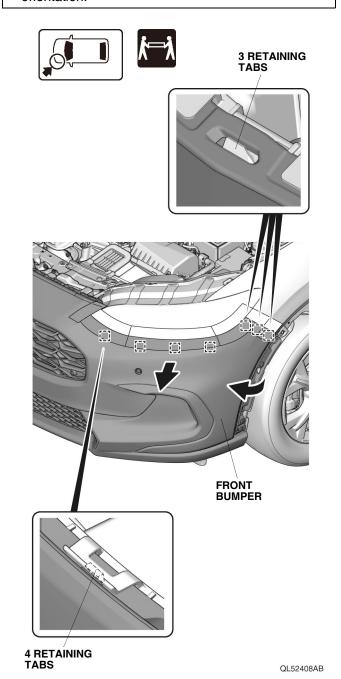


10. Repeat step 9 on the other side.

11. Remove the front bumper.









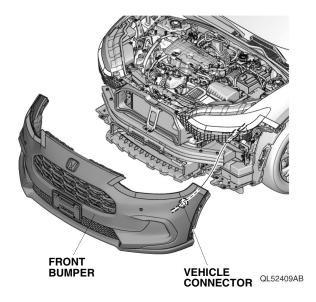


Choose one of these options.




13. Remove the front license plate base.

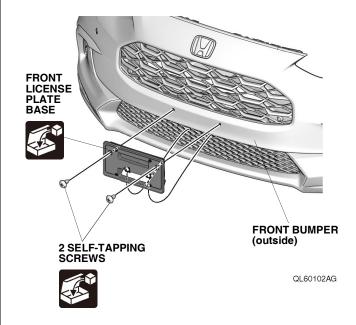

14. Pierce the front bumper.

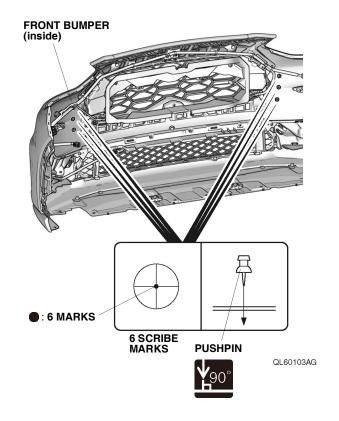


15. Drill the front bumper.

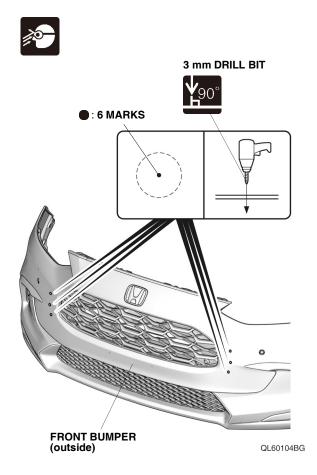


16. Drill the front bumper.


NOTE Make sure to drill the correct positions.

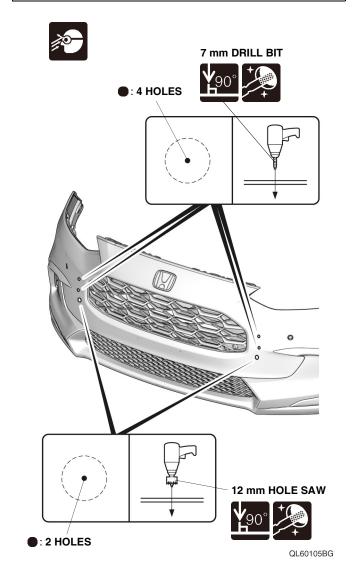


17. Secure the template.

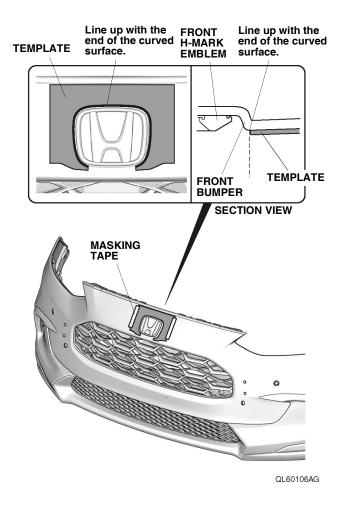


18. Choose one of these options.




19. Pierce the front bumper trim.

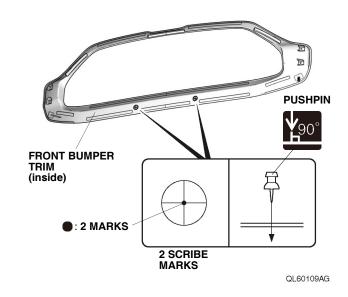

20. Drill the front bumper trim.

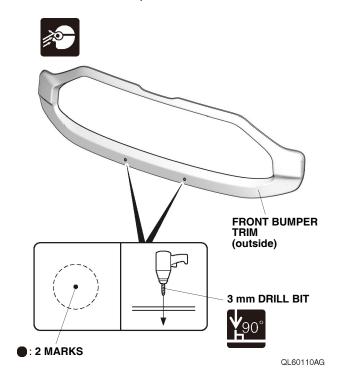


21. Drill the front bumper trim.

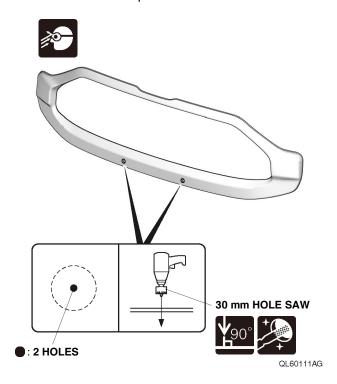

22. Install the spring nuts.

NOTE


Make sure to install the spring nuts in the correct orientation.

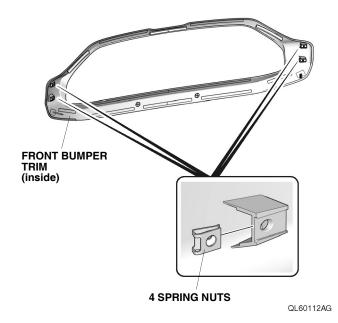

23. Clean the attaching area.


NOTE

- Any oil or dirt remaining on the front bumper will affect the performance of the adhesive tape, which could cause gaps or trim lifting.
- Allow to dry thoroughly.

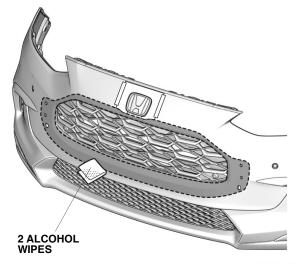


QL60114BG

24. Temporarily attach the adhesive backings.

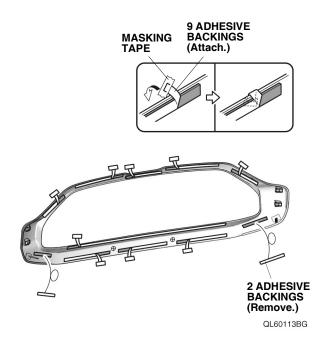

25. Remove the adhesive backings.


26. Install the front bumper trim.

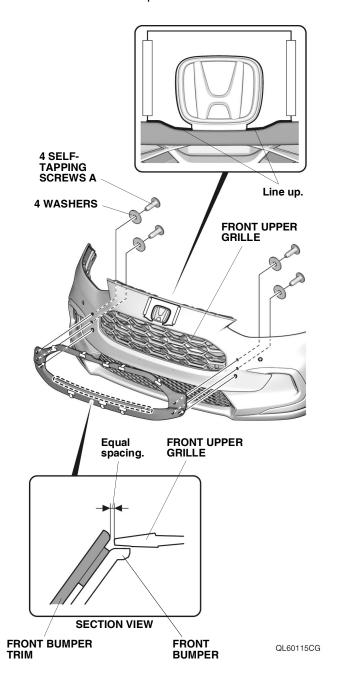

27. Secure the front bumper trim.

NOTE

- · Secure in the order shown.
- Check the position of the double-sided adhesive tapes and make sure to press firmly.

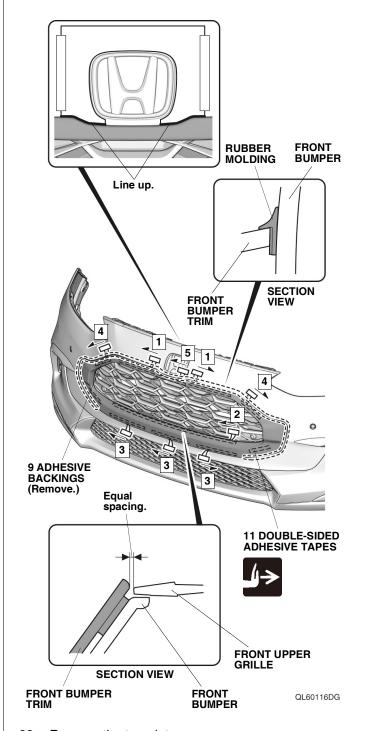


28. Remove the template.


29. Secure the front bumper trim.

NOTE


Do not push the female clips too tight; you could deform the front bumper trim. If necessary, readjust the female clips.

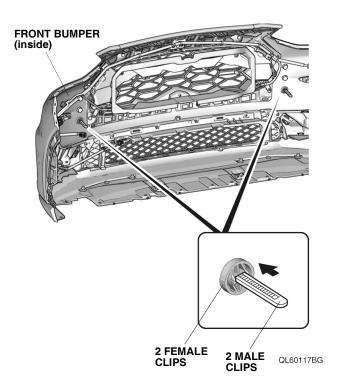


30. Secure the front bumper trim.

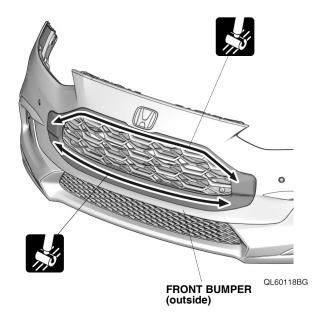

31. Choose one of these options.



32. Install the front license plate base.

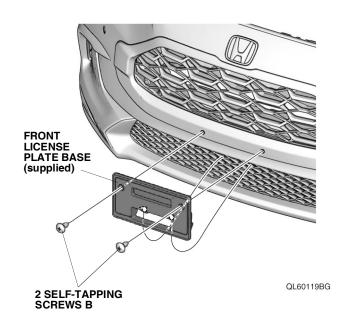

33. Check that all parts are installed and properly routed.

NOTE

- Check that all harnesses are not pulled or pinched.
- Make sure all clips and wire ties are securely installed.
- 34. Install all removed parts.
- 35. Connect the negative cable to the battery.



- Make sure all accessories and systems operate properly.
- 37. If necessary, restore the systems back to normal operation as described in the service information.
- 38. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.