

Germain Honda of College Hills




INSTALLATION INSTRUCTIONS

Accessory
GRAPHIC DECALS

Application
**2023 HR-V
MODEL SERIES**

Publications No.
VERSION 1
Issue Date
MAY 2022

GENERAL VIEW

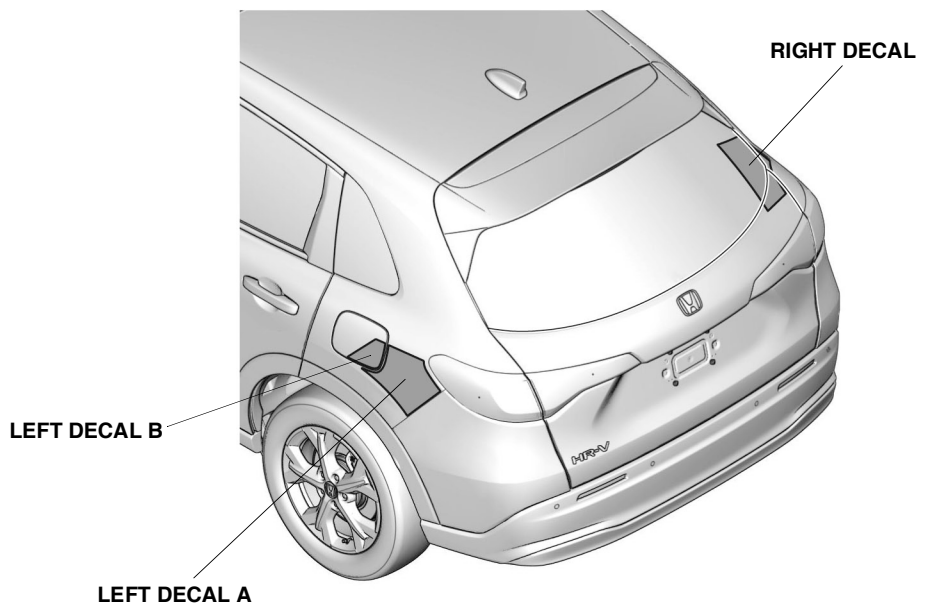

QL60801AB

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of following symbols:

*All symbols are not used in all installation instructions.

⚠ DANGER

You will be killed or seriously hurt if you do not follow the instructions.

⚠ WARNING

You can be killed or seriously hurt if you do not follow the instructions.

⚠ CAUTION

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.




Indicates a prohibited action.

Germain Honda of College Hills


Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle.
(instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the customer.
(Do not reuse.)

Safety: General

- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.


Safety: Accessory

- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Cover nearby parts with a shop towel to prevent getting them wet.
- Always wear gloves when working with 3M protective tape application solution.
- Use 3M protective tape application solution with a spray bottle.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

Germain Honda of College Hills

PARTS LIST

Graphic Decals Kit (P/N 08F30-3V0-100)

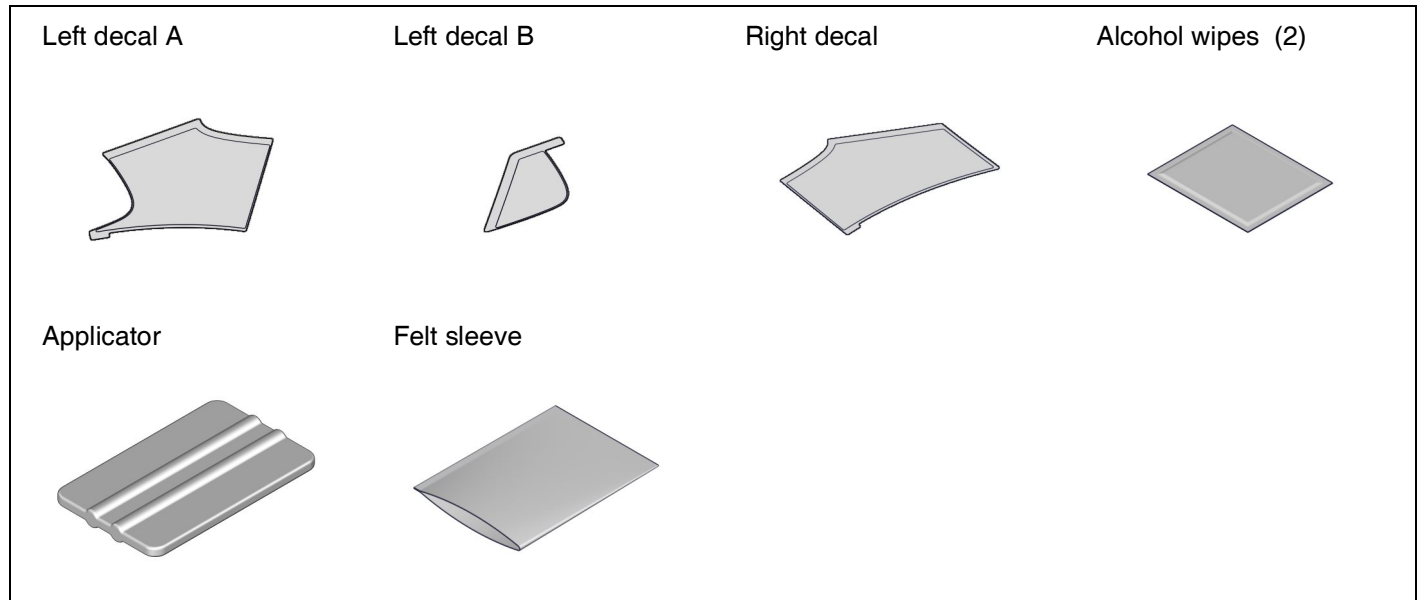

REQUIRED TOOLS AND SUPPLIES

- Shop towel
- Gloves
- 3M Protective tape application solution


Germain Honda of College Hills

INSTALLATION

1. Clean the attaching areas.


NOTE

Allow to dry thoroughly.



FUEL LID


LEFT REAR FENDER

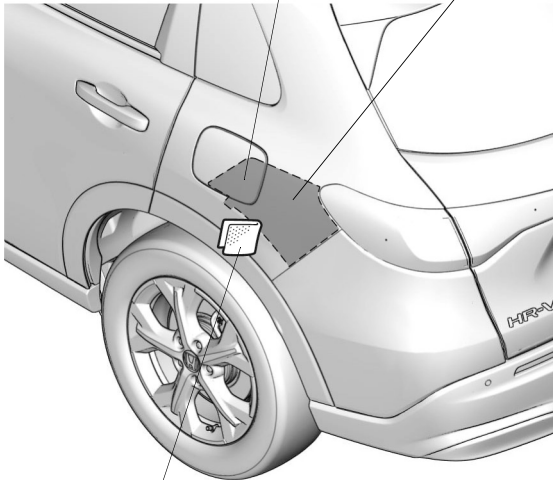

ALCOHOL WIPE

QL60802AB

2. Spray the left rear fender.

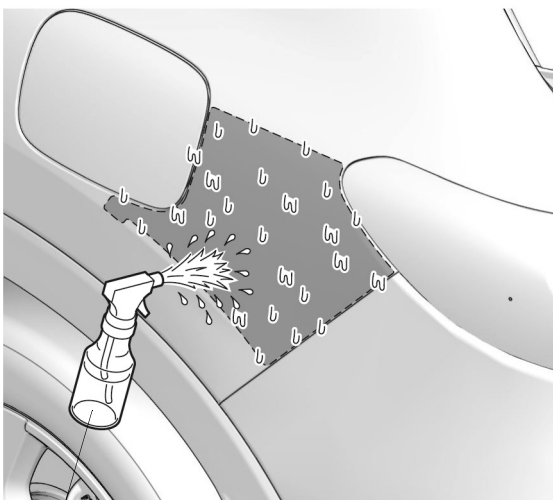


3M PROTECTIVE TAPE
APPLICATION SOLUTION

QL60803AB

3. Remove the adhesive backing.


ADHESIVE
BACKING
(Remove.)

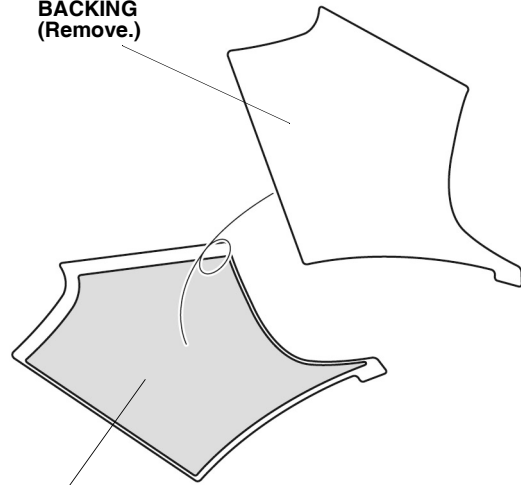

LEFT DECAL A

QL60804AB


4. Spray the left decal A.

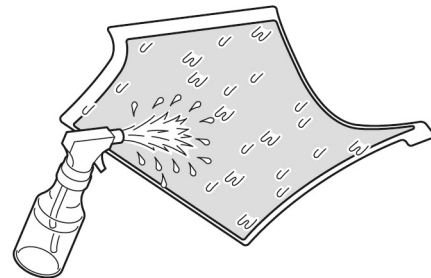

QL60805AB

Germain Honda of College Hills

5. Line up the left decal A.


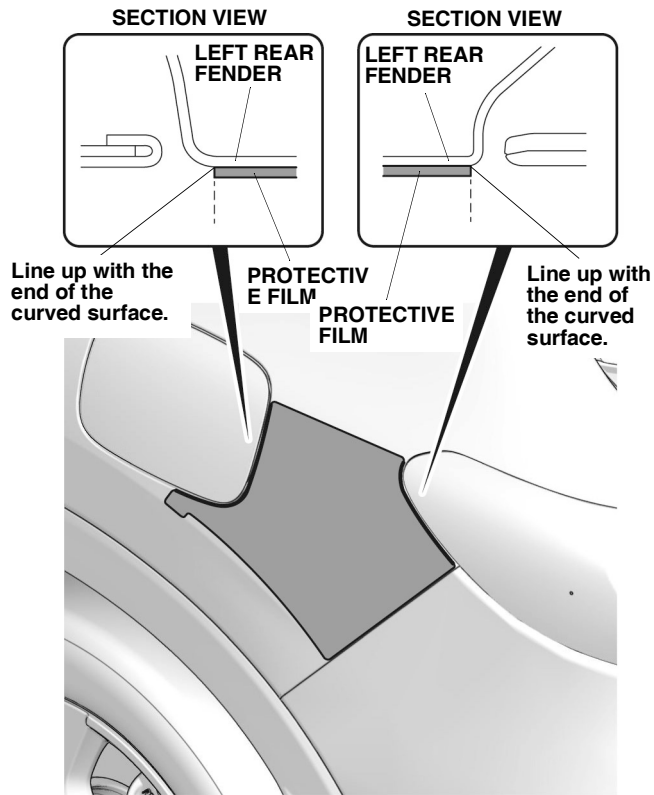


QL60806AB

6. Secure the left decal A.

NOTE

Move the felt sleeve in one direction only.

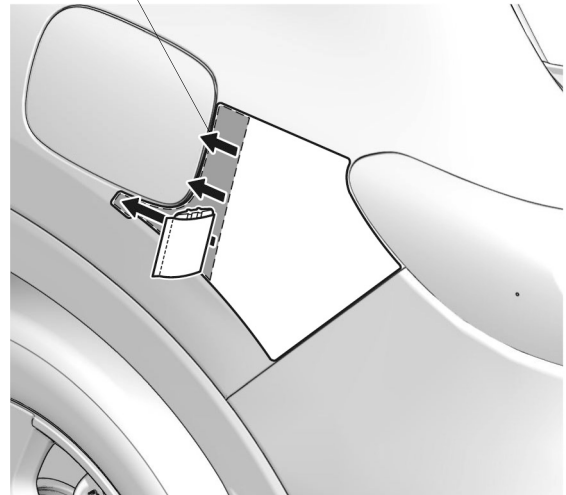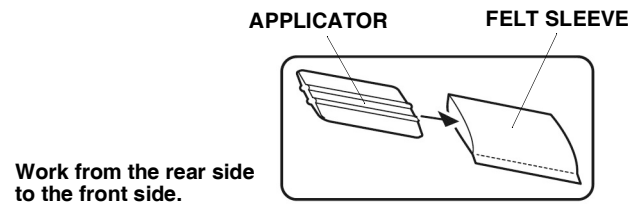

QL60807BB


Germain Honda of College Hills

7. Secure the left decal A.

NOTE

Move the felt sleeve in one direction only.

Work from the front
side to the rear side.

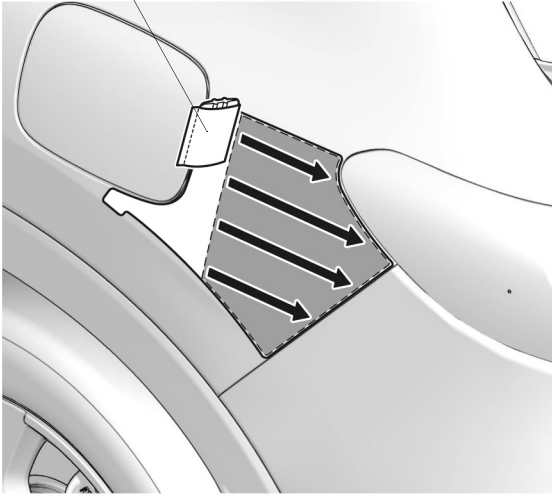



QL60808AB

8. Remove the protective film.

NOTE

Do not pull up on the protective film.

PROTECTIVE FILM
(Remove.)

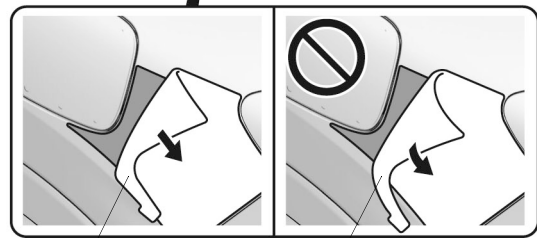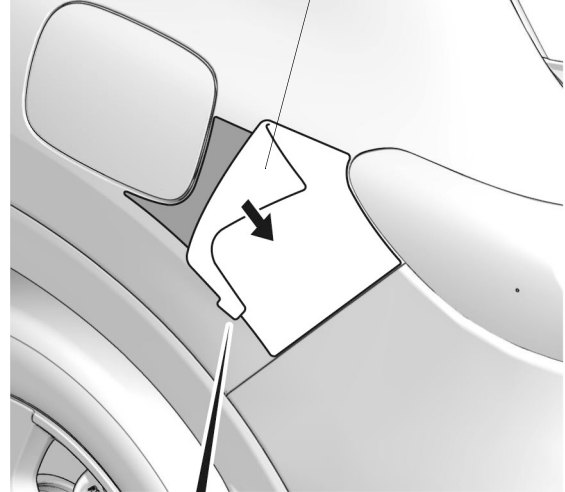


Peel along the
left decal A.

Do not pull up.

QL60809AB


9. Spray the fuel lid.

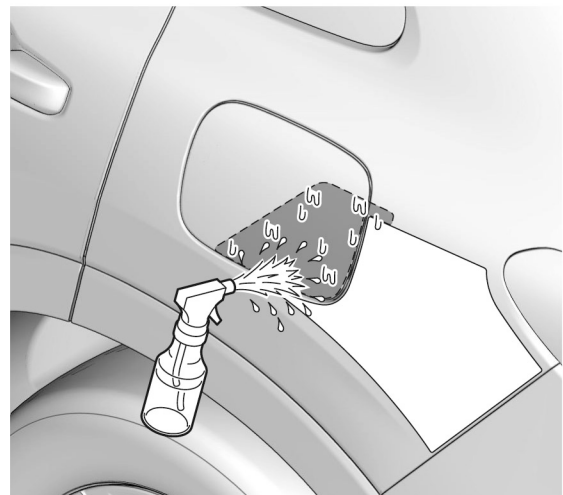


QL60901AB

Germain Honda of College Hills


10. Remove the adhesive backing.

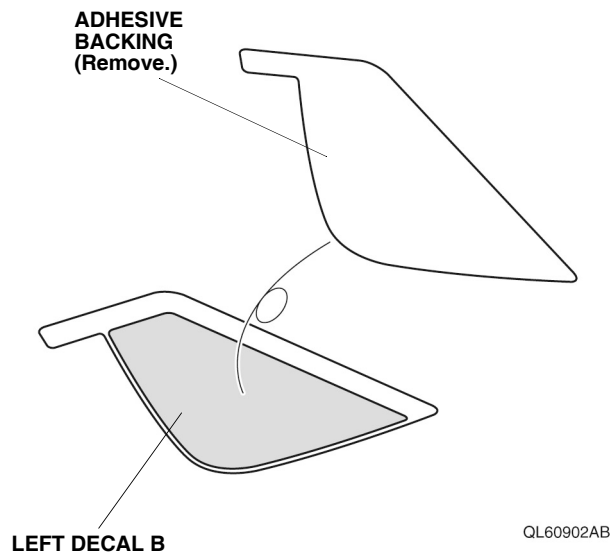

11. Spray the left decal B.

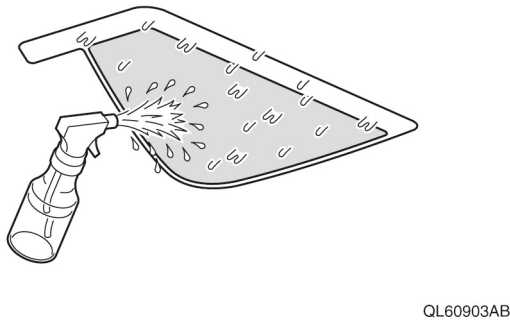

12. Line up the left decal B.

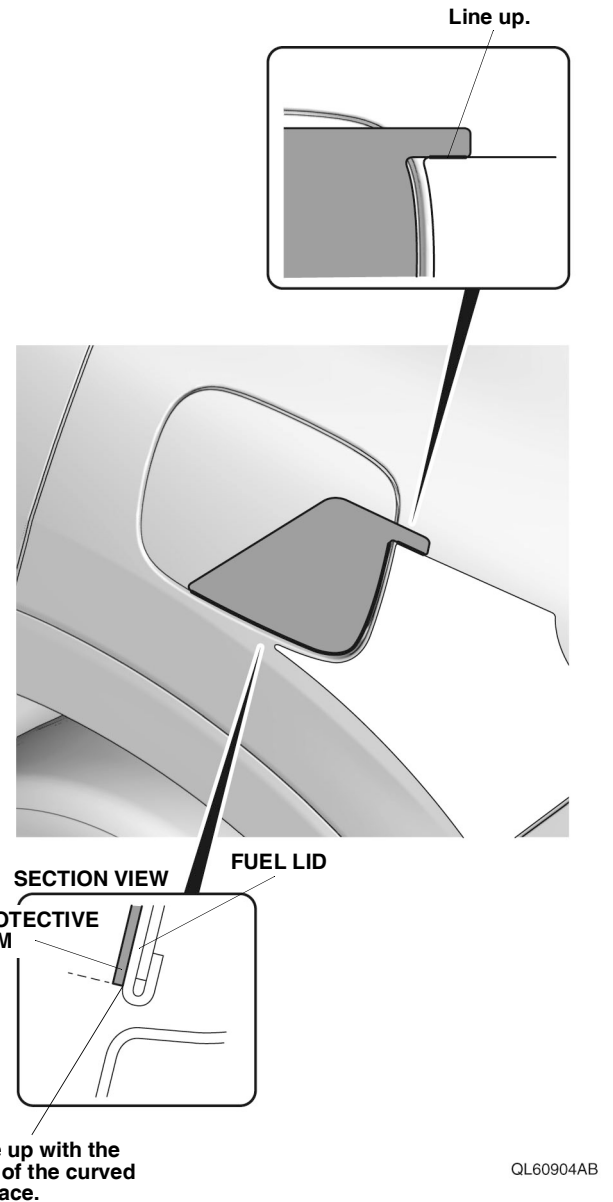


Germain Honda of College Hills

13. Secure the left decal B.

NOTE

Move the felt sleeve in one direction only.

Work from the upper side
to the lower side.

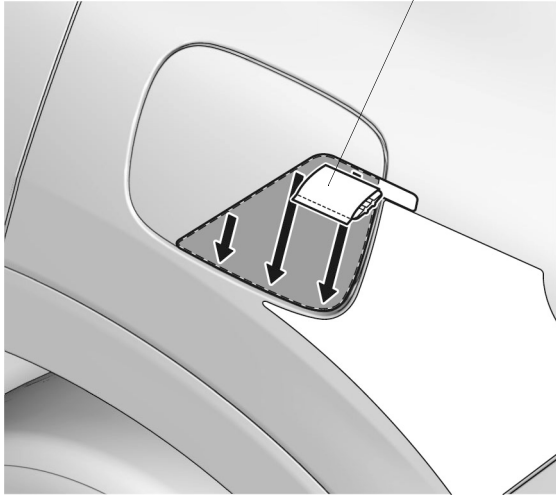



QL60905AB

14. Remove the protective film.

NOTE

Do not pull up on the protective film.

PROTECTIVE FILM
(Remove.)

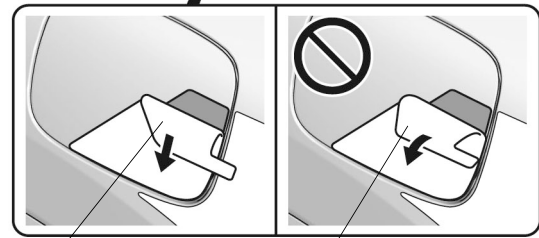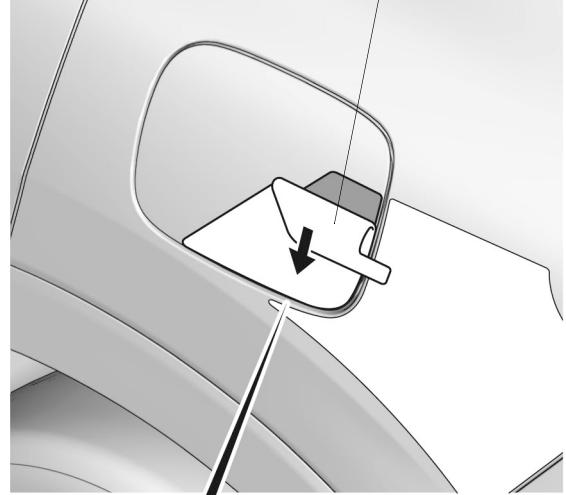

Peel along the
left decal B.

Do not pull up.


QL60906AB

Germain Honda of College Hills

15. Wipe off the 3M protective tape application solution.

NOTE

Allow to dry thoroughly.

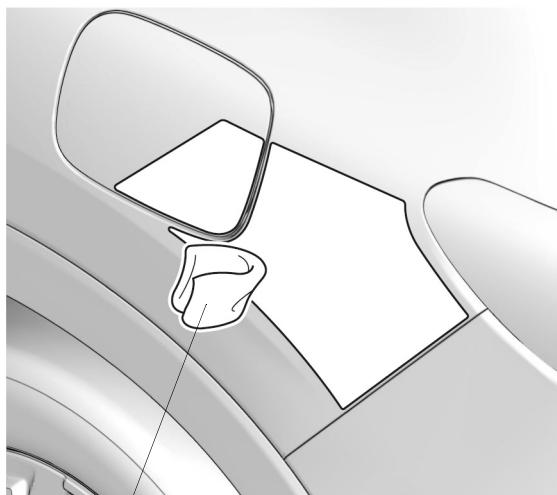


SHOP TOWEL

QL60907AB


16. Clean the attaching area.

NOTE

Allow to dry thoroughly.




RIGHT REAR
FENDER

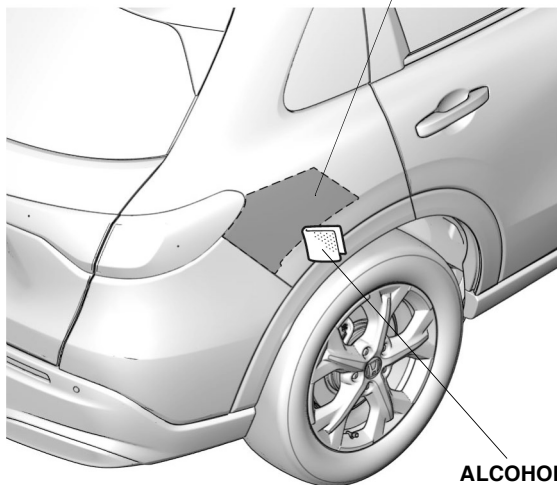

ALCOHOL
WIPE

QL61001AB

17. Spray the right rear fender.

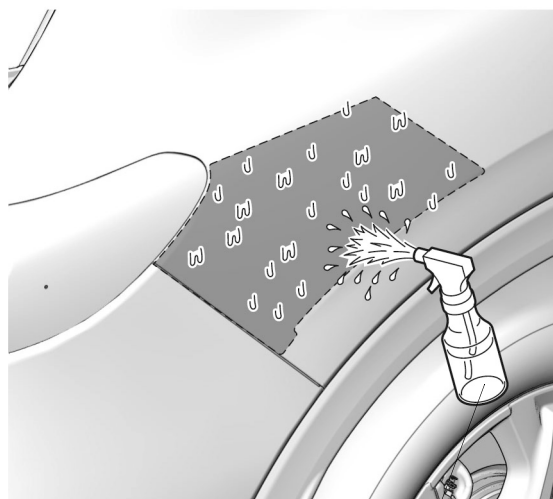


QL61002AB

3M PROTECTIVE TAPE
APPLICATION SOLUTION

18. Remove the adhesive backing.

ADHESIVE
BACKING
(Remove.)

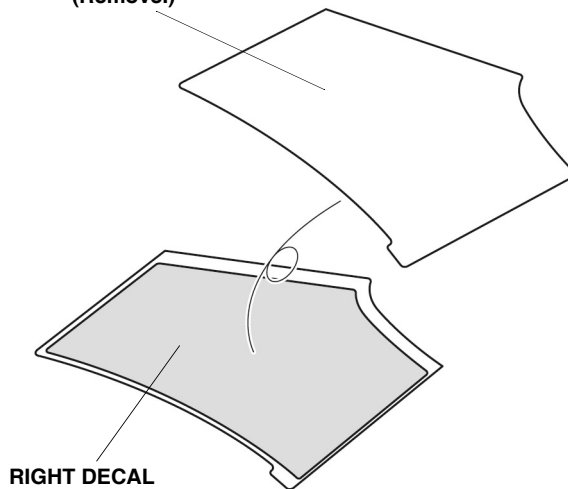


RIGHT DECAL

QL61003AB



Germain Honda of College Hills

19. Spray the right decal.

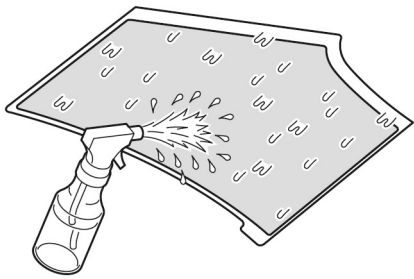

QL61004AB

20. Line up the right decal.

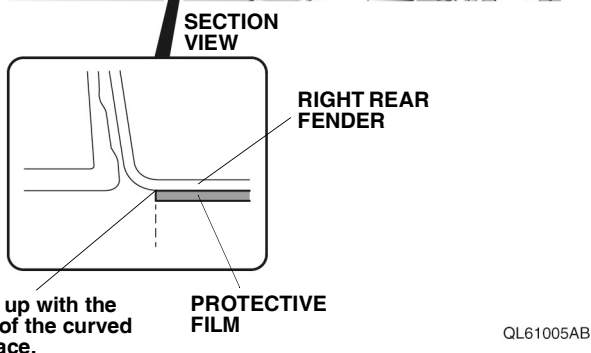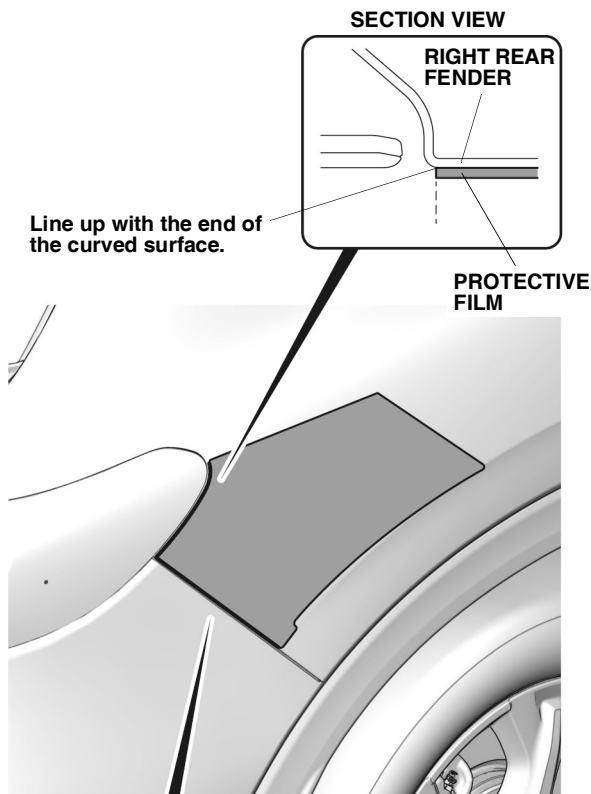


QL61005AB

21. Secure the right decal.

NOTE

Move the felt sleeve in one direction only.

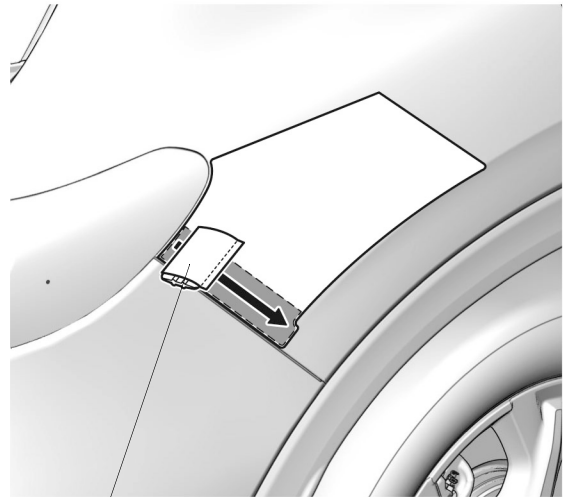


QL61006AB

Work from the upper side to the lower side.

22. Secure the right decal.

NOTE

Move the felt sleeve in one direction only.

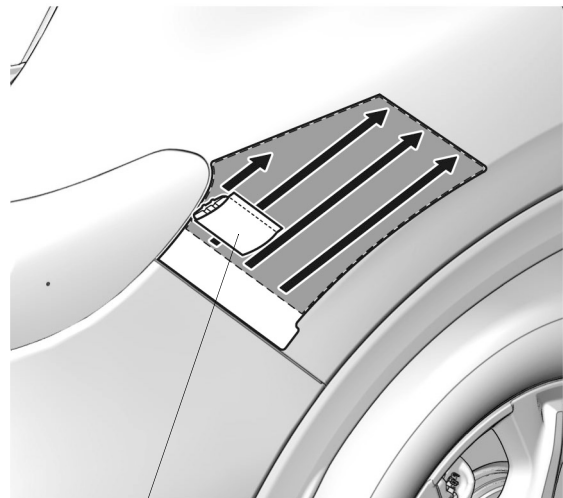

QL61007AB


Work from the rear side to the front side.

Germain Honda of College Hills

23. Remove the protective film.


NOTE
Do not pull up on the protective film.

PROTECTIVE FILM
(Remove.)

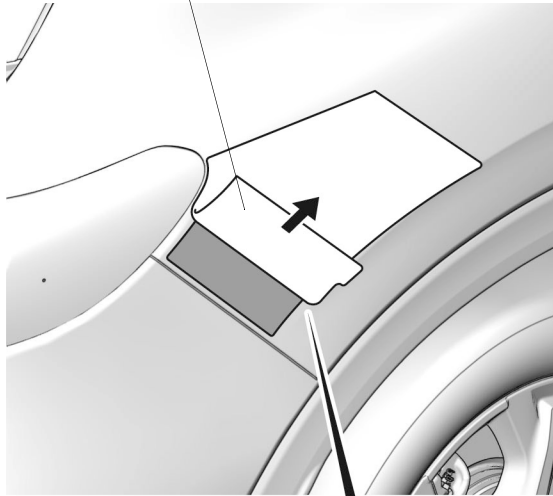

Peel along the right decal.

Do not pull up.

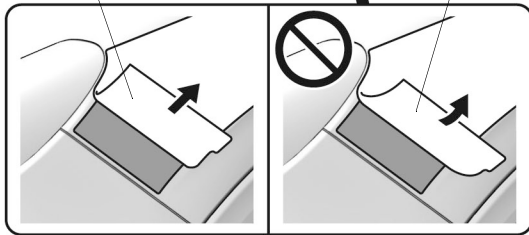


QL61008AB

24. Wipe off the 3M protective tape application solution.

NOTE
Allow to dry thoroughly.

SHOP TOWEL

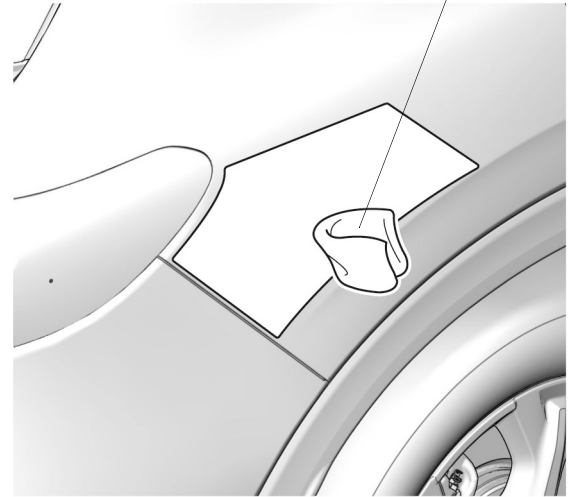

QL61009AB

25. Check that all parts are installed properly.