

# Germain Honda of College Hills



## INSTALLATION INSTRUCTIONS

### Accessory

### TAILGATE SPOILER

### Application

2023 HR-V  
MODEL SERIES


### Publications No.

VERSION 1

### Issue Date

MAY 2022

## GENERAL VIEW

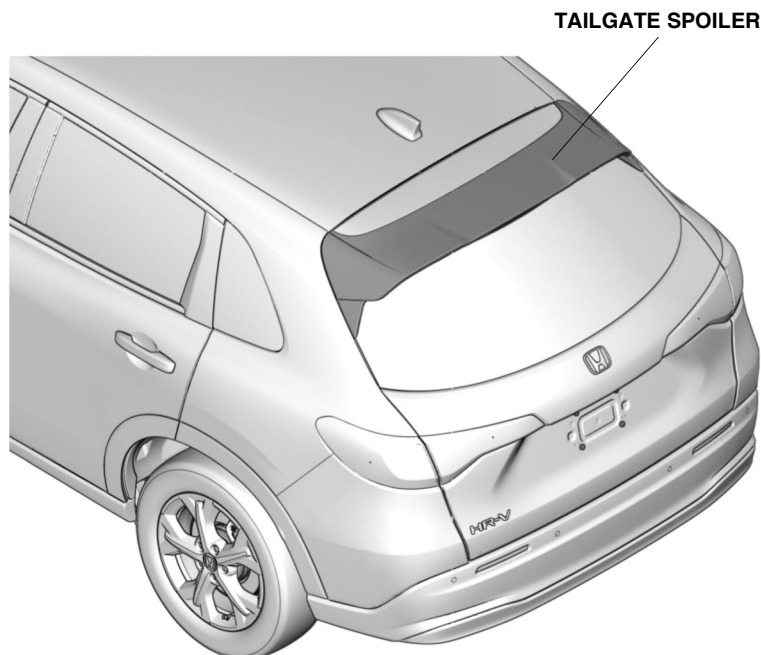

QL60701AA

## FOR YOUR SAFETY (Read carefully.)

### Warning Symbols

**Safety:** Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of following symbols:

\*All symbols are not used in all installation instructions.

#### **DANGER**

You will be killed or seriously hurt if you do not follow the instructions.

#### **WARNING**

You can be killed or seriously hurt if you do not follow the instructions.

#### **CAUTION**

You can be hurt if you do not follow the instructions.

#### **NOTICE**

Gives advice to prevent damage to the product, vehicle, the environment or other property.

#### **NOTE**

Gives helpful information or instructions to be followed when installing this product.

# Germain Honda of College Hills




Indicates a prohibited action.


## Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

\*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle.  
(instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.




Clean with isopropyl alcohol.




Return the original part to the customer.  
(Do not reuse.)


## Wire Harness Routing Precaution

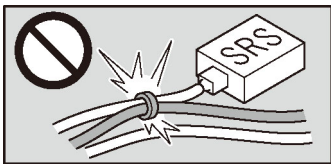


Do not secure the  
accessory harness to the  
SRS harness.  
(except for instruction  
cases.)

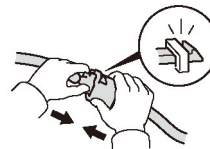


Push the connectors and  
terminals together until  
they lock.

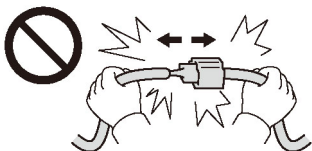

Do not pull the harness to  
unplug the connectors.



Install removed  
connectors in their original  
location.

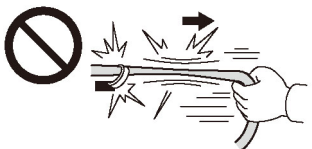

Do not pull the harness.




Secure the accessory  
harness as shown.

# Germain Honda of College Hills



Do not pinch the harness.

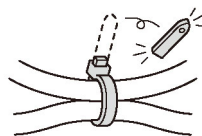

Cut off the excess wire tie.

## Safety: General

- Observe all safety notes and precautions described in the service information, in addition to those described in this Installation Instruction. Be extremely careful for your safety and safety of others.
- Be careful not to damage the vehicle or the parts.
- Be extremely careful when handling retaining tabs and clips.
- Note the locations of the parts before removing them so they can be properly installed in their original positions.
- The illustrations may differ slightly from the actual accessory.

## Safety: Electric Parts





Always disconnect the negative cable from the battery before beginning work.

## Safety: Accessory

- Always use the parts and tools specified in the installation instructions.
- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

## PARTS LIST

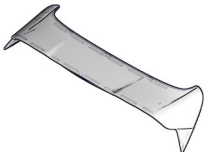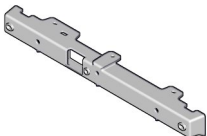Tailgate Spoiler Kit (P/N 08F02-3V0-100)

Tailgate spoiler	Bracket	Clip A	Clips B (6)
			

# Germain Honda of College Hills

Wire tie with clip

(May not be used)



Self-tapping screws (3)



# Germain Honda of College Hills

## REQUIRED TOOLS AND SUPPLIES

- 10 mm Open end wrench
- 8 mm and 10 mm Sockets
- Needle nose pliers
- Pliers
- Blanket
- Phillips screwdriver
- Masking tape
- Isopropyl alcohol

The following tools are available through the Honda Tool and Equipment Program:


- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N

## INSTALLATION

1. Disconnect the negative cable from the battery.



### NOTE

Take countermeasures to prevent from locking the tailgate.

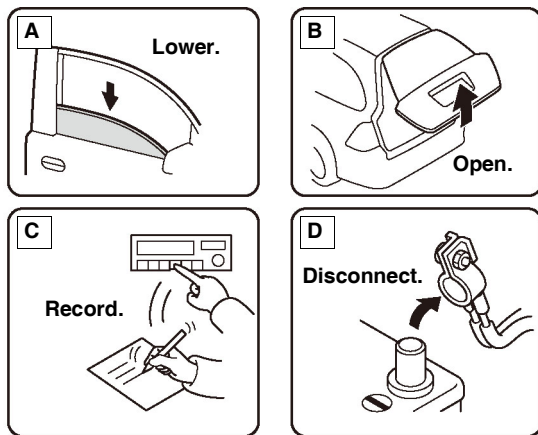

QCD0504BM


2. Remove the bolts.

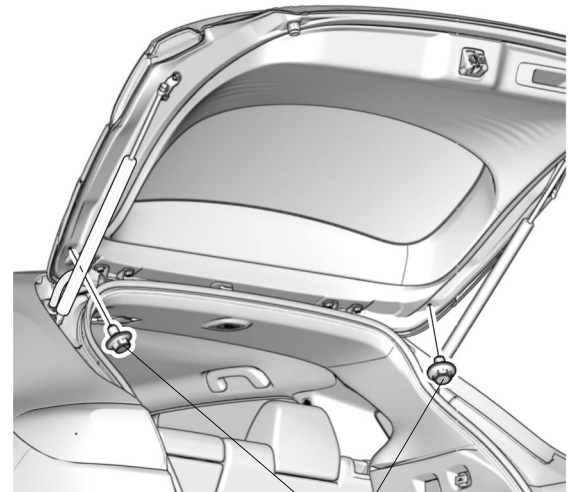


QL60702AA

3. Release the tailgate spoiler.

# Germain Honda of College Hills

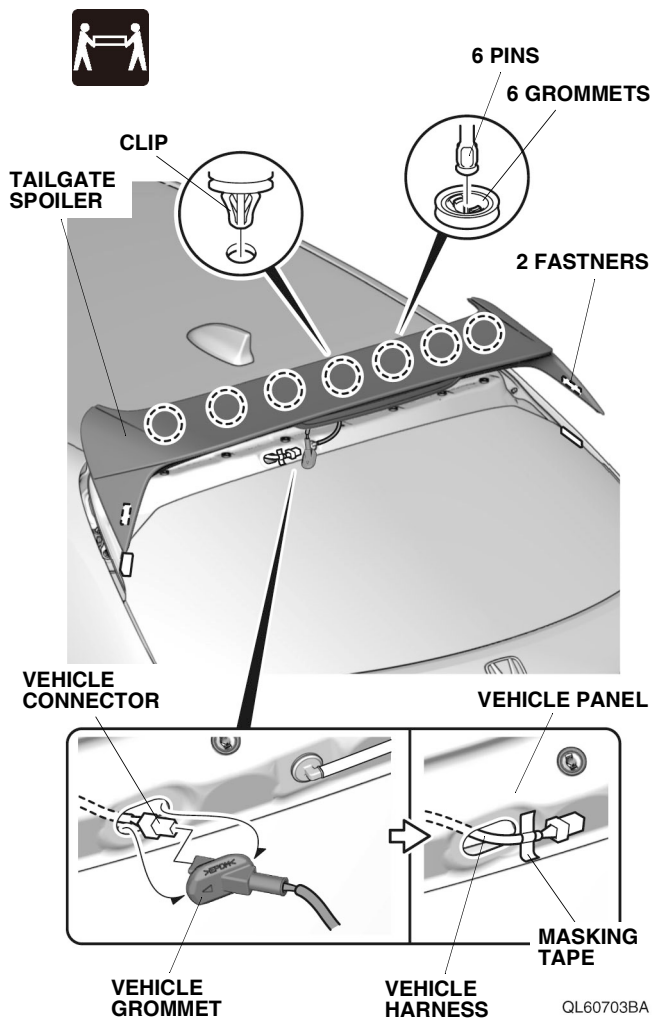


4. Secure the vehicle harness.
5. Place a blanket to protect the vehicle.

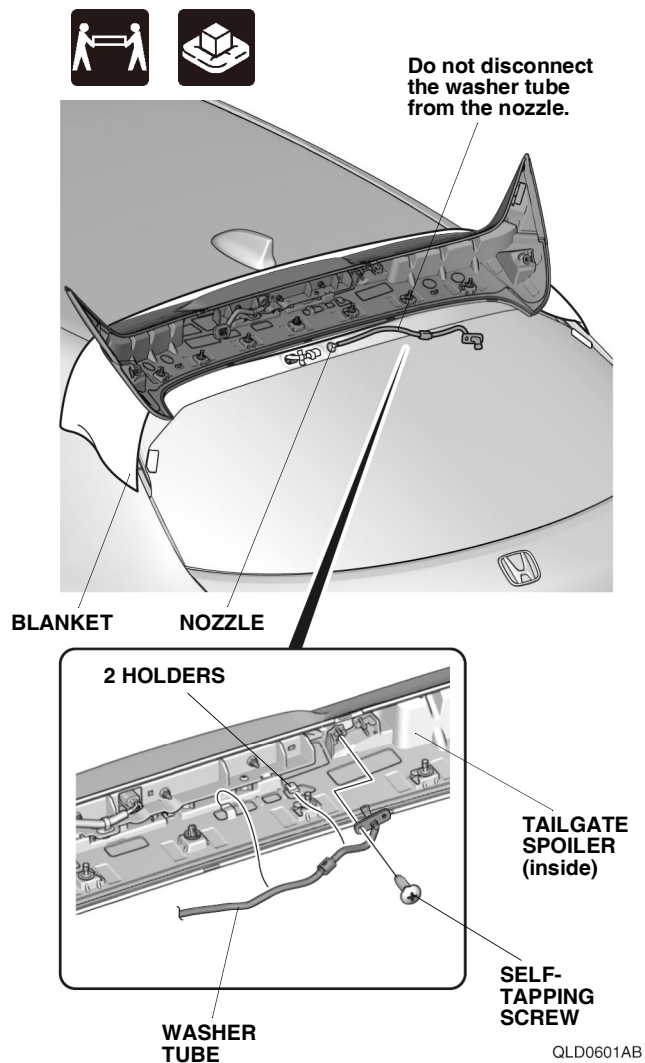


6. Release the washer tube.
7. Remove the tailgate spoiler.
8. Remove the grommets.


# Germain Honda of College Hills

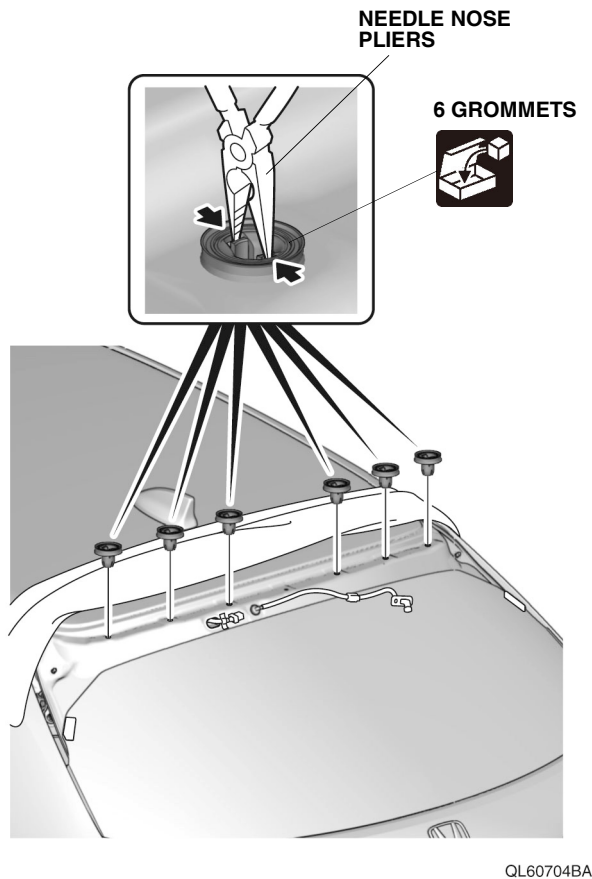


9. Remove the nuts.

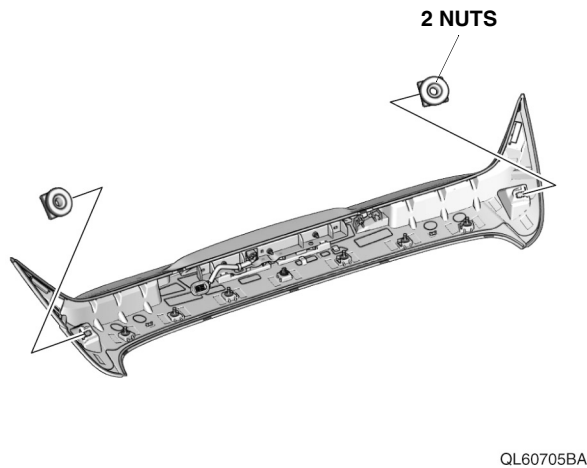

10. Remove the vehicle harness.

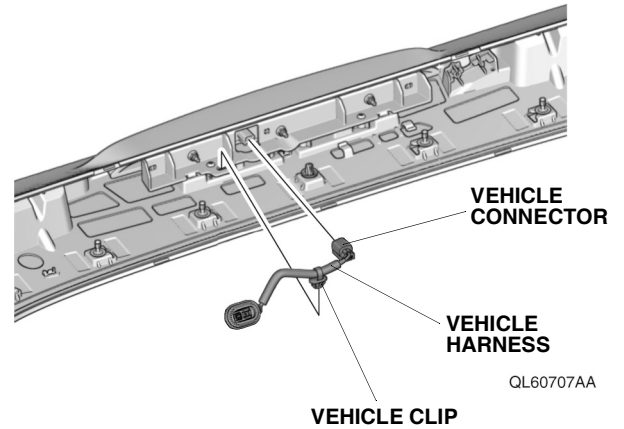


11. Remove the high mount brake light.

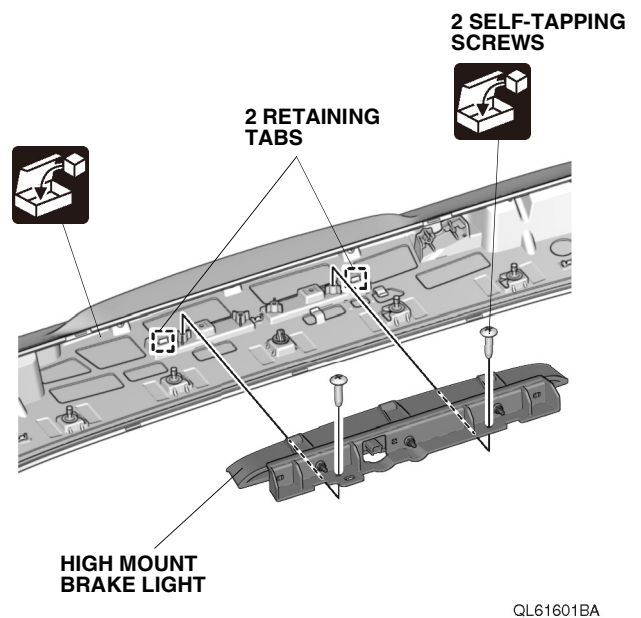


12. Remove the bracket.



# Germain Honda of College Hills

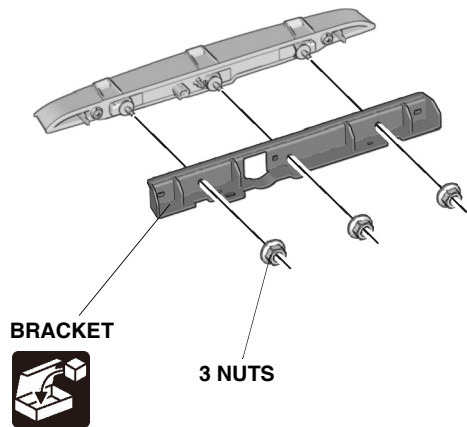


13. Install the new bracket.

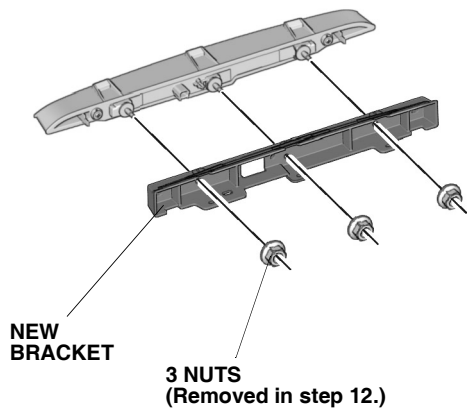


14. Clean the attaching area.



**NEW TAILGATE SPOILER**

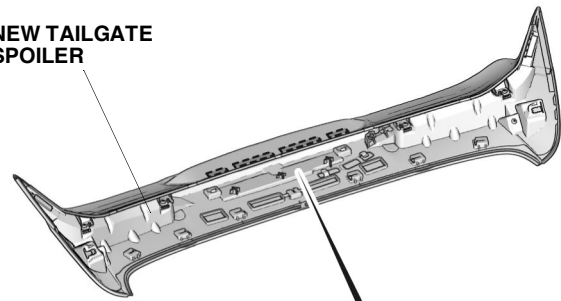

**NEW TAILGATE SPOILER  
(inside)**

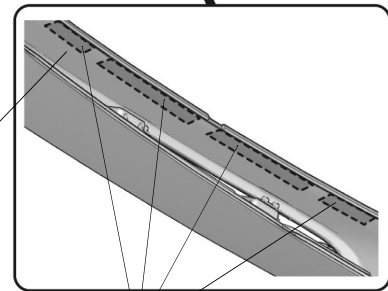

15. Temporarily attach the tabs.

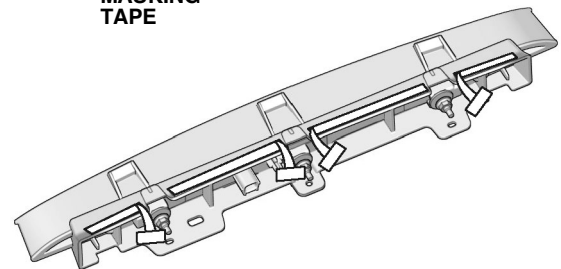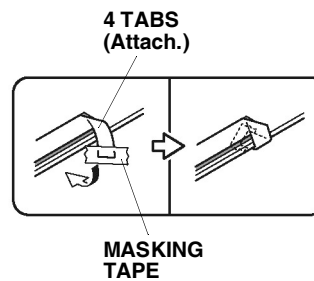


16. Install the high mount brake light.

## NOTE

Be careful not to damage the insulators.




# Germain Honda of College Hills

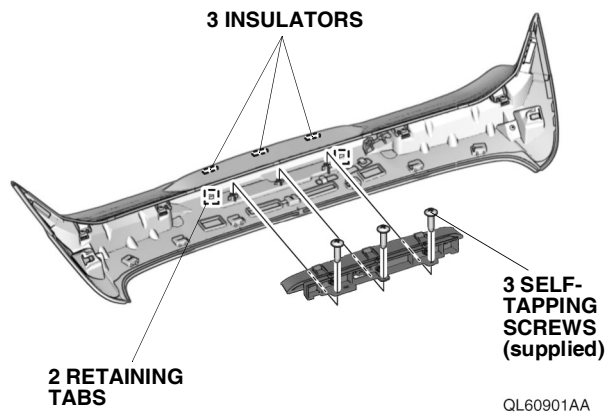

17. Secure the new bracket.

## NOTE

- Check the position of the double-sided adhesive tapes and make sure to press firmly.
- Secure in the order shown.

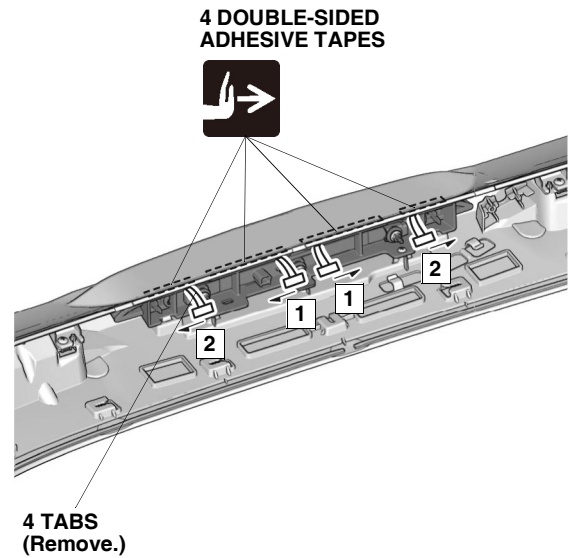


18. Secure the new bracket.

## NOTE


Make sure to press the bracket against the tailgate spoiler to secure.

# Germain Honda of College Hills

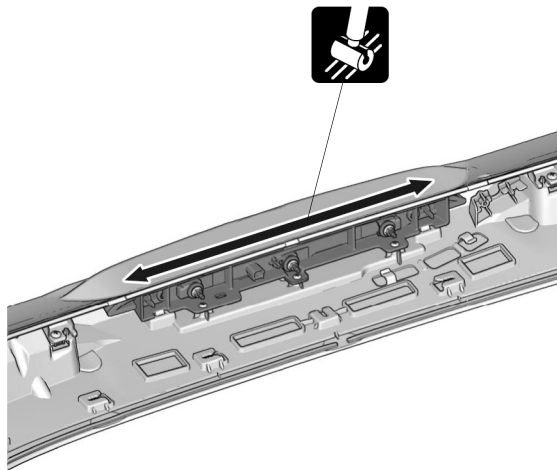

QLD1605AG

19. Plug-in the vehicle connector.

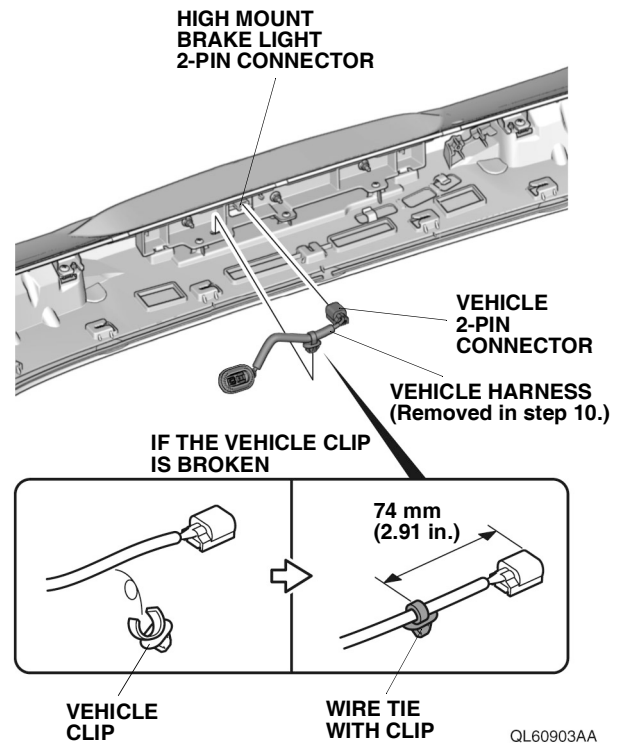

QL60903AA

20. Secure the vehicle harness.

## NOTE


Be careful not to damage the vehicle harness.

21. Install the clips A and B.

## NOTE


Make sure to install the clips in the correct positions.

# Germain Honda of College Hills

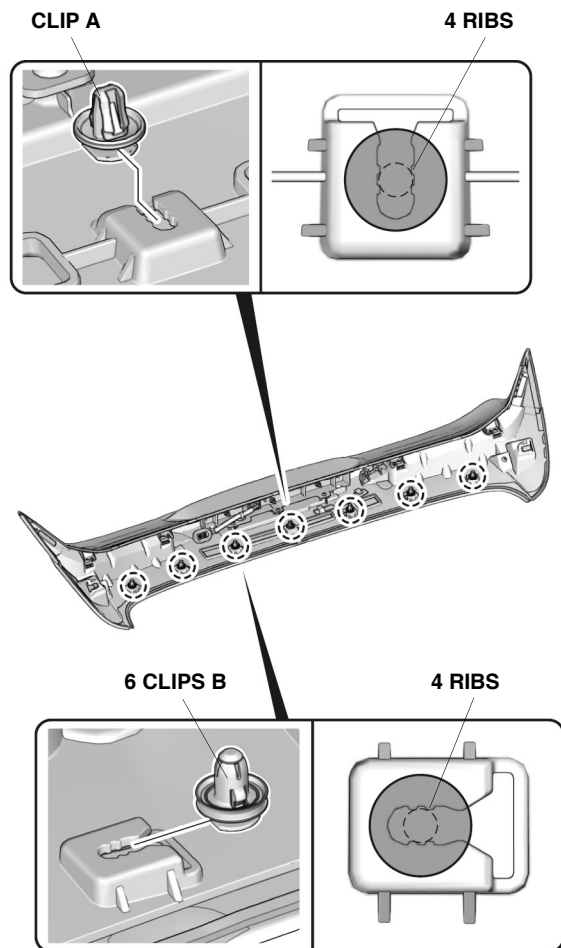

QL60905CA

22. Install the nuts.

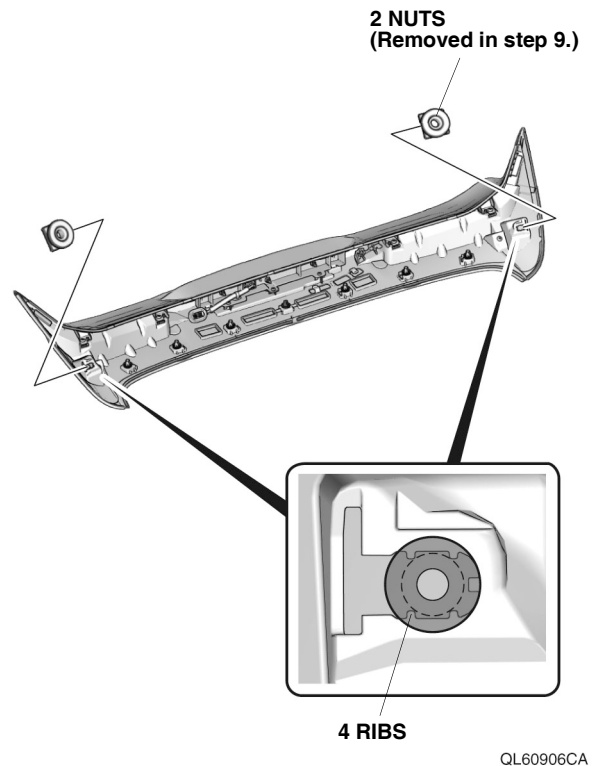

QL60906CA


23. Remove the masking tape.

# Germain Honda of College Hills



VEHICLE 2-PIN  
CONNECTOR

2 HOLDERS

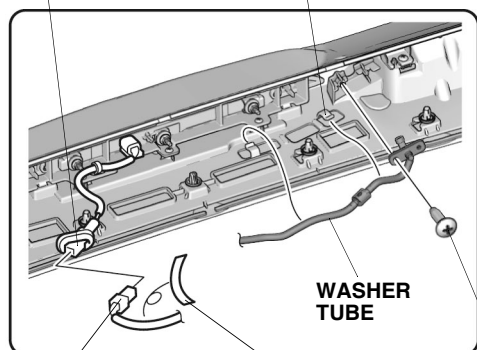


WASHER  
TUBE

VEHICLE 2-PIN  
CONNECTOR


MASKING  
TAPE

SELF-TAPPING  
SCREW  
(Removed  
in step 6.)

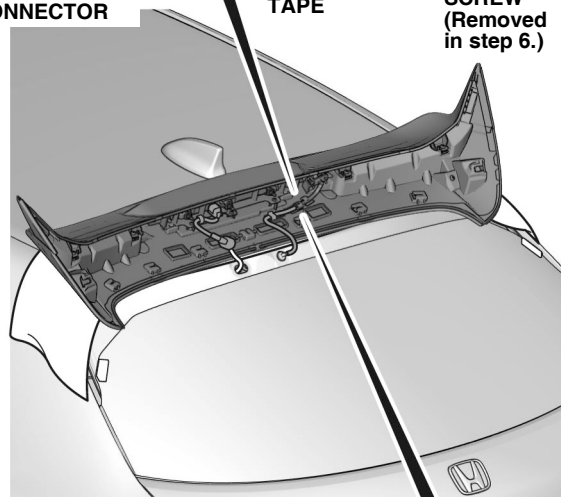

ONE WAY  
VALVE

PROJECTION

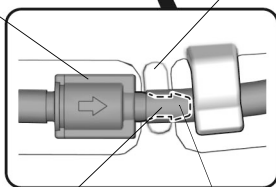

Line up the constricted  
part of the nozzle with  
the projection on the  
new tailgate spoiler.

NOZZLE


QLD0602AB

24. Plug-in the vehicle connector.
25. Install the washer tube.
26. Remove the blanket.




7 CLIPS

2 FASTNERS

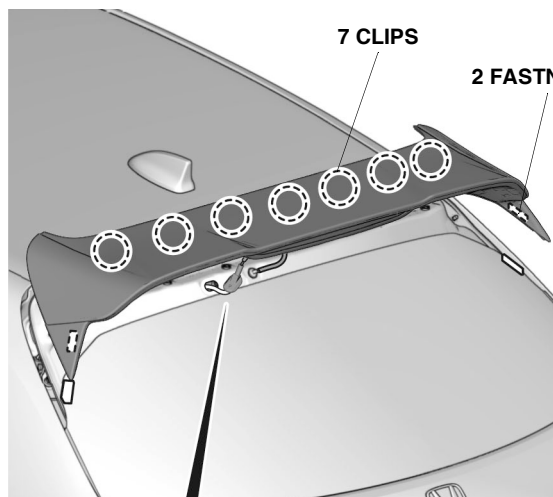

SECTION VIEW

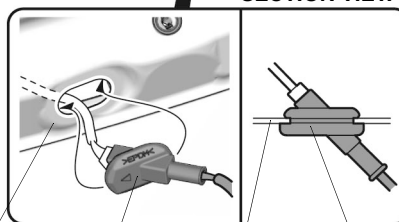

VEHICLE  
PANEL

VEHICLE  
GROMMET

VEHICLE  
PANEL

VEHICLE  
GROMMET

QL60907BA


27. Secure the vehicle grommet.

## NOTICE

Make sure to check that the grommet is secured properly.

28. Install the new tailgate spoiler.
29. Secure the new tailgate spoiler.

# Germain Honda of College Hills

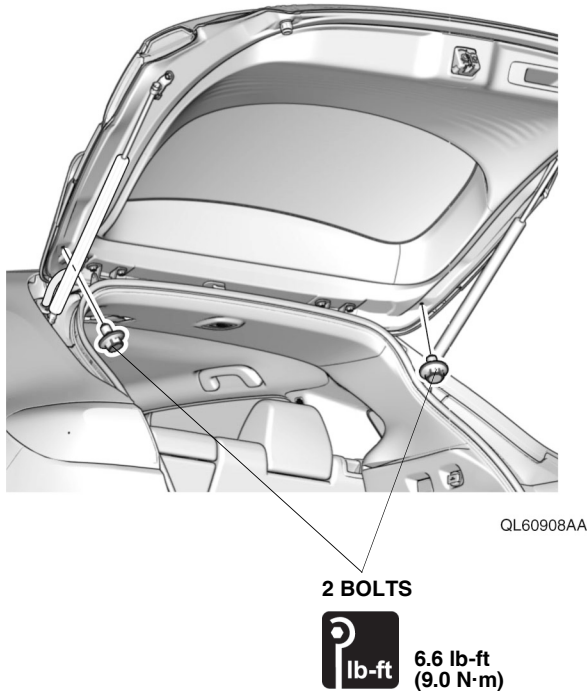


30. Check that all parts are installed and properly routed.

## NOTE

- Check that all harnesses are not pulled or pinched.
- Make sure all clips and wire ties are securely installed.

31. Connect the negative cable to the battery.

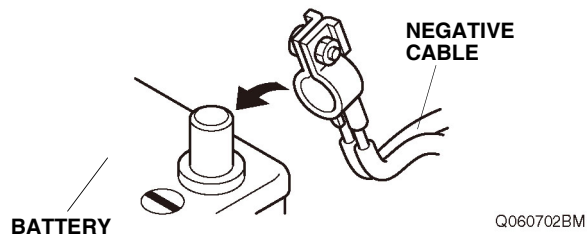

32. Make sure that the high mount brake light operates properly.
33. Make sure all accessories and systems operate properly.
34. If necessary, restore the systems back to normal operation as described in the service information.
35. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.