



INSTALLATION INSTRUCTIONS

Accessory	Application	Publications No.
SPLASH GUARDS P/N 08P00-TXM-100	2020 INSIGHT	VERSION 1
		Issue Date JULY 2019

PARTS LIST

Left front splash guard



Right front splash guard



Left rear splash guard



Right rear splash guard



2 Spring nuts



8 Self-tapping screws



TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver


Stubby Phillips screwdriver

Pushpin

The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

Illustration of the Splash Guards Installed on the Vehicle

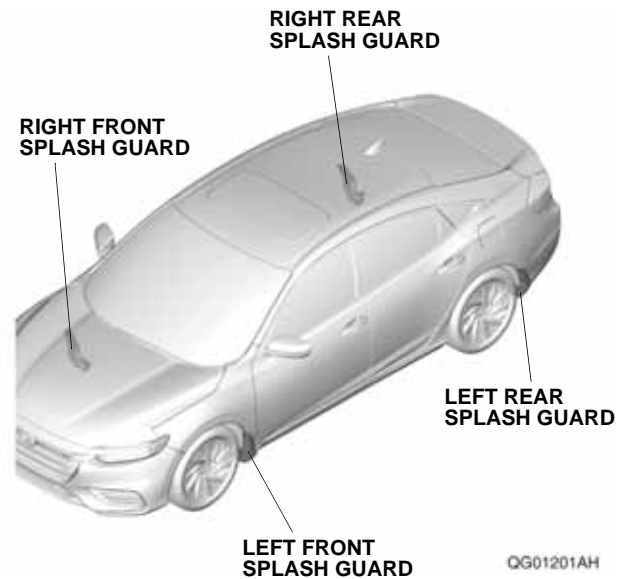

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE:

- Be careful not to damage the body paint finish.
- Clean the areas to be covered.

Installing the Front Splash Guards


1. Turn the steering wheel fully counterclockwise.

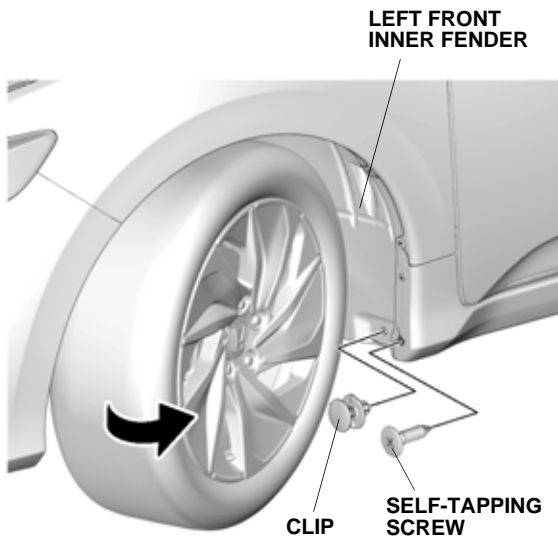

QG01202AH


2. Remove the self-tapping screw and clip from the left front inner fender.

3. Using a pushpin, pierce the center of the clip on the left front inner fender.

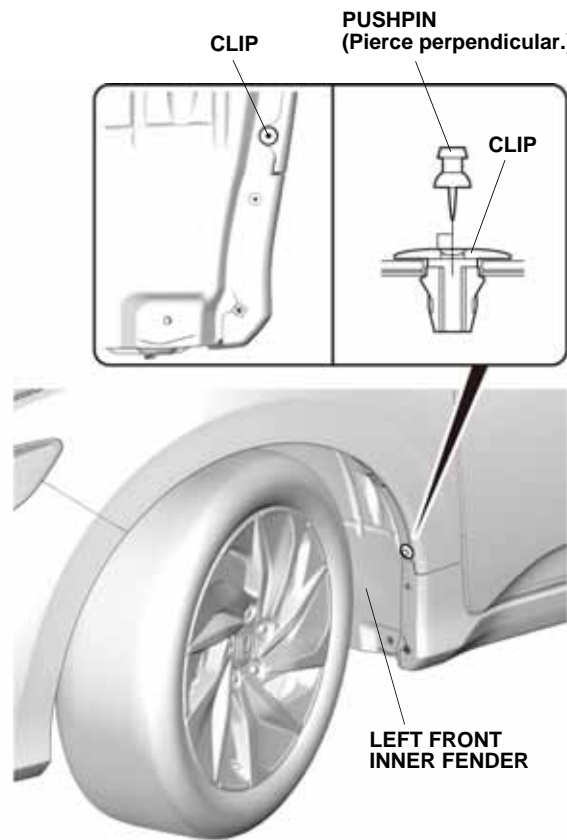


QG01203AH

4. Secure the left front splash guard with two self-tapping screws and one clip as shown.
 NOTE: Make sure there is no gap between the left front splash guard and the vehicle body. If there is one, loosen the self-tapping screws, hold the splash guard against the body, and retighten the screws.

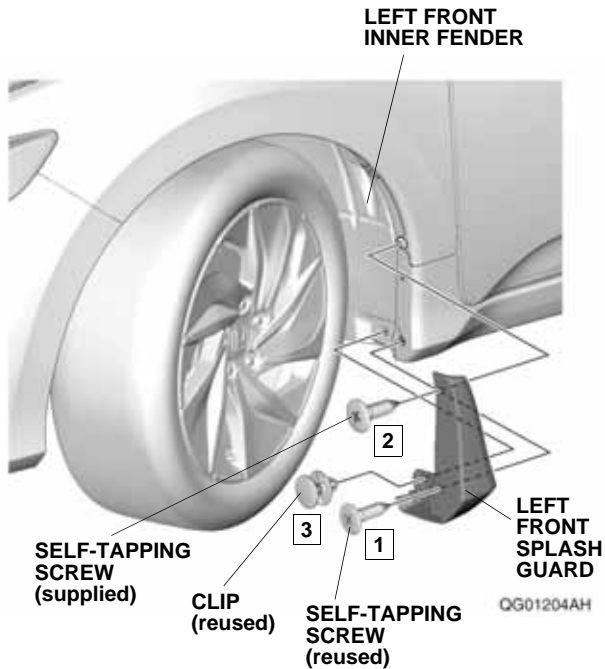


Installing the Rear Splash Guards


5. Remove the two self-tapping screws and one clip from the rear bumper.

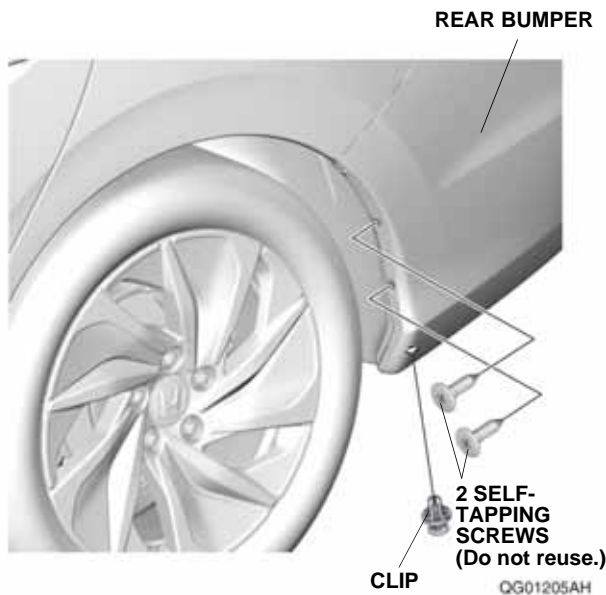


6. Locate the one dimple. Using a pushpin, pierce the rear bumper at the dimple.

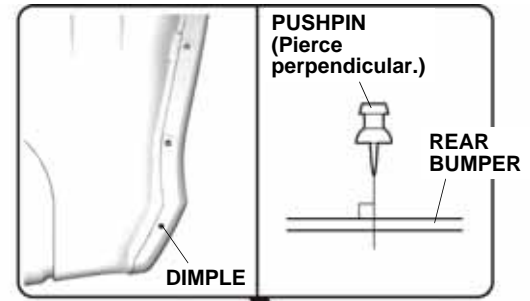

7. Install one spring nut to the rear bumper as shown.
 NOTE: Make sure to install the spring nut in the correct position with the large hole facing out.

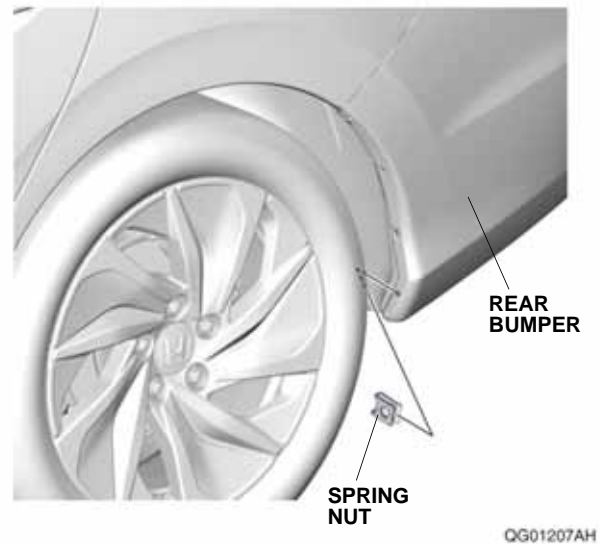

8. Secure the left rear splash guard with three self-tapping screws and one clip as shown.
NOTE: Make sure there is no gap between the left rear splash guard and the bumper. If there is one, loosen the self-tapping screws, hold the splash guard against the bumper, and retighten the screws.

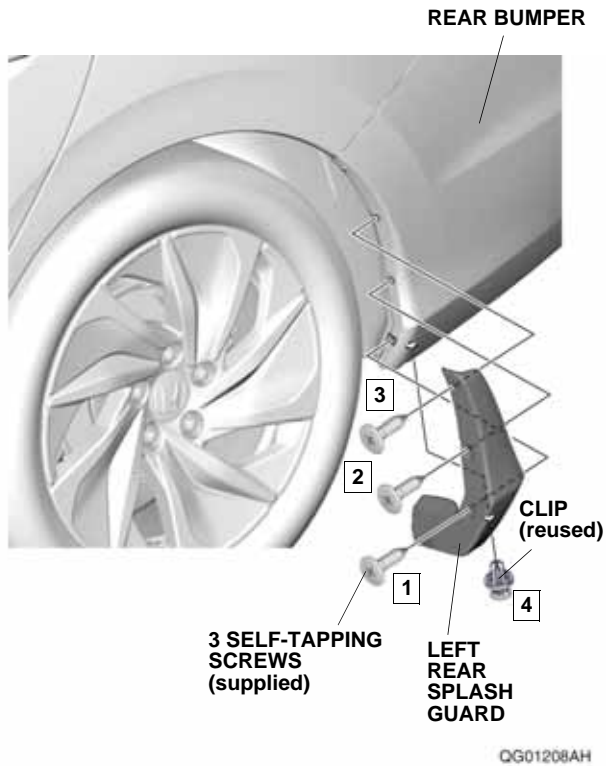

9. Turn the steering wheel fully clockwise, and repeat steps 2 through 8 to install the right splash guards.