



INSTALLATION INSTRUCTIONS

Accessory
CARGO NET
P/N 08L96-TK8-100

Application
2012 ODYSSEY

Publications No.
All 46727
Issue Date
SEP 2011

Put this information in the glove box with the vehicle owner's manual.

PARTS LIST

Cargo net


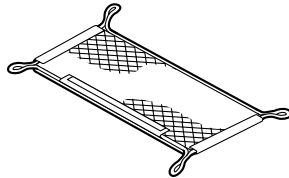


Illustration of the Cargo Net Installed in the Vehicle

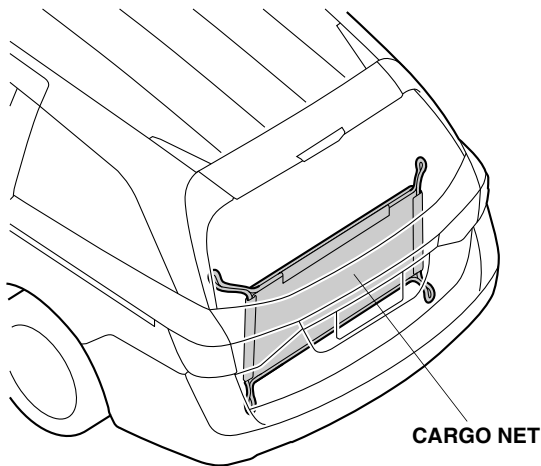


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

Installing the Cargo Net

1. Open the tailgate.

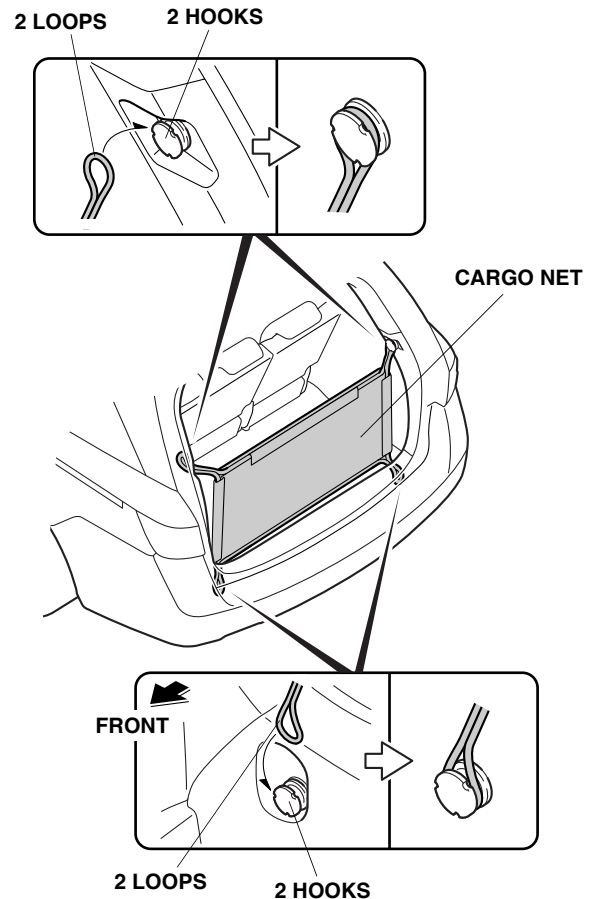

2. Secure four loops on the cargo net to the four hooks in the vehicle as shown.