



## INSTALLATION INSTRUCTIONS

### Accessory

HOOD AIR DEFLECTOR  
P/N 08P47-THR-100

### Application

2018 ODYSSEY

### Publications No.

VERSION 1

### Issue Date

MAY 2017

### PARTS LIST

Hood air deflector



2 Brackets A  
(Identification mark: A)



2 Brackets B  
(Identification mark: B)



Left bracket C  
(Identification mark: C-L)



Right bracket C  
(Identification mark: C-R)



Template



2 Collars



3 Alcohol swabs



4 Clips



2 Screws



4 Short screws




4 Protection films



Notice label

4 Grommet nuts

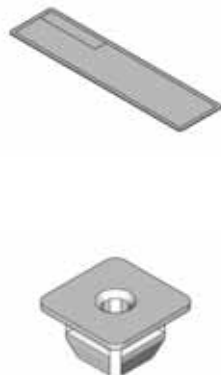

## TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Masking tape

**Illustration of the Hood Air Deflector Installed on the Vehicle**



## INSTALLATION


**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

### NOTE:


- Be careful not to damage the body paint finish.
- This kit should be installed only if the ambient air temperature is 15°C (60°F) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Make sure your customer is aware of this.

### Installing the Hood Air Deflector


1. Open the hood. Fold back the rubber seal, and locate the four square holes on the inside of the hood. Push one grommet nut into each square hole in the hood.

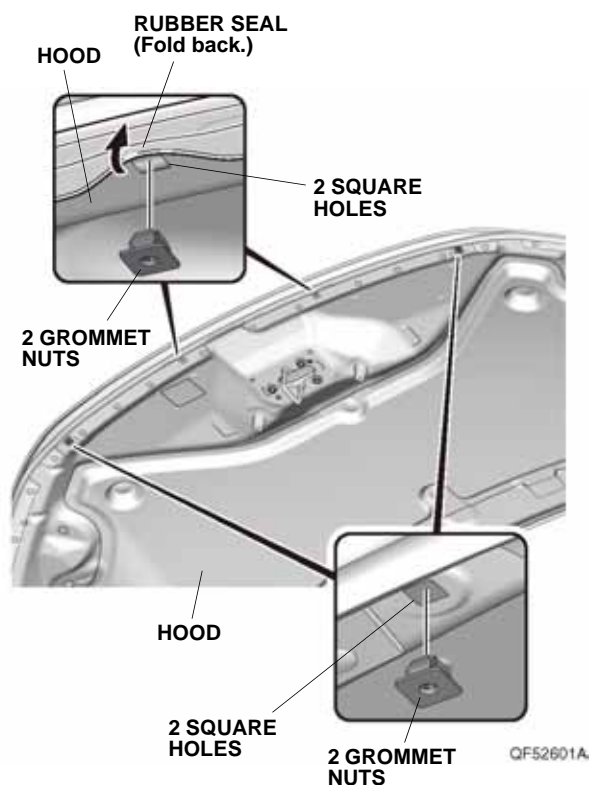


- Using an alcohol swab, thoroughly clean the hood where the protection film will attach.

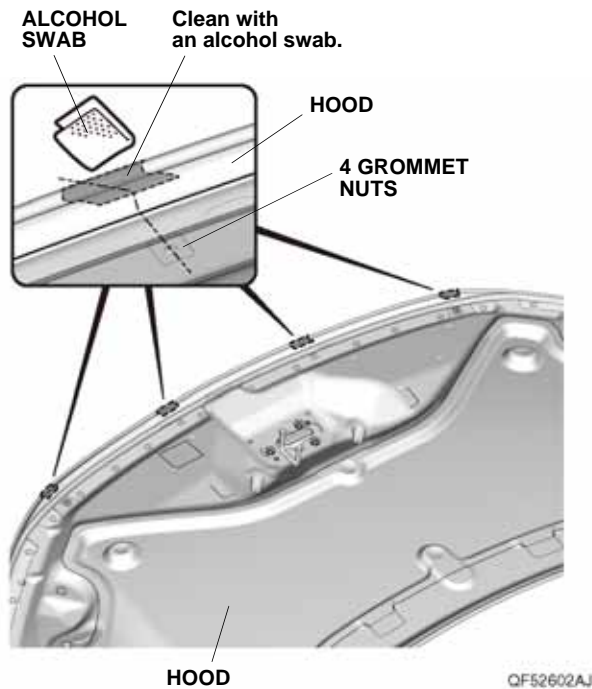


- Remove the adhesive backings from the four protection films, and attach them to the front of the hood area where the two brackets A and the two brackets B will mount.

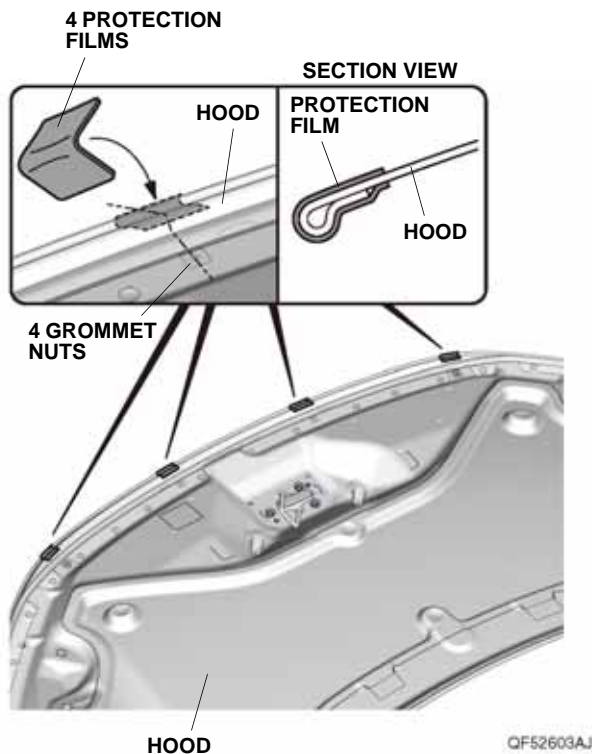


- Slide the two brackets A and the two brackets B over the lip of the hood, and line them up with the holes in the grommet nuts. Loosely install a short screw through each bracket.

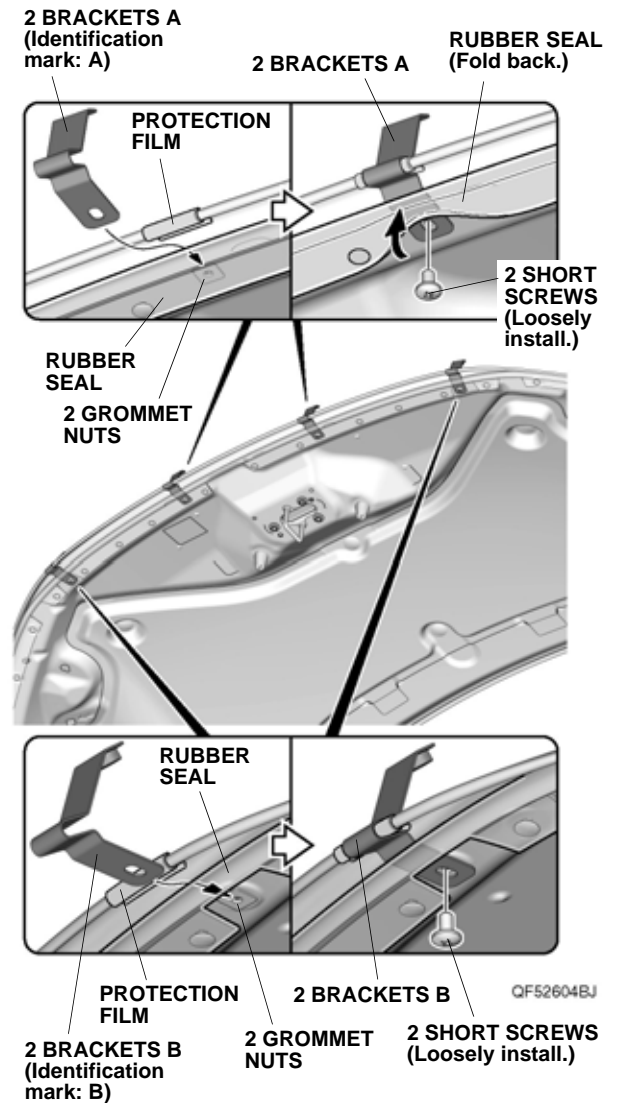


5. Close the hood. Attach the template to the front edge of the hood on the driver's side as shown. Secure the template to the hood with strips of masking tape.

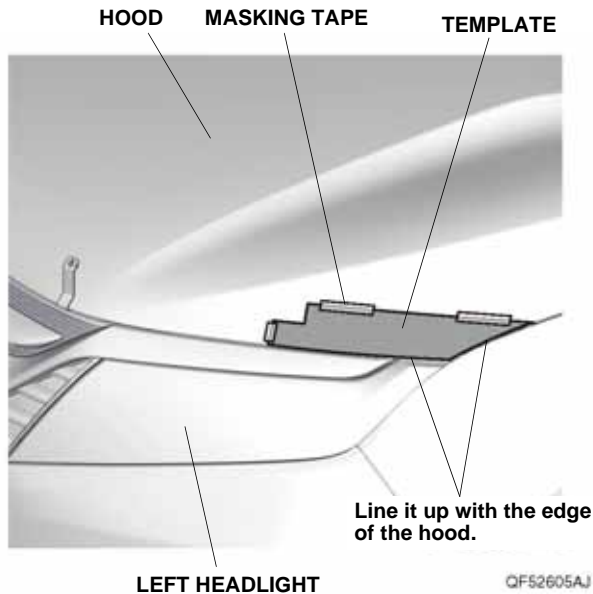

6. Using an alcohol swab, thoroughly clean the hood where the left bracket C will attach.

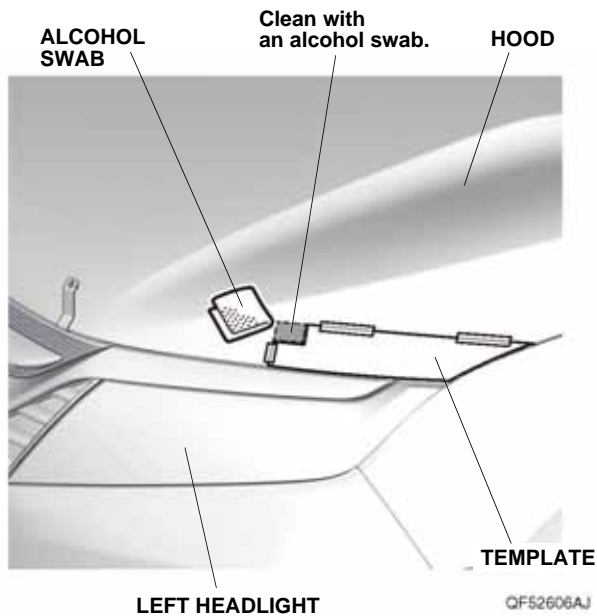


7. Remove the adhesive backing from the left bracket C, line it up with the template, and press the left bracket C against the hood to set the adhesive. Remove the template.

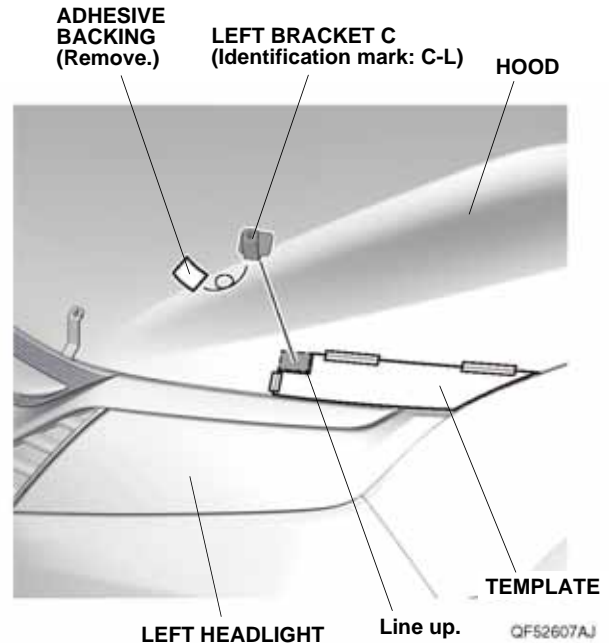


8. Turn the template over and repeat steps 5 through 7 to install the right bracket C on the right side of the vehicle.


9. Position the hood air deflector on the hood. Line up the holes in the hood air deflector with the holes in the six brackets. Install the hood air deflector on the brackets with two screws, two collars, and four clips. Tighten the screws securely.

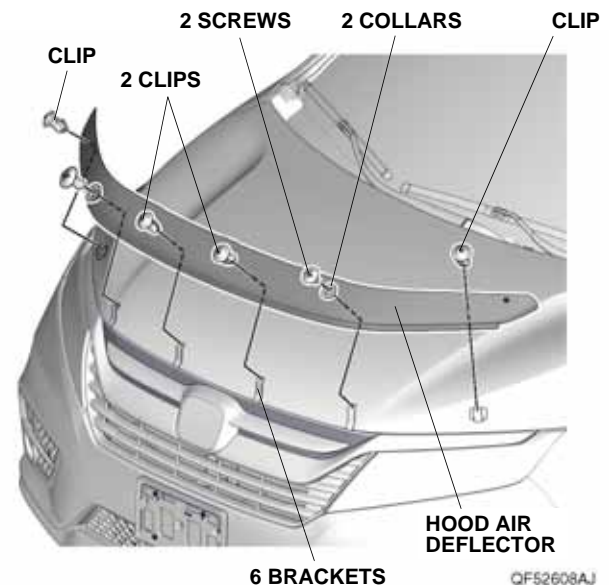


10. Insert the large end of the template between the hood and the hood air deflector to unfold the molding as shown.

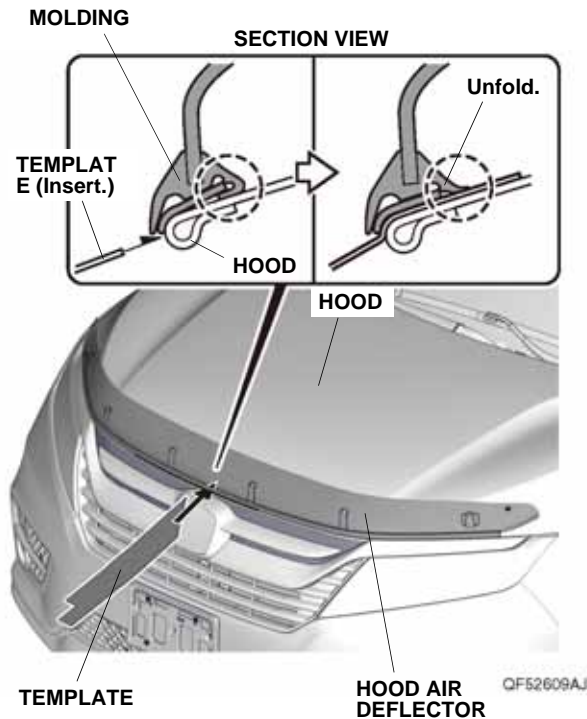

11. Open the hood. Tighten the four short screws loosely installed in step 4.

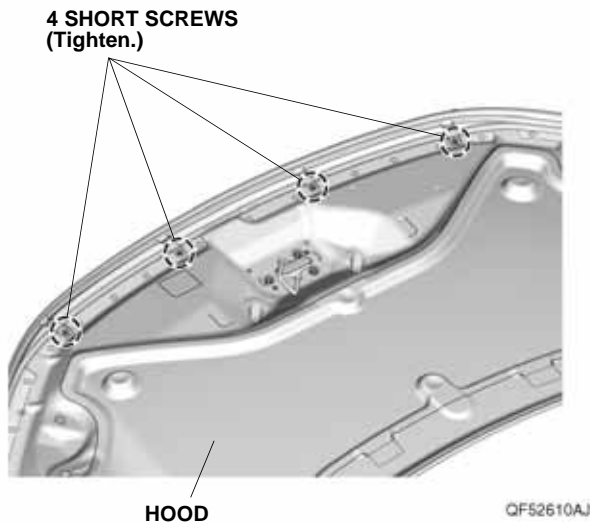

12. Using an alcohol swab, thoroughly clean the hood where the notice label will attach.

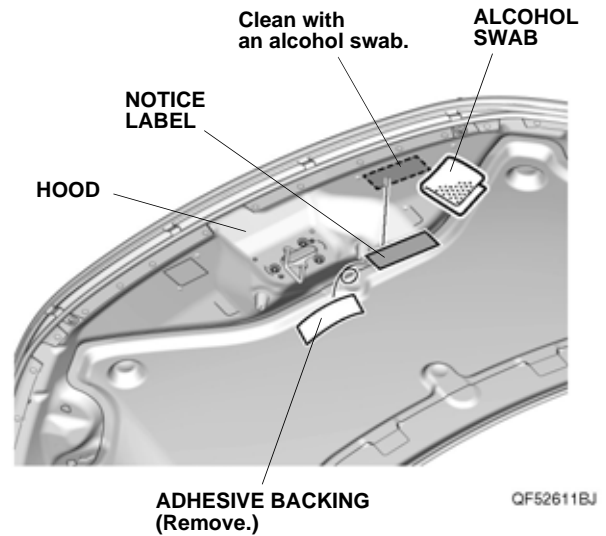

13. Remove the adhesive backing from the notice label, and attach it to the hood as shown.  
NOTE: Do not attach the notice label over the other vehicle caution labels.

**Put a copy of this page in the glove box for your customer.**

## CARE OF THE HOOD AIR DEFLECTOR

- To avoid damaging the surface, never use ammonia-based cleaners or solvents to clean the hood air deflector.
- Clean with a solution of mild dishwashing soap and water using a soft cloth or chamois.
- To remove fine scratches and restore the original luster, use Meguiar's Mirror Glaze plastic cleaner and polish or an equivalent high-quality plastic cleaner.