www.collegehillshonda.com

INSTALLATION INSTRUCTIONS

CROSSBARS P/N 08L04-THR-100

2018 ODYSSEY

VERSION 1

Issue Date **MAY 2017**

Publications No.

PARTS LIST

Front crossbar (long)



Rear crossbar (short)



Bolts



TOOLS AND SUPPLIES REQUIRED

Ratchet

Torque wrench


T-30 TORX bit

INSTALLATION


NOTE:

- The weight of the cargo must not exceed the maximum weight capacity of 75 kg (165 lbs).
- · Be extremely careful not to damage the roof and other finished surfaces of the body when installing the crossbars.

1. Remove four plastic screws from the left roof rail and the right roof rail.

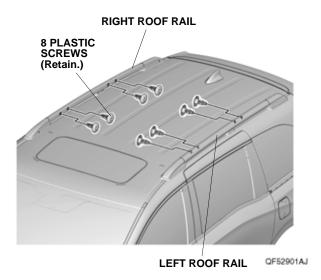


2. Install the front crossbar with four bolts. Torque the bolts to 10 N·m (7.4 lb·ft).

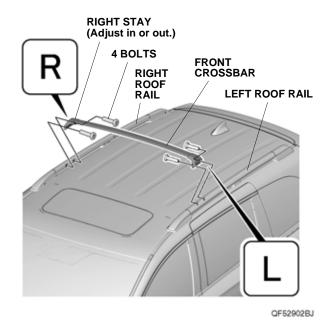

www.collegehillshonda.com

3. Install the rear crossbar with four bolts. Torque the bolts to 10 N·m (7.4 lb·ft).

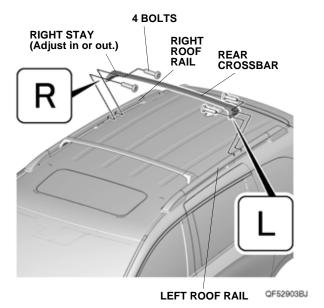

www.collegehillshonda.com

Put a copy of this page in the glove box for your customer.

USE AND CARE

- Check the roof rail mounting bolts frequently, and retighten if necessary. Torque the bolts to 7 lb-ft (10 N-m).
- Distribute the weight of the cargo evenly, and do not exceed the maximum weight capacity of 165 lbs (75 kg).