

# Germain Honda of College Hills



## HONDA INSTALLATION INSTRUCTIONS

### Accessory

DOOR HANDLE FILMS  
P/N 08P48-THR-100A

### Application

2023 ODYSSEY

### Publications No.

VERSION 1

### Issue Date

MAR 2022

## PARTS LIST

4 Door handle films



4 Alcohol wipes



## TOOLS AND SUPPLIES REQUIRED

Shop towel

Spray bottle


3M Protective tape application solution

Gloves


*The following tool is available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.*

Mini Soft Spreader/Applicator (T/N SBSA2302Y5PK)

## Illustration of the Door Handle Films on the Vehicle

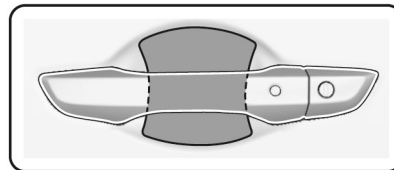

2 DOOR HANDLE  
FILMS

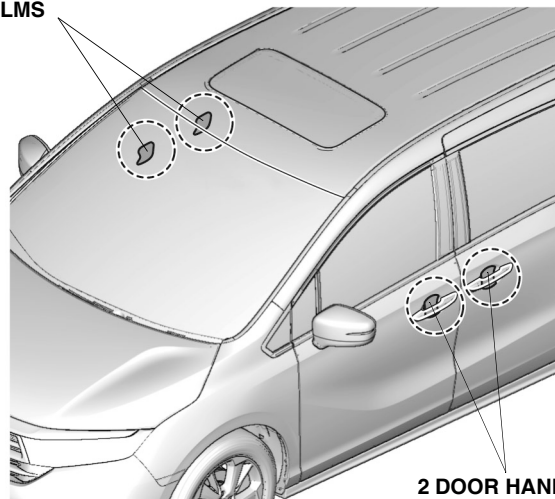

2 DOOR HANDLE  
FILMS

QJ92501BN

## INSTALLATION

**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


### NOTE:

- Always wear gloves when working with 3M Protective tape application solution.
- Be careful not to damage the paint finish.
- This kit should be installed only if the ambient air temperature is 60°F (15°C) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Make sure your customer is aware of this.

# Germain Honda of College Hills


## Installing the Door Handle Films

1. Using the alcohol wipe, thoroughly clean the left front door where the door handle film will attach.

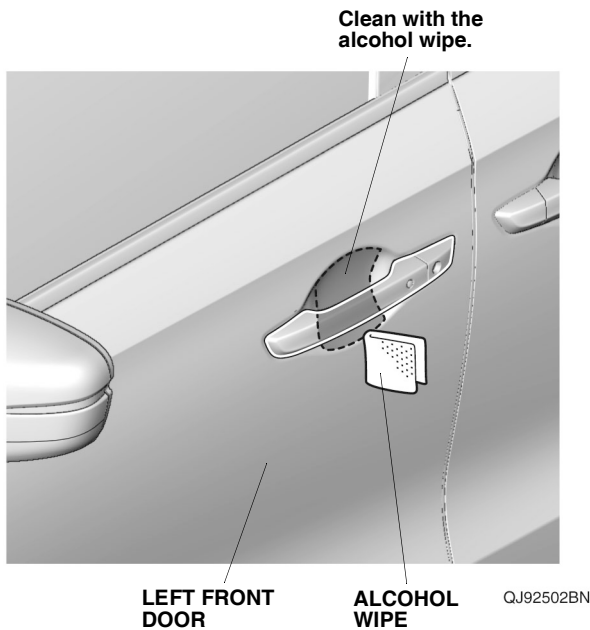


2. Using a spray bottle with the 3M protective tape application solution, spray the left front door where the door handle film will attach.

Spray with the 3M protective tape application solution.

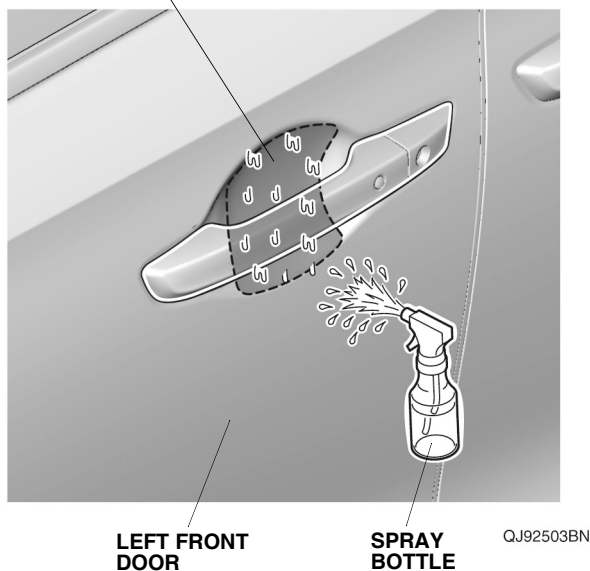


3. Remove the adhesive backing from the door handle film.

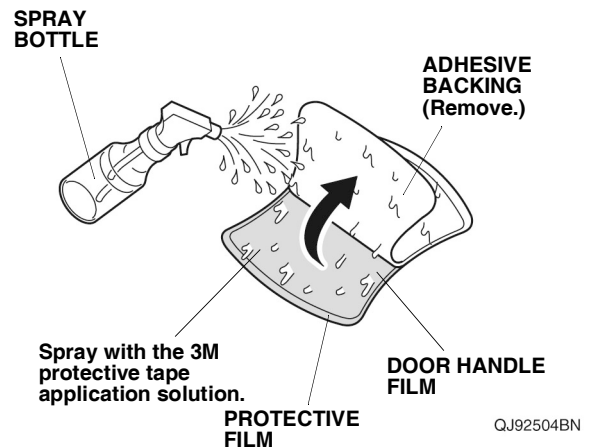

4. Spray the door handle film and protective film with the 3M protective tape application solution.


# Germain Honda of College Hills

5. Line up the protective film with the left front door as shown.  
**NOTE:** Check the arrow mark and installation position of the door handle film. Make sure to install the door handle film in the correct position and orientation.

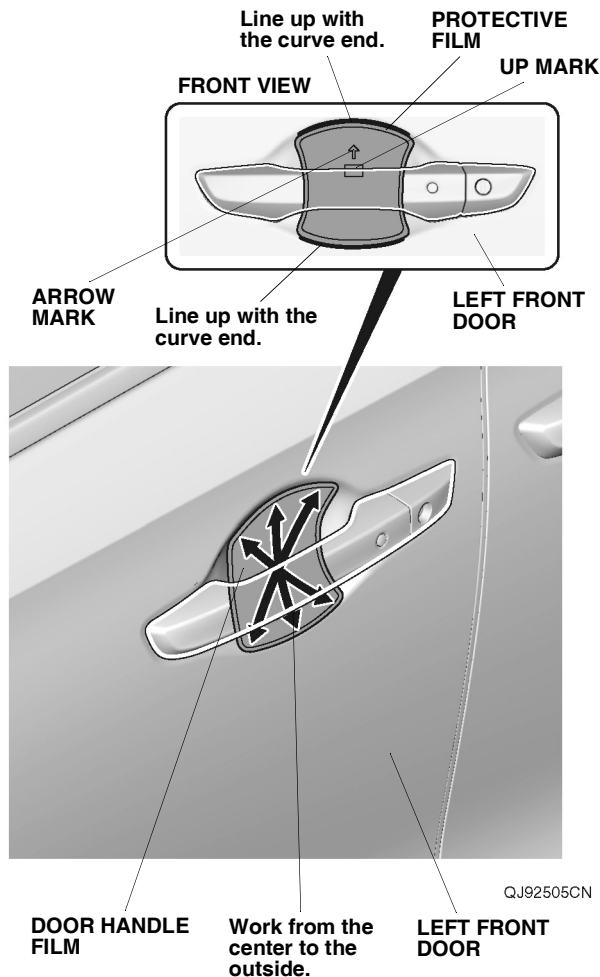

6. Starting from the center and working outward, use the mini soft spreader/applicator to smooth out the door handle film. If you see an air bubble, stop and gently peel up that section to work out the bubble. Work slowly and keep pressure against the door handle film.

7. Remove the protective film from the door handle film. Using a shop towel, wipe up the 3M protective tape application solution. Allow the door handle film to dry thoroughly.

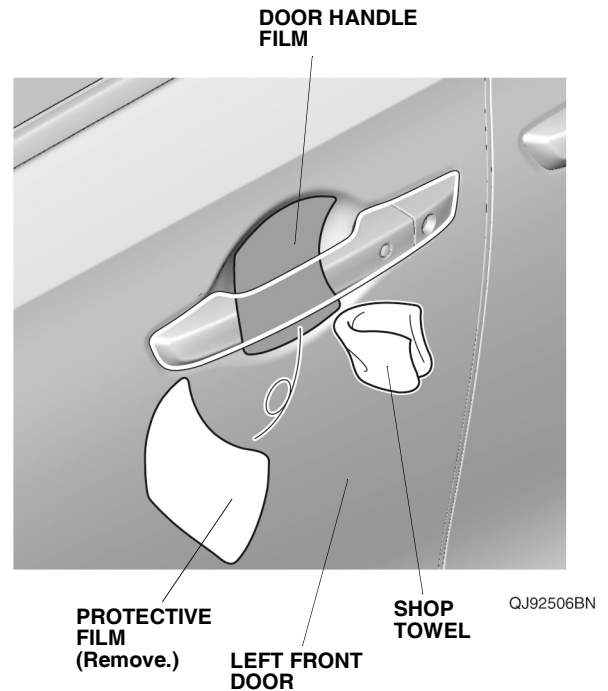

8. Repeat steps 1 through 7 for the remaining door handle films.