

TOOLS AND SUPPLIES REQUIRED

Ratchet

T-15 and T-20 TORX bits

The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or. call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


NOTE:

- Cargo must not exceed the maximum weight capacity • of 165 lbs (75 kg).
- Clean the roof rails before installing the crossbars.
- Do not damage the roof and other finished surfaces • when installing the crossbars.

www.collegehillshonda.com


Installing the Crossbars


1. Remove the TORX screw from the left rear roof rail cover.

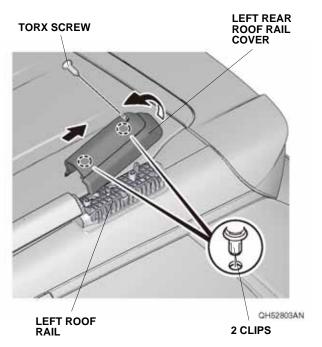

- 2. Using a plastic trim tool, remove the left rear roof rail cover.
- 3. Remove the TORX screw from the left roof rail.

5. Slide the crossbars into the roof rails. Make sure they are inserted in the correct position and direction.

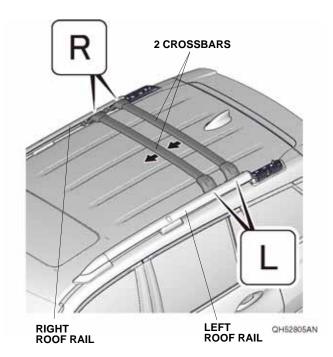


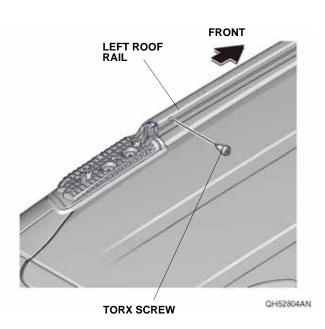

4. Repeat steps 1 through 3 on the right side of the vehicle.

www.collegehillshonda.com

6. Line up the marks on the crossbars with the marks on the roof rails as shown. Tighten the eight thumbwheel screws to secure the crossbars to the roof rails.

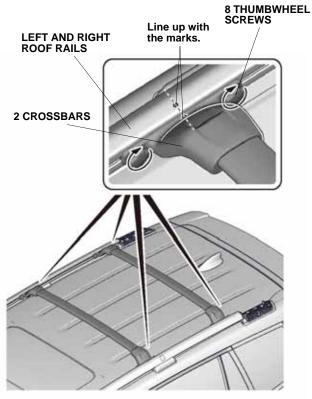

QH52806AN

7. Install the TORX screw removed in step 3 into the left roof rail, and tighten it securely. Repeat on the right side of the vehicle.

8. Install the left rear roof rail cover to the left roof rail with the two clips and one TORX screw. Repeat for the other side.

NOTE: Make sure they are securely snapped in place.



USE AND CARE

- Check the crossbar mounting screws frequently and retighten if necessary.
- Distribute the weight of the cargo evenly and do not exceed the maximum weight capacity of 165 lbs (75 kg).