



INSTALLATION INSTRUCTIONS

Accessory
REAR SEAT-BACK PROTECTORS
 08P42-TGS-100B

Application
2019 PASSPORT

Publications No.
VERSION 1
 Issue Date
JAN 2019

PARTS LIST

Left rear seat-back protector



Right rear seat-back protector



12 Well nuts



12 Snaps



12 Screws



TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Drill

3 mm Drill bit

T-pin

Masking tape

File


Ruler

Eye protection (face shield, safety goggles, etc.)

The following tool is available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

Rotabroach Hole Cutting Kit (T/N BLR11201SO)

Illustration of the Rear Seat-back Protectors in the Vehicle

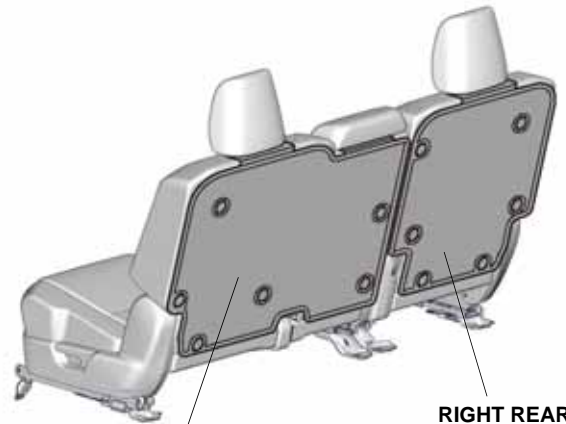

LEFT REAR SEAT-BACK PROTECTOR

RIGHT REAR SEAT-BACK PROTECTOR

QH52906A8


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


NOTE: Be careful not to damage the body.

Installing the Rear Seat-back Protectors

1. While pressing on each head restraint guide button, remove the two head restraints and center head restraint by pulling them upward.

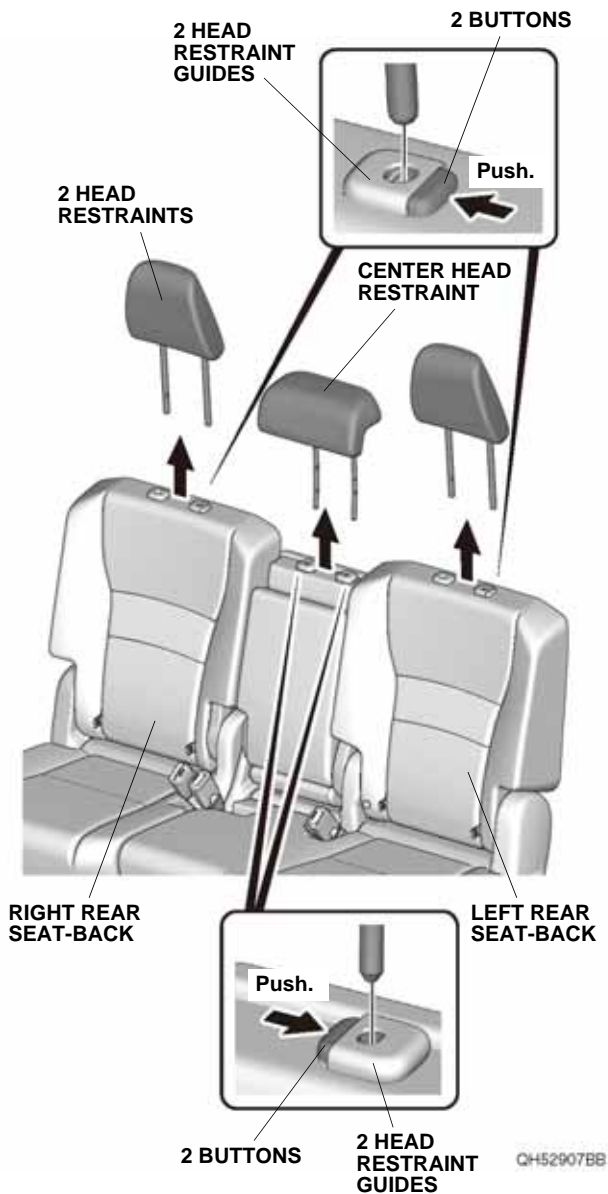


2. Secure the six snaps to the six snap retainers on the left rear seat-back protector with masking tape as shown.
NOTE: Make sure the snaps are centered on the snap retainers.

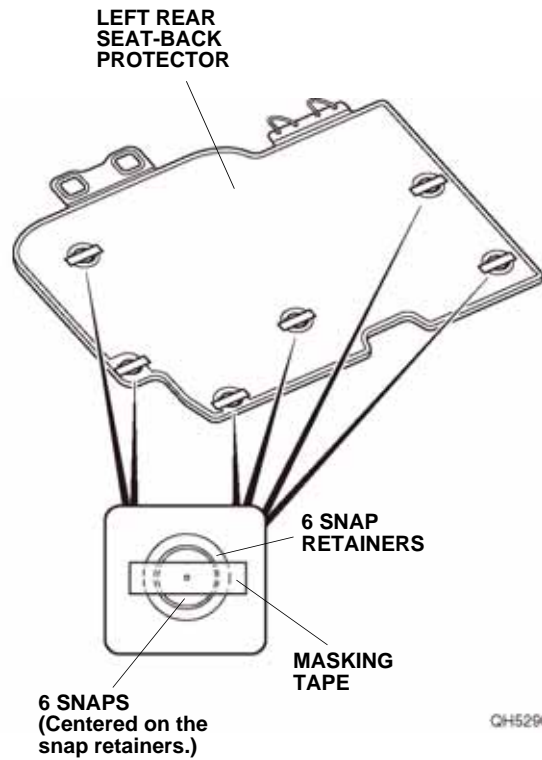


3. Fold down the left rear seat-back.




4. Place the left rear seat-back protector on the left rear seat-back. Secure the head restraint holder to the two head restraint guides as shown.

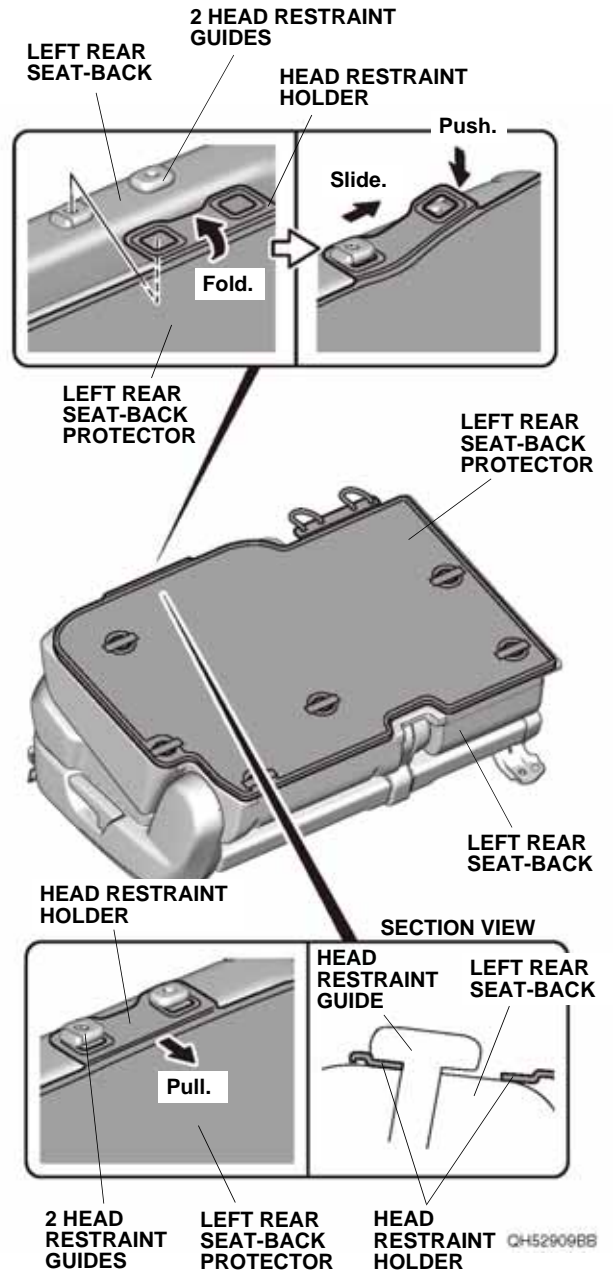


5. Line up the left rear seat-back protector with the left rear seat-back as shown.

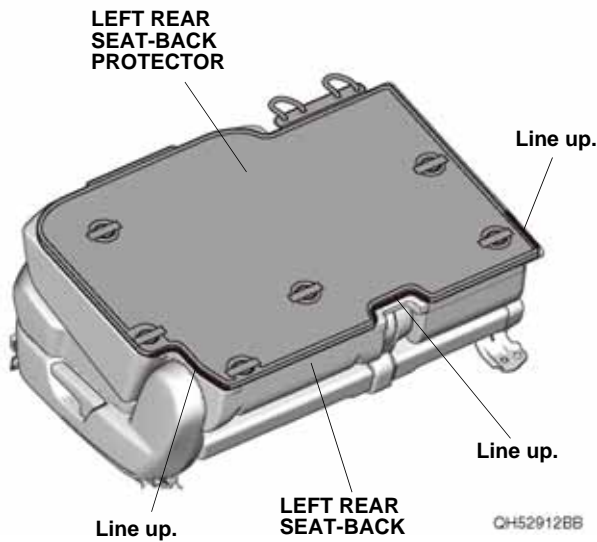

6. Lift the left rear seat-back protector, and attach masking tape to the left rear seat-back where the snaps will be located.

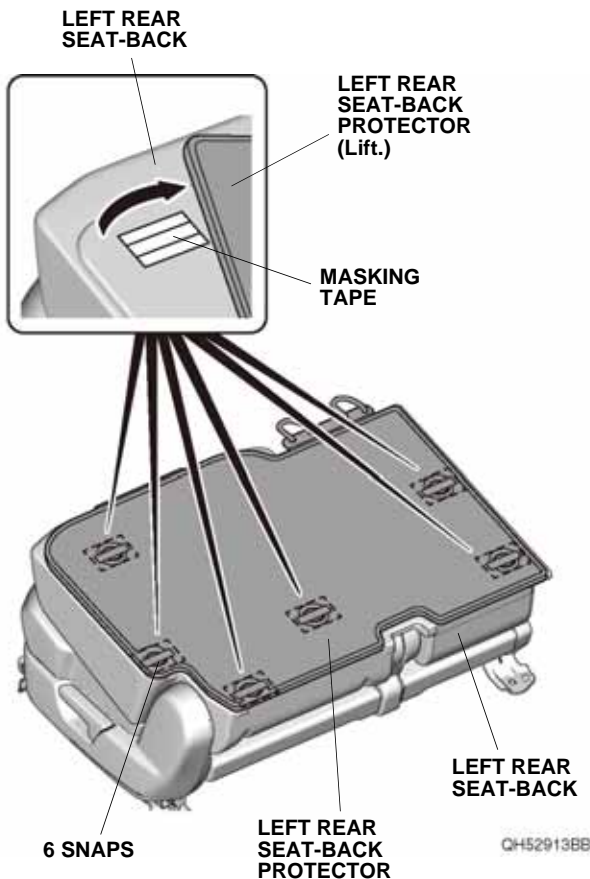


7. Using a T-pin, pierce the left rear seat-back through the hole on the left rear seat-back protector snap as shown. Remove the masking tape attached in step 2 from the left rear seat-back protector. NOTE: Make sure to pierce the left rear seat-back perpendicular. Do not remove the masking tape where the left rear seat-back is not marked yet.

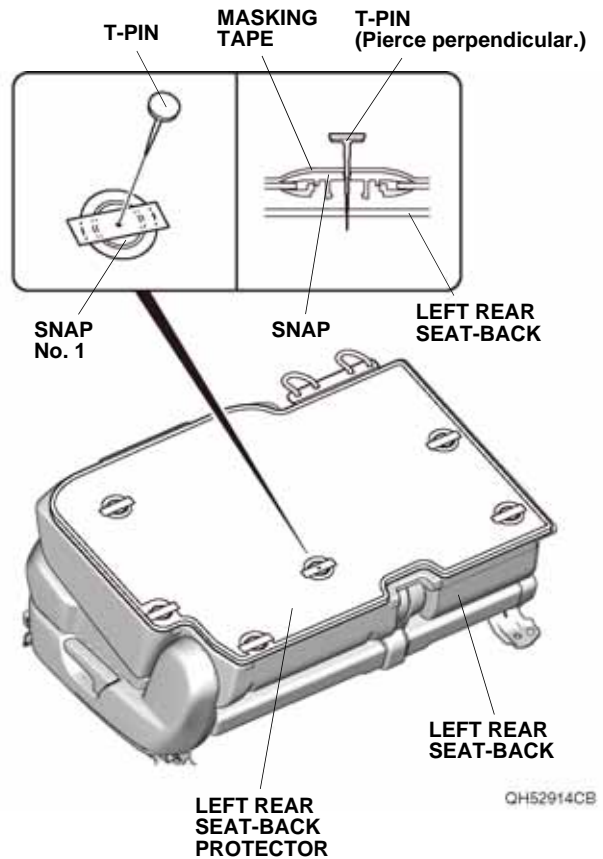


8. Remove the left rear seat-back protector.


9. While wearing eye protection, use a 3 mm drill bit to drill the pierced mark as shown.
NOTE: Insert a 3 mm drill bit into the drill. Make sure that the drill bit extension is no more than 50 mm (1.97 in.). Wrap masking tape around the 3 mm drill bit 10 mm (0.39 in.) from the tip, or use a drill stop. Make sure to drill the left rear seat-back perpendicular.

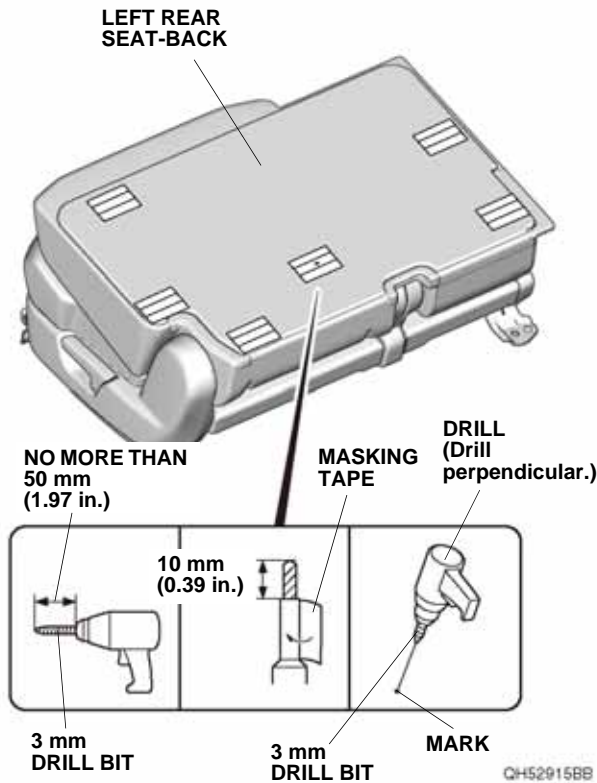


10. While wearing eye protection, use a 8 mm Rotabroach bit to drill the hole as shown. Remove any burrs.
NOTE: Make sure to drill the left rear seat-back perpendicular.

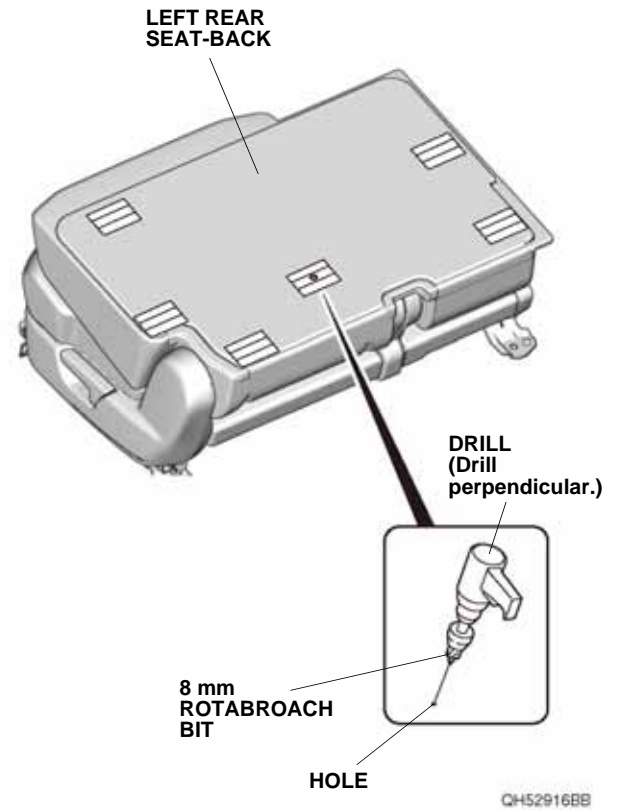

11. Remove the masking tape attached in step 6 at the drilled position from the left rear seat-back.
NOTE: Do not remove the masking tape where the left rear seat-back is not marked yet.
12. Install the snap and well nut to the hole on the left rear seat-back with screw as shown.

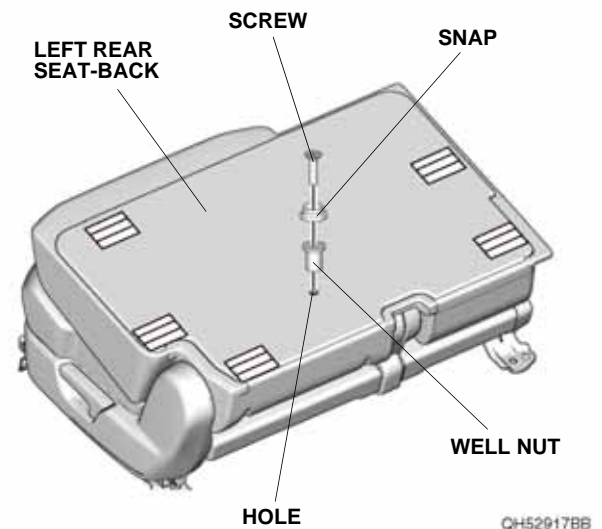


- Line up the left rear seat-back protector with the left rear seat-back.

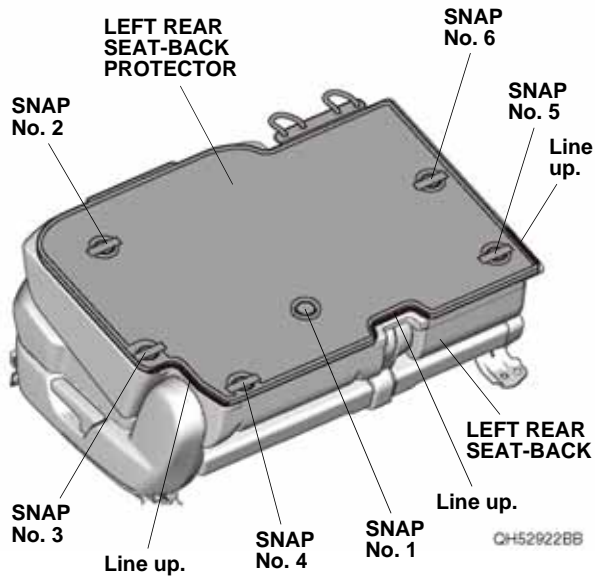


- Temporarily attach the left rear seat-back protector with snap No.1.
- Repeat steps 7 through 13 for each of the remaining snaps one by one following the pattern as shown.

- Attach the left rear seat-back protector with the six snaps installed in previous steps. Lift the outer top corner of the left rear seat-back protector as shown, and remove the protective cloth of the adapter pad.

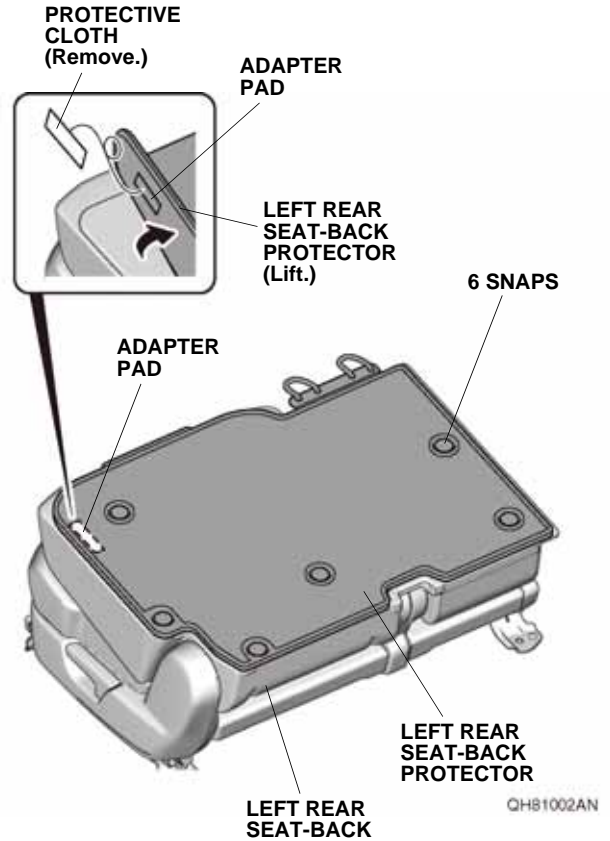


- Apply pressure to the left rear seat-back protector at the area were the hook and loop is located, make front to back movements while applying pressure to ensure proper attachment of adapter pad.

18. Raise the left rear seat-back. Install the center head restraint on the left rear seat. Bungee on center head restraint should be installed at this point, making sure it is secure by the head restraining rods.

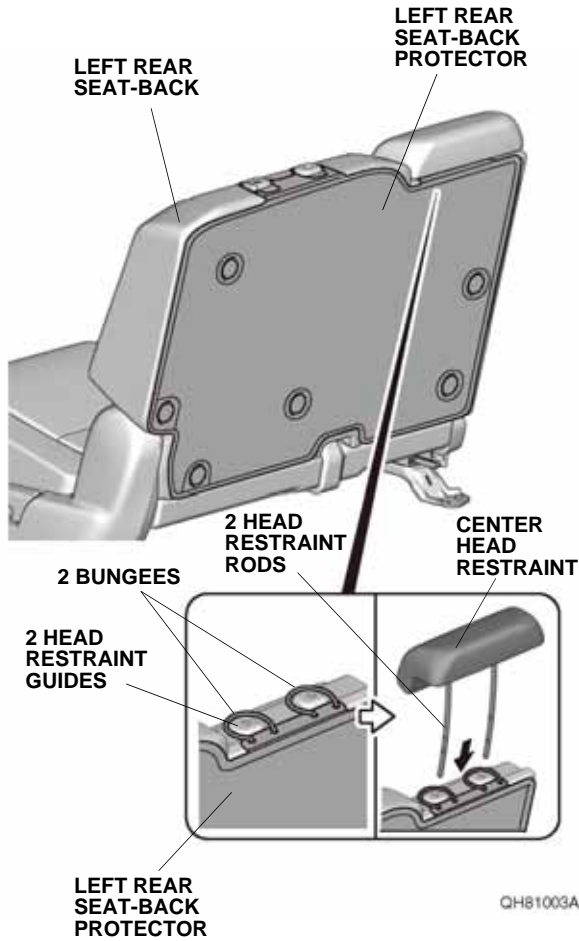

19. Install the head restraint on the left rear seat.


20. Secure the six snaps to the six snap retainers on the right rear seat-back protector with masking tape as shown.
NOTE: Make sure the snaps are centered on the snap retainers.

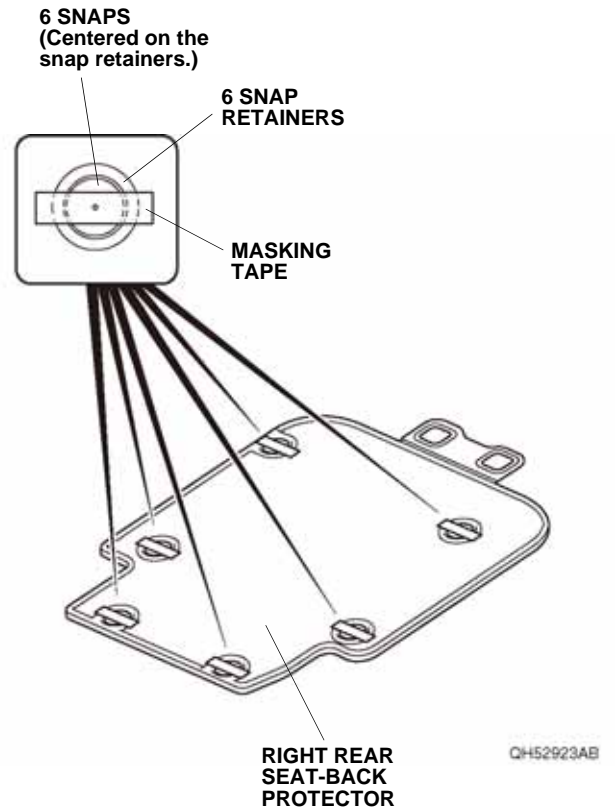


21. Fold down the right rear seat-back.




22. Place the right rear seat-back protector on the right rear seat-back. Secure the head restraint holder to the two head restraint guides as shown.

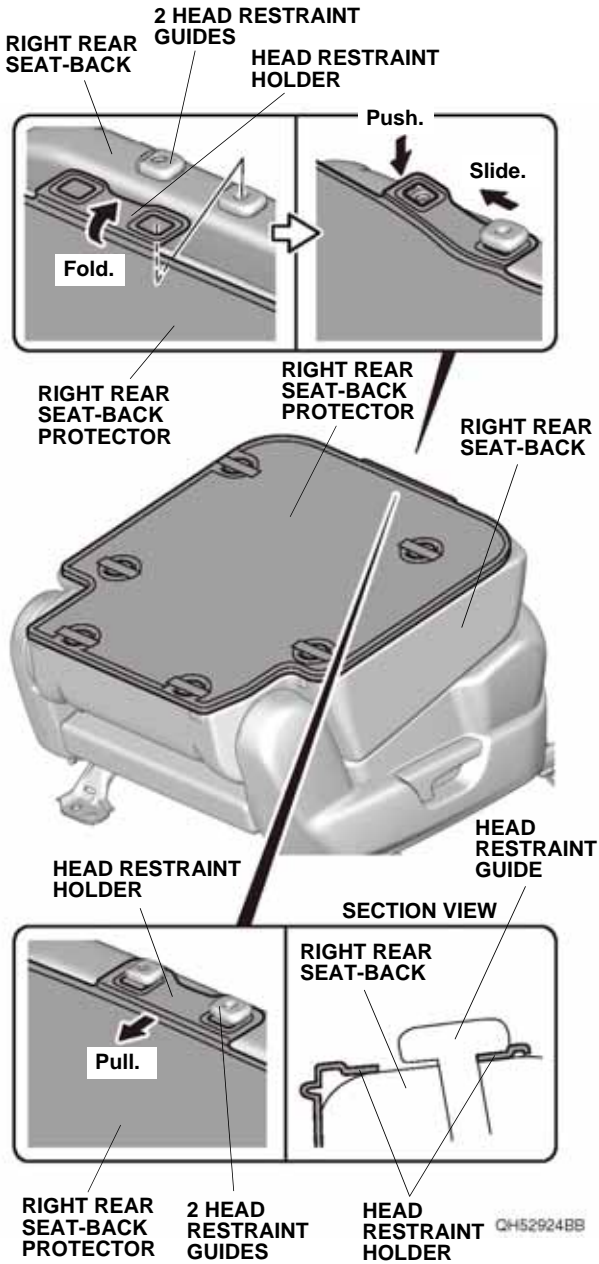


23. Line up the right rear seat-back protector with the right rear seat-back as shown.

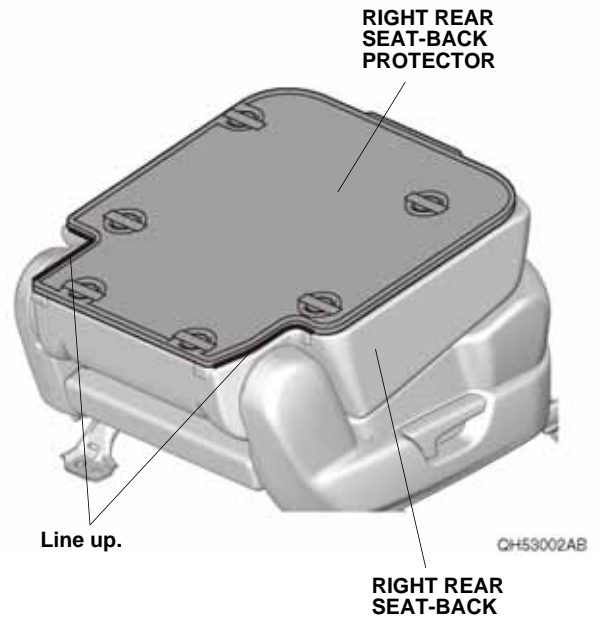

24. Lift the right rear seat-back protector, and attach masking tape to the right rear seat-back where the snaps will be located.

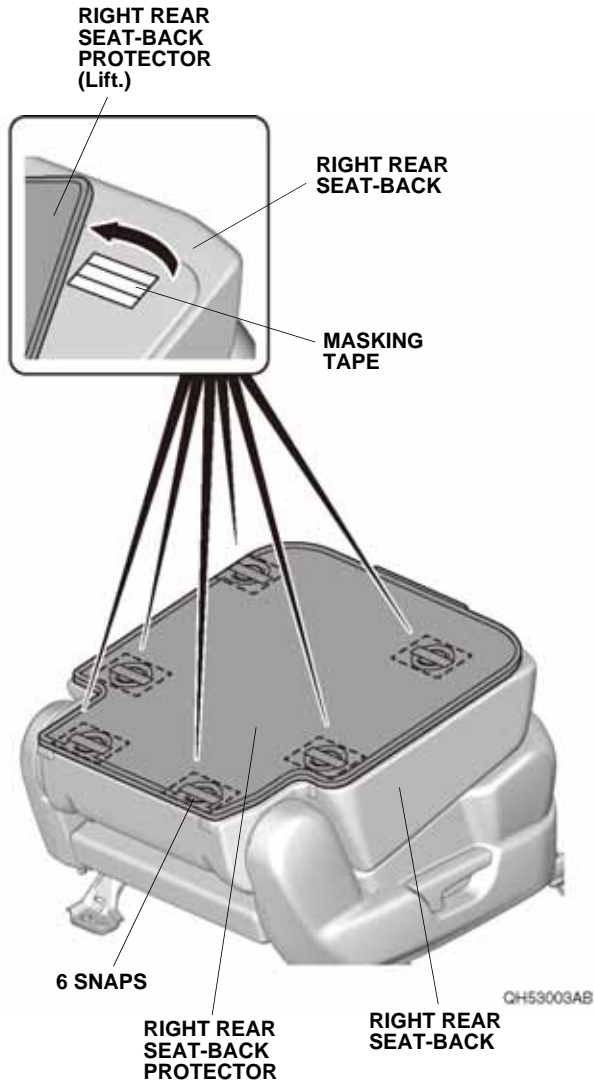


25. Using a T-pin, pierce the right rear seat-back through the hole on the right rear seat-back protector snap as shown. Remove the masking tape attached in step 20 from the right rear seat-back protector. NOTE: Make sure to pierce the right rear seat-back perpendicular. Do not remove the masking tape where the right rear seat-back is not marked yet.

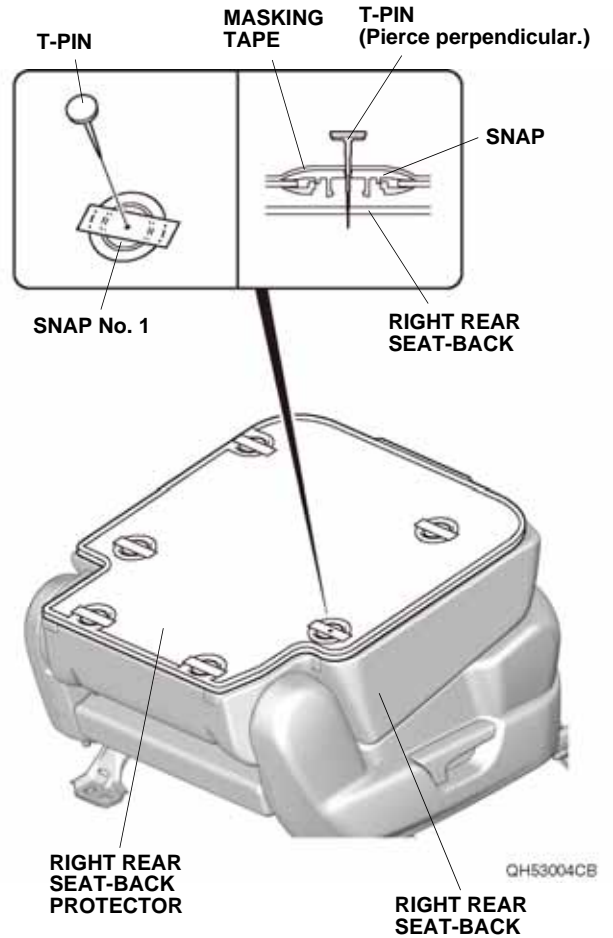


26. Remove the right rear seat-back protector.

27. While wearing eye protection, use a 3 mm drill bit to drill the pierced mark as shown.
NOTE: Insert a 3 mm drill bit into the drill. Make sure that the drill bit extension is no more than 50 mm (1.97 in.). Wrap masking tape around the 3 mm drill bit 10 mm (0.39 in.) from the tip, or use a drill stop. Make sure to drill the right rear seat-back perpendicular.

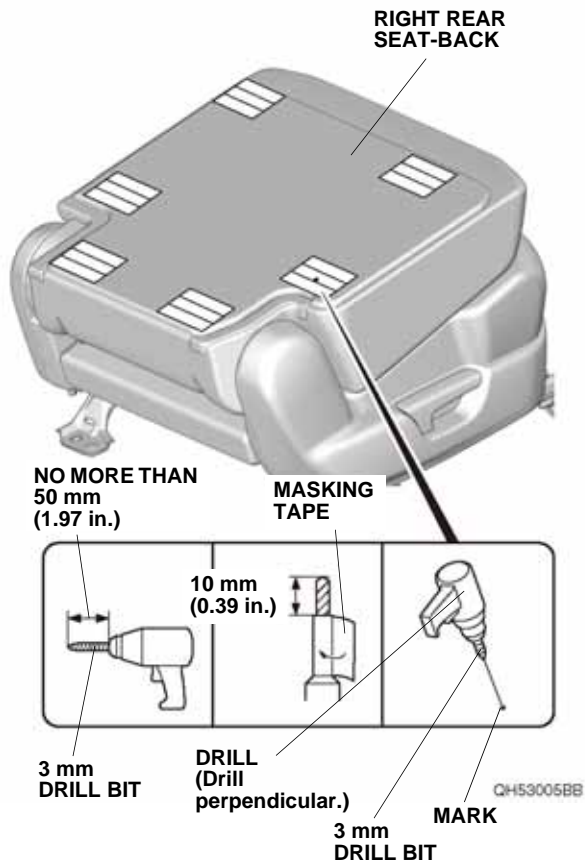


28. While wearing eye protection, use a 8 mm Rotabroach bit to drill the hole as shown. Remove any burrs.
NOTE: Make sure to drill the right rear seat-back perpendicular.

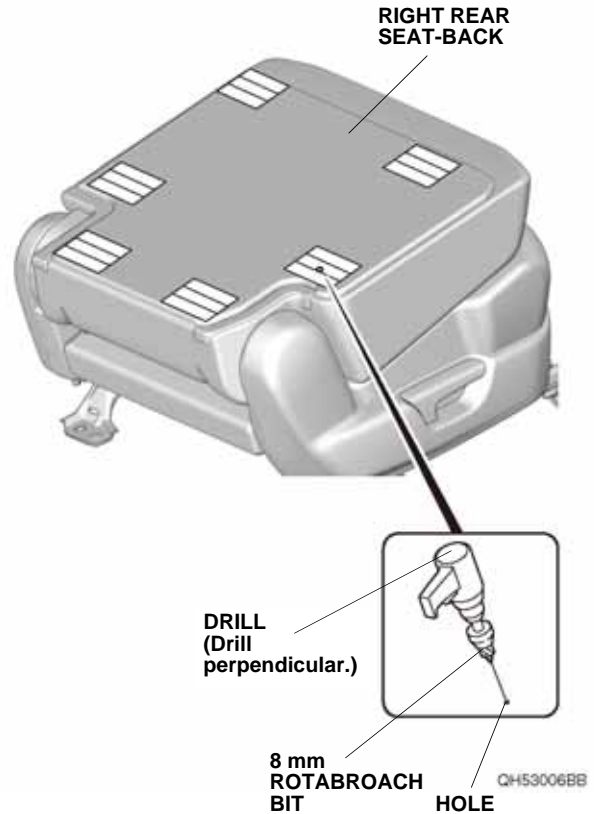


29. Remove the masking tape attached in step 24 at the drilled position from the right rear seat-back.
NOTE: Do not remove the masking tape where the right rear seat-back is not marked yet.

30. Install the snap and well nut to the hole on the right rear seat-back with screw as shown.

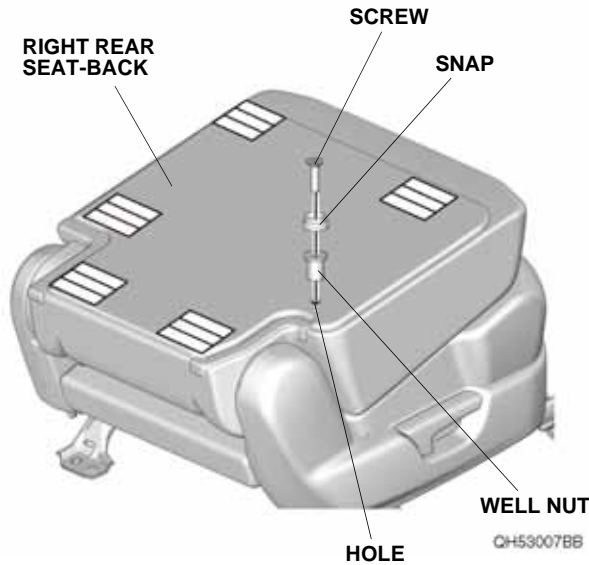


31. Line up the right rear seat-back protector with the right rear seat-back.

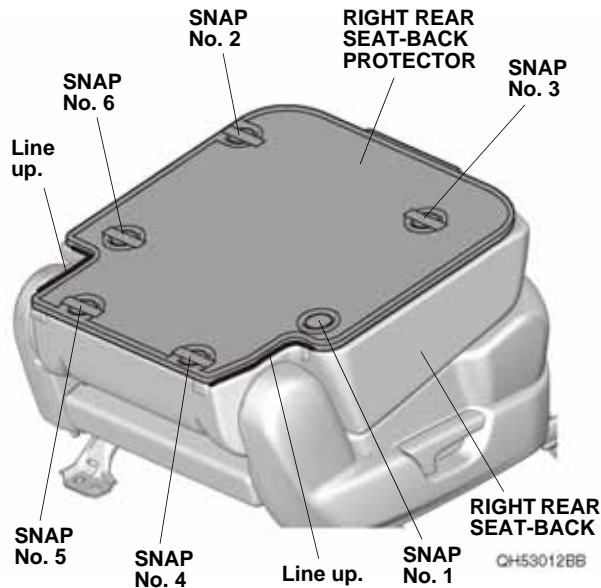

32. Temporarily attach the right rear seat-back protector with snap No.1.
 33. Repeat steps 25 through 31 for each of the remaining snaps one by one following the pattern as shown.

34. Attach the right rear seat-back protector with the six snaps installed in previous steps. Lift the outer top corner of the right rear seat-back protector as shown, and remove the protective cloth of the adapter pad.

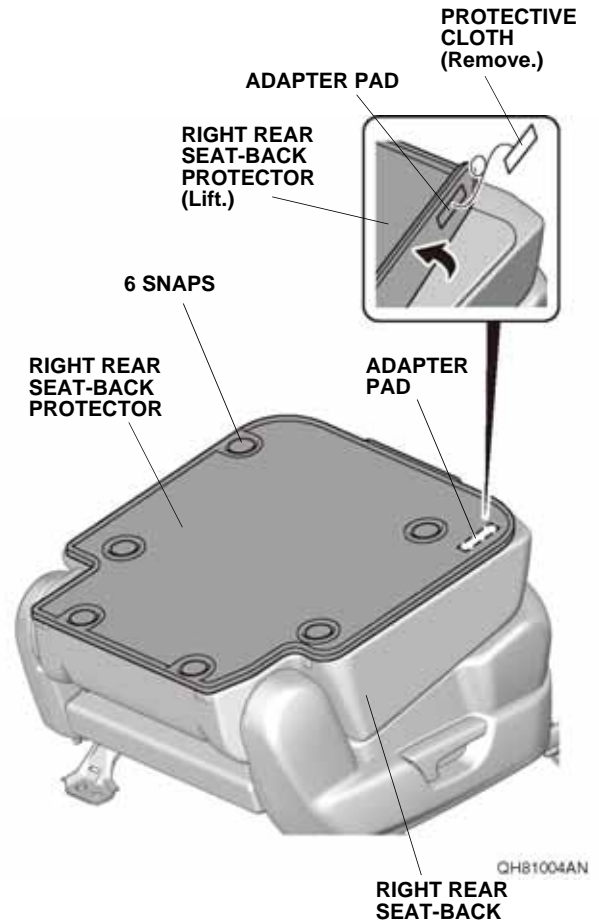

35. Apply pressure to the right rear seat-back protector at the area were the hook and loop is located, make front to back movements while applying pressure to ensure proper attachment of adapter pad.
 36. Raise the right rear seat-back. Install the head restraint on the right rear seat.